


ALARM ASSEMBLY
HC5 AND STD. UC744 ONLY

SEE ELECTRICAL RATING
PLATE FOR SUPPLY VOLTAGE
AND FREQUENCY.

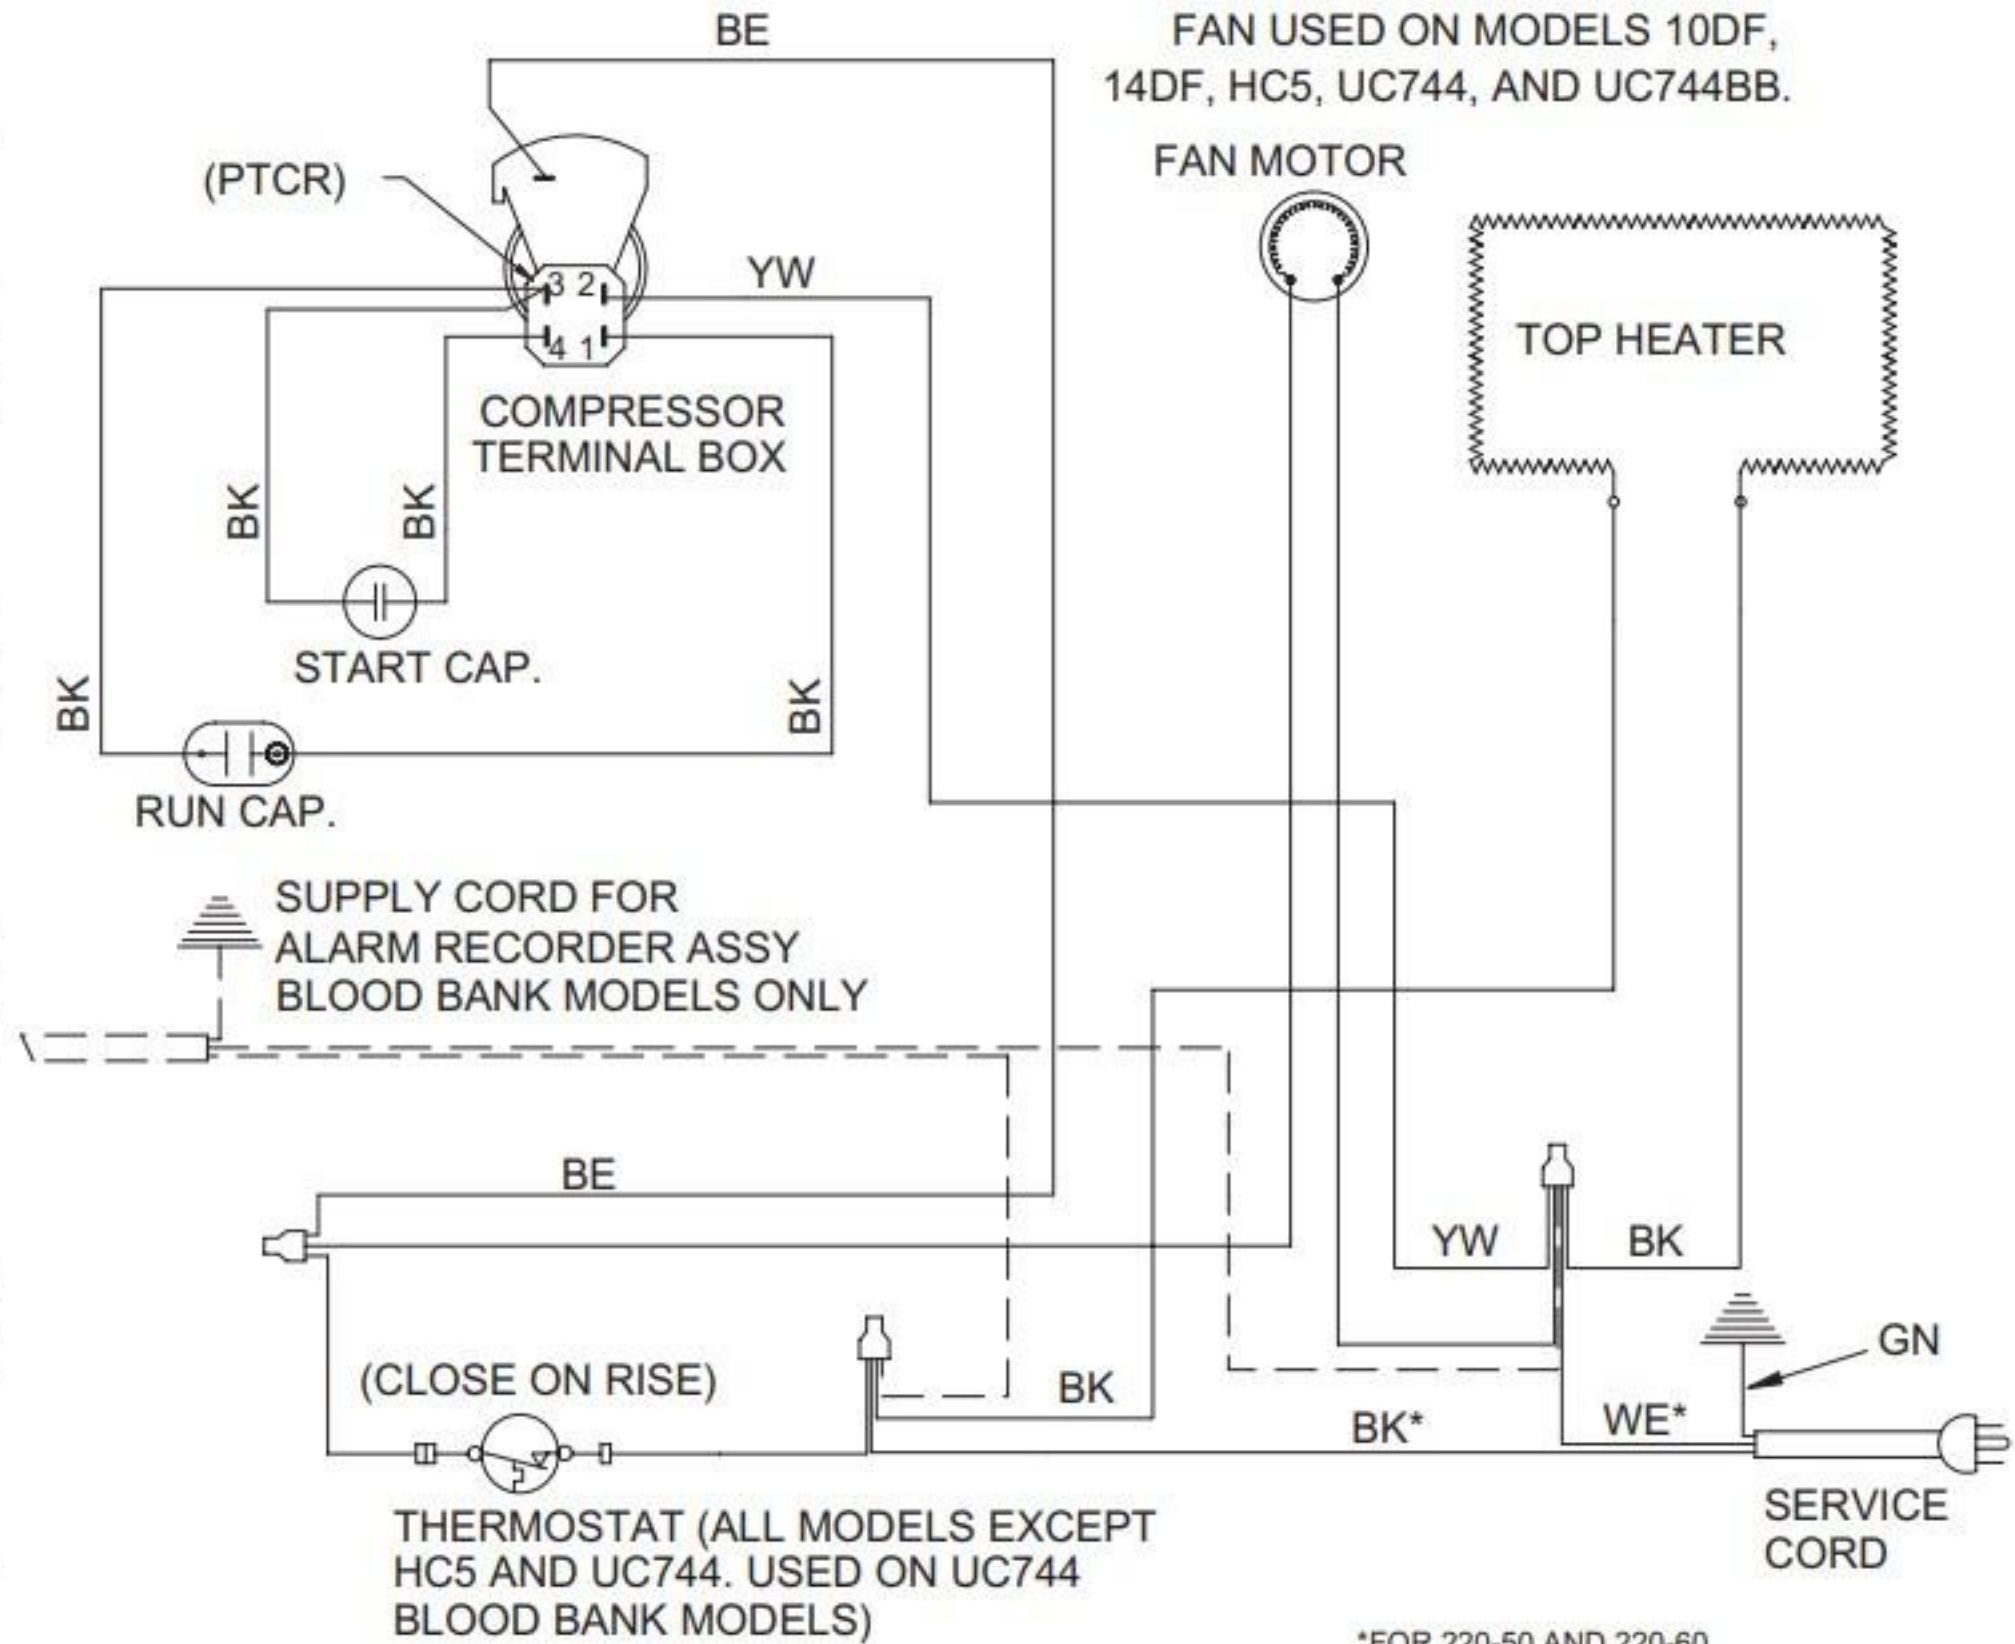

THERMOSTAT (ALL MODELS EXCEPT
HC5 AND UC744. USED ON UC744
BLOOD BANK MODELS)

*FOR 220-50 AND 220-60
EXPORT-CONNECT THE BLUE
IN PLACE OF WHITE AND BROWN IN
PLACE OF BLACK.

NOTE:
CABINET MUST BE GROUNDED.
USE COPPER CONDUCTORS ONLY.