


ALARM ASSEMBLY  
HC5 AND STD. UC744 ONLY

SEE ELECTRICAL RATING  
PLATE FOR SUPPLY VOLTAGE  
AND FREQUENCY.

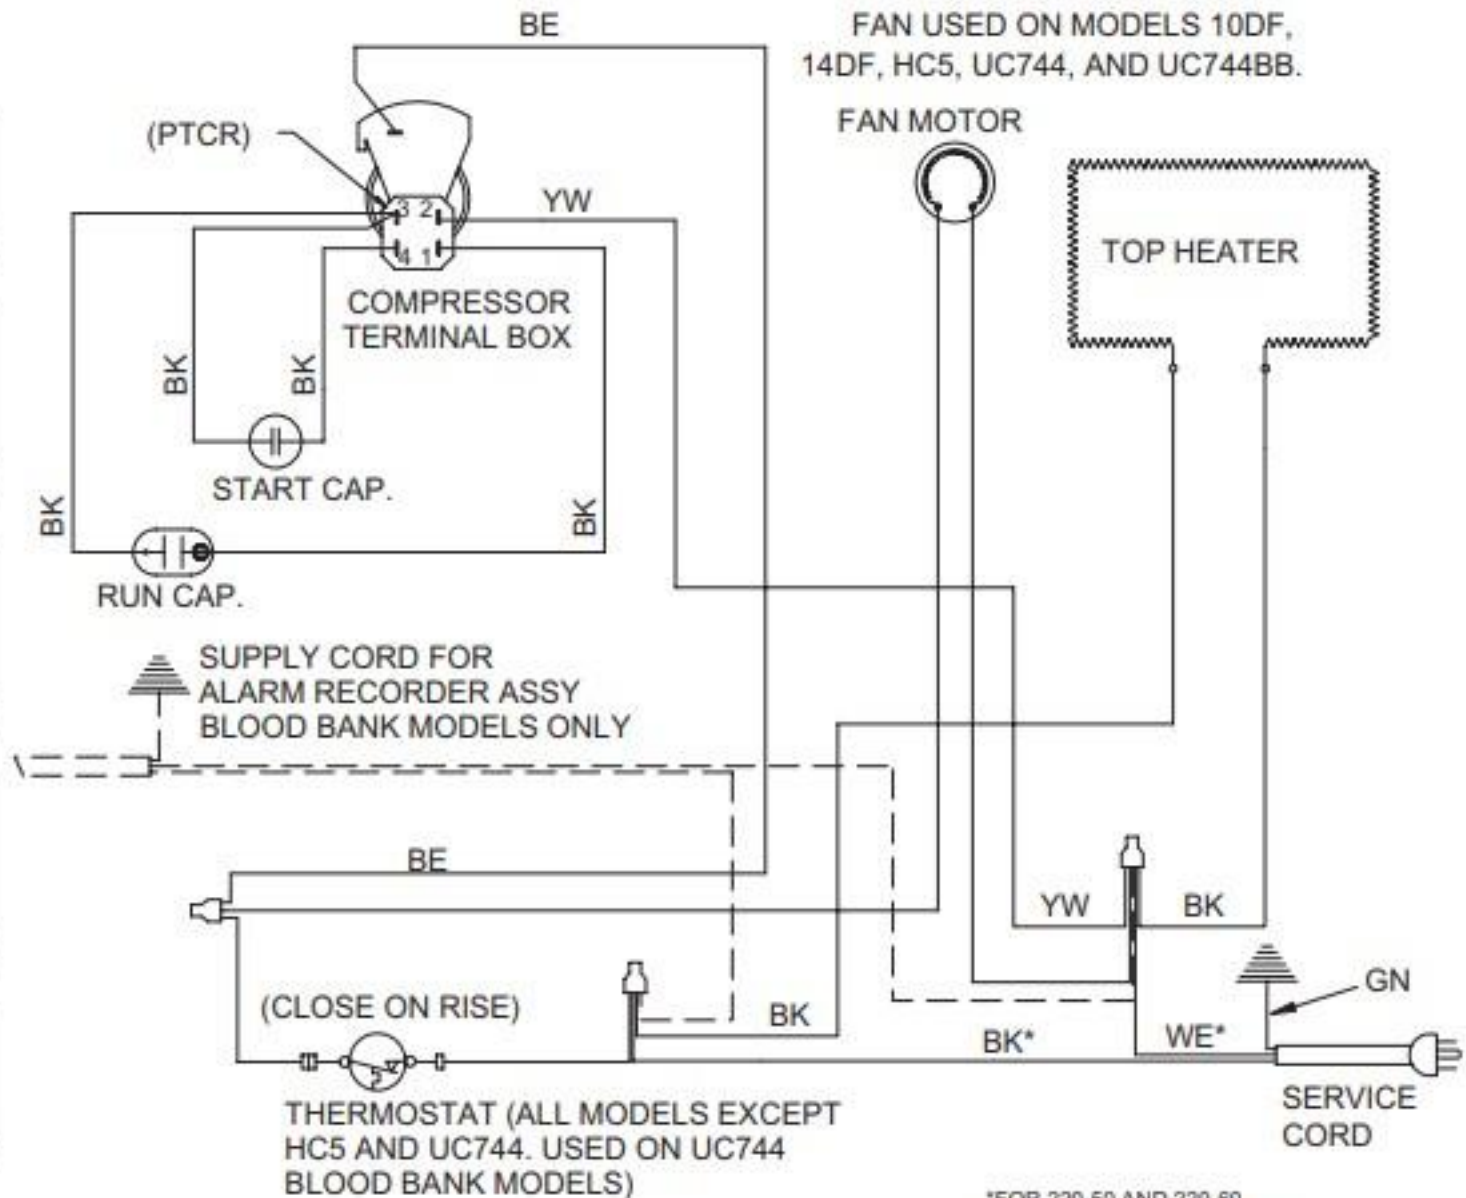

\*FOR 220-50 AND 220-60  
EXPORT-CONNECT THE BLUE  
IN PLACE OF WHITE AND BROWN IN  
PLACE OF BLACK.

NOTE:  
CABINET MUST BE GROUNDED.  
USE COPPER CONDUCTORS ONLY.