

**MENUMASTER<sup>®</sup>**  
Commercial

# Service Training Manual

High Speed Combination Oven



MXP - 50 Hz  
December 2011  
16400017

**ACP** INC.<sup>™</sup>  
*New*  
HIGH PERFORMANCE HAS A NAME<sup>™</sup>

# Table of Contents

|                                                                                           |       |
|-------------------------------------------------------------------------------------------|-------|
| Important Safety Information.....                                                         | 1-5   |
| Installation.....                                                                         | 7     |
| Specifications.....                                                                       | 8     |
| Quick Start Reference Guide AXP5201, AXP5203, MXP5201, MXP5203.....                       | 9-14  |
| Touch Panel Symbol Description MXP5221/ MXP5223.....                                      | 15-16 |
| Quick Start Reference Guide MXP5221, MXP5223.....                                         | 17-23 |
| Oven Construction AXP5201, AXP5203, MXP5201, MXP5203,<br>MXP5221, MXP5223 .....           | 24-31 |
| MXP5221 / MXP5223 Ceramic Tray and Replaceable Waveguide.....                             | 32    |
| Interlock Switch Service.....                                                             | 33-34 |
| Oven Performance Test AXP5201, AXP5203, MXP5201, MXP5203,<br>MXP5221, MXP5223.....        | 35-38 |
| Component Testing Procedures AXP5201, AXP5203, MXP5201, MXP5203, MXP5221,<br>MXP5223..... | 39-41 |
| Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203.....                                   | 42-50 |
| Troubleshooting AXP5201 / AXP5203 / MXP5201 / MXP5203.....                                | 51-56 |
| Display Diagnostics AXP5201 / AXP5203 / MXP5201 / MXP5203.....                            | 57-58 |
| Service Test MXP5221 / MXP5223.....                                                       | 59-66 |
| Troubleshooting MXP5221 / MXP5223.....                                                    | 67-72 |
| Display Diagnostics MXP5221 / MXP5223.....                                                | 73-74 |
| Wiring Diagrams / Schematics Sample AXP5201 / MXP5201,<br>MXP5221 / MXP5223.....          | 75-81 |

# **1 | Important Safety Information**

# Important Information

## Important Notices for Servicers and Consumers

ACP will not be responsible for personal injury or property damage from improper service procedures. Pride and workmanship go into every product to provide our customers with quality products. It is possible, however, that during its lifetime a product may require service. Products should be serviced only by a qualified service technician who is familiar with the safety procedures required in the repair and who is equipped with the proper tools, parts, testing instruments and the appropriate service information. IT IS THE TECHNICIANS RESPONSIBILITY TO REVIEW ALL APPROPRIATE SERVICE INFORMATION BEFORE BEGINNING REPAIRS.



### WARNING

To avoid risk of severe personal injury or death, disconnect power before working/servicing on appliance to avoid electrical shock.

To locate an authorized servicer please contact:

ComServ Support Center



Web Site

WWW.ACPSOLUTIONS.COM

Telephone Number

1-866-426-2621 or 319-368-8195

E-Mail: [commercialservice@acpsolutions.com](mailto:commercialservice@acpsolutions.com)

Recognize Safety Symbols, Words, and Labels



### DANGER

DANGER— Immediate hazards which WILL result in severe personal injury or death.



### WARNING

WARNING— Hazards or unsafe practices which COULD result in severe personal injury or death.



### CAUTION

CAUTION— Hazards or unsafe practices which COULD result in minor personal injury, product or property damage.

# Important Safety Information



## WARNING

Read the following information to avoid possible exposure to microwave radiation:

The basic design of the Microwave Oven makes it an inherently safe device to both use and service.

However, there are some precautions which should be followed when servicing the microwave to maintain this safety. These are as follows:

1. Always operate the unit from an adequately grounded outlet. Do not operate on a two-wire extension cord.
2. Before servicing the unit (if unit is operable) perform the microwave leakage test.
3. The oven should never be operated if the door does not fit properly against the seal, the hinges or hinge bearings are damaged or broken; the choke is damaged, (pieces missing, etc.); or any other visible damage can be noted. Check the choke area to ensure that this area is clean and free of all foreign matter.
4. If the oven operates with the door open and produces microwave energy, take the following steps:
  - A. Tell the user not to operate the oven.
  - B. Contact ACP ComServ immediately.
5. Always have the oven disconnected when the outer case is removed except when making the "live" tests called for in the Service Manual. Do not reach into the equipment area while the unit is energized. Make all connections for the test and check them for tightness before plugging the cord into the outlet.
6. Always ground the capacitors on the magnetron filter box with an insulated-handle screwdriver before working in the high voltage area of the equipment compartment. Some types of failures will leave a charge in these capacitors and the discharge could cause a reflex action which could make you injure yourself.
7. Always remember that in the area of the transformer there is HIGH VOLTAGE. When the unit is operating keep this area clear and free of anything which could possibly cause an arc or ground, etc.
8. Do not for any reason defeat the interlock switches there is not valid reason for this action at any time; nor will it be condoned by ACP.
9. IMPORTANT: Before returning a unit to a customer, be sure to check for proper switch interlock action.
10. The Microwave Oven should never be operated with any components removed and/or bypassed or when any of the safety interlocks are found to be defective, or when any of the seal surfaces are defective, missing, or damaged.
11. All microwave ovens meet all requirements of the radiation control for Health and Safety Act of 1968. Due to measurement uncertainties, the maximum leakage for the field will be  $4\text{mw}/\text{cm}^2$ .
12. To ensure that the unit does not emit excessive microwave leakage and to meet the Department of Health and Human Services guidelines, check the oven for microwave leakage using a microwave oven leakage meter that complies with US Government CDRH / FDA / DHHS requirements and or any other local government requirements. The maximum leakage level allowed by ACP is  $4\text{mw}/\text{cm}^2$ .
13. If servicer encounters an emission reading over  $4\text{mw}/\text{cm}^2$ , the servicer is to cease repair and contact the ACP ComServ Department immediately for further direction. ACP will contact the proper Government Agency upon verification of the test results.

# IMPORTANT SAFETY INSTRUCTIONS



Recognize this symbol as a **SAFETY** message



## WARNING

When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons including the following.

1. READ all instructions before using equipment.
2. READ AND FOLLOW the specific “PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY” on this page.
3. This equipment **MUST BE GROUNDED**. Connect only to properly GROUNDED outlet. See “GROUNDING / EARTHING INSTRUCTIONS” on page 5.
4. Install or locate this equipment **ONLY** in accordance with the installation instructions in this manual.
5. Some products such as whole eggs and sealed containers—for example, closed glass jars—are able to explode and **SHOULD NOT** be HEATED in this oven.
6. Use this equipment **ONLY** for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this equipment. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
7. As with any equipment, **CLOSE SUPERVISION** is necessary when used by **CHILDREN**.
8. See door cleaning instructions on page A-4 of this owners manual.
9. **DO NOT** heat baby bottles in oven.
10. Baby food jars shall be open when heated and contents stirred or shaken before consumption, in order to avoid burns.
11. **DO NOT** operate this equipment if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
12. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Special tools are required to service equipment. Contact nearest authorized service facility for examination, repair, or adjustment.
13. **DO NOT** cover or block louvers or other openings on equipment.
14. **DO NOT** store this equipment outdoors. **DO NOT** use this product near water – for example, near a kitchen sink, in a wet basement, a swimming pool, or a similar location.
15. **DO NOT** immerse cord or plug in water.
16. Keep cord **AWAY** from **HEATED** surfaces.
17. **DO NOT** let cord hang over edge of table or counter.
18. For commercial use only.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A. **DO NOT** attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- B. **DO NOT** place any object between the oven front face and the door too allow soil or cleaner residue to accumulate on sealing surfaces.
- C. **DO NOT** operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  1. door (bent)
  2. hinges and latches (broken or loosened)
  3. door seals and sealing surfaces.
- D. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

To avoid risk of fire in the oven cavity:

- a. DO NOT overcook food. Carefully attend oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- c. If materials inside the oven ignite, keep oven door CLOSED, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- d. DO NOT use the cavity for storage. DO NOT leave paper products, cooking utensils, or food in the cavity when not in use.



## WARNING

Liquids such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:

- i) Do not overheat the liquid.
- ii) Stir the liquid both before and halfway through heating it.
- iii) Do not use straight-sided containers with narrow necks.
- iv) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- v) Use extreme care when inserting a spoon or other utensil into the container.



## CAUTION

To avoid personal injury or property damage, observe the following:

1. Do not deep fat fry in oven. Fat could overheat and be hazardous to handle.
2. Do not cook or reheat eggs in shell or with an unbroken yolk using microwave energy. Pressure may build up and erupt. Pierce yolk with fork or knife before cooking.
3. Pierce skin of potatoes, tomatoes, and similar foods before cooking with microwave energy. When skin is pierced, steam escapes evenly.
4. Do not operate equipment without load or food in oven cavity.
5. Microwave popcorn should not be popped in oven.
6. Do not use regular cooking thermometers in oven. Most cooking thermometers contain mercury and may cause an electrical arc, malfunction, or damage to oven.
7. Do not use metal utensils in oven.
8. Do not use aluminum foil in oven.
9. Never use paper, plastic, or other combustible materials that are not intended for cooking.
10. When cooking with paper, plastic, or other combustible materials, follow manufacturer's recommendations on product use.
11. Do not use paper towels which contain nylon or other synthetic fibers. Heated synthetics could melt and cause paper to ignite.
12. Do not heat sealed containers or plastic bags in oven. Food or liquid could expand quickly and cause container or bag to break. Pierce or open container or bag before heating.
13. To avoid pacemaker malfunction, consult physician or pacemaker manufacturer about effects of microwave energy on pacemaker.
14. An authorized servicer MUST inspect equipment annually. Record all inspections and repairs for future use.

## SAVE THESE INSTRUCTIONS

# 2

## **AXP5201 / AXP5203 / MXP5201 / MXP5203, MXP5221 / MXP5223 50 Hz Specifications**

### **Installation**

- Unpacking the oven
- Oven Clearances

### **Power Specification**

- Input
- Output
- Consumption

### **Dimensions**

- Weight

# Installation

## STEP 1 - Unpack Oven


- Inspect oven for damage such as dents in door or inside oven cavity.
- Report any dents or breakage to source of purchase immediately.  
**Do not attempt to use oven if damaged.**
- Remove all packing materials from oven interior.
- If oven has been stored in extremely cold area, wait a few hours before connecting power.

## STEP 2 - Place Oven on Counter

- Recommended countertop surface depth is 26" (66 cm).
- Do not install oven next to or above source of heat, such as pizza oven or deep fat fryer. This could cause oven to operate improperly and could shorten life of electrical parts.
- Do not block or obstruct oven filter. Allow access for cleaning.
- Install oven on level countertop surface.
- Outlet should be located so that plug is accessible when oven is in place.

## STEP 3 - Install Rack

- Install oven rack
  1. Oven cavity must be cool to touch.
  2. Place rack in oven with rear guard positioned toward the back of the oven.
- **DO NOT** cook food directly on floor of oven.

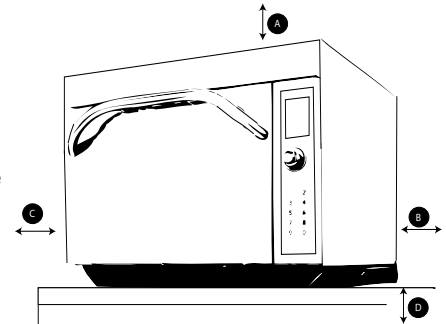

### Oven Clearances

A—For North American (UL/CSA) models, allow at least 2" (5.1 cm) of clearance around top of oven. For International (50 Hz) models, allow at least 7" (18 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.

B—Allow at least 2" (5.1 cm) between air discharge on back of oven and back wall.

C—Allow at least 2" (5.1 cm) of clearance around sides of oven.

D—Install combination oven so oven bottom is at least 3 feet (91.5 cm) above floor.

# Specifications AXP5201, AXP5203 MXP5201, MXP5203, MXP5221, MXP5223

MXP5221 / MXP5201 MXP5223 / MXP5203

|                                                         |             |                 |
|---------------------------------------------------------|-------------|-----------------|
| <b>Power Source</b>                                     |             |                 |
| <b>Voltage AC</b>                                       | 208/240 VAC | 400 VAC         |
| <b>Amperage (Single Unit)</b>                           | 32 A        | 16 A            |
| <b>Frequency</b>                                        | 50 Hz       | 50 Hz Wye       |
| <b>Single Phase, 3 wire grounded</b>                    | X           | 3 phase, 5 wire |
| <b>Receptacle</b>                                       | IEC-309     | IEC-309         |
| <b>Plug</b>                                             | IEC-309     | IEC-309         |
| <b>Power Output – Microwave</b>                         |             |                 |
| <b>Nominal microwave energy (IEC705)</b>                | 2200 Watts  | 2200 Watts      |
| <b>Minimum Temperature Rise (<math>\Delta T</math>)</b> | 12°C        | 12°C            |
| <b>Operating Frequency</b>                              | 2450 MHz    | 2450 MHz        |
| <b>Power Consumption</b>                                | 5700 Watts  | 5700 Watts      |
| <b>Microwave only</b>                                   | 4200 Watts  | 4200 Watts      |
| <b>Convection fan</b>                                   | 425 Watts   | 425 Watts       |
| <b>Radiant heater</b>                                   | 3000 Watts  | 3000 Watts      |
| <b>Convection heater</b>                                | 2000 Watts  | 2000 Watts      |
| <b>Combination</b>                                      | 5300 Watts  | 5300 Watts      |
| <b>Dimensions</b>                                       |             |                 |
| <b>Cabinet (in / cm)</b>                                |             |                 |
| <b>Width</b>                                            | 63.5 cm     | 63.5 cm         |
| <b>Height</b>                                           | 51 cm       | 51 cm           |
| <b>Depth (includes bracket on back)</b>                 | 65 cm       | 65 cm           |
| <b>Oven Interior (in / cm) – useable space</b>          |             |                 |
| <b>Width</b>                                            | 41 cm       | 41 cm           |
| <b>Height</b>                                           | 20 cm       | 20 cm           |
| <b>Depth</b>                                            | 38 cm       | 38 cm           |
| <b>Weight (lbs. / kg)</b>                               |             |                 |
| <b>Uncrated</b>                                         | 68 kg       | 68 kg           |
| <b>Crated</b>                                           | 79 kg       | 79 kg           |

# **3** | **AXP5201 / AXP5203 / MXP5201, MXP5203 / MXP5221 / MXP5223 50 Hz Quick Start Reference Guide**

## Quick Start Reference Guide

High Speed Commercial Combination Oven

Refer to Product Safety Manual for Safety Statements. Complete Owner's Manual available online

### Oven Controls

The oven touch screen displays menu options. The dial, keypad and touch screen can be used to navigate through onscreen menus. **This guide will focus primarily on the dial control for menu navigation.**

#### Dial Menu Navigation

1. Rotate the dial clockwise to scroll through menu options.
2. The current menu selection will be highlighted.
3. To select menu item, press dial.

The icons below will be used throughout this guide to indicate when menu navigation other than the dial is necessary.



### Selecting a Function




Highlight menu items by rotating the dial. Push the dial to select.

### Getting Started

#### Preheating the Oven

This oven can be set to a preheat temperature between 200°F and 520°F (95°C and 270°C).

1. Oven must be plugged in.
2. The Preheat Temperature the oven is set to will appear at the top of the display.
2. Rotate the dial to highlight the PRESS TO PREHEAT button and press to select.
3. Oven Preheating status menu will display until oven reaches preheat temperature. The main menu screen will then appear.

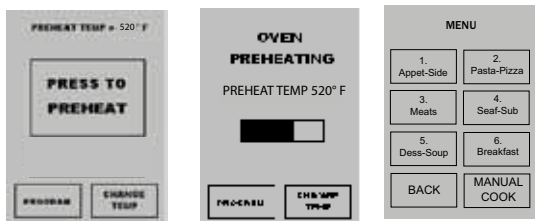


#### Programming or Changing Preheat Setting To program the preheat setting:

1. Oven must be plugged in.
2. Rotate dial until CHANGE TEMP is highlighted and press dial to select.
3. Rotate dial until desired temperature is displayed and press knob to select.

### Cooking with Pre-programmed Pads

To cook food using pre-programmed menu items

1. After oven has preheated to the desired temperature, highlight desired menu category by rotating the dial and press to select.
2. Highlight menu item group and press dial to select.
3. Highlight item.
4. Open oven door, place food in oven and close door.
5. Push dial to start cooking process.
6. At end of cooking cycle, oven beeps and displays "DONE. REMOVE FOOD FROM OVEN"

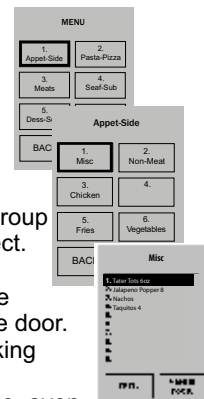

### Using MANUAL COOK

To cook food using a specific entered time and power level.

1. After oven has preheated, Select MANUAL COOK option on the menu screen by rotating dial and press to select.
2. For Stage 1, input desired cooking time using the dial. Press dial.
3. Input desired temperature. Press dial.
4. Rotate dial until desired microwave cooking power is displayed and press.
5. Rotate dial until desired cooking fan speed is displayed. Press to select.
6. Rotate dial until desired heating setting is displayed and press.
7. Repeat steps 2-6 for each cooking stage, if more than one stage is necessary.
8. Place food in oven as indicated on the oven display.
9. Press start pad or touch screen to start.



10. At end of cooking cycle, oven beeps and displays "DONE. REMOVE FOOD FROM OVEN".

Note: To interrupt cooking cycle, open door. To resume cooking, close door and press start.

## Quick Start Reference Guide


High Speed Commercial Combination Oven

### ACCESSING THE PROGRAM MENU

1. To access the PROGRAM MENU, select the BACK button on the main menu screen.



2. Then select PROGRAM from the READY screen.

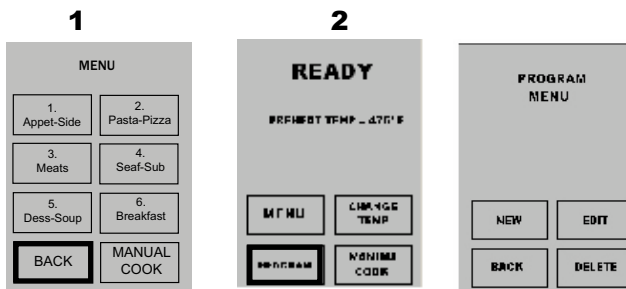

### PROGRAM MENU OVERVIEW

**NEW** – Add a new menu item

**BACK** – Go to previous screen

**EDIT** – Change an existing menu item

**DELETE** – Delete an existing menu item



### ADDING OR CHANGING MAIN MENU LEVEL OR ITEM GROUP MENU

1. From PROGRAM MENU rotate dial to select NEW to add a new item or EDIT to edit an existing menu item.

2. From the MENU or MENU ITEM GROUP screen select EDIT MENU (border will flash).

3. Using the dial, highlight pad you wish to program or edit and press dial to select.


4. Enter name for menu using keypad digits for letters, numbers and symbols. **[For example: Press Keypad “2” three times for letter “c”]**

When the correct letter is displayed, wait until cursor moves to the next space. If a correction is necessary, press CLEAR to erase one character at a time.




| Keypad Press | Character Display         |
|--------------|---------------------------|
| 1            | “, -, #, 1                |
| 2            | a, b, c, A, B, C, 2       |
| 3            | d, e, f, D, E, F, 3       |
| 4            | g, h, i, G, H, I, 4       |
| 5            | j, k, l, J, K, L, 5       |
| 6            | m, n, o, M, N, O, 6       |
| 7            | p, q, r, s, P, Q, R, S, 7 |
| 8            | t, u, v, T, U, V, 8       |
| 9            | w, x, y, z, W, X, Y, Z, 9 |
| 0            | &, %, \$, 0               |

#### EDITING MAIN MENU CATEGORY SCREEN

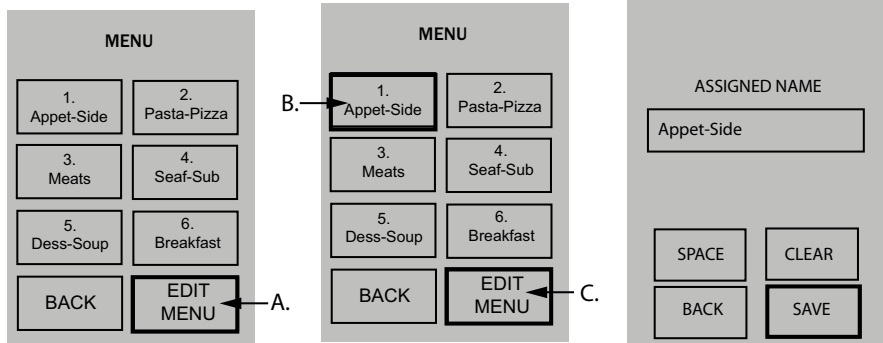

#### EDITING FOOD CATEGORY SCREEN

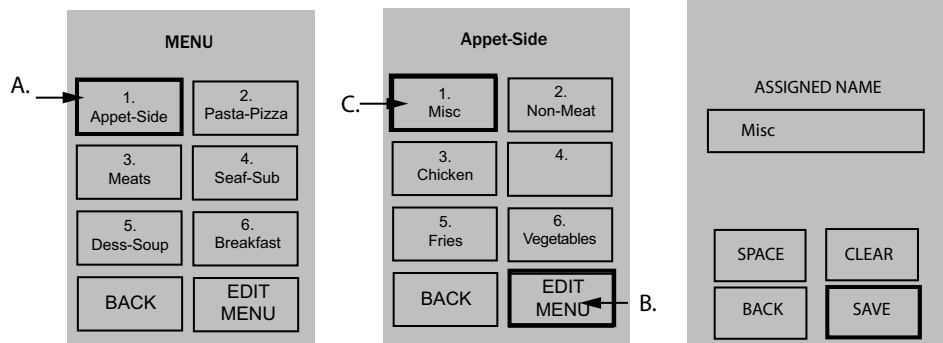

4. Highlight SAVE button and press dial to select when item is complete. If you do not wish to save the entry, press the back button to return the oven to Program Edit without saving.
5. Press BACK button to return to READY display.

# AXP5201 / AXP5203 / MXP5201 / MXP5203


## Quick Start Reference Guide | High Speed Commercial Combination Oven

### ADDING ITEM TO ITEM MENU

1. Select NEW from the PROGRAM MENU to add a new item or EDIT to edit item.
2. Select category you wish to change from MAIN MENU and ITEM GROUP Menus.
3. At the ITEM MENU, rotate dial until item to be added or changed is highlighted and press dial. The confirm screen will appear and ask you to confirm the change you're making. Touch CREATE or press knob to CONFIRM OVERWRITE. Note - When editing an item the CONFIRM OVERWRITE screen does not appear.



CREATING NEW ITEM GROUP

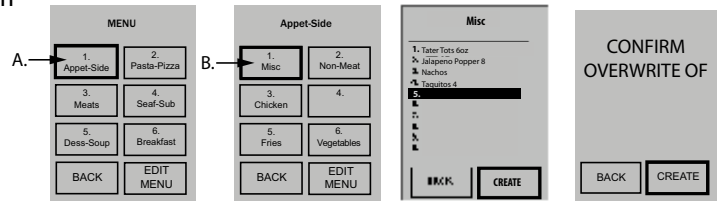

The cooking program menu will appear

4. For Stage 1 rotate the dial to input desired time.



5. Input desired temperature.



6. Input desired microwave power



7. Input desired fan speed



8. Input desired (IR) heating setting.



9. Press SAVE button on screen.





If necessary, repeat steps 4 through 8 for stages 2, 3, and 4.

10. Enter Item Names using letters on keypad and touch SAVE.



| Keypad Press | Character Display         |
|--------------|---------------------------|
| 1            | “, -, #, 1                |
| 2            | a, b, c, A, B, C, 2       |
| 3            | d, e, f, D, E, F, 3       |
| 4            | g, h, i, G, H, I, 4       |
| 5            | j, k, l, J, K, L, 5       |
| 6            | m, n, o, M, N, O, 6       |
| 7            | p, q, r, s, P, Q, R, S, 7 |
| 8            | t, u, v, T, U, V, 8       |
| 9            | w, x, y, z, W, X, Y, Z, 9 |
| 0            | &, %, \$, 0               |

### COOKING PROGRAM MENU

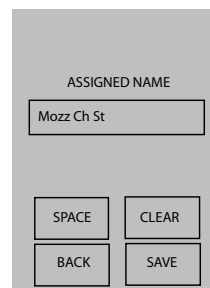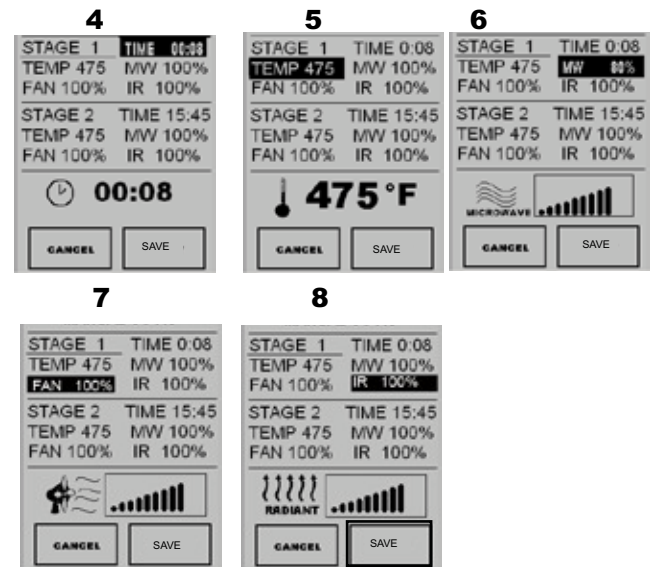

# AXP5201 / AXP5203 / MXP5201 / MXP5203

## Quick Start Reference Guide

High Speed Commercial Combination Oven

Refer to Product Safety Manual for Safety Statements. Complete Owner's Manual available online

### Changing User Options



There are several option you can change to customize the operation of the oven for your business. The table below shows these options; the factory setting is shown in bold type.

1. Oven must be off. To turn oven off, press OFF button on Keypad.
2. Press and hold "2" keypad for three seconds.
3. Choose option by turning dial to highlight desired option. Press knob and the next option will be highlighted.
4. Press SAVE when finished.

Off

| Option # | Setting Name         | Options                                                                                                |
|----------|----------------------|--------------------------------------------------------------------------------------------------------|
| 1        | Digit Entry          | <b>Single digit entry</b><br>Double digit entry                                                        |
| 2        | Menu Setting         | 1 Level<br>2 Levels<br><b>3 Levels</b>                                                                 |
| 3        | Manual Lock          | <b>Manual cooking allowed</b><br>Manual cooking not allowed                                            |
| 4        | Program Lock         | <b>Changes to programs allowed</b><br>Password needed                                                  |
| 5        | Door Open            | Opening door resets timer<br><b>Opening door pauses cook cycle</b>                                     |
| 6        | Keybeep              | Off<br><b>On</b>                                                                                       |
| 7        | Keybeep Volume       | Low<br>Medium<br><b>High</b>                                                                           |
| 8        | End of Cycle Beep    | Continuous until door is opened<br>Three beeps once<br><b>Three beeps repeating</b>                    |
| 9        | Keyboard Window      | Off<br>30 Seconds<br><b>60 Seconds</b><br>120 Seconds                                                  |
| 10       | Preheat Warnings     | <b>Off</b><br>Warn if oven not at temp                                                                 |
| 11       | Temperature Scale    | Temperatures are displayed in °F for 60 Hz models<br>Temperatures are displayed in °C for 50 Hz models |
| 12       | Clean Filter         | Off<br><b>Displays every 7 days</b><br>Displays every 30 days<br>Displays every 90 days                |
| 13       | Auto Menu            | From Preheat, go to Ready<br><b>From Preheat, go to Menu</b>                                           |
| 14       | Magnetron Control    | <b>No individual tube programming</b><br>Individual Tube Programming                                   |
| 15       | Microwave Only Mode  | <b>No microwave only mode</b><br>Allow microwave only mode                                             |
| 16       | Manual Program Save  | Do not save after manual cook<br><b>Save after manual cook</b>                                         |
| 17       | Automatic Shut Off   | 2 Hours<br><b>4 Hours</b><br>8 Hours<br>Disable                                                        |
| 18       | Data Transfer        | <b>Begin Transfer: Card to Oven</b><br>Begin Transfer: Oven to Card                                    |
| 19       | Preheat Temperature* | Enter Temperature in 5° increments<br>200°F (95°C) - 520°F (270°C)                                     |

### CLEAN FILTER



When this message displays, clean the air filter thoroughly. **Cleaning the air filter will not shut off the message.** The message will automatically stop displaying after 24 hours.

Depending on microwave use and environmental conditions, the filter may need to be cleaned more or less frequently. Once the frequency is determined, set the option for the appropriate time frame.

Air filter and vents must be cleaned regularly to prevent overheating of the oven. Refer to Owner's Manual for complete cleaning instructions.

\* Option 19 not on all models

# AXP5201 / AXP5203 / MXP5201 / MXP5203

## EZCard Programming

To program the oven using the EZCard:

Oven must be in Standby mode (Preheat must be OFF)

1. Open protective cover from bottom of keypad.

2. Insert the EZCard into the slot located below the vertical keypad.

**Note:** The EZCard can be inserted forwards or backwards.

3. From Standby, press and hold the “2” pad to go to “User Options”.

4. Go to Option #18 by pressing “Prev Option” on the screen or repeatedly pressing “Next Option”

5. Select the desired operation by highlighting “Transfer card to oven” or “Transfer oven to card” with the knob.

6. Press the “Start” pad to begin the transfer (The screen will indicate transferring and indicate done when transfer is complete.)

7. Press the SAVE pad to complete the process.

**Note:** You can exit from programming the oven by pressing “off” keypad.

8. Remove EZCard and close the protective cover.

Standby Mode



# Touch Panel Symbol Description MXP5221 / MXP5223


The oven screen displays menu choices. The keypad is used to navigate through onscreen menus.

The icons below will be used throughout this guide to indicate menu navigation.



## ON / OFF Keypad

- Press to preheat oven or turn oven off. (Fan will continue to run if temperature is over 200°F / 95°C).

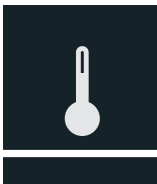

## TEMPERATURE Keypad

- Press to check set temperature
- Press to change temperature.
- Press Number keypads to enter or change temperature.
- Press Enter to save.

## Menu Screen



Use Scroll Up and Scroll Down to highlight food categories.



## PROGRAM Keypad

- Press to program new product or change existing programs.
- Press to start data key transfer.
- Press to change password.



## EDIT

- Select to program new product or change existing programs.




## DELETE

- Select to delete programs.



## MANUAL COOK Keypad

- Press for manual cooking.

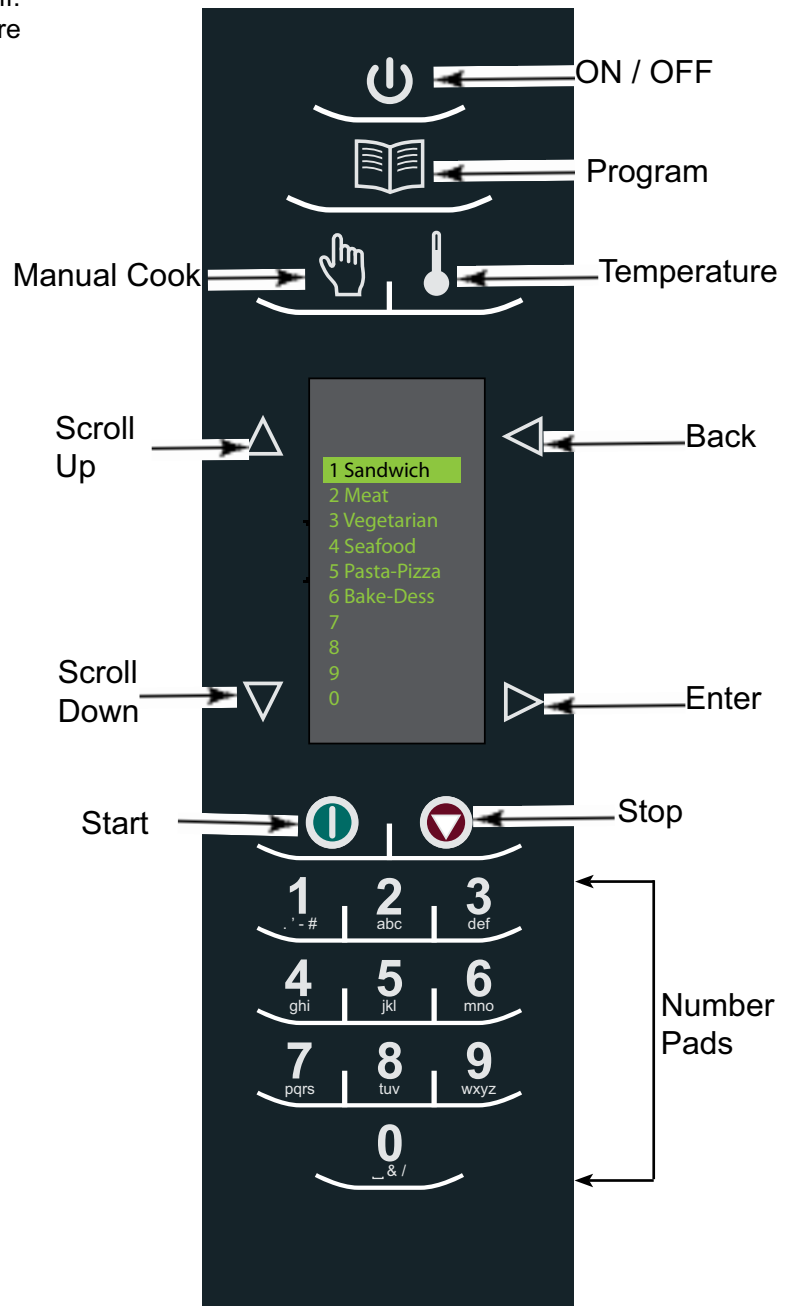

# Touch Panel Symbol Description MXP5221 / MXP5223




## SCROLL UP Keypad

- Press to change setting or move up to another setting.
- Press to move up to another highlighted area.



## SCROLL DOWN Keypad

- Press to change setting or move down to another setting.
- Press to move down to another highlighted area.

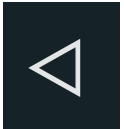

## BACK Keypad

- Press repeatedly to return to main menu.
- Press to go to previous screen.
- Press repeatedly to exit program mode.
- Press to erase a character.




## ENTER Keypad

- Press to save a menu.
- Press to save a MANUAL COOK program.
- Press to go to next screen.
- Press to save a name.
- Press to confirm deletion of a menu item.



## START Keypad

- Press to start cooking cycle.
- Press to save option in option mode.

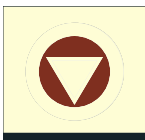


## STOP / RESET Keypad

- Press to stop cooking cycle.
- Press to exit option in option mode.




## NUMBER Keypads

 - Press to input temperature settings.
- Press to select menu items.
- Press to input names of menu items.



## Oven Cooling Mode Icon:

- The oven fan will continue to run to cool the oven. The oven Cooling Mode Icon appears and stays on until the oven temperature is below 200°F (95°C).
- To avoid damage to the convection motor do not turn off power by unplugging the unit or shutting off the power breaker until the fan stops.

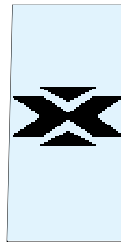

## Oven Off Icon:


- The Oven Off Icon appears for 5 minutes then the display goes blank.



## Oven Temperature Out of Range:

- When oven temperature is out of range of a cooking program set point. A line will be thru that item or items preventing it to be selected. Place the oven in Program Mode to view temperature set point of that cooking program. If the temperature of the oven needs to be changed after reviewing temperature for the cooking program, exit programming mode and change oven temperature.

## View Temperature

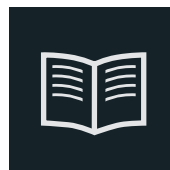

Program



EDIT

## Change Oven Temperature



## Preheat Temperature Warning Icon:

- Oven not up to temperature setpoint.
- Preheat temperature warning will flash when programming cook cycle until temperature setpoint is met.


## Quick Start Reference Guide | High Speed Commercial Combination Oven

Refer to Product Safety Manual for Safety Statements. Complete Owner's Manual available online

The oven screen displays menu options. The keypad is used to navigate through onscreen menus.

The icons below will be used throughout this guide to indicate menu navigation.

Use Scroll Up and  
Scroll Down to  
highlight food  
categories

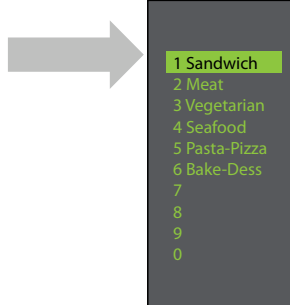

### COOKING MENUS

Your ovens ships with the cooking screens set to three menu levels.

1. The **MENU CATEGORIES** screen highlights product categories.
2. The **FOOD CATEGORIES** screen features products within the main menu category.
3. The **MENU ITEM** screen features products within the food category screen.


*NOTE: The oven can be set to operate with 1, 2, or 3 menu levels see user options for more details.*

The **ITEM MENU** breaks the item group menu down further allowing you to input quantities, different food types, etc.

### THREE MENU LEVELS



### TWO MENU LEVELS

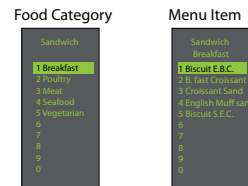

### ONE MENU LEVEL



Manual Cook

Scroll  
Up

Scroll  
Down

Start

ON / OFF

Program


Temperature

Back

Enter

Stop

Number  
Pads

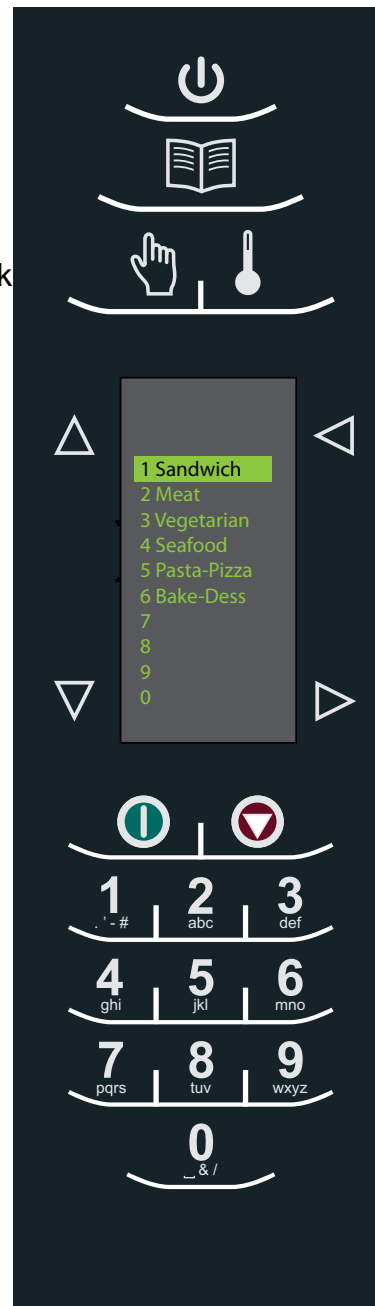

# Quick Start Reference Guide | High Speed Commercial Combination Oven

After the oven has preheated, the menu appears. The oven comes preprogrammed with several menu items to simplify cooking.

## MAIN COOKING MENU

Examples of Preprogrammed Menu Items Include:

### 1. Sandwich

- Breakfast
- Poultry
- Meat
- Seafood
- Vegetarian

### 2. Meat

- Poultry
- Beef
- Pork
- Appetizers
- Breakfast

### 3. Vegetarian

- Breakfast
- Lunch
- Vegetables
- Appetizers
- Potatoes

### 4. Seafood


- Fish
- Shellfish
- Misc

### 5. Pasta-Pizza

- Small/Large Pizza
- Pasta
- Miscellaneous

### 6. Bakery-Desserts

- Bread
- Desserts
- Snacks
- Breakfast
- Sweet

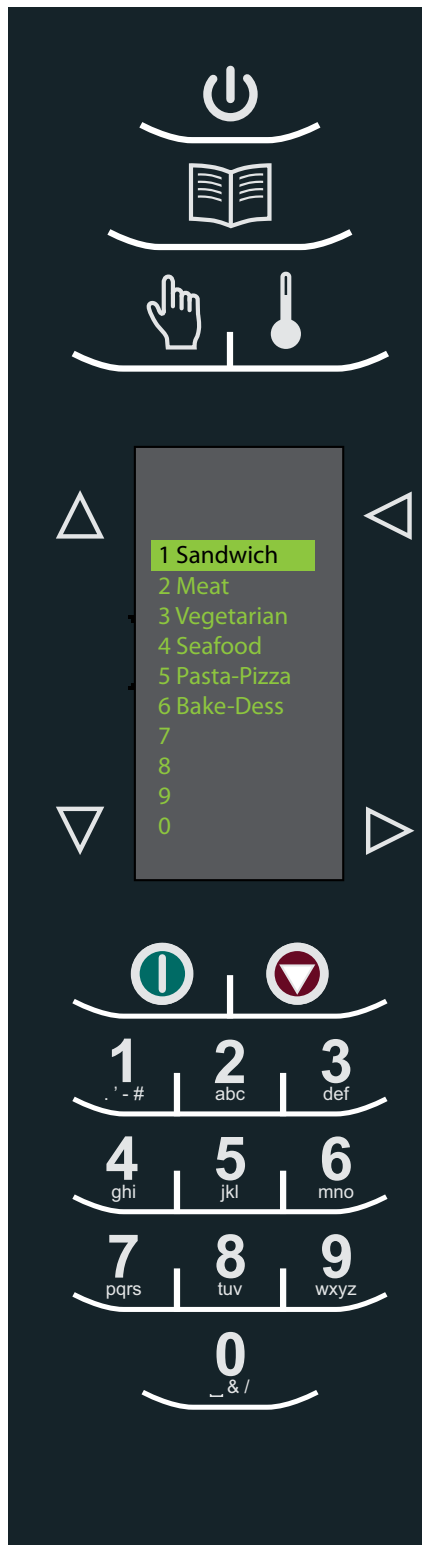

## Cooking with Preprogrammed Pads

To cook food using preprogrammed menu items

1. After oven has preheated to the desired temperature. Scroll or press number to choose desired food category from menu.

2. Choose menu item group and press Enter to select.




3. Highlight item you wish to cook.

**Note:** If there is a line through the menu item, then preheat temperature is different than menu item preset temperature. The control will not allow you to select that item.

4. Open oven door, place food in oven and close door.

5. Press Enter to start cooking process.

6. At end of cooking cycle, oven beeps and displays animation at right to indicate food can be removed.

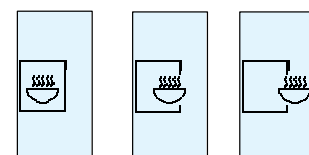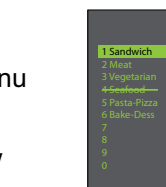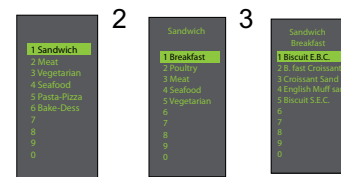

**Note:** Menu Items may vary by model.

## Quick Start Reference Guide | High Speed Commercial Combination Oven


### Using MANUAL COOK (Option 4 has to be set to allow manual cooking. See options section)

Use Manual cooking when a specific time and cooking power levels are desired. It's very useful when you are experimenting with new food items. Maximum cook time is 100 minutes. Microwave, Fan and IR can be set in 11 different power levels between 0-100% at 10% increments.


- After oven has preheated to desired temperature (200-520°F / 95-270°C), press Manual Cook keypad.




- Use Scroll Up  and Scroll Down  keypad to move between cooking elements and time
- For Stage 1, enter cooking time using the number pads (up to 100 minutes). Press Scroll Down keypad to move to the following cooking element.

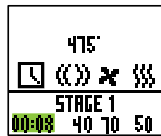


- Enter desired microwave power (press 0 (for 0%), 1 (10%), press 5 (50%)... and press 1 twice for full power (100%). Press Scroll Down keypad to move to the following cooking element

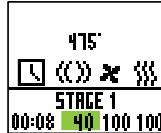

- Input desired fan speed using number keypad.

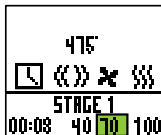

- Enter desired Infrared (IR) power (press 0 (for 0%), 1 (10%), press 5 (50%)... and press 1 twice for full power (100%).

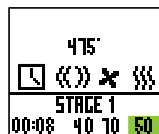


- Repeat steps 2-6 for each cooking stage, if more than one cooking stage is necessary.
- Place food in oven.

- Press Start keypad to begin cooking. The display counts down. The food category is displayed and the word Manual is in the display.



- At end of cooking cycle, oven beeps and displays animation below:

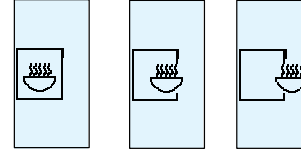

- Remove food from oven.

*Note: To interrupt cooking cycle, open door. To resume cooking, close door and press start.*

### ? How to Save A Manual Cook Program to the Menu

If satisfied with the cooking results achieved from manual cooking, save the manual cook item:

- To save, press Enter  keypad.

**Note:** Option 5 must be set to save after manual cook.




- Highlight Menu Category by using Scroll Up  or Scroll Down  keypad or create new Menu Category name. Press Enter  keypad.

- Highlight food category by using Scroll Up  and Scroll Down  keypad to select open menu location.

- In the Menu Item screen, highlight the location where you wish to add the new name.

- When new location is highlighted Press Program  keypad.

- Use Number  keypads to enter item name. Use Back  keypad to delete any mistakes. This step needs to be repeated for each menu level. See user option 2 for text case options.

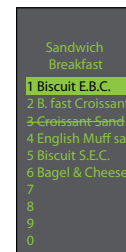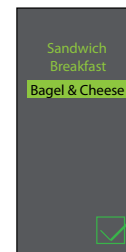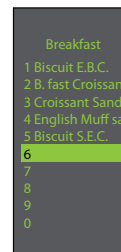

- Press Enter  keypad when finished.

- To exit Manual Cook mode, press Back  keypad repeatedly to take you to the Main Menu screen.

## Quick Start Reference Guide | High Speed Commercial Combination Oven

### ACCESSING THE PROGRAM MENU

1. To access the PROGRAM mode, press the Program  keypad.

2. Then select Edit  with Scroll Up  or Scroll Down  from the screen.

3. Press Enter  then select the food category, food item to be programed using the Scroll Up  or Scroll Down  keypad.

### PROGRAM MENU OVERVIEW

**PROGRAM**  Add a new menu item

**ENTER**  To save or go to next screen

**BACK**  Go to previous screen

**SCROLL UP**  or **SCROLL DOWN** 

**EDIT**  Change an existing menu item

**DELETE**  Delete an existing menu item

### EDITING OR ADDING MENU PROGRAM SETTINGS

1. Press the Program  keypad.

2. Highlight Edit with Scroll Up  or Scroll Down  keypad.

3. Press the Enter  keypad

4. Use the Scroll Up  or Scroll Down  keypad to highlight Menu Category and/or Food Category where menu item to edit is saved. Press Enter  keypad.




5. At the Menu item screen, use Scroll Up  or Scroll Down  keypad to highlight the desired item to edit.



6. Press the Enter keypad and cook settings will appear.

7. Use Scroll Up  or Scroll Down  keypad to Select Temperature, Time, Microwave %, Fan% and IR% setting. Use number keypads to enter the time, temperature or cooking powers. For MW, Fan or IR, press 0 for 0%, 1 for 10%..... 9 for 90% or 1 twice for 100%.

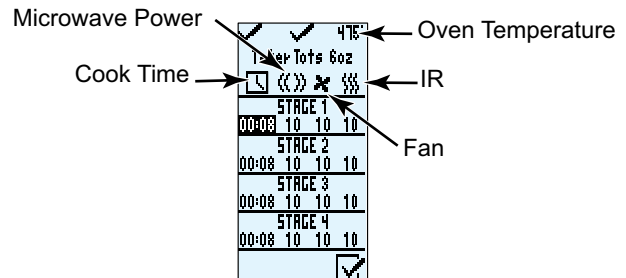

8. When cook settings are complete press Enter  keypad.

9. Press Back  keypad repeatedly to exit program mode.

# Quick Start Reference Guide | High Speed Commercial Combination Oven

## EDITING OR ADDING NEW NAMES FOR MENU CATEGORY OR FOOD CATEGORY OR MENU ITEM

1. Press the Program  keypad.
2. Highlight Edit  with Scroll Up  or Scroll Down  keypad and press Enter  keypad.
3. Using the Scroll Up  or Scroll Down  keypad to highlight location where new category or item will be placed. (In order to navigate to the following screen, Scroll Up  and Scroll Down  keypad to highlight desired menu and press Enter  keypad). For example:

### I. Editing Name in Menu Category Screen

- A. Highlight Item
- B. go to Step 4



### II. Editing Name in Food Category

- A. Highlight desired Menu Category
- B. Press Enter



- C. Highlight desired Food Category



- D. Go to Step 4

### III. Editing / Adding Name in Menu Item

In order to add program settings, you must name your item first.

- A. Highlight desired Menu Category



- B. Press Enter

- C. Highlight desired Food Category



- D. Press Enter

- E. Highlight desired Menu Item



- F. Go to Step 4

4. Press the Program  keypad.

# MXP5221 / MXP5223

## Quick Start Reference Guide


### High Speed Commercial Combination Oven

There are several options you can change to customize the operation of the oven for your business. The table below shows these options; the factory setting is shown in bold type.

1. Oven must be off. To turn oven off, press ON/OFF  keypad.
2. Press and hold "2" keypad until option screen appears.
3. Choose option by pressing Enter  keypad then use Scroll Up  and Scroll Down  keypad to select option to highlight desired option.
4. Press Start  keypad to save and press Stop / Reset  to exit options mode.
5. Option 6, if "Password Needed" is highlighted press Program keypad to view or edit password.

| Options# | Setting Name                                                                                                                                                                              | Options                                                                                                                                |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| 01       | Digit Entry                                                                                              | Single digit entry                                                                                                                     |
|          |                                                                                                                                                                                           | Double digit entry                                                                                                                     |
| 02       | Text Case                                                                                                | Caps                                                                                                                                   |
|          |                                                                                                                                                                                           | Lower case                                                                                                                             |
|          |                                                                                                                                                                                           | Mixed                                                                                                                                  |
| 03       | Menu Setting                                                                                                                                                                              | 01=10 Items                                                                                                                            |
|          |                                                                                                                                                                                           | 02 =100 Items                                                                                                                          |
|          |                                                                                                                                                                                           | 03 = 360 items                                                                                                                         |
| 04       |  (Manual) Cook          | Manual cooking allowed                                                                                                                 |
|          |                                                                                                                                                                                           | Manual cooking not allowed                                                                                                             |
| 05       |  (Manual) Save          | Save after manual cook                                                                                                                 |
|          |                                                                                                                                                                                           | Do not save after manual cook                                                                                                          |
| 06       | Program Password                                                                                         | Password needed                                                                                                                        |
|          |                                                                                                                                                                                           | Changes to programs allowed                                                                                                            |
| 07       | Door Reset                                                                                               | Opening door resets timer                                                                                                              |
|          |                                                                                                                                                                                           | Opening door pauses cook cycle                                                                                                         |
| 08       | Keyboard Activation                                                                                    | Off                                                                                                                                    |
|          |                                                                                                                                                                                           | 30 Seconds                                                                                                                             |
|          |                                                                                                                                                                                           | 60 Seconds                                                                                                                             |
|          |                                                                                                                                                                                           | 120 Seconds                                                                                                                            |
| 09       |  Keybeep            | On                                                                                                                                     |
|          |                                                                                                                                                                                           | Off                                                                                                                                    |
| 10       |  Keybeep Volume     | Low                                                                                                                                    |
|          |                                                                                                                                                                                           | Medium                                                                                                                                 |
|          |                                                                                                                                                                                           | High                                                                                                                                   |
| 11       |  End Of Cycle Beep  | Three beeps once                                                                                                                       |
|          |                                                                                                                                                                                           | Three beeps repeating                                                                                                                  |
|          |                                                                                                                                                                                           | Continuous until door is opened                                                                                                        |
| 12       |  Preheat Warning    | Warn if oven not at temp                                                                                                               |
|          |                                                                                                                                                                                           | Off                                                                                                                                    |
| 13       |  Temperature Scale  | Temperatures are displayed in °F for 60Hz models                                                                                       |
|          |                                                                                                                                                                                           | Temperatures are displayed in °C for 50Hz models                                                                                       |
| 14       | Clean Filter Reminder                                                                                  | Off                                                                                                                                    |
|          |                                                                                                                                                                                           | Displays every 7 days                                                                                                                  |
|          |                                                                                                                                                                                           | Displays every 30 days                                                                                                                 |
|          |                                                                                                                                                                                           | Displays every 90 days                                                                                                                 |
| 15       |  (Microwave) Only   | Allow microwave only mode                                                                                                              |
|          |                                                                                                                                                                                           | No microwave only mode                                                                                                                 |
| 16       | Auto Off                                                                                               | Disable                                                                                                                                |
|          |                                                                                                                                                                                           | 2 Hours                                                                                                                                |
|          |                                                                                                                                                                                           | 4 Hours                                                                                                                                |
|          |                                                                                                                                                                                           | 8 Hours                                                                                                                                |
| 17       | Data Transfer                                                                                          | Begin Transfer: Card to Oven. Press Program Keypad  |
|          |                                                                                                                                                                                           | Begin Transfer: Oven to Card. Press Program Keypad  |

### CLEAN FILTER

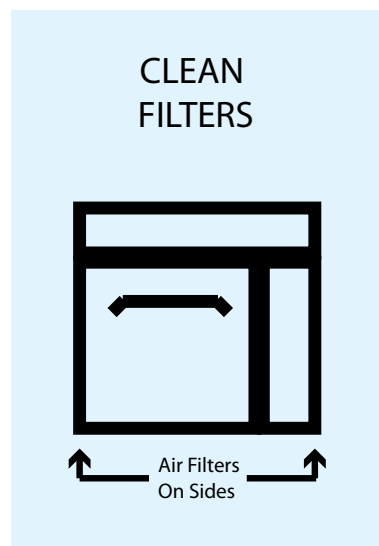

When this message displays, clean the air filter thoroughly. **Cleaning the air filter will not shut off the message.** The message will automatically stop displaying after 24 hours.

Depending on microwave use and environmental conditions, the filter may need to be cleaned more or less frequently. Once the frequency is determined, set the option for the appropriate time frame.

Air filter and vents must be cleaned regularly to prevent overheating of the oven. Refer to Owner's Manual for complete cleaning instructions.

# MXP5221 / MXP5223

 
 
## USB Flash Drive Programming

### To program the oven using standard flash drive:

Oven must be in Off mode (Preheat must be OFF)

1. Remove protective cover from bottom of keypad.
2. Insert the flash drive into the slot located below the keypad.

**Note:** After inserting flash drive in USB port wait at least **6 seconds** before proceeding.

3. From Off, press and hold the “2” pad to go to “User Options”.
4. Go to Option #17 by pressing “Back  ” or repeatedly pressing “Enter  ”
5. Select the desired operation by highlighting “Transfer card to oven  ” or “Transfer oven to flash drive  ” with the Scroll Up  or Scroll Down  keypad.



**Note:** After inserting flash drive in USB port wait at least **6 seconds** before proceeding to Step 6.

6. Press the “Program  ” pad to begin the transfer (The screen will indicate “TRANSFERRING” and indicate “DONE” when transfer is complete.) **Note:** The screen will indicate “ NO CARD” if the data key is not detected.
7. Remove flash drive and close the protective cover.

# **4 | AXP5201 / AXP5203, MXP5201 / MXP5203, MXP5221 / MXP5223 50 Hz Oven Construction**


# OVEN CONSTRUCTION PANELS (TOP & SIDE)

To remove side panels loosen the three top T-15 torx screws.

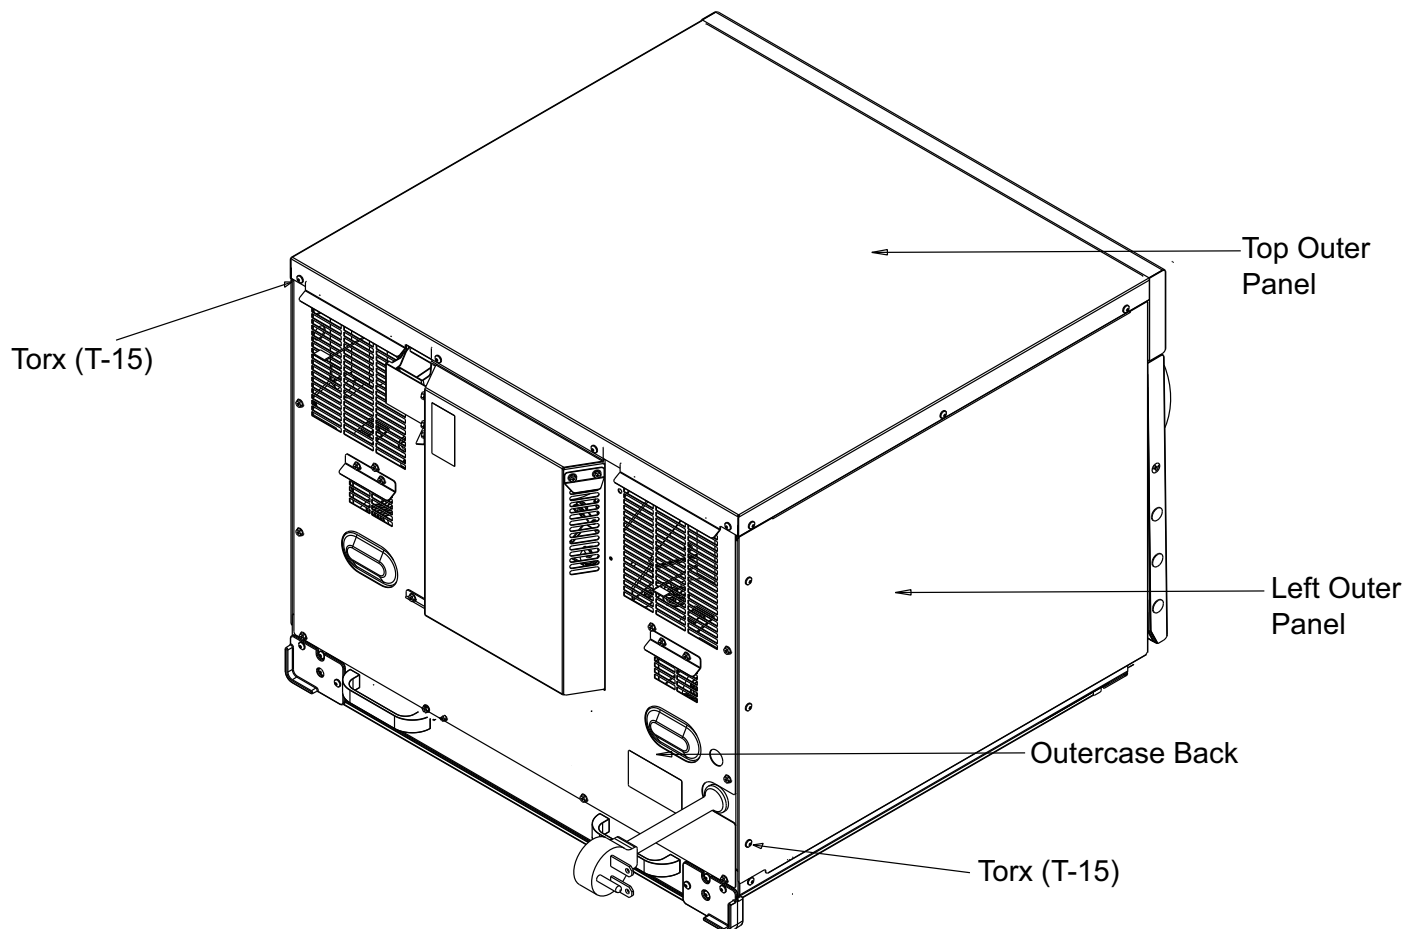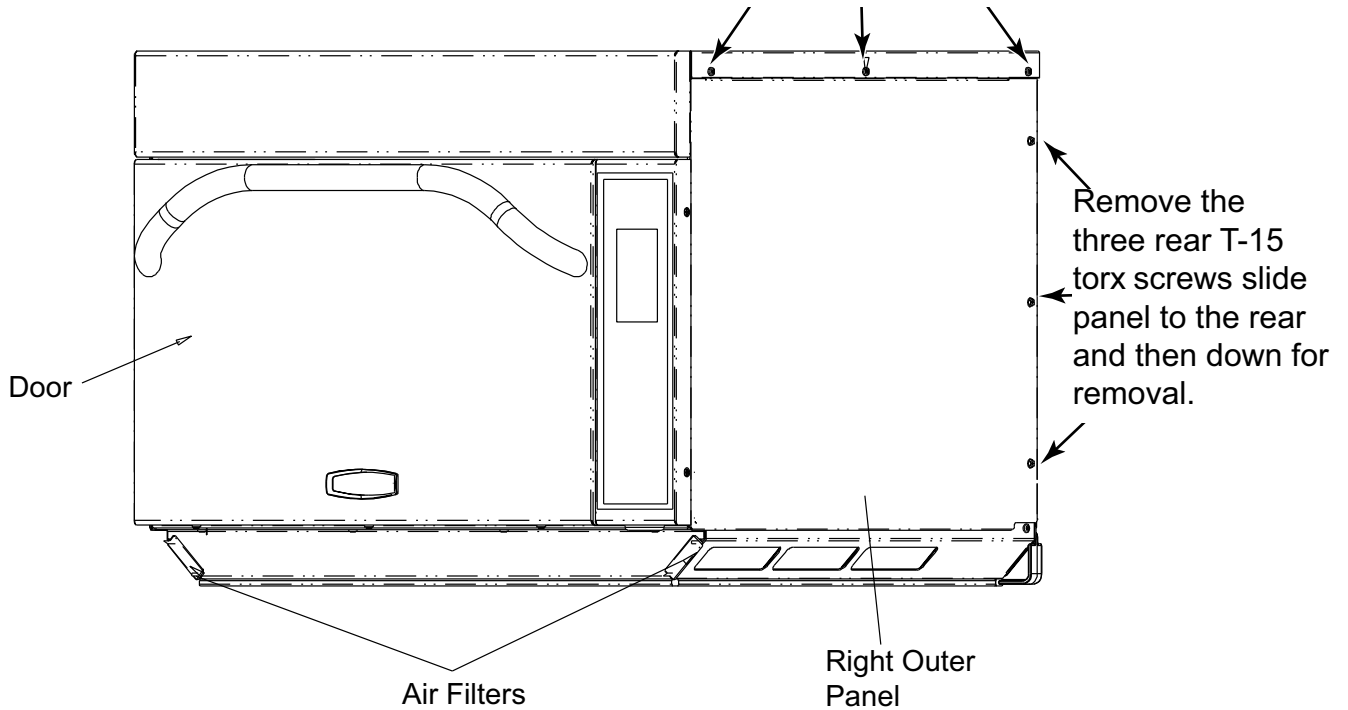


# Door Construction

## Door Assembly

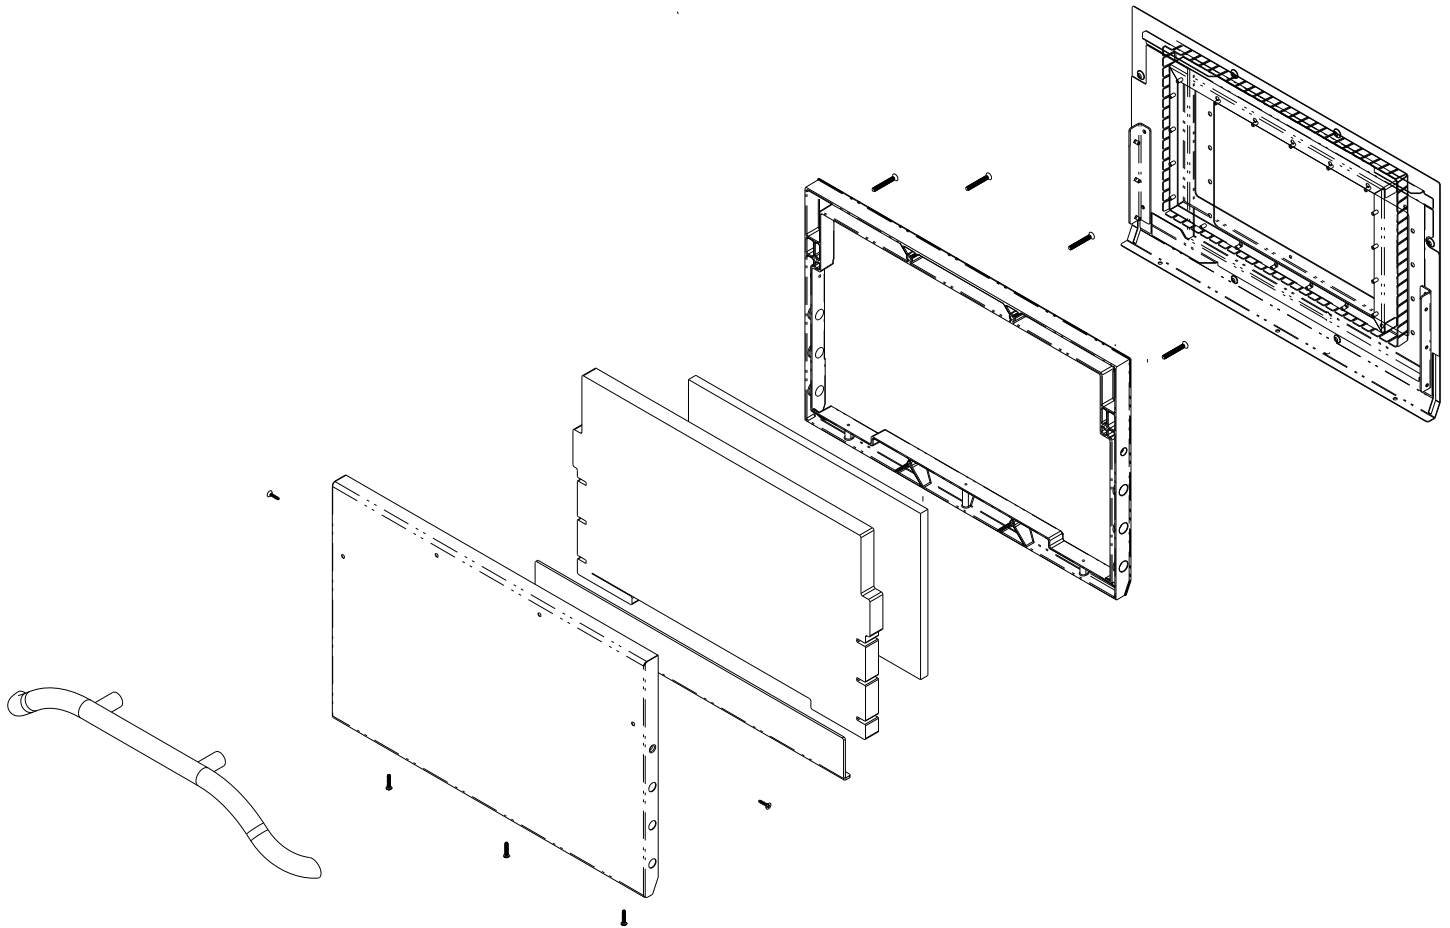

# Oven Construction

HV Transformers  
Magnetrons  
Fuses  
Sensor  
Triac's  
Magnetron TCO's  
Capacitor / Diodes

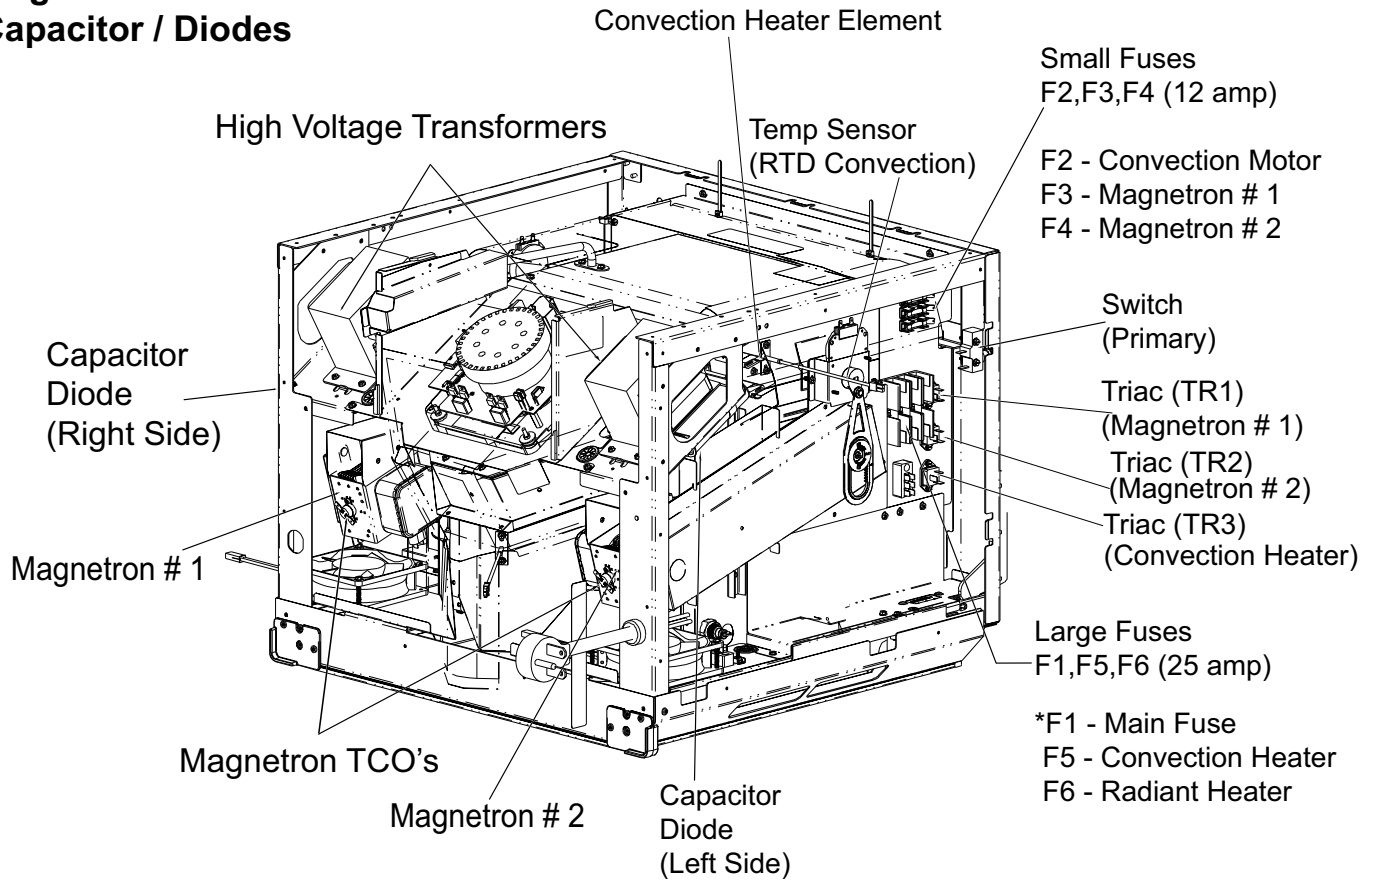

**\*Note: If Main Fuse (F1) is blown  
replace Relay Monitor  
Board and Power Relay.**

# Oven Construction

Circuit Boards

Power Relay

Limiter


Triac

Thermocouple

Temp Sensor (RTD)

Cooling Fans


Convection Motor

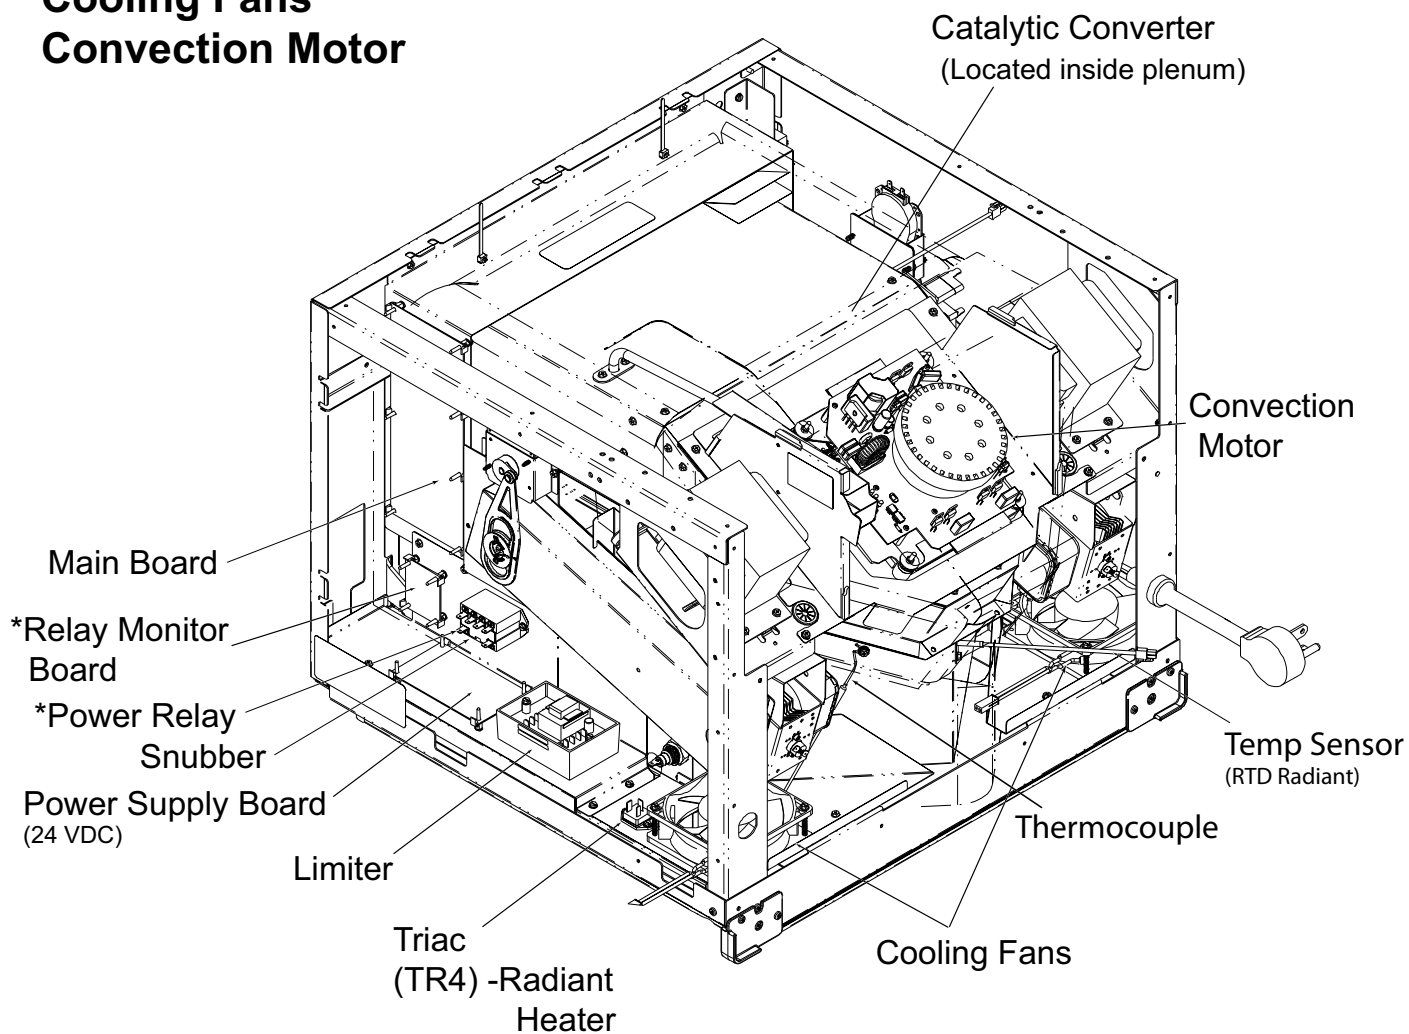

**\*Note: If Main Fuse (F1) is blown  
replace Relay Monitor Board  
and Power Relay.**

# Oven Construction


## AXP5201 / MXP5201 AXP5203 / MXP5203 CONTROL PANEL ASSEMBLY

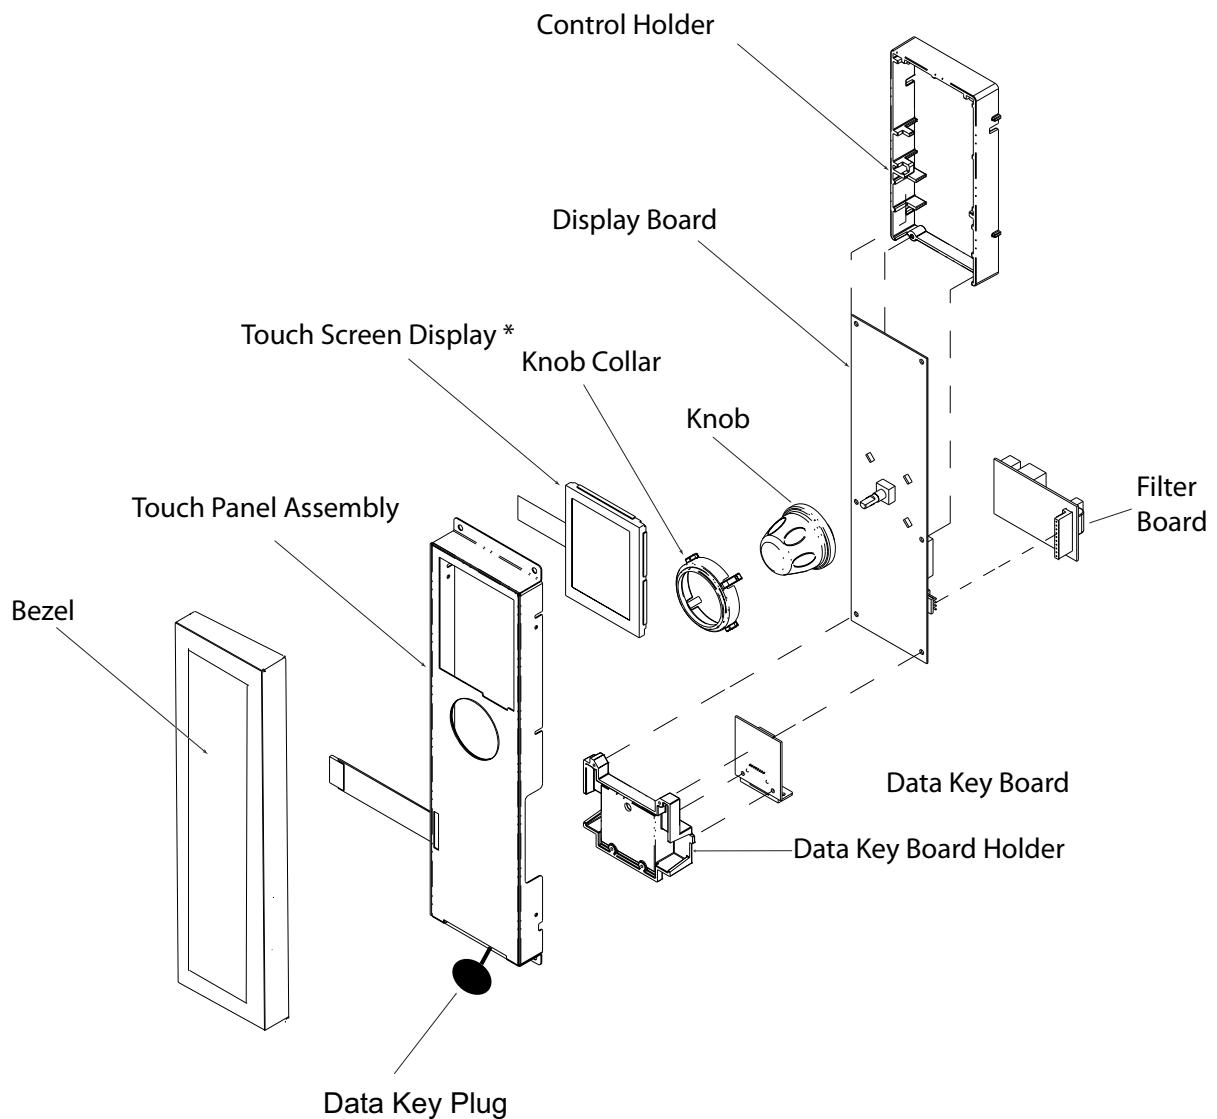

**\* Caution:** Do not handle touch screen display by the sides. This may damage the display circuitry. Handle using the corners.



# Oven Construction

## MXP5221 / MXP5223 CONTROL PANEL ASSEMBLY

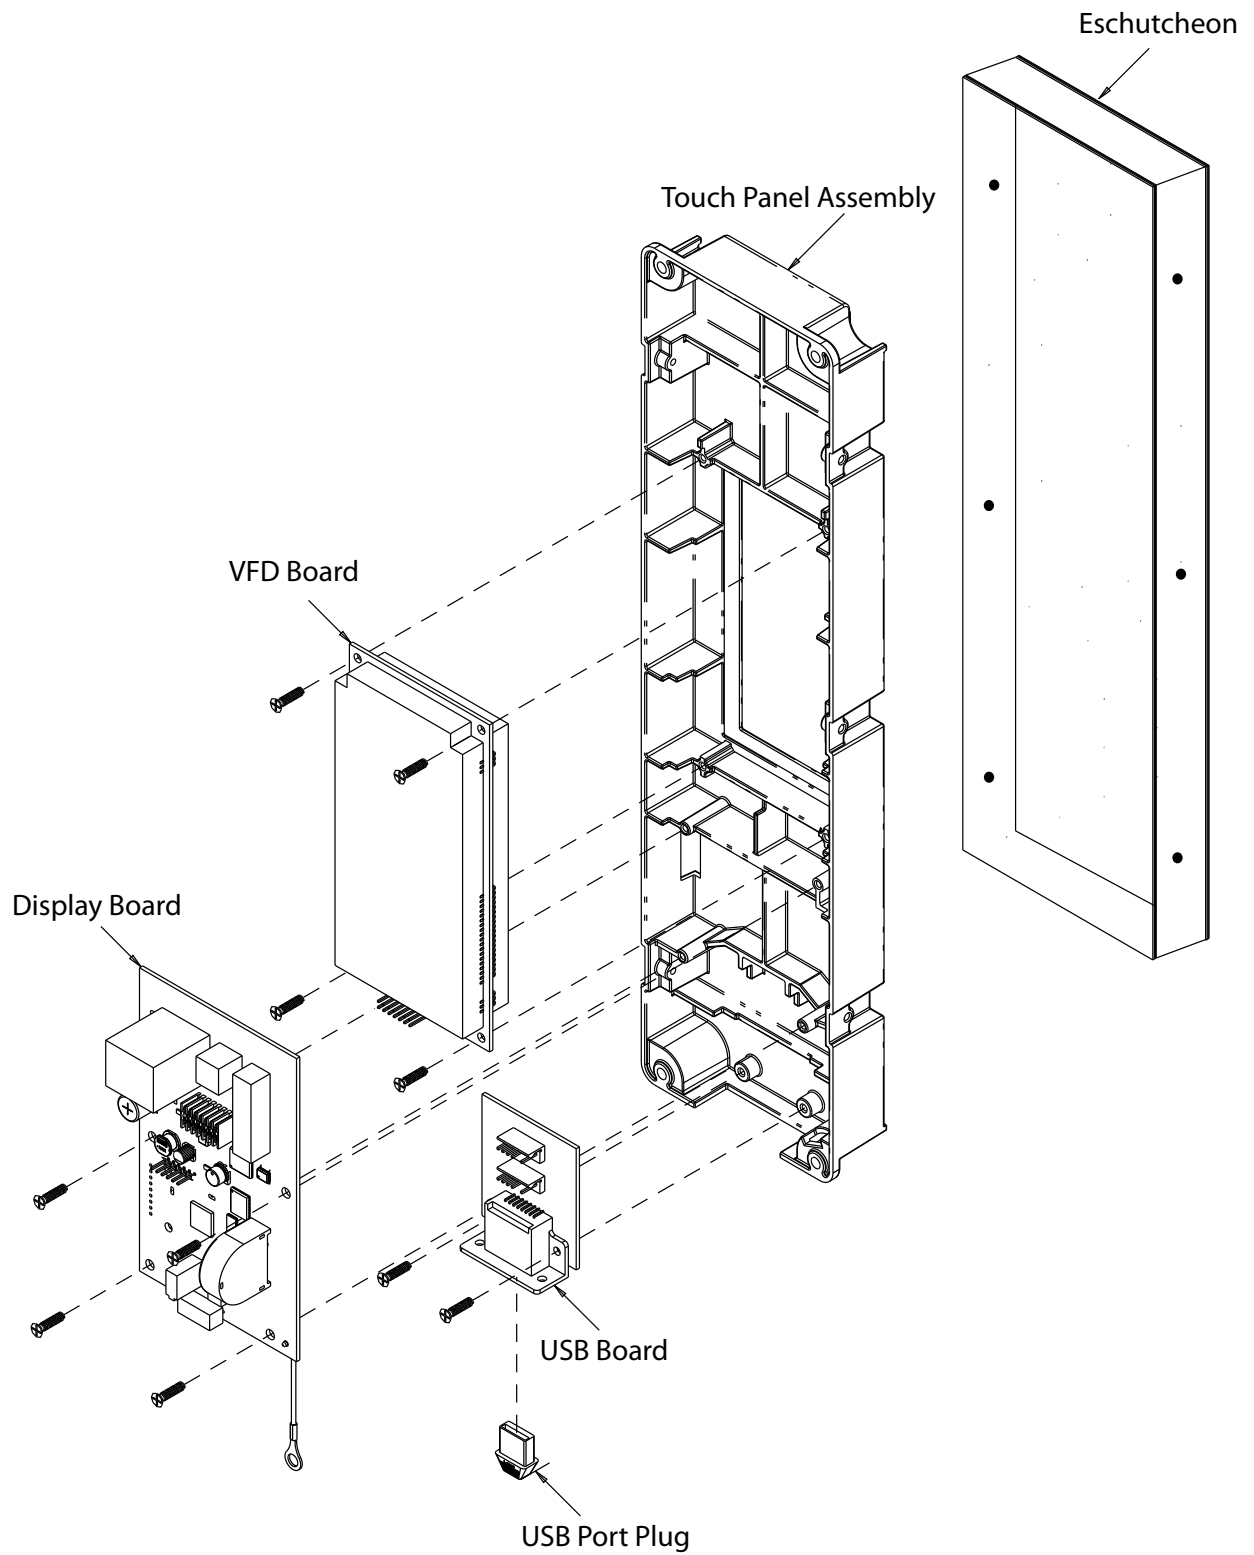

# Oven Construction

Antenna Motor  
Cam  
Gear Assembly  
Antenna  
Rivet, Plastic  
Radiant Heater

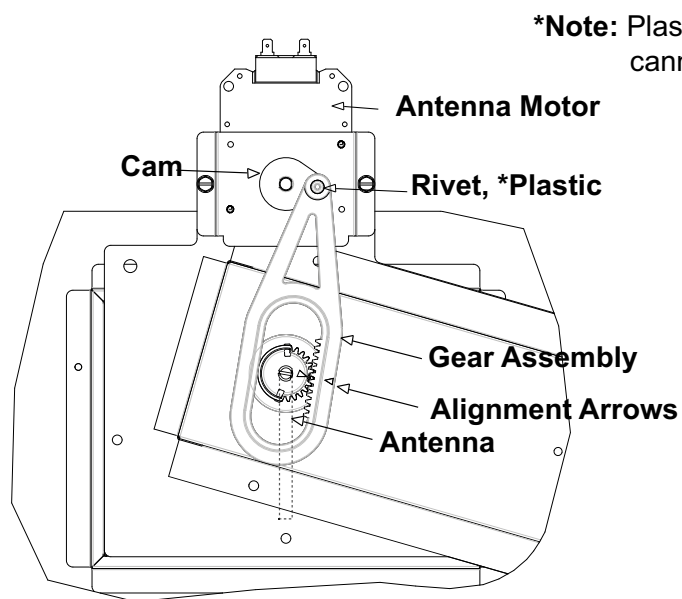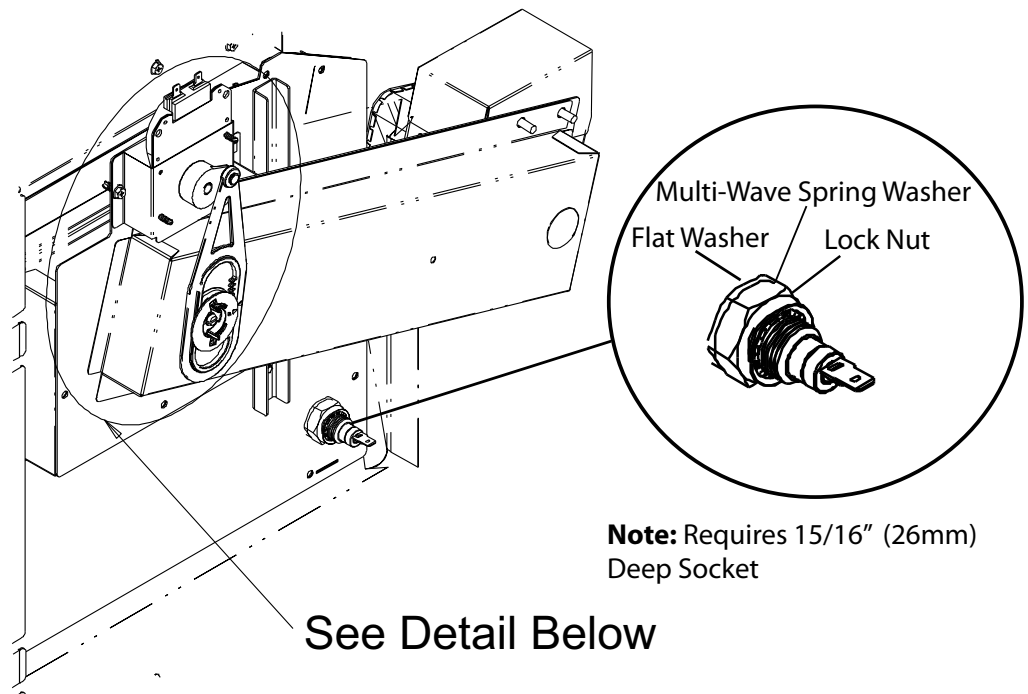


## Oven Construction

### MXP5221 / MXP5223 Ceramic Tray



- **Ceramic trays** can be replaced without replacing waveguide. Ceramic trays for both waveguides are available as a separate kit which includes (1) ceramic tray and a tube of high temperature sealer with installation instructions.

### MXP5221 / MXP5223 Replaceable Waveguide

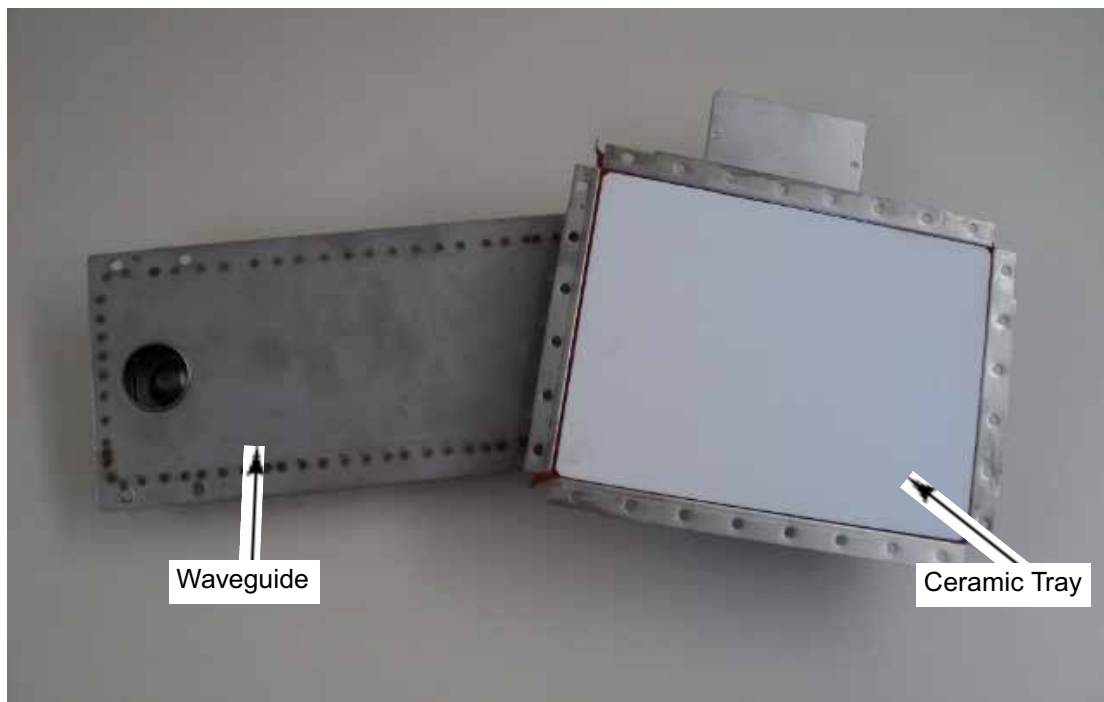

- **Waveguides** are replaceable on MXP5221 / MXP5223 models. Waveguides are available as a right hand or left hand waveguide kit which includes new mounting nuts, studs, antenna, and ceramic tray installed in waveguide with installation instructions.

# **5 | AXP5201 / AXP5203 / MXP5201 / MXP5203 / MXP5221 / MXP5223 50 Hz Interlock Switch Service**

# Interlock Switch Service

## Oven Switch Replacement & Interlock Switch Adjustment

Attach Ohm-Meter to  
Wire Harness Connectors



Switch Adjustment  
Lever

Mounting Screw

Figure 1

## Adjustment

### Switch Test:

When the door is opened or closed, the left door hinge activates the secondary / monitor switches.

1. Connect an ohm-meter to wire harness (as shown in figure 1, to verify switch activation).

**Note:** The switch assembly should activate when the door gap is approximately 1/4 inch (6mm).

### Switch Adjustment:

1. Loosen mounting screws.
2. Slide adjustment lever for proper switch activation.
3. Tighten mounting screws.
4. Preheat oven to set temperature and verify switch adjustment settings and function.


**Note:** To ensure proper switch adjustment, the switch mounting **MUST** be tightened after each adjustment prior to testing the door alignment.

## Replacement

### Removal:

1. Remove switch assembly mounting screw.
2. Push switch assembly 1/2 inch (13mm) towards back of oven.
3. Twist mounting leg towards oven cavity to release mounting tab.
4. Push assembly towards back of oven to remove.

**Note:** New replacement switch assembly has been adjusted at the factory, no adjustment should be necessary.

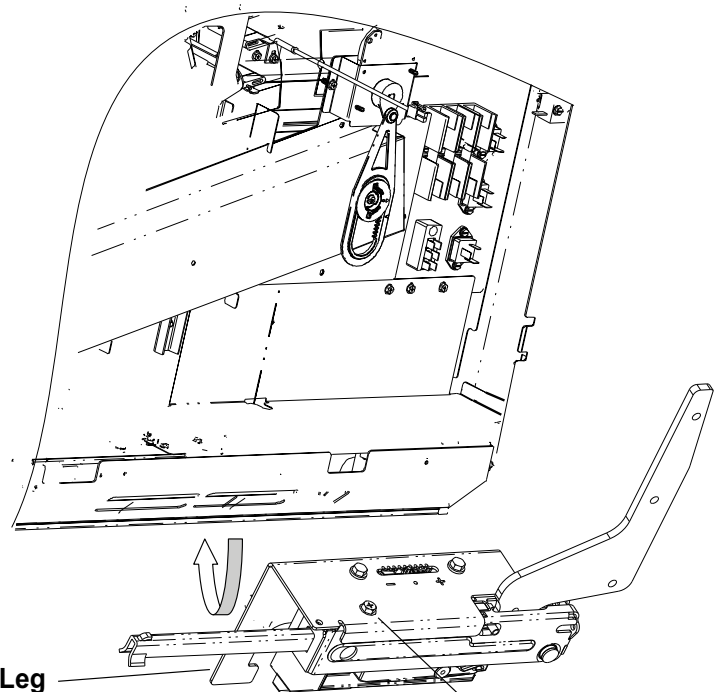

Mounting Leg

Mounting Screw

# **6 | AXP5201 / AXP5203 / MXP5201 MXP5203 / MXP5221 / MXP5223 50 Hz Oven Performance Test**

# Oven Performance Test AXP5201 / AXP5203 / MXP5201 / MXP5203

**Note:** To run Oven Performance Test the, OVEN CAVITY MUST BE AT ROOM TEMPERATURE, and the display must read MICROWAVE ONLY mode. See below using oven as a microwave oven. If MICROWAVE ONLY is not in display you must go to User Options and activate MICROWAVE ONLY option.

## Changing User Options:

1. Oven must be OFF.
2. Press and hold Pad "2" for 5 seconds.



3. Rotate dial to highlight: ALLOW MICROWAVE ONLY mode.
4. Press SAVE.

## USING OVEN AS A MICROWAVE OVEN

This option is only available if the oven cavity temperature is less than 200°F.

When user option MICROWAVE ONLY is set as a default, the MICROWAVE ONLY button appears on the PREHEAT MENU.

See page 11 for Oven Performance Test procedure.

To run Performance Test using microwave only follow these steps:

1. Place filled (1000 ml) test bowl in oven.
2. Press MICROWAVE ONLY button.




3. Press manual cook.
4. Press Pad 3 twice for 33 seconds.
5. Press Start.
6. Oven will beep, remove test bowl from oven.
7. Press OFF to return to PREHEAT MENU.

## PREHEAT MENU



# Oven Performance Test MXP5221 / MXP5223

**Note:** To run Oven Performance Test the, OVEN CAVITY MUST BE AT ROOM TEMPERATURE, and the display must read MICROWAVE ONLY mode. See below using oven as a microwave oven. If MICROWAVE ONLY icon does not appear in the bottom right corner of the display you must go to User Options and activate MICROWAVE ONLY option #15.

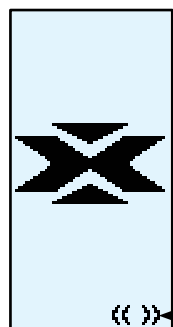


← Microwave Only Icon

1. Oven must be off. To turn oven off, press ON/OFF  keypad.
2. Press and hold “2” keypad until option screen appears.
3. Choose option by pressing Enter  keypad then use Scroll Up  and Scroll Down  keypad to select option #15. Scroll Up  and Scroll Down  keypad to highlight Microwave Only Icon. 
4. Press Start  keypad to save and press Stop / Reset  to exit options mode.
5. Option 6, if password needed is highlighted press Program keypad to view or edit password.

See page 38 for Oven Performance Test procedure.

 To run Performance Test using microwave only follow these steps:

1. Place filled (1000 ml) test bowl in oven.
2. Press manual cook. 
3. Press Pad 3 twice for 33 seconds.
4. Press Start  keypad.
5. Place filled (1000 ml) test bowl in oven.
6. Press Start  keypad.
7. Oven will beep, remove test bowl from oven.
8. After test is complete return to options and reset option #15 from  to .

# Oven Performance Test

All Amana and Menumaster microwave oven power outputs are rated using the IEC705 standards. Using the IEC705 test method requires precision measurements and equipment that is not practical to be performed in the field. Using the test shown below will indicate if the oven performance is satisfactory.

## Test equipment required:

- 1000 ml test container and thermometer.
- Digital watch / watch with a second hand for use on ovens with electromechanical timers.

## Important Notes:

- Low line voltage will cause low temperature rise / power output.
- Ovens must be on a dedicated circuit, properly grounded, and polarized. Other equipment on the same circuit may cause a low temperature rise / power output.
- This test and results are not a true IEC705 test procedures and are only intended to provide servicers with an easy means of determining if the microwave oven cooking output is correct.

## Procedure

1. Fill the test container to the 1000 ml line with cool tap water.

**NOTE:** Water temperature should be approximately 60°F / 16°C

2. Using the thermometer, stir water for five to ten seconds; measure, and record the temperature (T1).
3. Place test container of water in the center of oven cavity and close door.
4. Heat the water for a 33-second full power cycle.

**NOTE:** Use a digital watch or a watch with a second hand for ovens with electromechanical timers.

5. At end of the cycle, remove test container. Using the thermometer, stir water for five to ten seconds and record temperature (T2).
6. Subtract the starting water temperature (T1), from the ending water temperature (T2) to obtain the temperature rise ( $\Delta T$ ).
7. If the temperature rise ( $\Delta T$ ) meets or exceeds the minimum, the test is complete. If the temperature rise ( $\Delta T$ ) fails to meet the minimum temperature rise, test the line voltage to verify it is correct. Then repeat steps 1-6 making sure to change the water. If the temperature rise ( $\Delta T$ ) fails to meet the minimum temperature rise again the oven will require service.

### Minimum Temperature Rise at Thirty -Three (33) Seconds Run Time

| $\Delta T$<br>(°F) | Cooking<br>Power Output | $\Delta T$<br>(°F) | Cooking<br>Power Output | $\Delta T$<br>(°C) | Cooking<br>Power Output | $\Delta T$<br>(°C) | Cooking<br>Power Output |
|--------------------|-------------------------|--------------------|-------------------------|--------------------|-------------------------|--------------------|-------------------------|
| 10.....            | 1000                    | 20.....            | 2000                    | 5.....             | 1000                    | 11.....            | 2000                    |
| 11.....            | 1100                    | 21.....            | 2100                    | 5.5.....           | 1100                    | 11.5.....          | 2100                    |
| 12.....            | 1200                    | 22.....            | 2200                    | 6.5.....           | 1200                    | 12.....            | 2200                    |
| 14.....            | 1400                    | 24.....            | 2400                    | 7.5.....           | 1400                    | 13.....            | 2400                    |
| 17.....            | 1700                    | 25.....            | 2500                    | 9.5.....           | 1700                    | 13.5.....          | 2500                    |
| 18.....            | 1800                    | 27.....            | 2700                    | 10.....            | 1800                    | 15.....            | 2700                    |
| 19.....            | 1900                    | 30.....            | 3000                    | 10.5.....          | 1900                    | 16.5.....          | 3000                    |

# **7**

 
 
 

 
 
## **AXP5201 / AXP5203 / MXP5201 / MXP5203 MXP5221 / MXP5223 50 Hz Component Testing Procedures**

# Component Testing Procedures



## WARNING













To avoid risk of electrical shock, personal injury or death; disconnect power to oven and discharge capacitor before servicing, unless testing requires power.
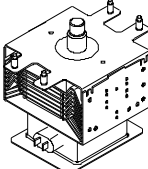
| Illustration                                                                                                                                                        | Component            | Test                                                                                                                                                                                                    | Results                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                    | Thermal cutout       | Disconnect all wires from TCO.<br>Measure resistance across terminals.<br>Control TCO .....<br>Magnetron TCO .....                                                                                      | Closed at 235°F (113°C) and open at 150°F (66°C)<br>Open at 300°F (149°C) and closed at 257°F (125°C)                                                                                                                                 |
|                                                                                    | Thermal cutout       | Cavity TCO .....                                                                                                                                                                                        | Open at 262°F (128°C)                                                                                                                                                                                                                 |
|                                                                                    | Diode                | <b>Discharge Capacitor</b><br>Remove diode lead from capacitor and connect ohmmeter.<br><br>Reverse leads for second test.                                                                              | Infinite resistance should be measured in one direction and 50KΩ or more in the opposite direction.<br><b>NOTE:</b> Ohmmeter must contain a battery of 6 volts minimum.                                                               |
| <br><br>Triac 1 (top) is for front element<br>Triac 2 (middle) is for rear element | Triac                | Disconnect wires to triac.<br><br>Measure resistance from:<br>MT1 to MT2 .....<br>MT1 to Gate .....<br><br>MT2 to Gate .....<br>All terminals to ground .....                                           | <b>Caution - Do not operate oven with wire to terminal MT2 removed.</b><br><br>Infinite<br>Approximately 15 Ω, then reverse meter leads 30 Ω<br>Infinite<br>Infinite                                                                  |
|                                                                                                                                                                     |                      | Measure voltage from:<br>MT1 to Gate                                                                                                                                                                    | 0.8 VAC when energized. If no voltage, check H.V. board and wiring.                                                                                                                                                                   |
|                                                                                  | Capacitor            | <b>Discharge Capacitor</b><br>Remove wires from capacitor terminals and connect ohmmeter, set on highest resistance scale to terminals.<br><br>Also check between each terminal and capacitor case..... | Between Terminals: Meter should momentarily deflect towards zero then return to over 5 MΩ. If no deflection occurs, or if continuous deflection occurs, replace capacitor.<br><br>Terminal to Case: Infinite resistance               |
|                                                                                  | Snubber assembly     | Disconnect wires to snubber.<br><br>Measure resistance across terminals.....                                                                                                                            | Infinite                                                                                                                                                                                                                              |
|                                                                                  | Magnetron            | <b>Discharge Capacitor</b><br>Remove wires from magnetron and connect ohmmeter to terminals. Also check between each terminal and ground.                                                               | Between Terminals: Less than 1 Ω<br><br>Each terminal to ground measures Infinite resistance.<br><b>Note:</b> This test is not conclusive. If oven does not heat and all other components test good replace the magnetron and retest. |
|                                                                                  | Cooling blower motor | Measure voltage at motor                                                                                                                                                                                | Approximately 24 vdc at incoming leads                                                                                                                                                                                                |
|                                                                                  | Stirrer motor        | Remove all wires from terminals.<br><br>Measure resistance from:<br>Terminal to terminal.....                                                                                                           | Approximately 29K Ω                                                                                                                                                                                                                   |
|                                                                                  | Line filter          | Remove all wires from terminals.<br>Measure resistance from:<br>Red to Brown wire.....<br>Blue to Blue wire .....                                                                                       | Infinite Ω<br>Infinite Ω                                                                                                                                                                                                              |

# Component Testing Procedures
         
## **WARNING**


To avoid risk of electrical shock, personal injury or death; disconnect power to oven and discharge capacitor before servicing, unless testing requires power.
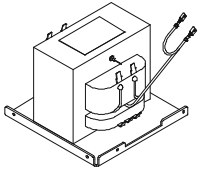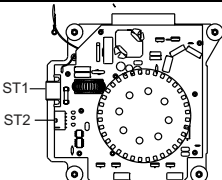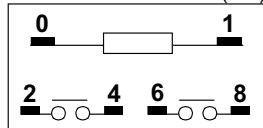
| Illustration                                                                        | Component                                    | Test                                                                                                                                                                                                                                  | Results                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Transformer                                  | <b>Discharge Capacitor</b><br>Remove all wires from terminals.<br><br>Measure resistance from:<br>230 to COM.....<br>208 to COM.....<br>230 to Ground.....<br>208 to Ground.....<br>Terminal 5 to 6.....<br>Terminal 4 to Ground..... | Less than 1 $\Omega$<br>Less than 1 $\Omega$<br>Infinite<br>Infinite<br>Less than 1 $\Omega$<br>Approximately 46 $\Omega$                                                               |
|    | Convection blower motor                      | Use Service test to verify operation<br><br>ST1-1 to ST1-3<br>BK BU<br>ST2<br>GN - YL - OR -BU-----                                                                                                                                   | Line Voltage<br><br>Disconnect ST2<br>Fan should operate at High Speed                                                                                                                  |
|    | Convection heating element (Top)             | Disconnect wires from terminals.<br><br>Measure resistance across heating element.<br>Element 2000 W .....                                                                                                                            | Approximately 19 - 22 $\Omega$                                                                                                                                                          |
|   | Heating element (Bottom)                     | Disconnect wires from terminals.<br><br>Measure resistance across heating element.<br>Element 3000 W .....                                                                                                                            | Approximately 14 $\Omega$                                                                                                                                                               |
|  | Resistance thermal device (RTD)              | Temperature<br><br>32°F (0°C) .....<br>350° (177°C) .....                                                                                                                                                                             | Resistance<br><br>1000 $\Omega$<br>1654 $\Omega$                                                                                                                                        |
|  | Limiter                                      | Red - Orange Lead Terminals .....<br>Yellow - Yellow Leads disconnected from Limiter .....<br>Terminal 6 - Terminal 7 .....                                                                                                           | Line Voltage<br>24vdc across yellow leads (Polarity must be correct)<br>0 $\Omega$ Indicates continuity                                                                                 |
|  | Relay (Power)                                | Measure resistance from:<br>Terminal 0 to terminal 1 (coil) .....<br>                                                                              | Approximately 6 to 7 M $\Omega$<br><br><b>NOTE:</b> Analog meter is recommended for measurement.<br><b>NOTE:</b> If using a digital meter it must contain a battery of 6 volts minimum. |
| Wire harness                                                                        | High voltage board to display module harness | Test continuity of wires .....                                                                                                                                                                                                        | Indicates continuity                                                                                                                                                                    |
|  | Primary switch                               | Com — <br>NO —<br>NC —                                                                                                                             | NC to Com Indicates continuity<br>NO to Com Indicates infinity                                                                                                                          |
|  | Secondary switch                             | <br>COM —<br>NC —<br>NO —                                                                                                                          | NC to Com Indicates continuity<br>NO to Com Indicates infinity                                                                                                                          |
|  | Monitor Interlock switch                     | <br>1 0 3 0 2                                                                                                                                      | 1 to 2 Indicates continuity<br>1 to 3 Indicates infinity                                                                                                                                |
|  | Power supply board -24 Volt                  | Red to White lead - J2 Power Supply Board                                                                                                                                                                                             | Approximately 24vdc                                                                                                                                                                     |

# **8** | **AXP5201 / AXP5203 / MXP5201 / MXP5203 50 Hz Service Test**

Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203

| Access to Service Mode                                                            |                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                                                                            | While at the Main Screen, press the following sequence on the keypad:                                                                                                                                                                                                                       |
|  | <p><b>NOTE:</b> The “MICROWAVE ONLY” button may or may not be present.</p> <ol style="list-style-type: none"><li>1. Press OFF pad until PRESS TO PREHEAT appears.</li><li>2. Press Hidden Pad.</li><li>3. Press pads 1 - 3 - 5 - 7 - 9</li></ol> <p>The display indicates SERVICE MODE.</p> |

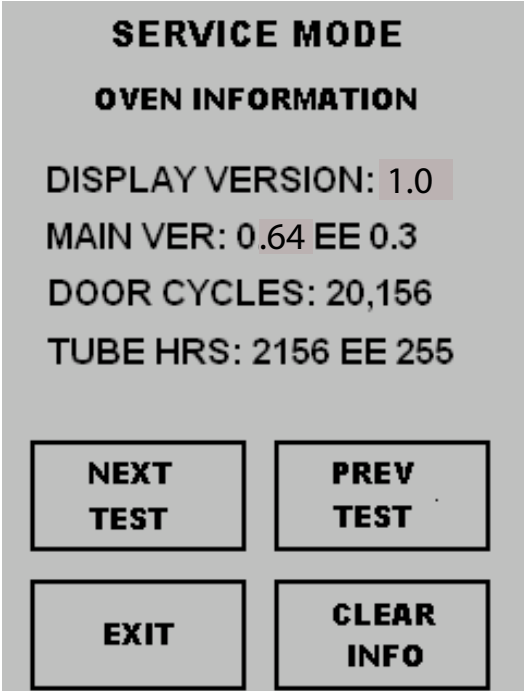
| Oven Information |                                                                                     | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen           |  | <p>This screen is Oven Information showing the versions of software in the control boards and information about door cycles and tube hours.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>CLEAR INFO:</b> Press this pad to reset the Door Cycles and Tube Hours back to zero.</p> <p><b>EXIT:</b> Press this pad to return to the ovens Main Menu</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203

| Manual Operation of Magnetrons #1 & #2 |                                                                                                                                                                                                                                                           | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                                 | <div> <p><b>SERVICE MODE</b></p> <p><b>MAGNETRONS #1 &amp; #2</b></p> <p>MAGNETRON #1: 9 AMPS</p> <p>MAGNETRON #2: 9 AMPS</p> <p>ACCEPTABLE RANGE:</p> <div> <div>NEXT TEST</div> <div>PREV TEST</div> <div>CANCEL</div> <div>TURN ON</div> </div> </div> | <p>This screen will allow operation of Magnetron #1 and #2 together and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the magnetrons on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, each mag's amp draw should be <b>5 – 12 amps</b>.</p> |


| Manual Operation of Magnetron #1 |                                                                                                                                                                                                                     | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                           | <div> <p><b>SERVICE MODE</b></p> <p><b>MAGNETRON #1</b></p> <p>CURRENT DRAW: 9 AMPS</p> <p>ACCEPTABLE RANGE:</p> <div> <div>NEXT TEST</div> <div>PREV TEST</div> <div>CANCEL</div> <div>TURN ON</div> </div> </div> | <p>This screen will allow operation of Magnetron #1 and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the magnetron on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>5 – 12 amps</b>.</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203
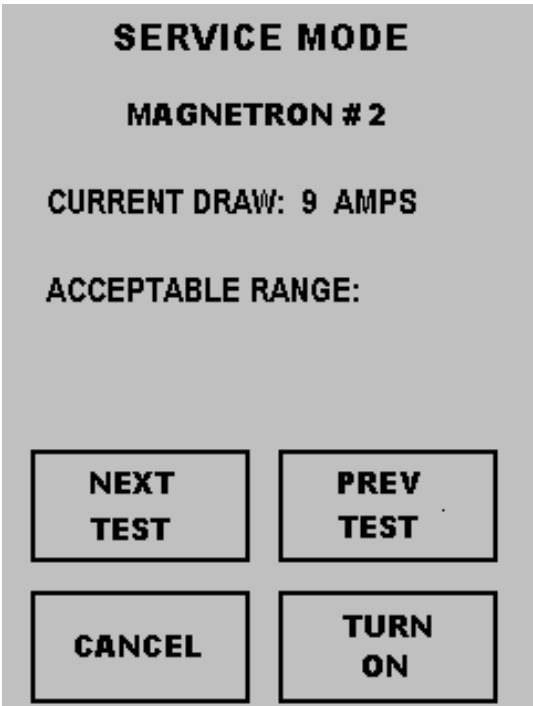
| Manual Operation of Magnetron #2 |                                                                                   | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                           |  | <p>This screen will allow operation of Magnetron #2 and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the magnetron on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>5 – 12 amps</b>.</p> |

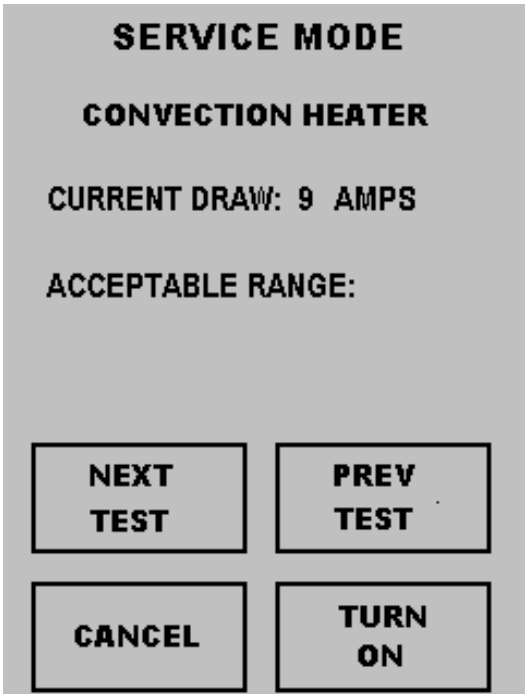
| Convection Heater |                                                                                     | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen            |  | <p>This screen will allow operation of the convection heater and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the heater on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>5 – 12 amps</b>.</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203
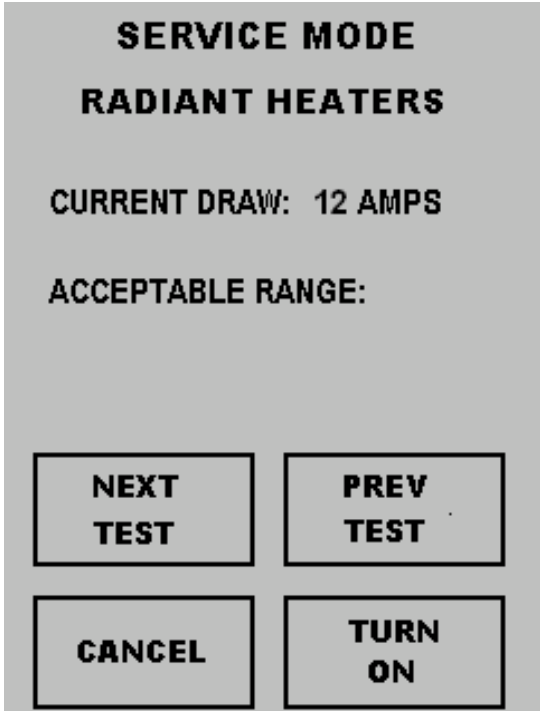
| Radiant Heater |                                                                                   | 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen         |  | <p>This screen will allow operation of the radiant heater and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the heater on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>10 – 16 amps</b>.</p> |

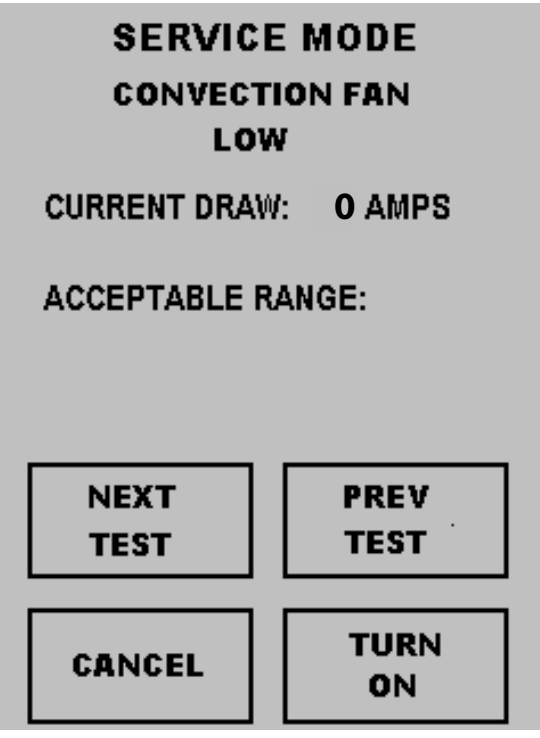
| Convection Fan – Low Speed |                                                                                     | 7                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                     |  | <p>This screen will allow operation of the convection fan at a low speed and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the convection fan on and off at a low speed.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw is too low to read.</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203
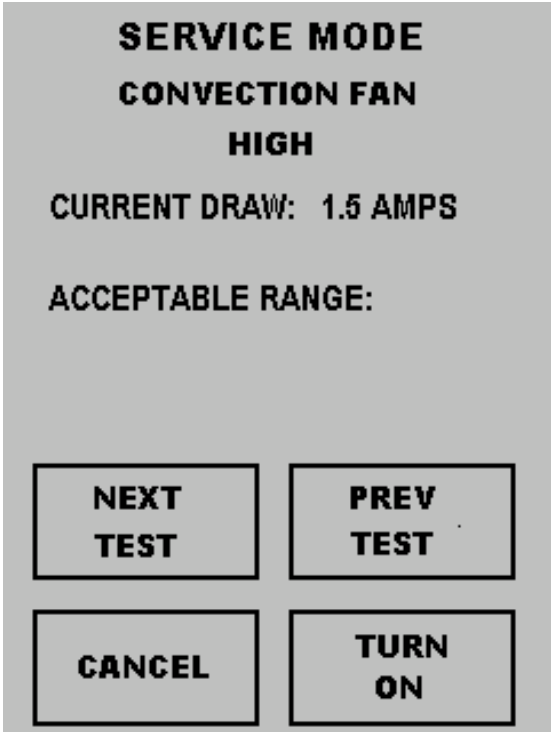
| Convection Fan – High Speed |                                                                                   | 8                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                      |  | <p>This screen will allow operation of the convection fan at a high speed and show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the convection fan on and off at a high speed.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>0.6 – 2.6 amps.</b><br/>(It may not read amps)</p> |

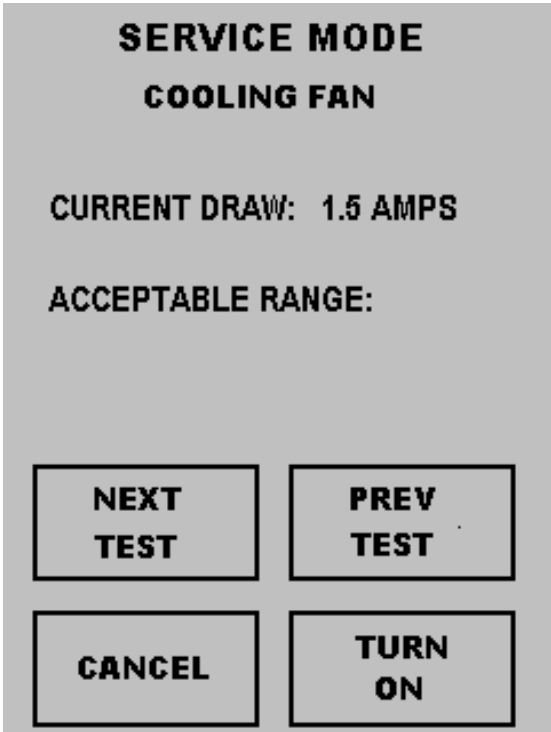
| Cooling Fan |                                                                                     | 9                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen      |  | <p>This screen will allow operation of the cooling fan show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the cooling fan on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>0.9 – 2.5 amps.</b><br/>(It may not read amps)</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203
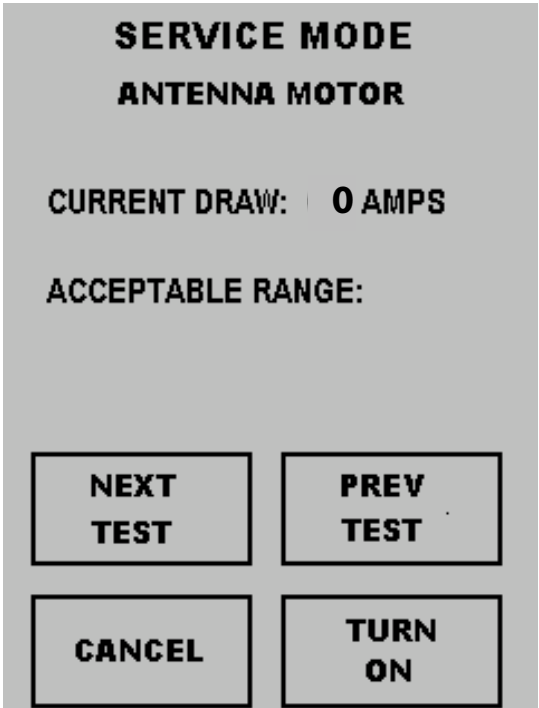
| Antenna Motor |                                                                                   | 10                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen        |  | <p>This screen will allow operation of the antenna motor show the number of amps being drawn.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>TURN ON:</b> This pad will toggle between turning the antenna motor on and off.</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>RANGE:</b> Under normal operation, the amp draw may be to low to read.</p> |

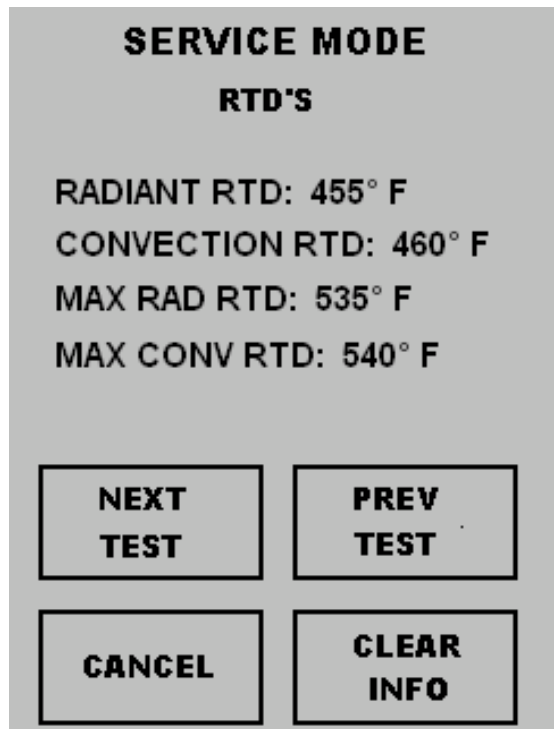
| RTD Status |                                                                                     | 11                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     |  | <p>This screen will show the temperatures being reported to the RTD's in the oven. The maximum temps seen by the controller are also recorded for diagnostic purposes.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>CLEAR INFO:</b> Press this pad to reset the Maximum RTD temps to zero.</p> |


# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203
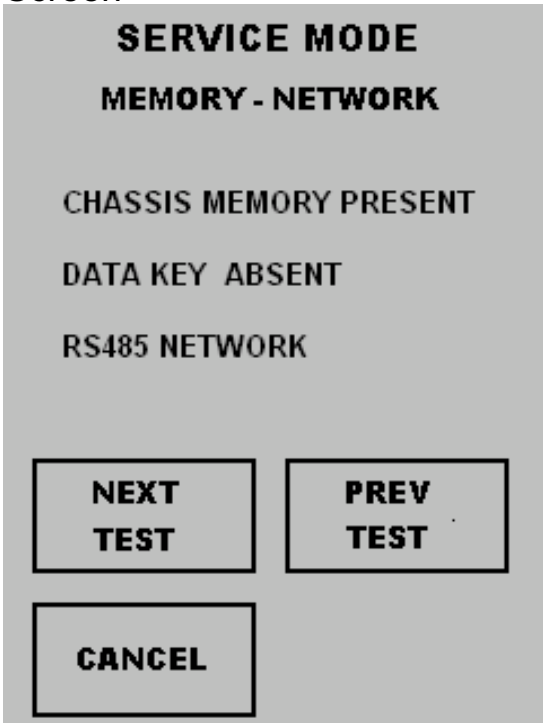
| Memory / Network Status |                                                                                   | 12                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                  |  | <p>This screen will show which memory chips are present and if the oven is hooked up to an external network.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> |
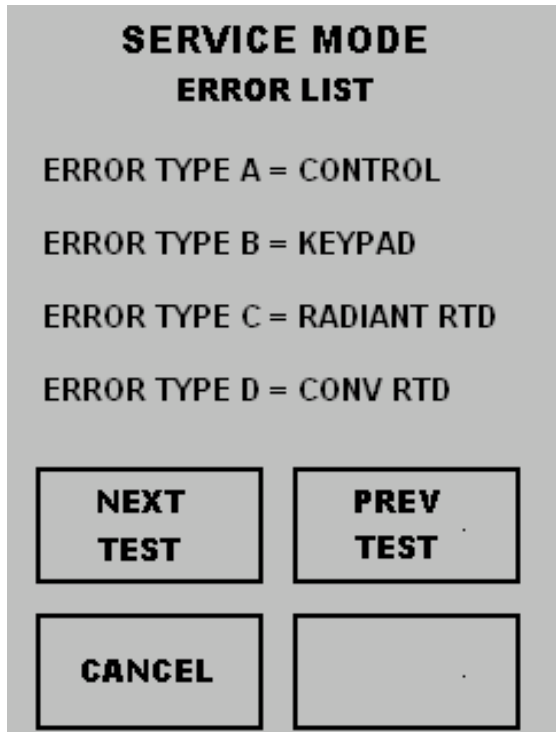
| Error List |                                                                                     | 13                                                                                                                                                                                                                                                                                                            |
|------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     |  | <p>This screen will show a description of the types of errors that can occur.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> |

# Service Test AXP5201 / AXP5203 / MXP5201 / MXP5203

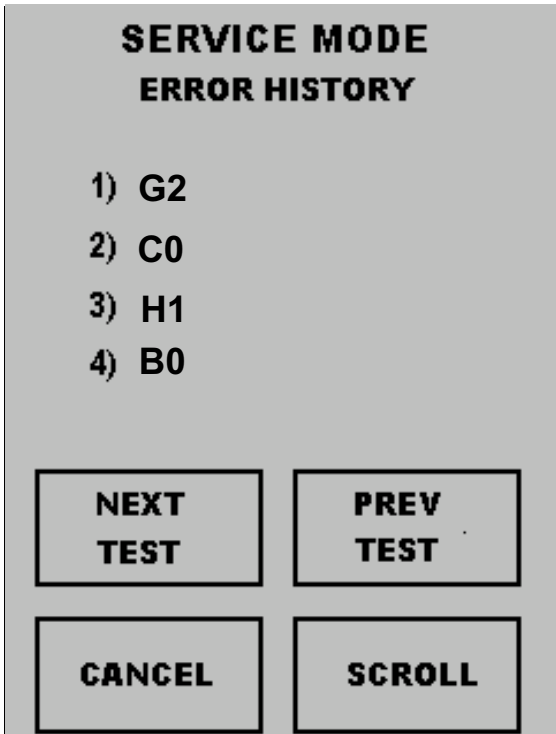
| Error History |                                                                                   | 14                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen        |  | <p>This screen will show the previous error codes that have occurred in the oven.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>SCROLL:</b> This pad will advance through the history of the error codes. (1-10)</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> <p><b>Note:</b> To clear codes: Press and hold Pad 1 until Code(s) disappear.</p> |
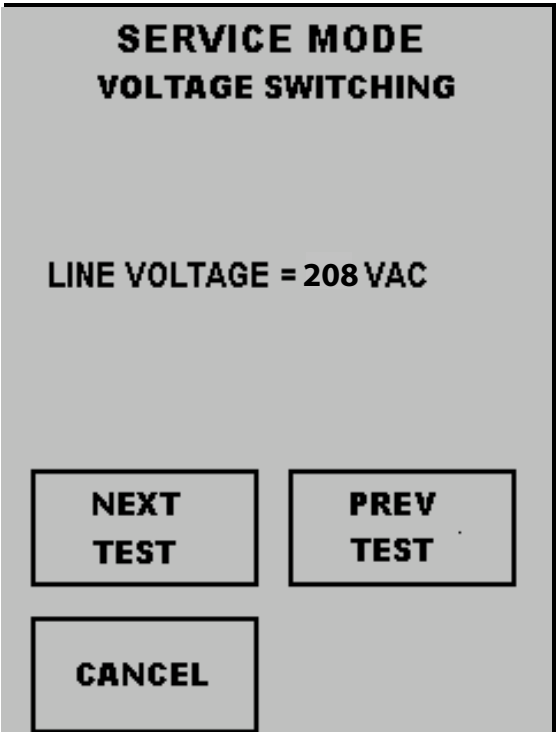
| Voltage Switching |                                                                                     | 15                                                                                                                                                                                                                                                                                              |
|-------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen            |  | <p>This screen will show the line voltage detected by the oven.</p> <p><b>NEXT TEST:</b> Press this pad to go to the next Service Mode Test</p> <p><b>PREV TEST:</b> Press this pad to go to the previous Service Mode Test</p> <p><b>CANCEL:</b> Press this pad to return to the Main Menu</p> |


# 9 | **AXP5201 / AXP5203 / MXP5201 / MXP5203 50 Hz Troubleshooting**

# Troubleshooting AXP5201 / AXP5203 / MXP5201 / MXP5203

## POWER UP CONDITION

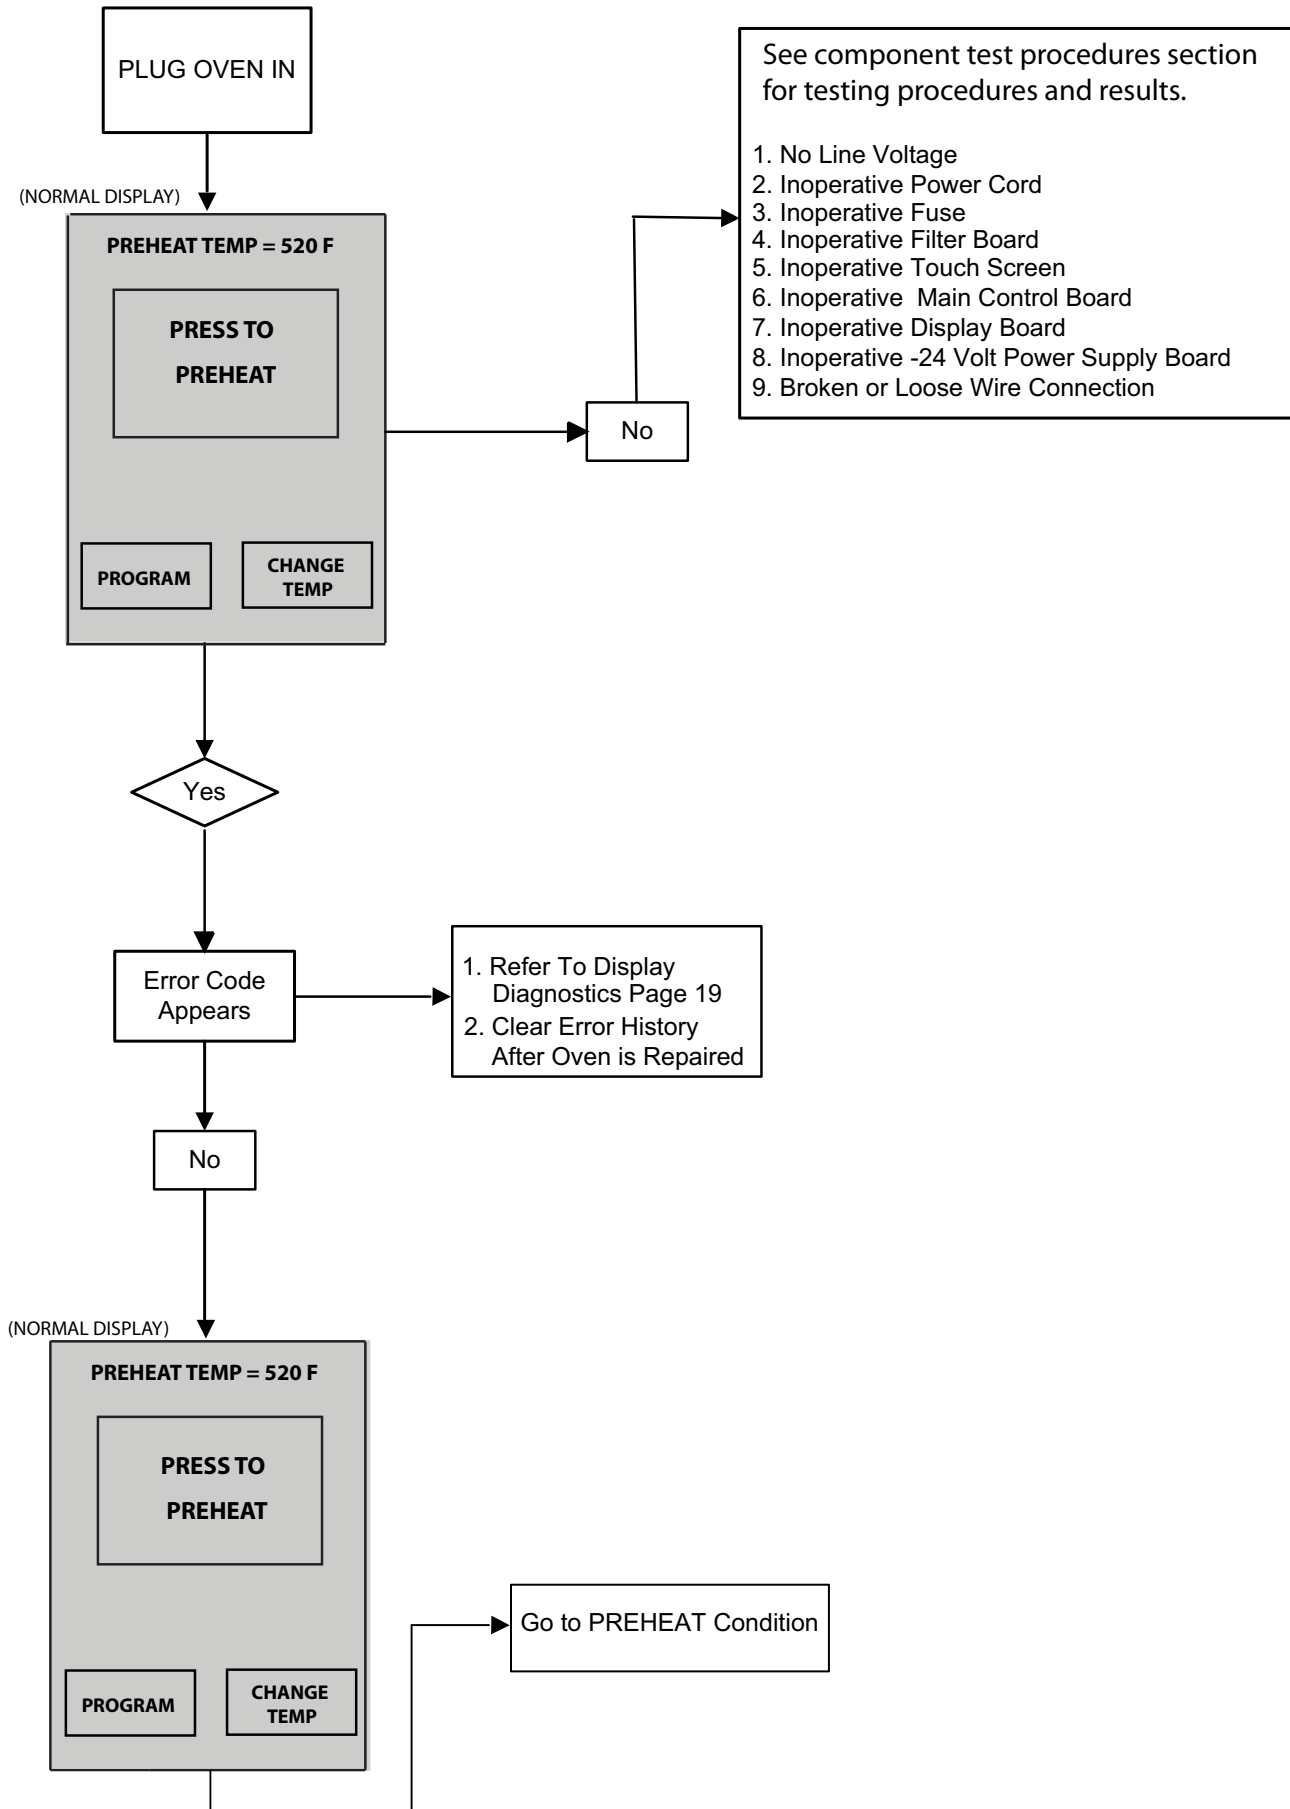


## PREHEAT CONDITION

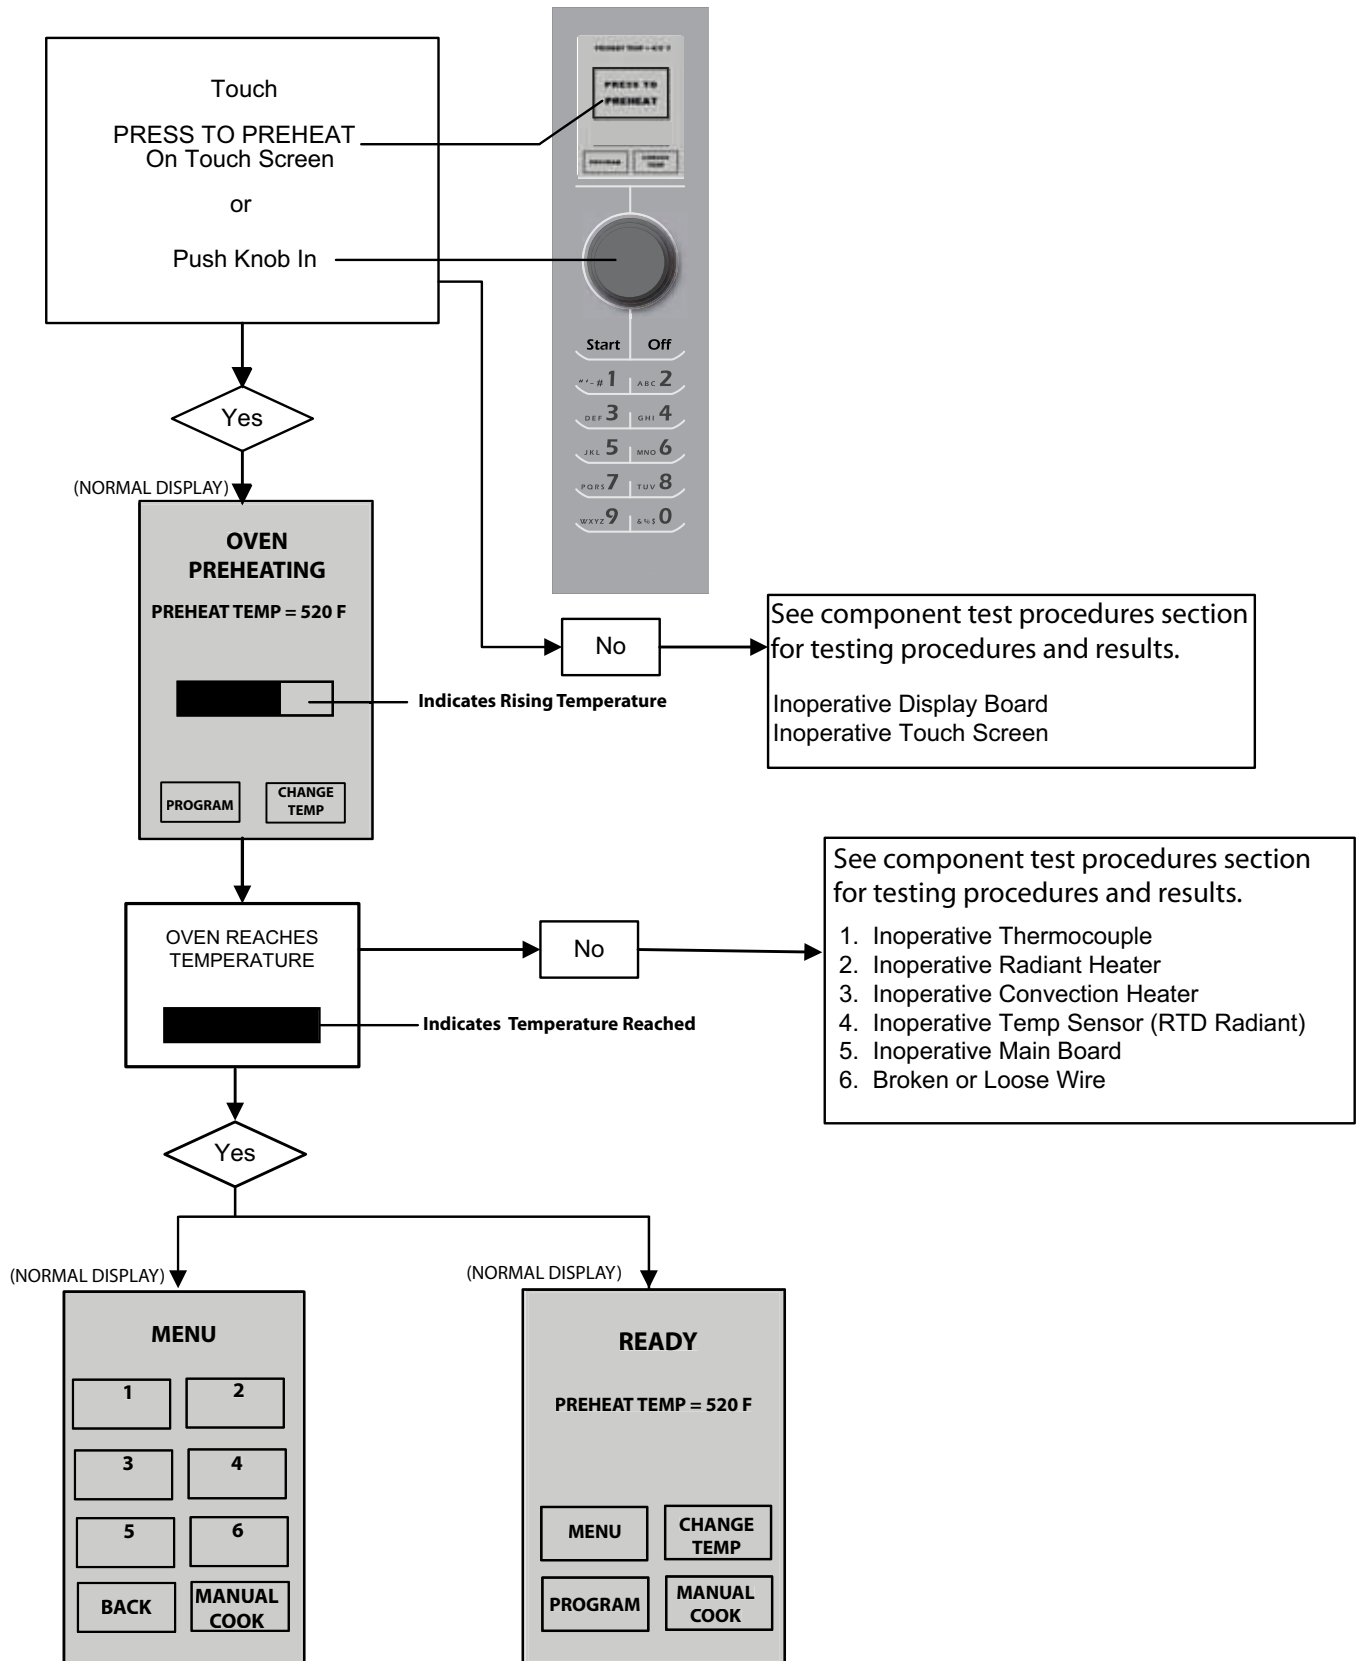

# Troubleshooting AXP5201 / AXP5203 / MXP5201 / MXP5203


## MICROWAVE CONDITION

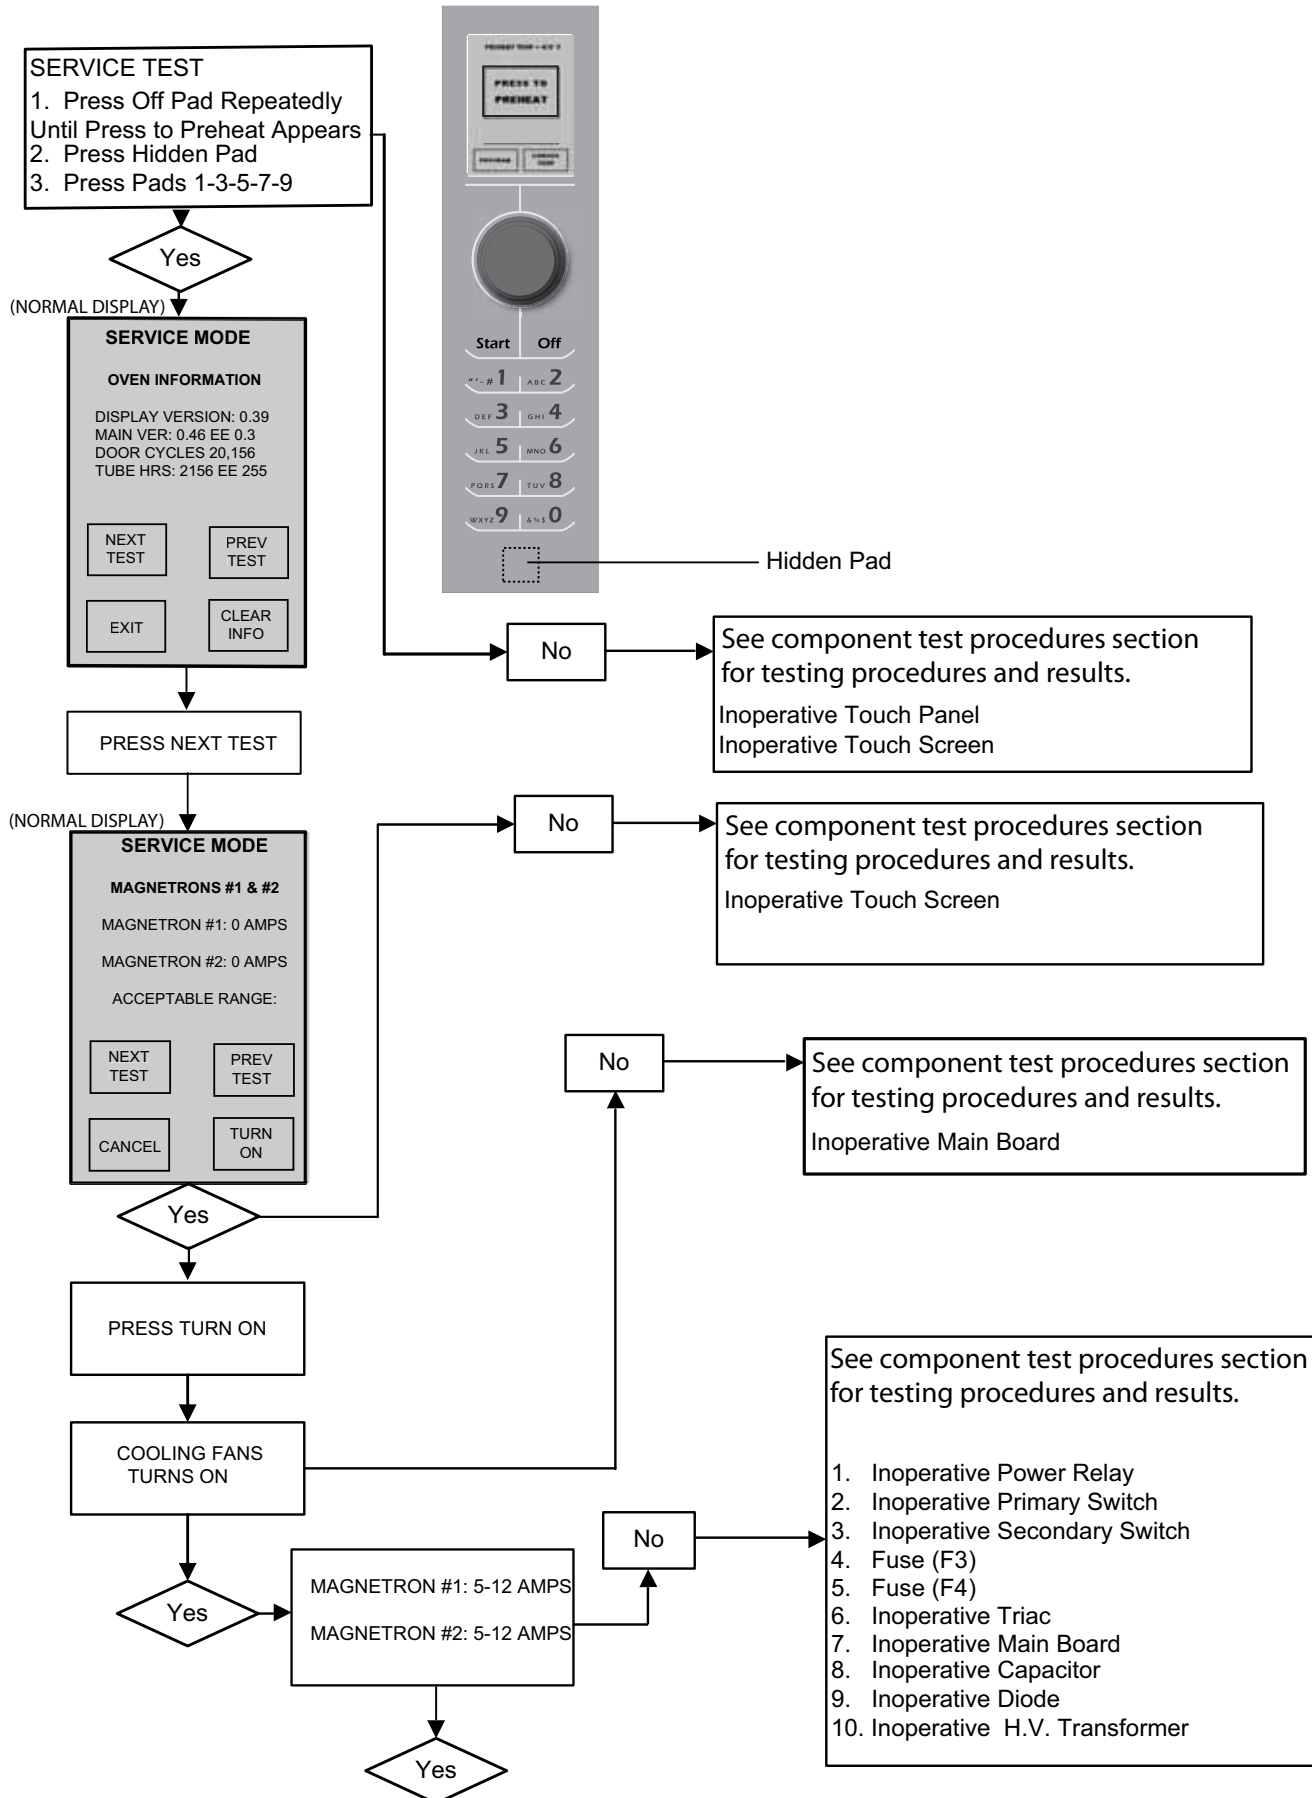

# Troubleshooting AXP5201 / AXP5203 / MXP5201 / MXP5203

## OPERATIONAL CODES

During oven operation the display may indicate one of the following:

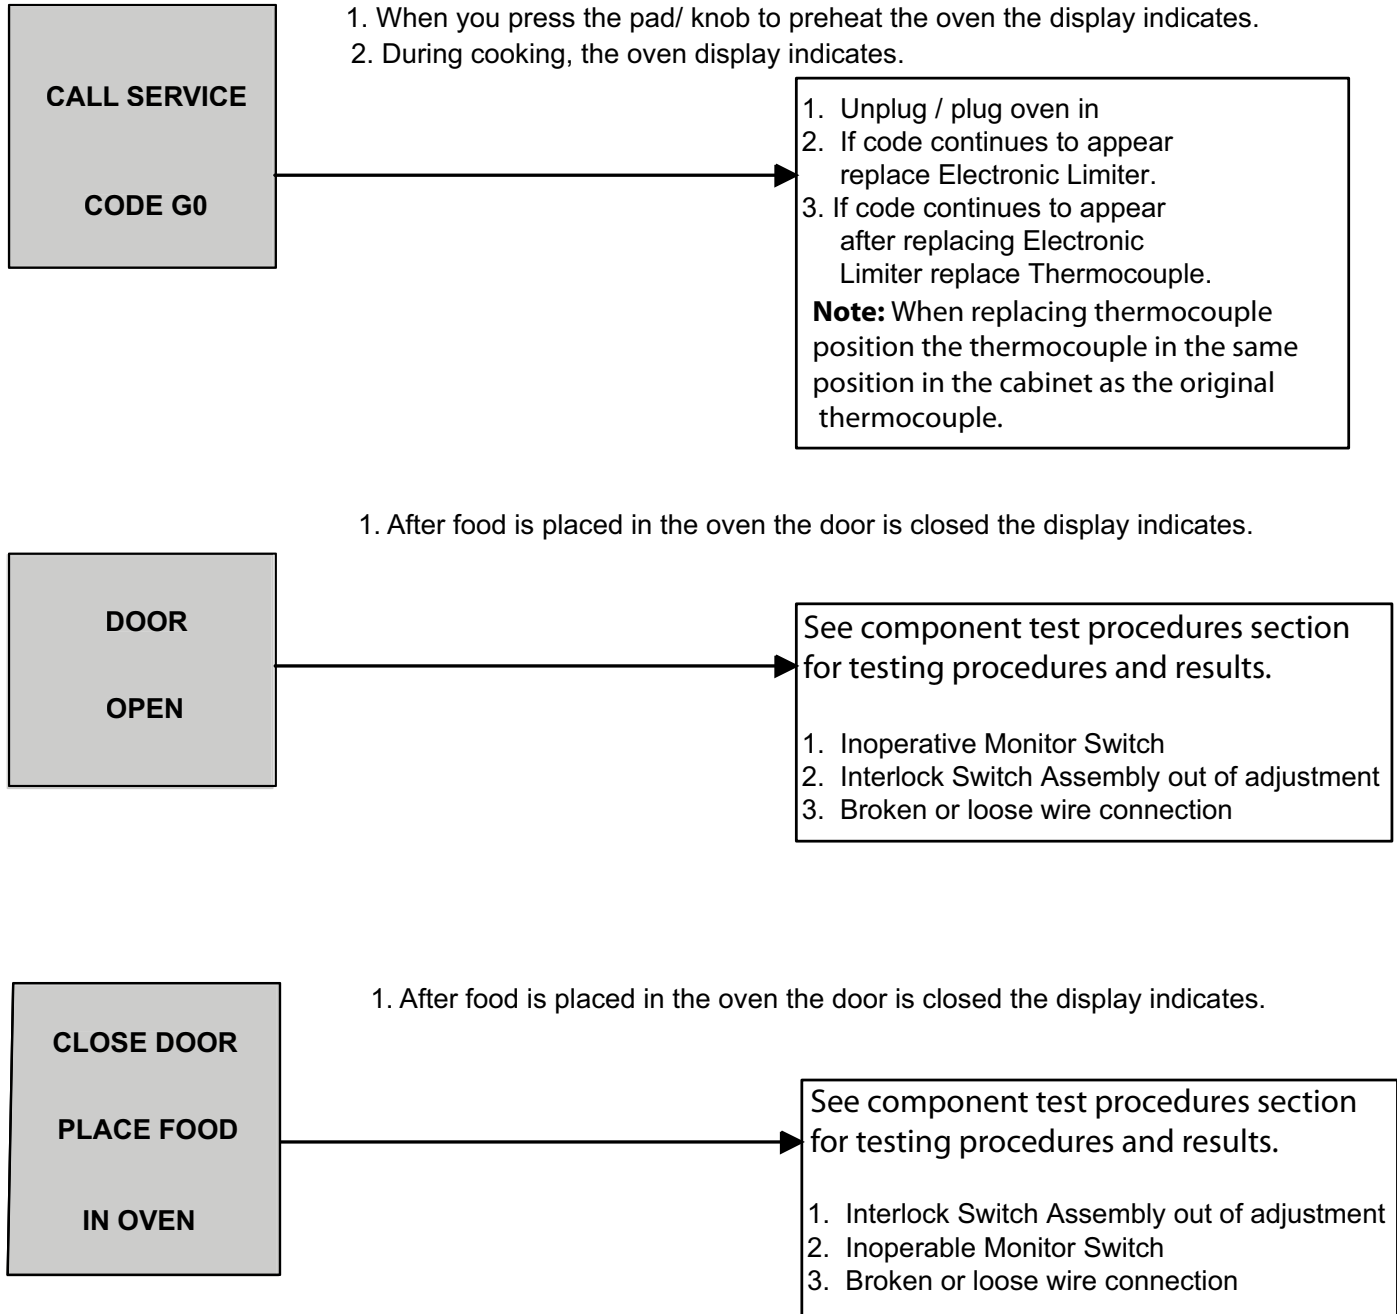

# Troubleshooting AXP5201 / AXP5203 / MXP5201 / MXP5203

## OPERATIONAL CODES

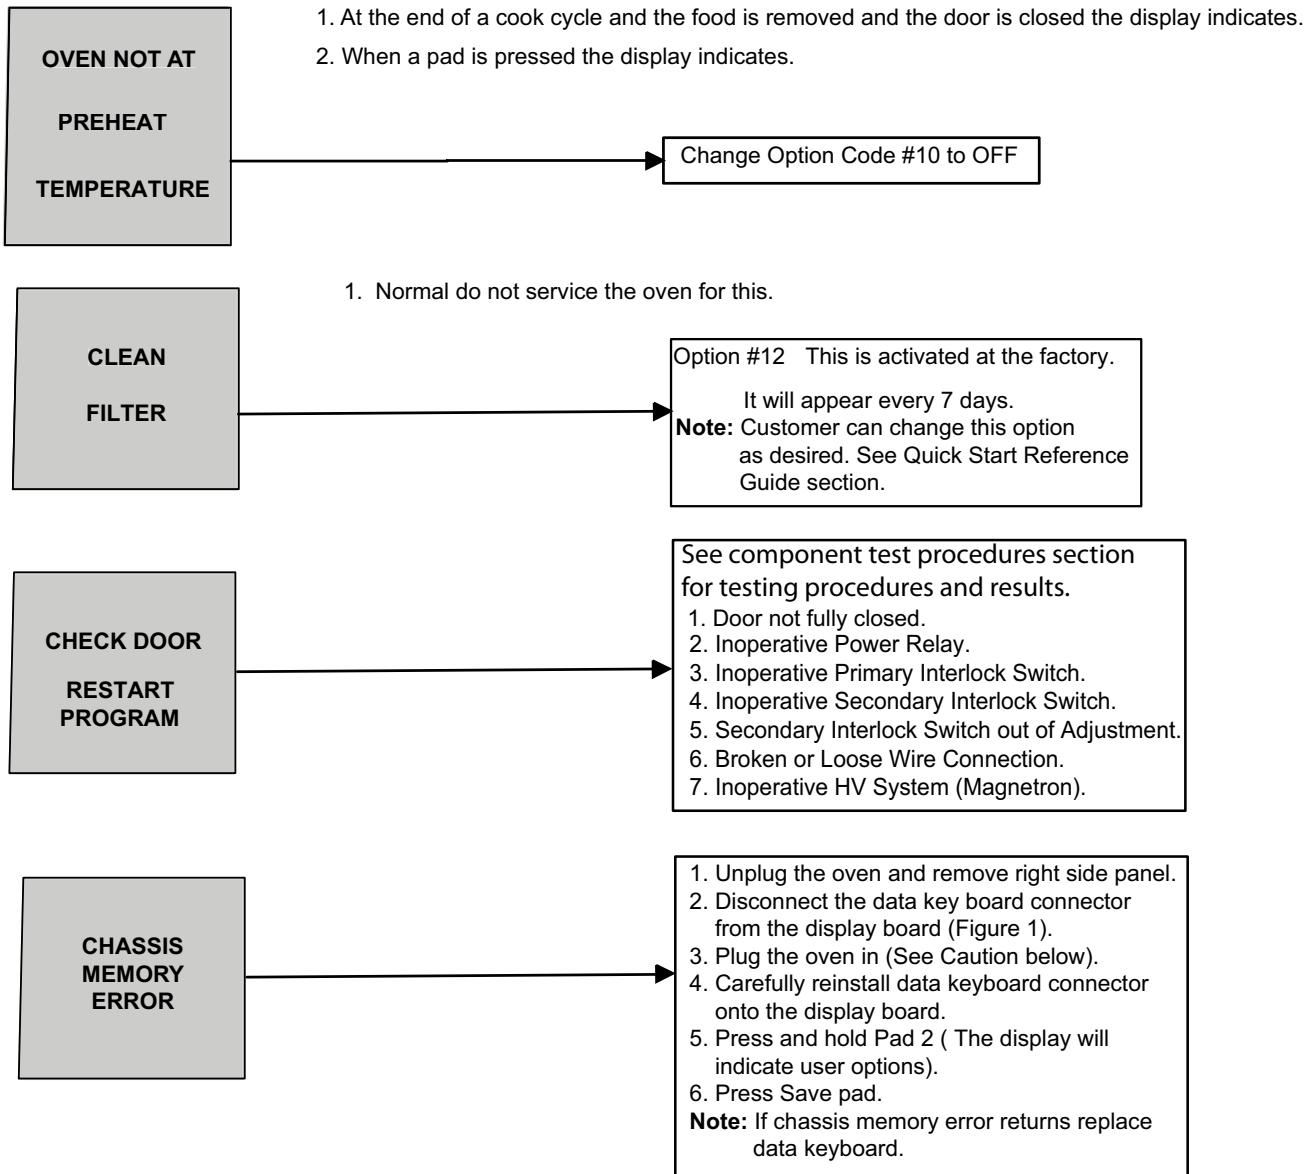


Figure 1



### CAUTION

Oven is energized, use care when plugging connector into data key board.

Data Key Connector

# 10 | **AXP5201 / AXP5203 / MXP5201 / MXP5203 50 Hz Display Diagnostics**

# Display Diagnostics AXP5201 / AXP5203 / MXP5201 / MXP5203

## Error Codes

| Display | Description                       | Corrective Action                                                                                                                                                                                                             |
|---------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A0      | Main Board                        | Replace main board                                                                                                                                                                                                            |
| A2      | Display Board                     | Replace display board                                                                                                                                                                                                         |
| B0      | Touch Panel                       | Replace Touch Panel                                                                                                                                                                                                           |
| B1      | Touch Panel                       | Replace Touch Panel                                                                                                                                                                                                           |
|         |                                   |                                                                                                                                                                                                                               |
| C-0     | Temp Sensor (RTD) (open)          | Replace Temp Sensor                                                                                                                                                                                                           |
| C-1     | Temp Sensor (RTD) (shorted)       | Replace Temp Sensor                                                                                                                                                                                                           |
| C-2     | Temp Sensor (RTD) (out of range)  | Replace Temp Sensor                                                                                                                                                                                                           |
| D-0     | Thermocouple (RTD) (open)         | Replace Thermocouple                                                                                                                                                                                                          |
| D-1     | Thermocouple (RTD) (shorted)      | Replace Thermocouple                                                                                                                                                                                                          |
| D-2     | Thermocouple (RTD) (out of range) | Replace Thermocouple                                                                                                                                                                                                          |
| G-0     | Oven Exceeded Max. Temp.          | Unplug / Plug oven in<br>If G-0 continues to appear:<br>1. Check wire connector on main board J7-1,2<br>2. Test thermocouple / RTD and replace if necessary.<br>3. If thermocouple/ RTD test good replace electronic limiter. |
| G-2     | Magnetron TCO                     | Perform service test (Magnetron #1 & #2)                                                                                                                                                                                      |
| G-2     | Cooling Motor                     | Perform service test (Cooling Fan)                                                                                                                                                                                            |
| H-0     | Signal Missing                    | Plug disconnected from J1 on main board                                                                                                                                                                                       |
| H-1     | Main Board Set Point Incorrect.   | Unplug / Plug oven in                                                                                                                                                                                                         |
| H-2     | Main Board                        | Replace main board                                                                                                                                                                                                            |
| H-3     | Main Board                        | Replace main board                                                                                                                                                                                                            |
| M-0     | Current Sense Low Amps            | Perform service test (Magnetron #1 & #2)                                                                                                                                                                                      |
| M-1     | Magnetron 1 Low Amps              | Perform service test (Magnetron #1)                                                                                                                                                                                           |
| M-2     | Magnetron 2 Low Amps              | Perform service test (Magnetron #2)                                                                                                                                                                                           |

**Note:** While in the service test the error history can be cleared by pressing and holding Pad 1.

# **1 1 | MXP5221 / MXP5223**


## **50 Hz**

### **Service Test**

# Service Test MXP5221 / MXP5223

## Access to Service Mode

Screen

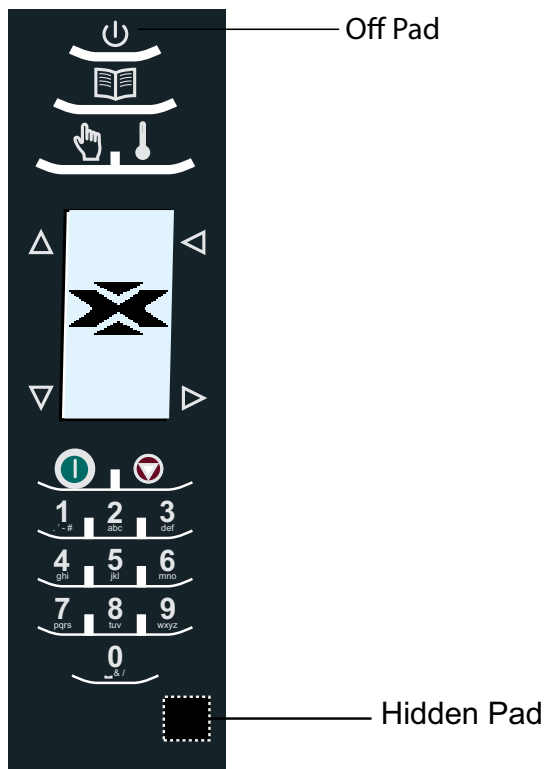


While in the OFF mode, press the following sequence on the keypad:

1. Press OFF pad until Icon appears.
  2. Press Hidden Pad.
  3. Press pads 1 - 3 - 5 - 7 - 9
- The display indicates SERVICE MODE.

## Oven Information

1

Screen

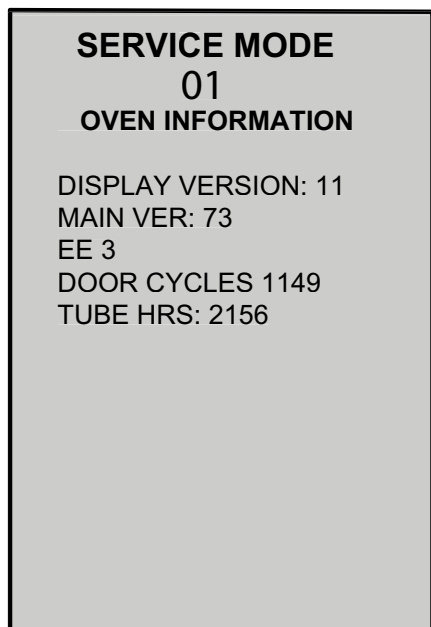

This screen is Oven Information showing the versions of software in the control boards and information about door cycles and tube hours.



Press this pad to go to the next Service Mode Test



Press this pad to go to the previous Service Mode Test

Press 0 pad for 5 seconds to reset the Door Cycles and Tube Hours back to zero.




Press this pad repeatedly to exit Service Mode.

# Service Test MXP5221 / MXP5223

## Manual Operation of Magnetrons #1

2

Screen

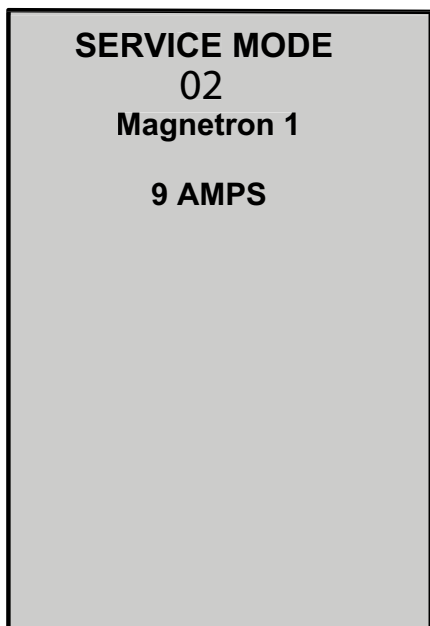

This screen will allow operation of Magnetron #1 and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test



Press this pad to go to the previous Service Mode Test



This pad will turn the magnetron on.



This pad will turn the magnetron off.




Press this pad repeatedly to exit Service Mode

**RANGE:** Under normal operation, each mag's amp draw should be **5 – 12 amps**.

## Manual Operation of Magnetron #2

3

Screen

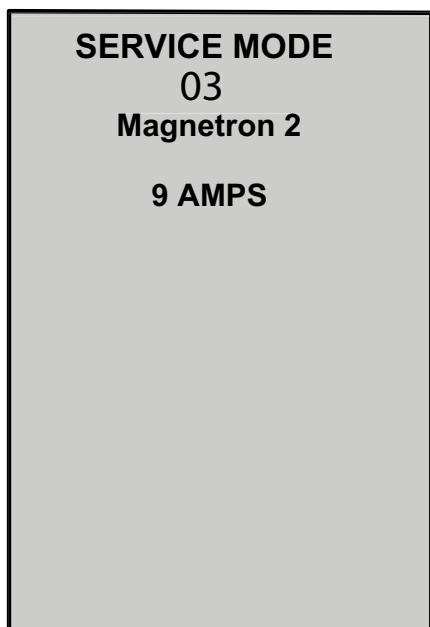

This screen will allow operation of Magnetron #2 and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test



Press this pad to go to the previous Service Mode Test



This pad will turn the magnetron on.




This pad will turn the magnetron off.




Press this pad repeatedly to exit Service Mode.

**RANGE:** Under normal operation, each mag's amp draw should be **5 – 12 amps**.

# Service Test MXP5221 / MXP5223
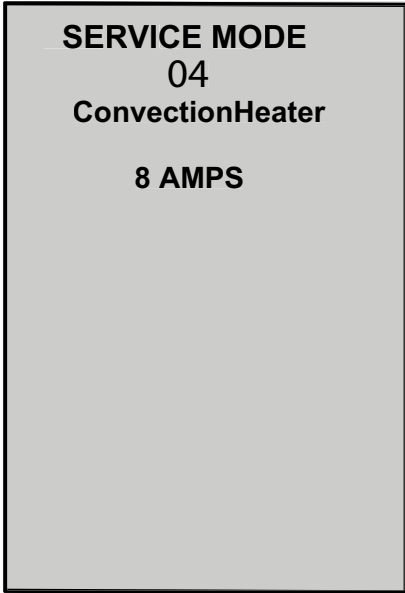
| Convection Heater |                                                                                   | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen            |  | <p>This screen will allow operation of the convection heater and show the number of amps being drawn.</p> <ul style="list-style-type: none"><li> Press this pad to go to the next Service Mode Test</li><li> Press this pad to go to the previous Service Mode Test</li><li> This pad will turn the heater on.</li><li> This pad will turn the heater off.</li><li> Press this pad repeatedly to exit Service Mode.</li></ul> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>5 – 12 amps</b>.</p> |

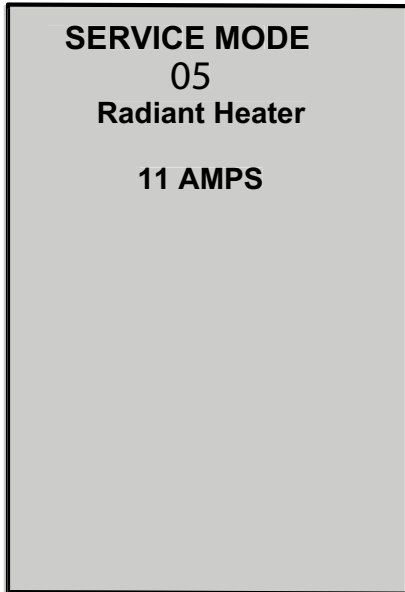
| Radiant Heater |                                                                                     | 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen         |  | <p>This screen will allow operation of the radiant heater and show the number of amps being drawn.</p> <ul style="list-style-type: none"><li> Press this pad to go to the next Service Mode Test</li><li> Press this pad to go to the previous Service Mode Test</li><li> This pad will turn the heater on.</li><li> This pad will turn the heater off.</li><li> Press this pad repeatedly to exit Service Mode.</li></ul> <p><b>RANGE:</b> Under normal operation, the amp draw should be <b>10 – 16 amps</b>.</p> |

# Service Test MXP5221 / MXP5223

## Convection Fan – Low Speed

7

Screen

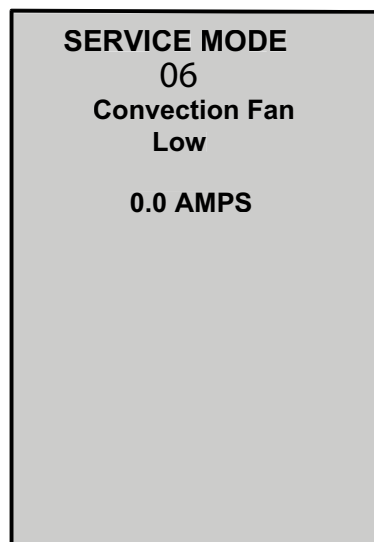

This screen will allow operation of the convection fan at a low speed and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test



Press this pad to go to the previous Service Mode Test



This pad will turn the fan on.



This pad will turn the fan off.




Press this pad repeatedly to exit Service Mode

**RANGE:** Under normal operation, the amp draw is too low to read.

## Convection Fan – High Speed

8

Screen

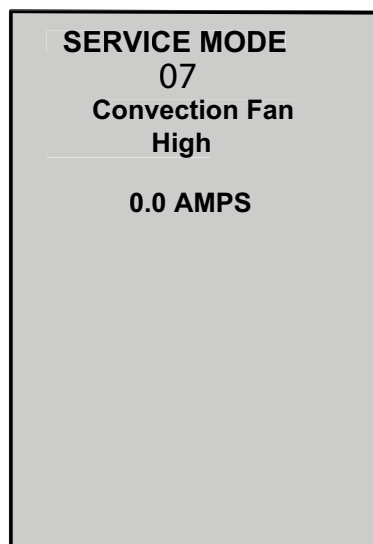

This screen will allow operation of the convection fan at a high speed and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test



Press this pad to go to the previous Service Mode Test



This pad will turn the fan on.



This pad will turn the fan off.



Press this pad repeatedly to exit Service Mode


**RANGE:** Under normal operation, the amp draw should be **0.6 - 2.6 amps**. (It may not read amps)

# Service Test MXP5221 / MXP5223

## Cooling Fan

9

Screen

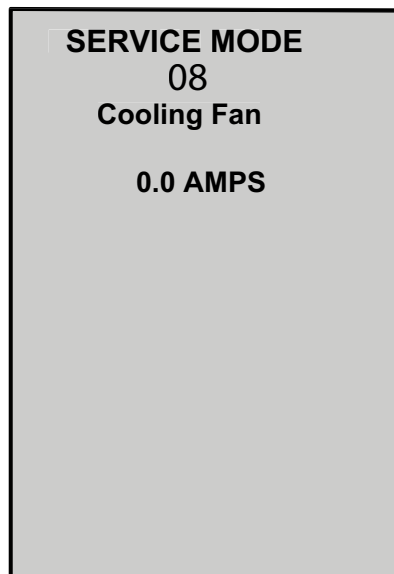

This screen will allow operation of the cooling fan and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test.



Press this pad to go to the previous Service Mode Test.



This pad will turn the fan on.



This pad will turn the fan off.




Press this pad repeatedly to exit Service Mode.

**RANGE:** Under normal operation, the amp draw should be **0.9 - 2.5 amps**. (It may not read amps)

## Antenna Motors

10

Screen

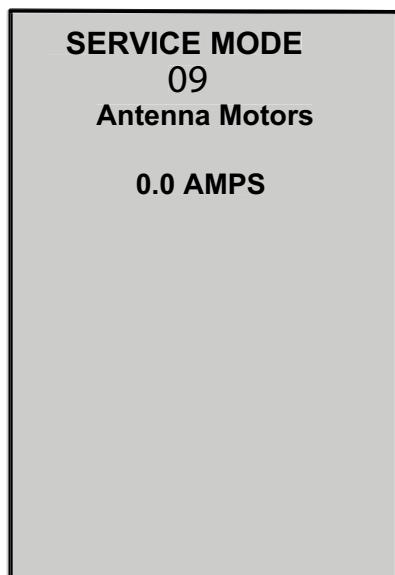

This screen will allow operation of the antenna motors and show the number of amps being drawn.



Press this pad to go to the next Service Mode Test.



Press this pad to go to the previous Service Mode Test.



This pad will turn the antenna motors on.



This pad will turn the antenna motors off.



Press this pad repeatedly to exit Service Mode.

**RANGE:** Under normal operation, the amp draw may be too low to read.

# Service Test MXP5221 / MXP5223

| RTD Status |                                                                                                                                                                                                                                                       | 11                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     | <div><div>SERVICE MODE</div><div>10</div><div>RTD's</div><div><div>Radiant RTD</div><div>182</div></div><div><div>Conv RTD</div><div>174</div></div><div><div>Max Radiant</div><div>520</div></div><div><div>Max Conv</div><div>177</div></div></div> | <p>This screen will show the temperatures being reported to the RTD's in the oven. The maximum temps seen by the controller are also recorded for diagnostic purposes.</p> <div><div></div><div>Press this pad to go to the next Service Mode Test.</div></div> <div><div></div><div>Press this pad to go to the previous Service Mode Test.</div></div> <div><div></div><div>Press this pad repeatedly to exit Service Mode</div></div> <p>Press the 0 pad for 5 seconds to reset the Maximum RTD temps to zero.</p> |

| Memory / Network Status |                                                                                                                                                                                                | 12                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen                  | <div><div>SERVICE MODE</div><div>11</div><div>Memory / Network</div><div>Chassis Memory</div><div>Present</div><div>DataKey</div><div>Absent</div><div>R54485 Network</div><div>OK</div></div> | <p>This screen will show which memory chips are present and if the oven is hooked up to an external network.</p> <div><div></div><div>Press this pad to go to the next Service Mode Test.</div></div> <div><div></div><div>Press this pad to go to the previous Service Mode Test.</div></div> <div><div></div><div>Press this pad repeatedly to exit Service Mode</div></div> <p>.</p> |

# Service Test MXP5221 / MXP5223


| Error List |                                                                                                                                                                                                                      | 13                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     | <div><div>SERVICE MODE</div><div>12</div><div>Error History</div><div><div>1-</div><div>2-</div><div>3-</div><div>4-</div><div>5-</div><div>6-</div><div>7-</div><div>8-</div><div>9-</div><div>0-</div></div></div> | <p>This screen will show a description of the types of errors that can occur.</p> <div><div></div><div>Press this pad to go to the next Service Mode Test.</div></div> <div><div></div><div>Press this pad to go to the previous Service Mode Test.</div></div> <div><div></div><div>Press this pad repeatedly to exit Service Mode</div></div> |

| Voltage Switching |                                                                                                | 14                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen            | <div><div>SERVICE MODE</div><div>13</div><div>Voltage Switching</div><div>208 Volt</div></div> | <p>This screen will show the line voltage detected by the oven.</p> <div><div></div><div>Press this pad to go to the next Service Mode Test.</div></div> <div><div></div><div>Press this pad to go to the previous Service Mode Test.</div></div> <div><div></div><div>Press this pad repeatedly to exit Service Mode</div></div> <div>.</div> |

# **12** | **MXP5221 / MXP5223** **50 Hz** **Troubleshooting**


# Troubleshooting MXP5221 / MXP5223

## POWER UP CONDITION

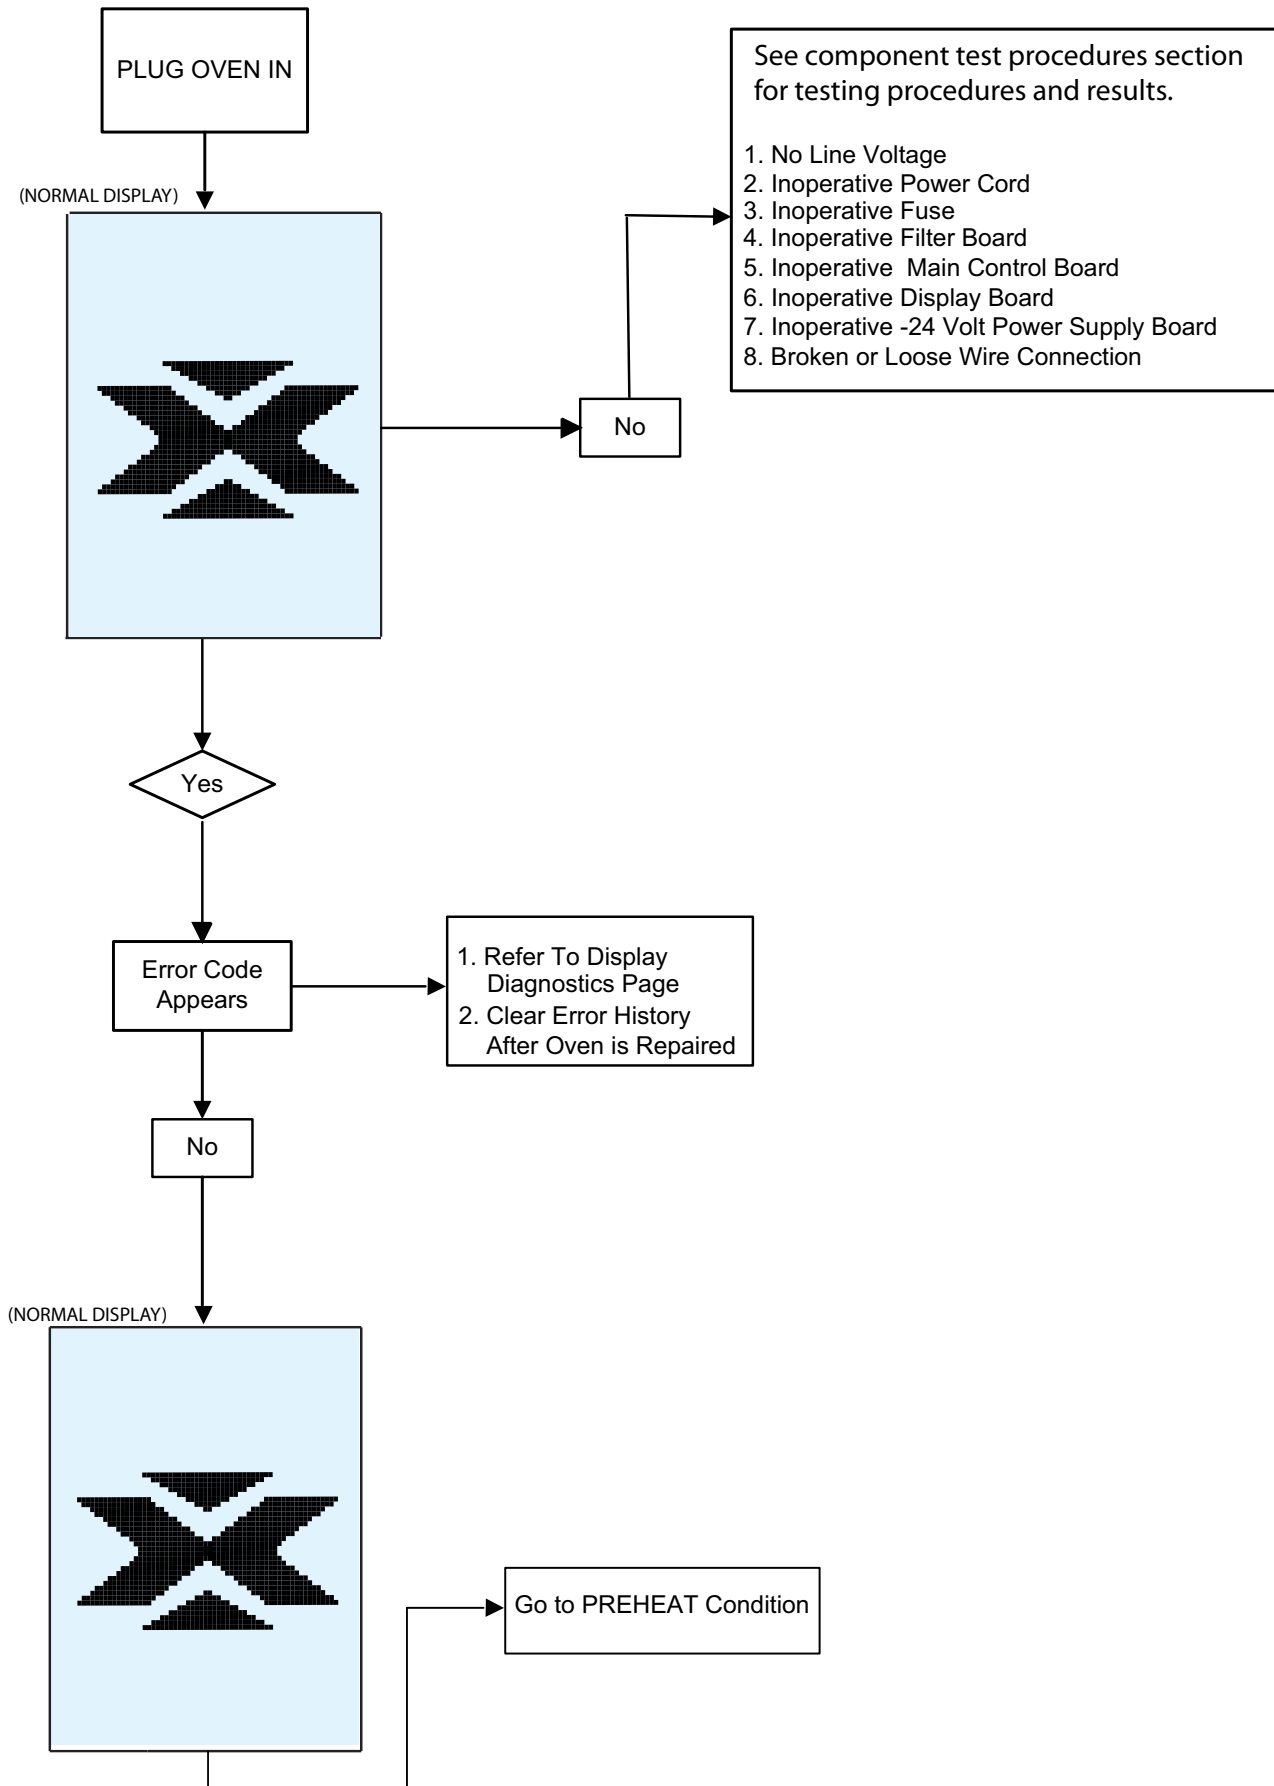


# Troubleshooting MXP5221 / MXP5223

## PREHEAT CONDITION

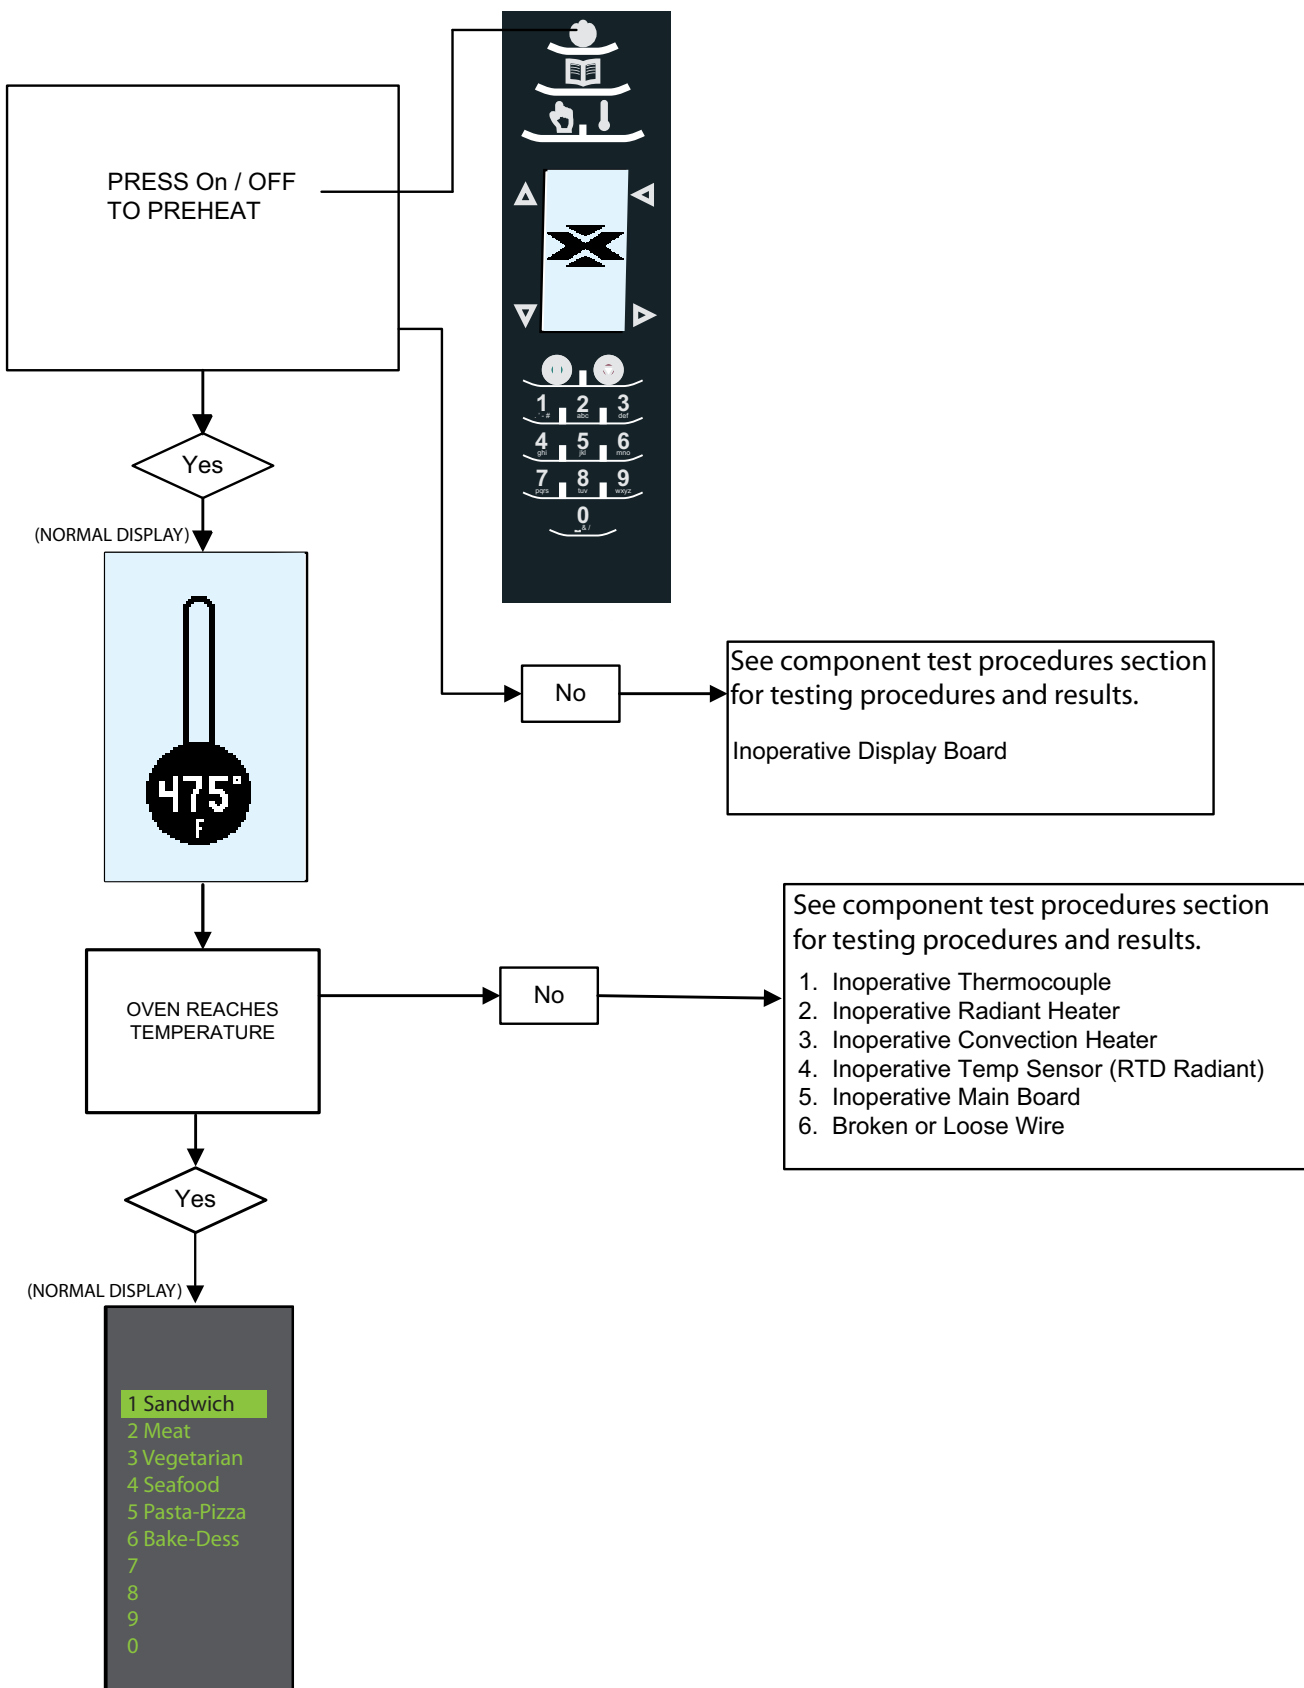

# Troubleshooting MXP5221 / MXP5223


## MICROWAVE CONDITION

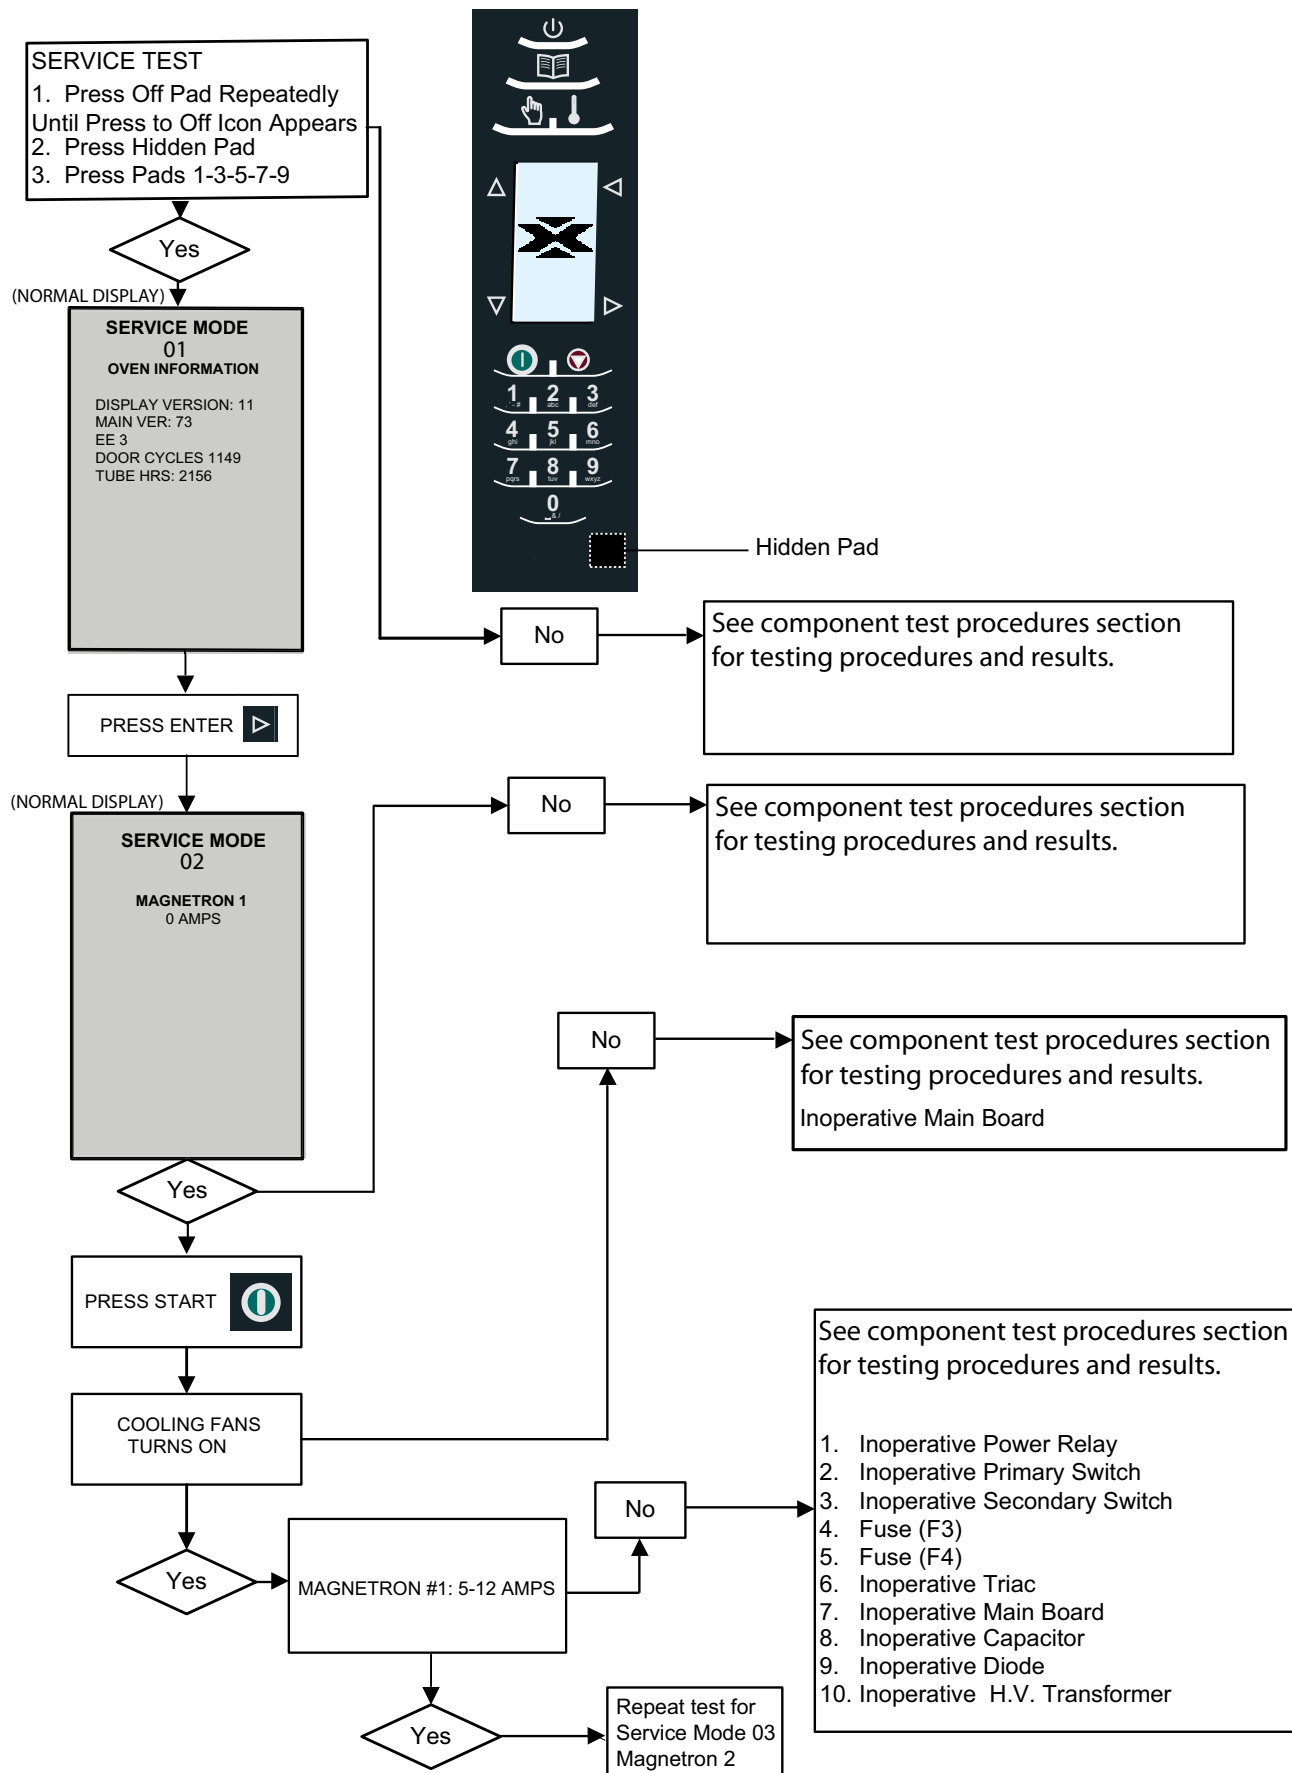

# Troubleshooting MXP5221 / MXP5223

## OPERATIONAL CODES


During oven operation the display may indicate one of the following:

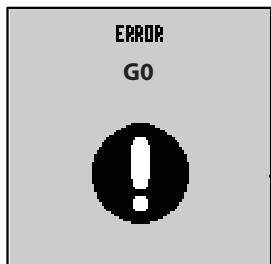

1. When you press the pad to preheat the oven the display indicates.
2. During cooking, the oven display indicates.


Unplug / plug oven in  
If G-0 continues to appear:

1. Check wire connector on main board J7-1,2
2. Test thermocouple / RTD and replace if necessary.
3. If thermocouple/ RTD test good replace electronic limiter.

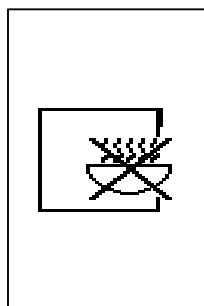

Check Door


1. Door not fully closed.
2. Inoperative Power Relay.
3. Inoperative Primary Interlock Switch.
4. Inoperative Secondary Interlock Switch.
5. Interlock Switch Assembly out of Adjustment.
6. Broken or Loose Wire Connection.
7. Inoperative HV System (Magnetron).

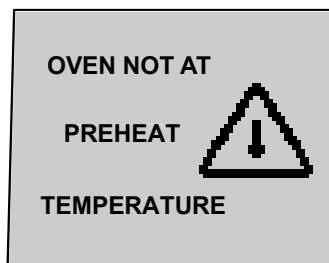

Preheat Warning

1. At the end of a cook cycle and the food is removed and the door is closed the display indicates.
2. When a pad is pressed the display indicates.

Change Option Code #12 to OFF

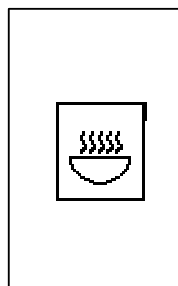

1. After food is placed in the oven the door is closed the display indicates.
2. During a cook cycle the oven stops.

1. End of cook cycle oven is operating normally.

## OPERATIONAL CODES

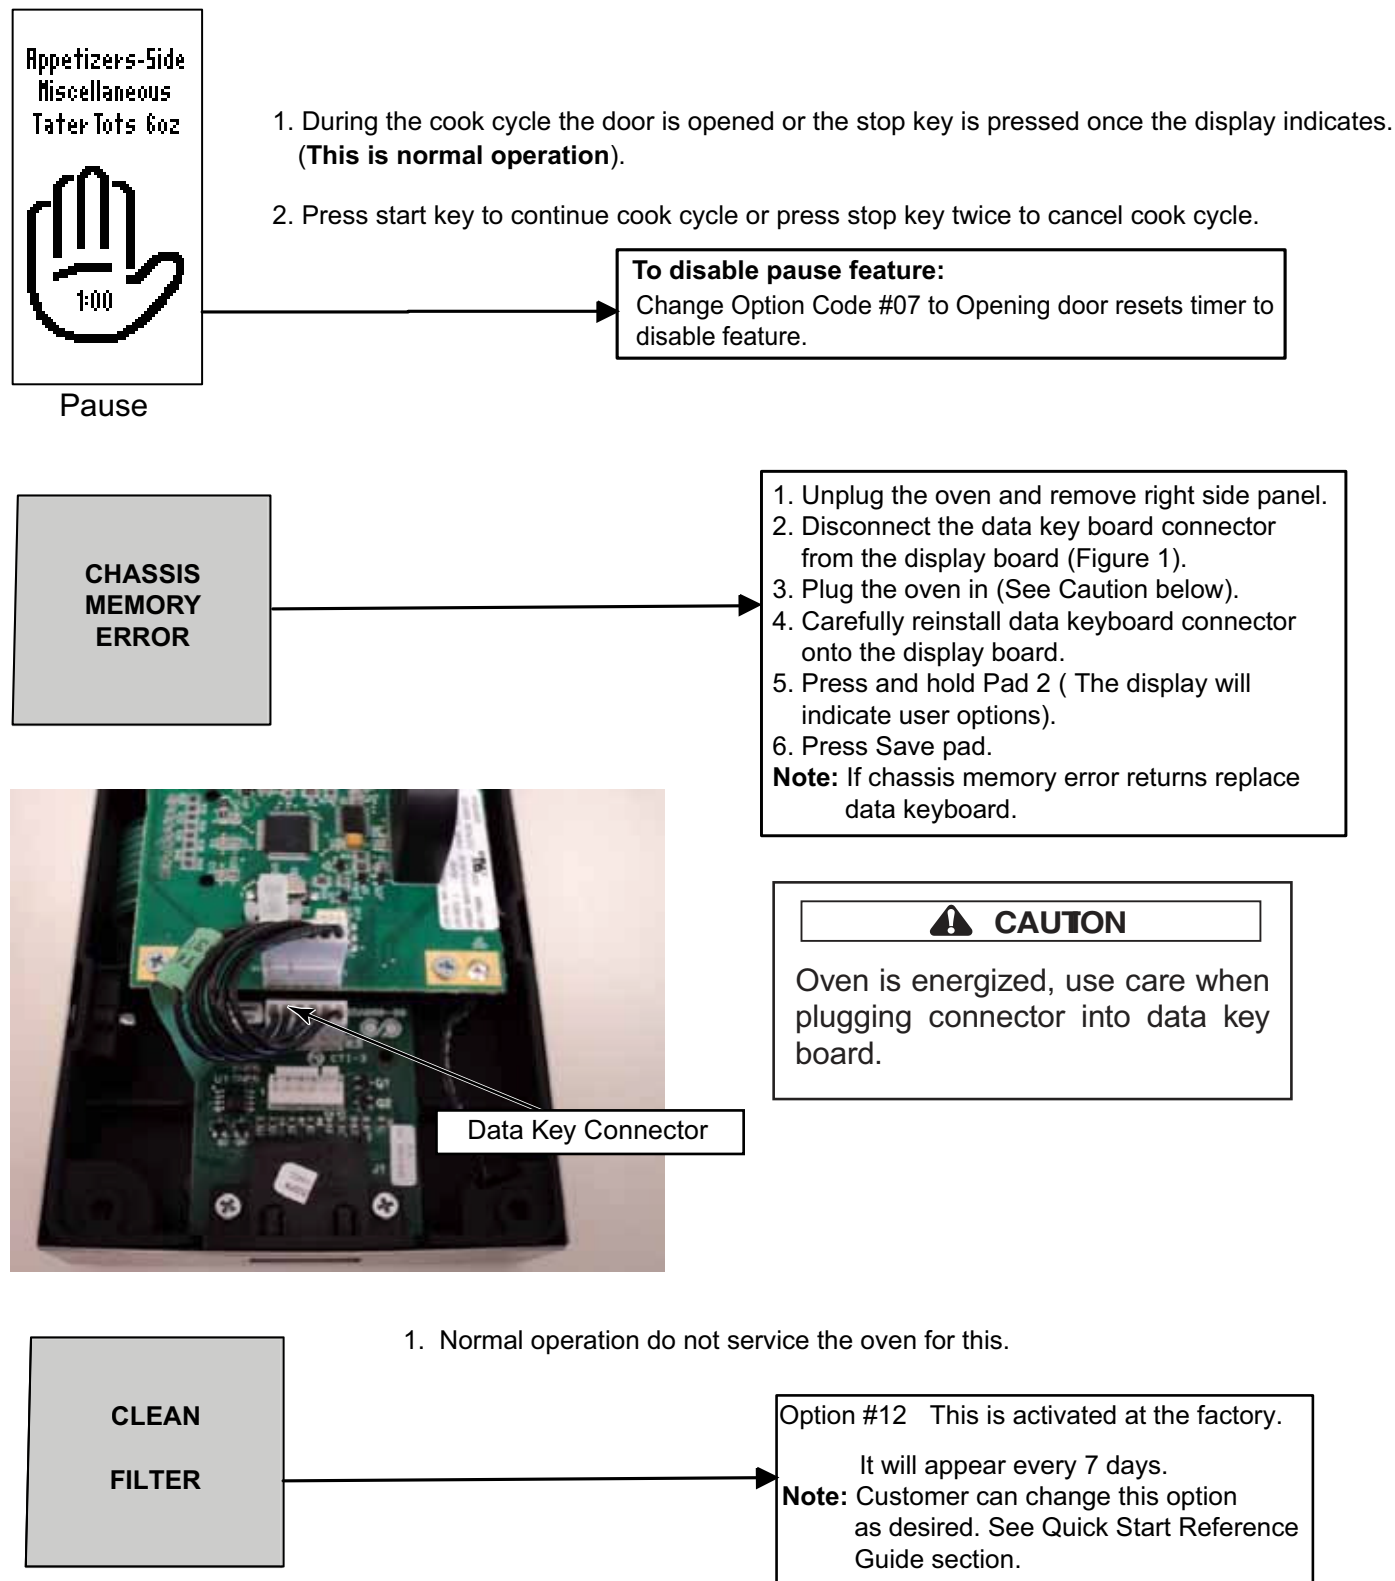


Figure 1

# 13

**MXP5221 / MXP5223**  
**50 Hz**  
**Display Diagnostics**

# Display Diagnostics MXP5221 / MXP5223


## Error Codes

| Display | Description                      | Corrective Action                                                                                                                                                                                                             |
|---------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A0      | Main Board                       | Replace main board                                                                                                                                                                                                            |
| A2      | Display Board                    | Replace display board                                                                                                                                                                                                         |
| B1      | Touch Panel                      | Replace touch panel                                                                                                                                                                                                           |
| C0      | Temp Sensor (RTD) (open)         | Replace temp sensor                                                                                                                                                                                                           |
| C1      | Temp Sensor (RTD) (shorted)      | Replace temp sensor                                                                                                                                                                                                           |
| C2      | Temp Sensor (RTD) (out of range) | Replace temp sensor                                                                                                                                                                                                           |
| D0      | Thermocouple (RTD) (open)        | Replace thermocouple                                                                                                                                                                                                          |
| D1      | Thermocouple (RTD) (shorted)     | Replace thermocouple                                                                                                                                                                                                          |
| G-0     | Oven Exceeded Max. Temp.         | Unplug / Plug oven in<br>If G-0 continues to appear:<br>1. Check wire connector on main board J7-1,2<br>2. Test thermocouple / RTD and replace if necessary.<br>3. If thermocouple/ RTD test good replace electronic limiter. |
| G2      | Magnetron TCO                    | Perform service test (Magnetron #1 & #2)                                                                                                                                                                                      |
| G2      | Cooling Motor                    | Perform service test (Cooling Fan)                                                                                                                                                                                            |
| H0      | Signal Missing                   | Plug disconnected from J1 on main board                                                                                                                                                                                       |
| H1      | Main Board Set Point Incorrect.  | Unplug / Plug oven in                                                                                                                                                                                                         |
| H2      | Main Board                       | Replace main board                                                                                                                                                                                                            |
| H3      | Main Board                       | Replace main board                                                                                                                                                                                                            |


**Note:** While in the service test the error history can be cleared by pressing and holding Pad 0.

# **14 | AXP5201 / AXP5203 / MXP5201 / MXP5203 / MXP5221 / MXP5223 50 Hz Wiring Diagrams / Schematics**

# Wiring Diagram Sample AXP5201 / MXP5201

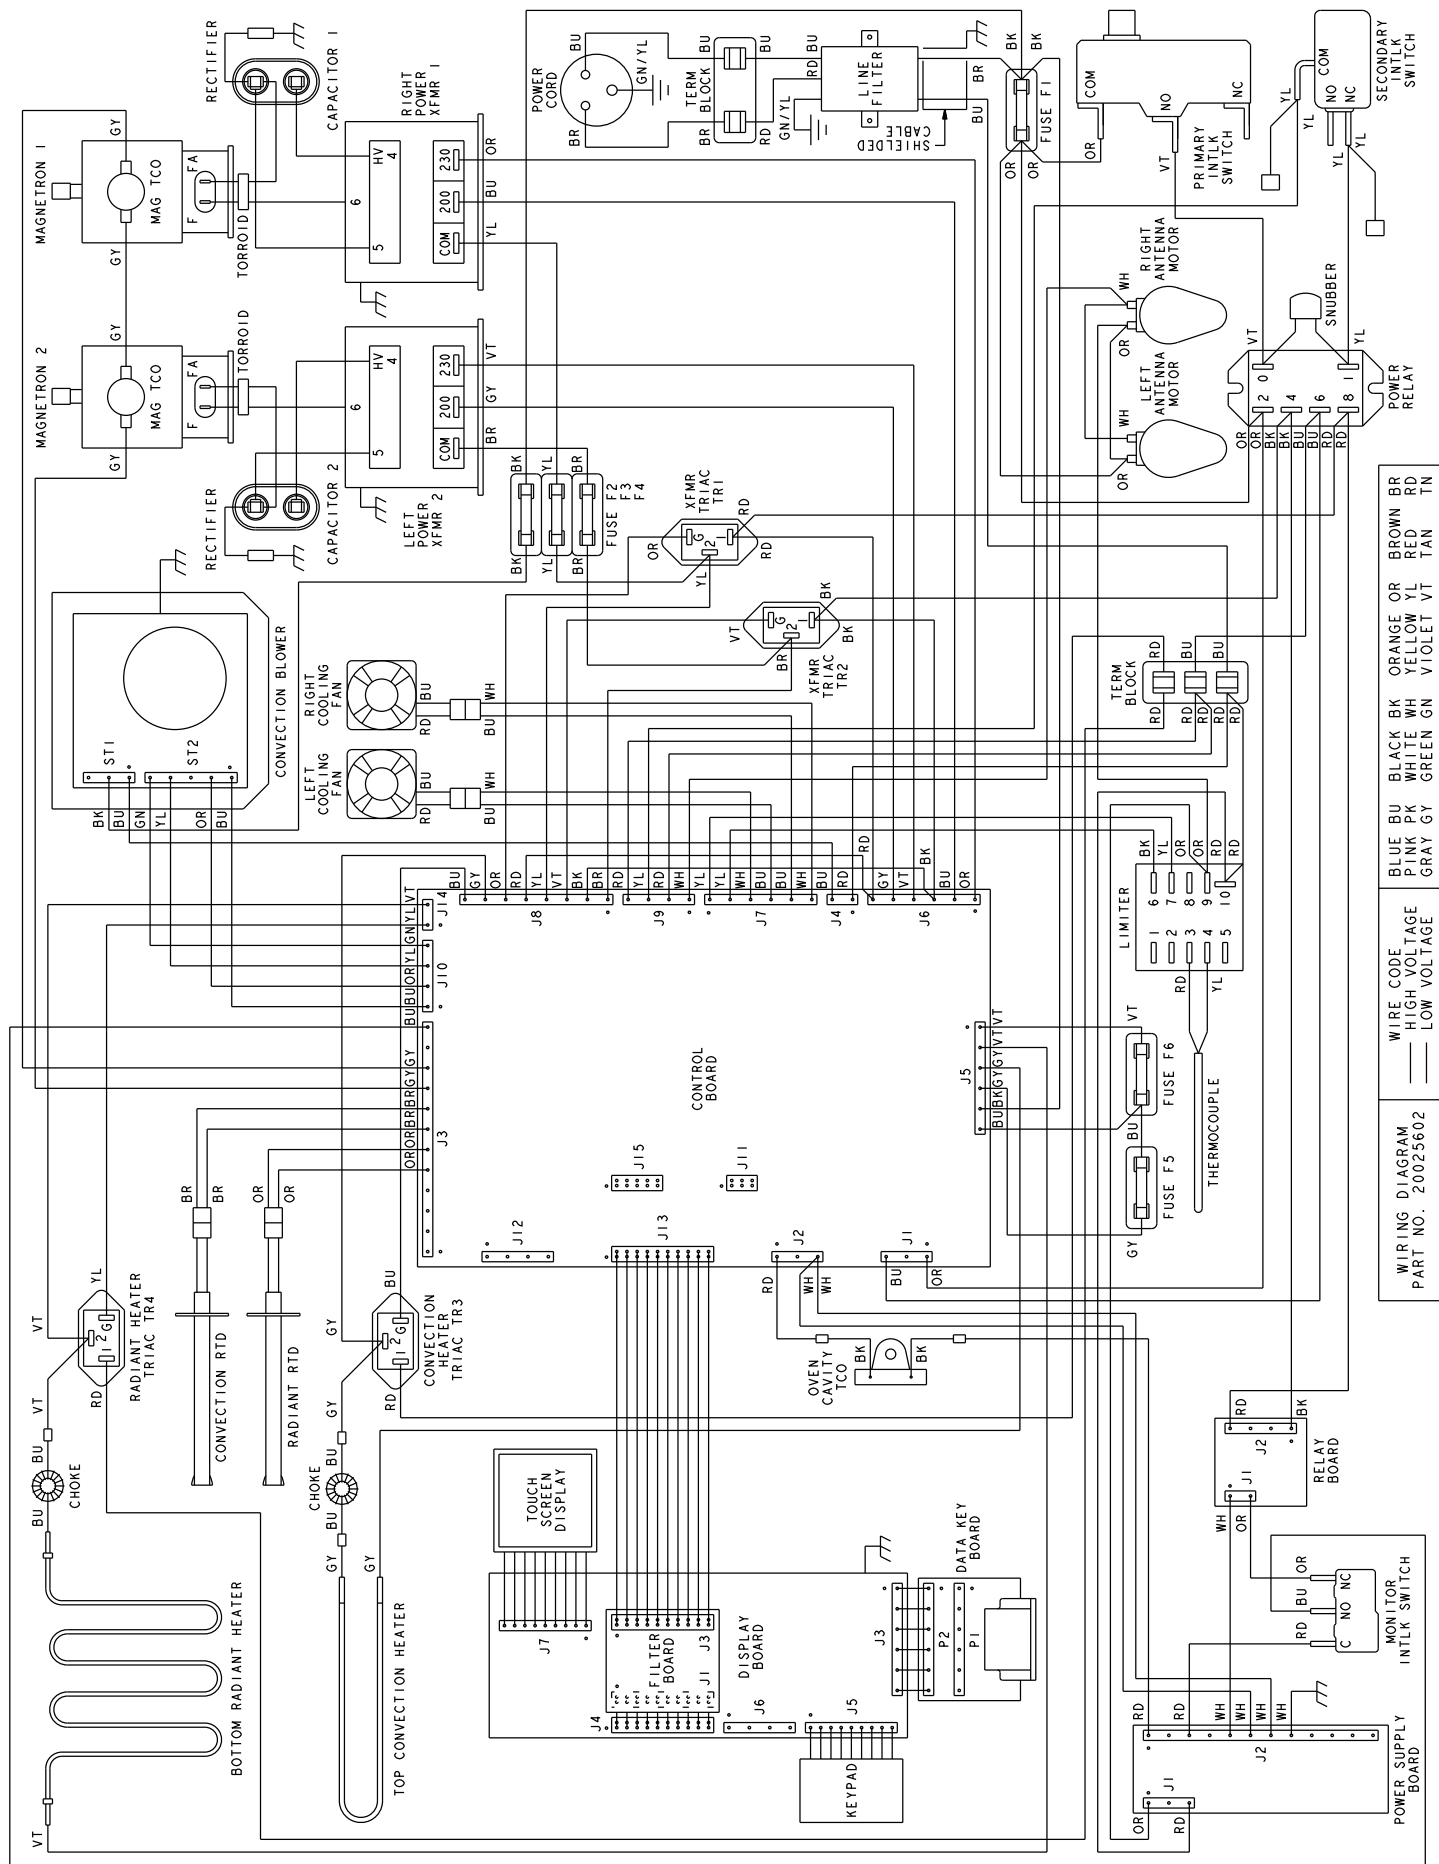


# Schematic Sample AXP5201 / MXP5201

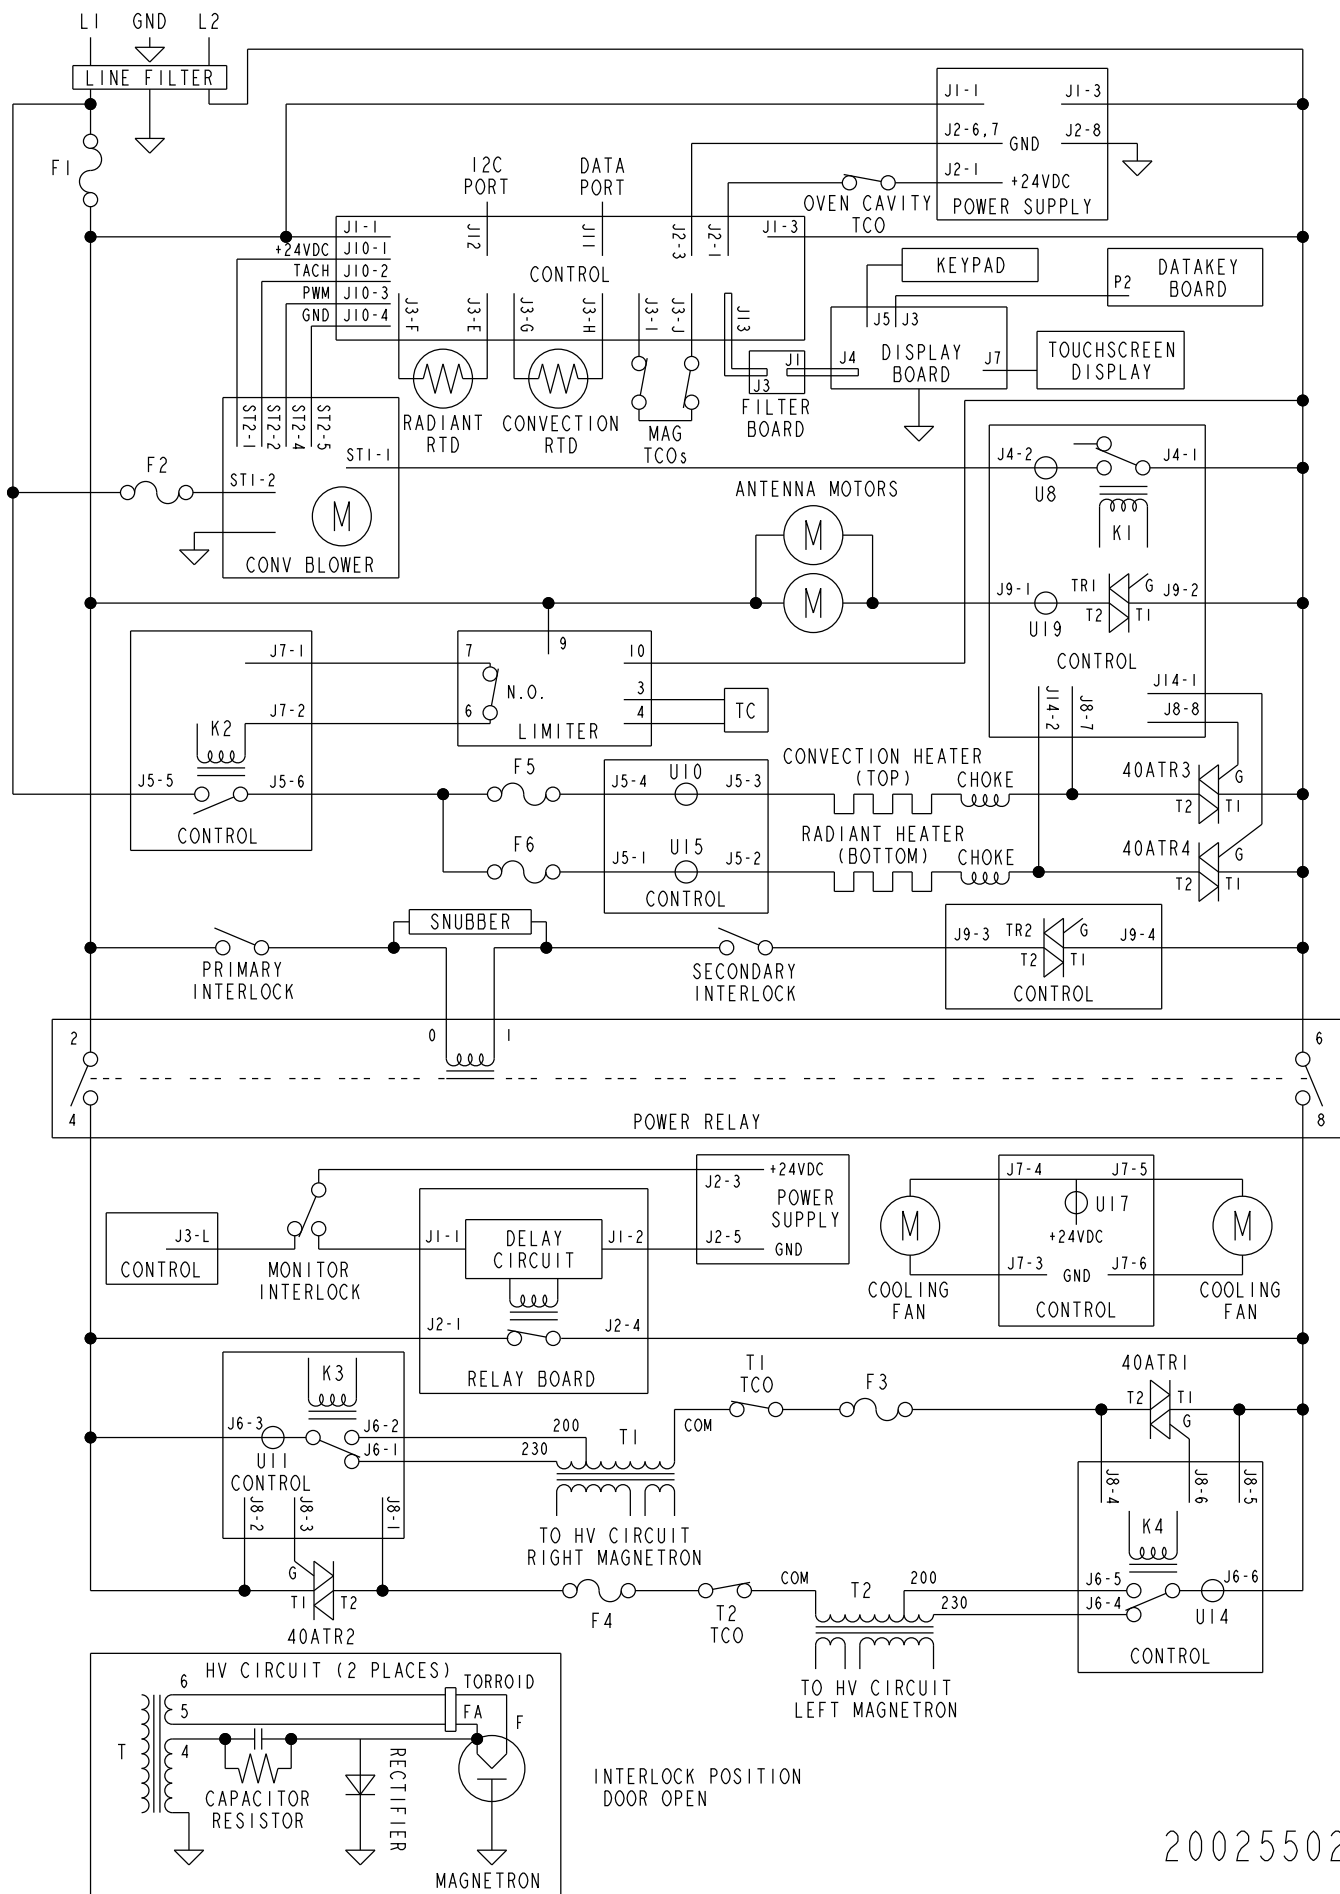


20025502

# Wiring Diagram Sample MXP5221

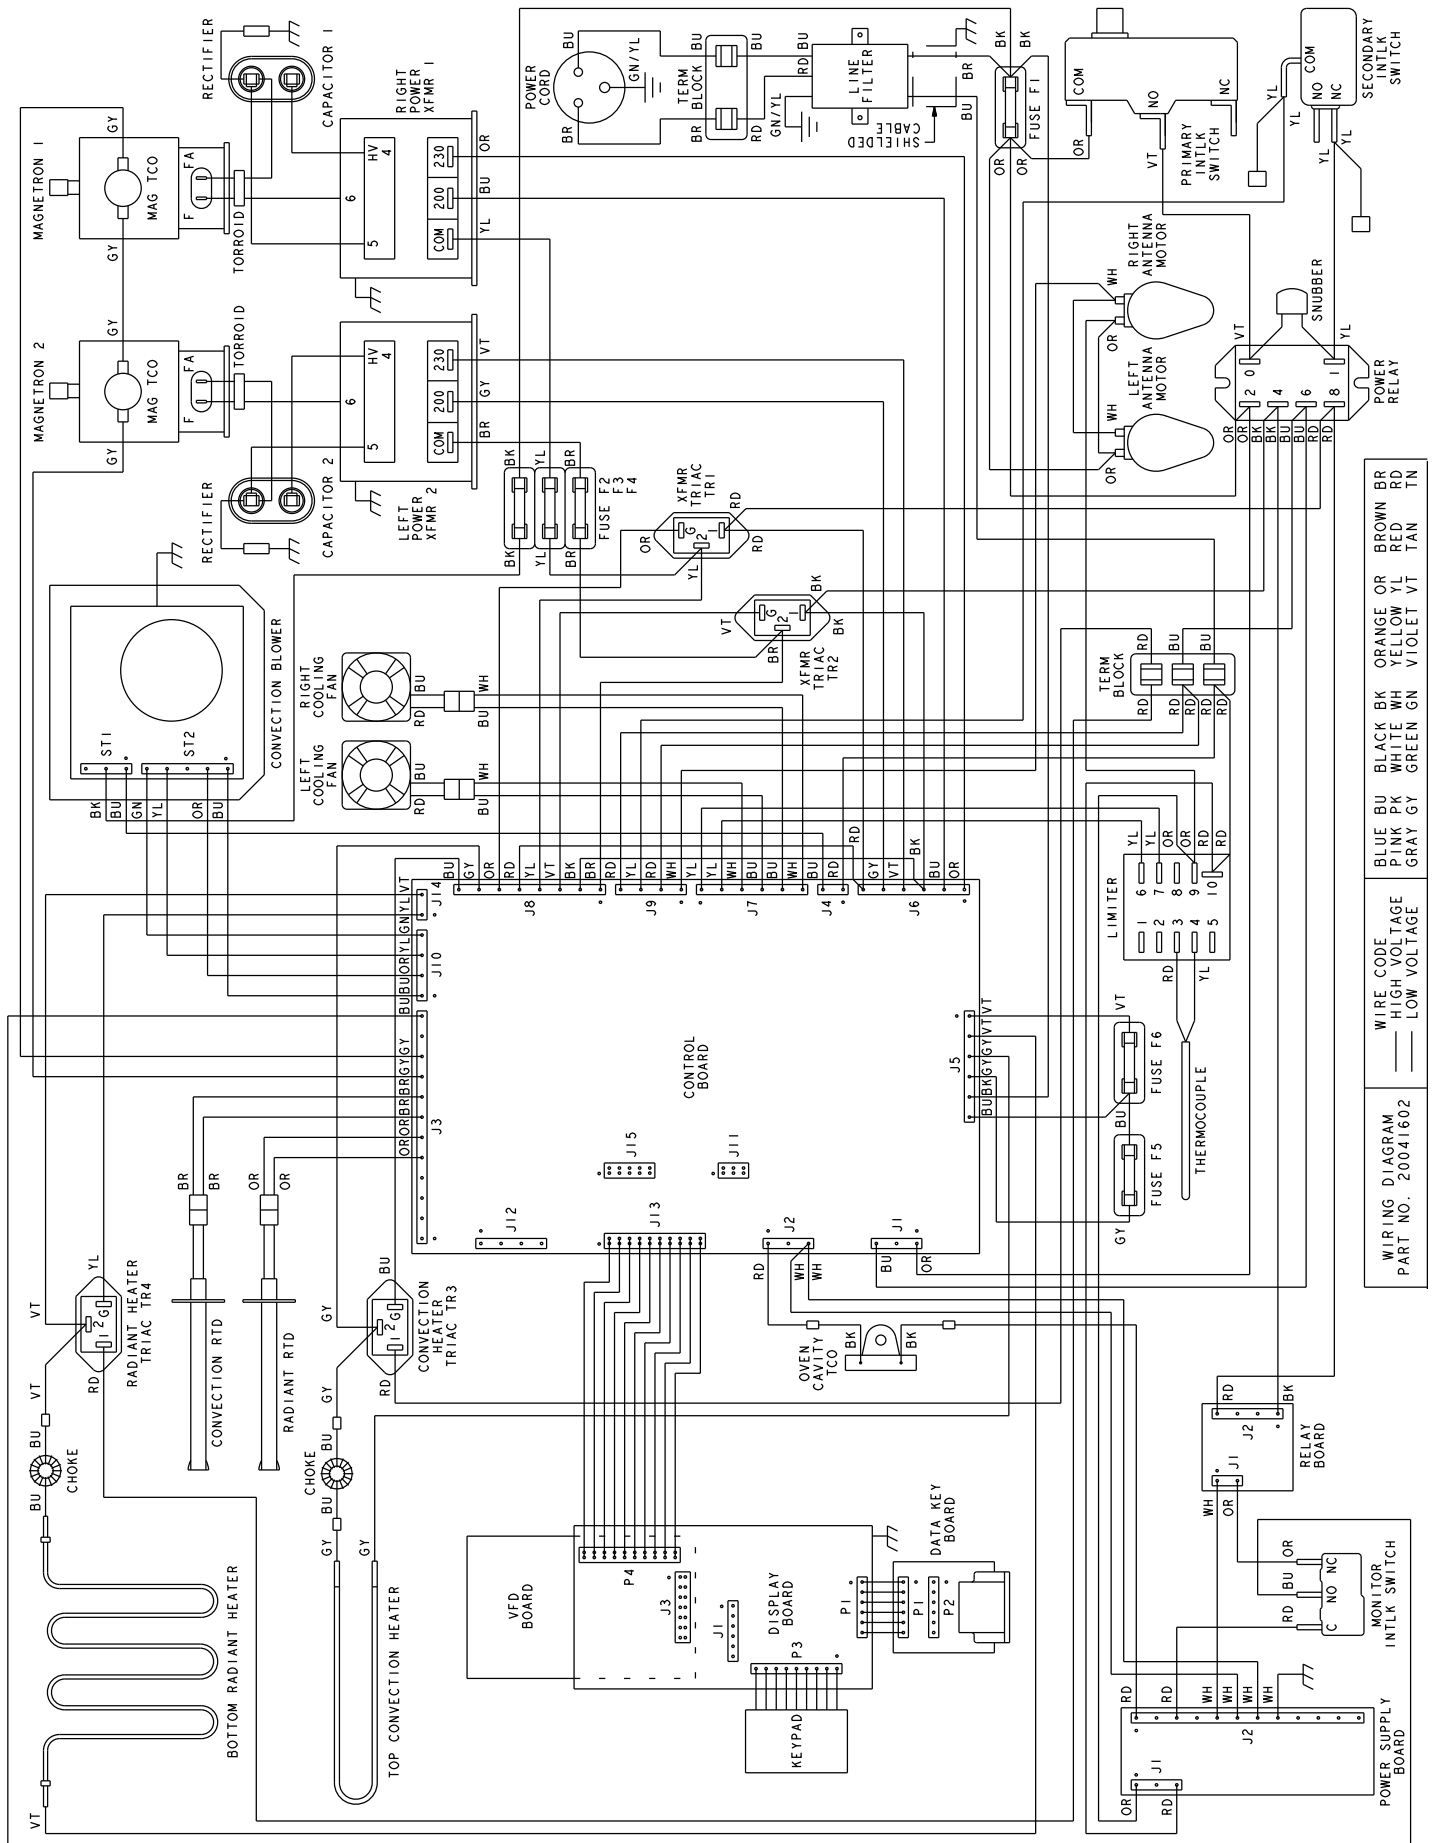


# Wiring Schematic Sample MXP5221

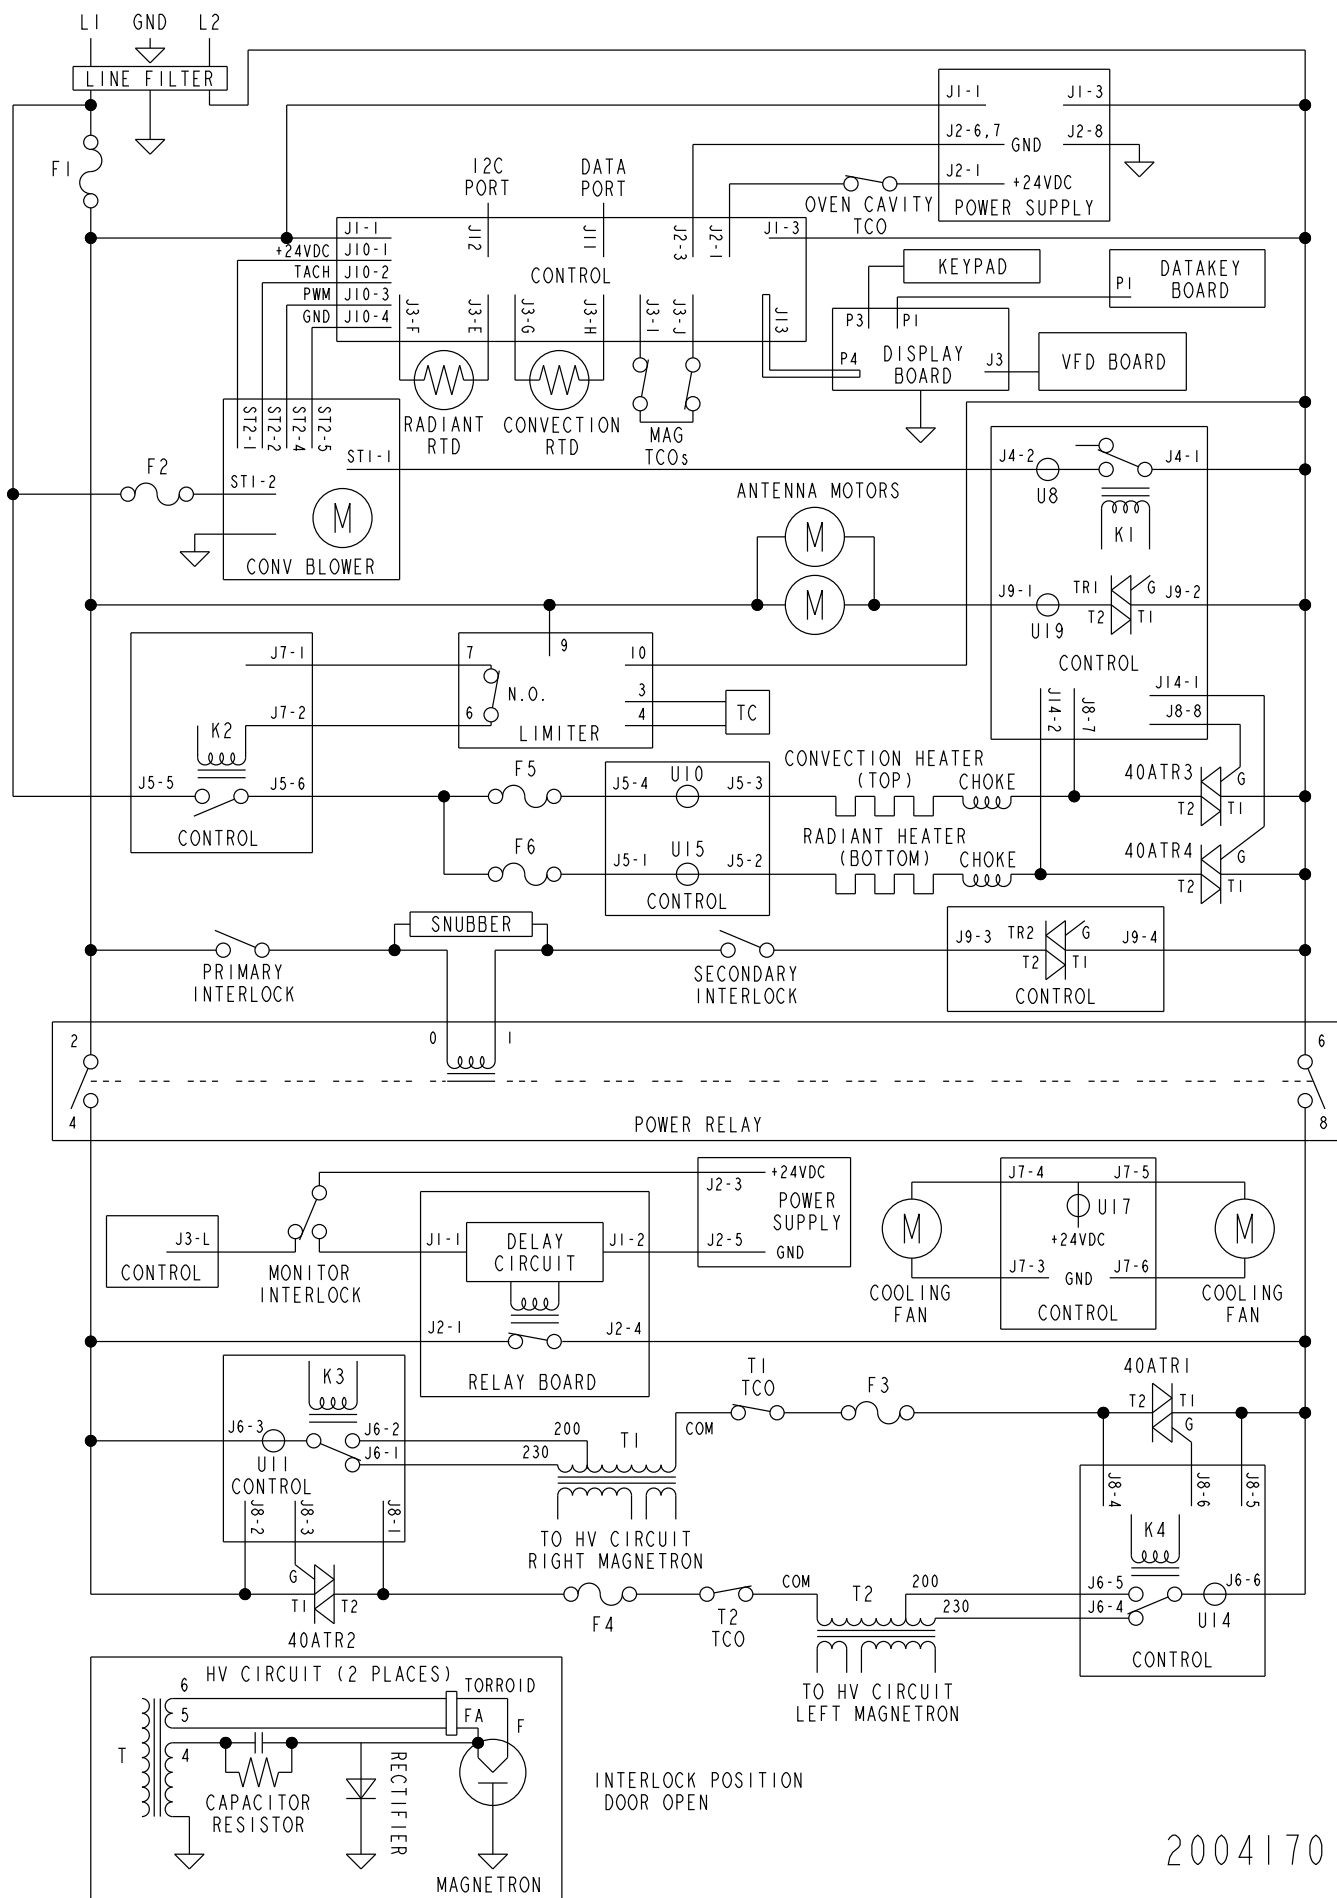


20041701

# Wiring Diagram Sample MXP5223

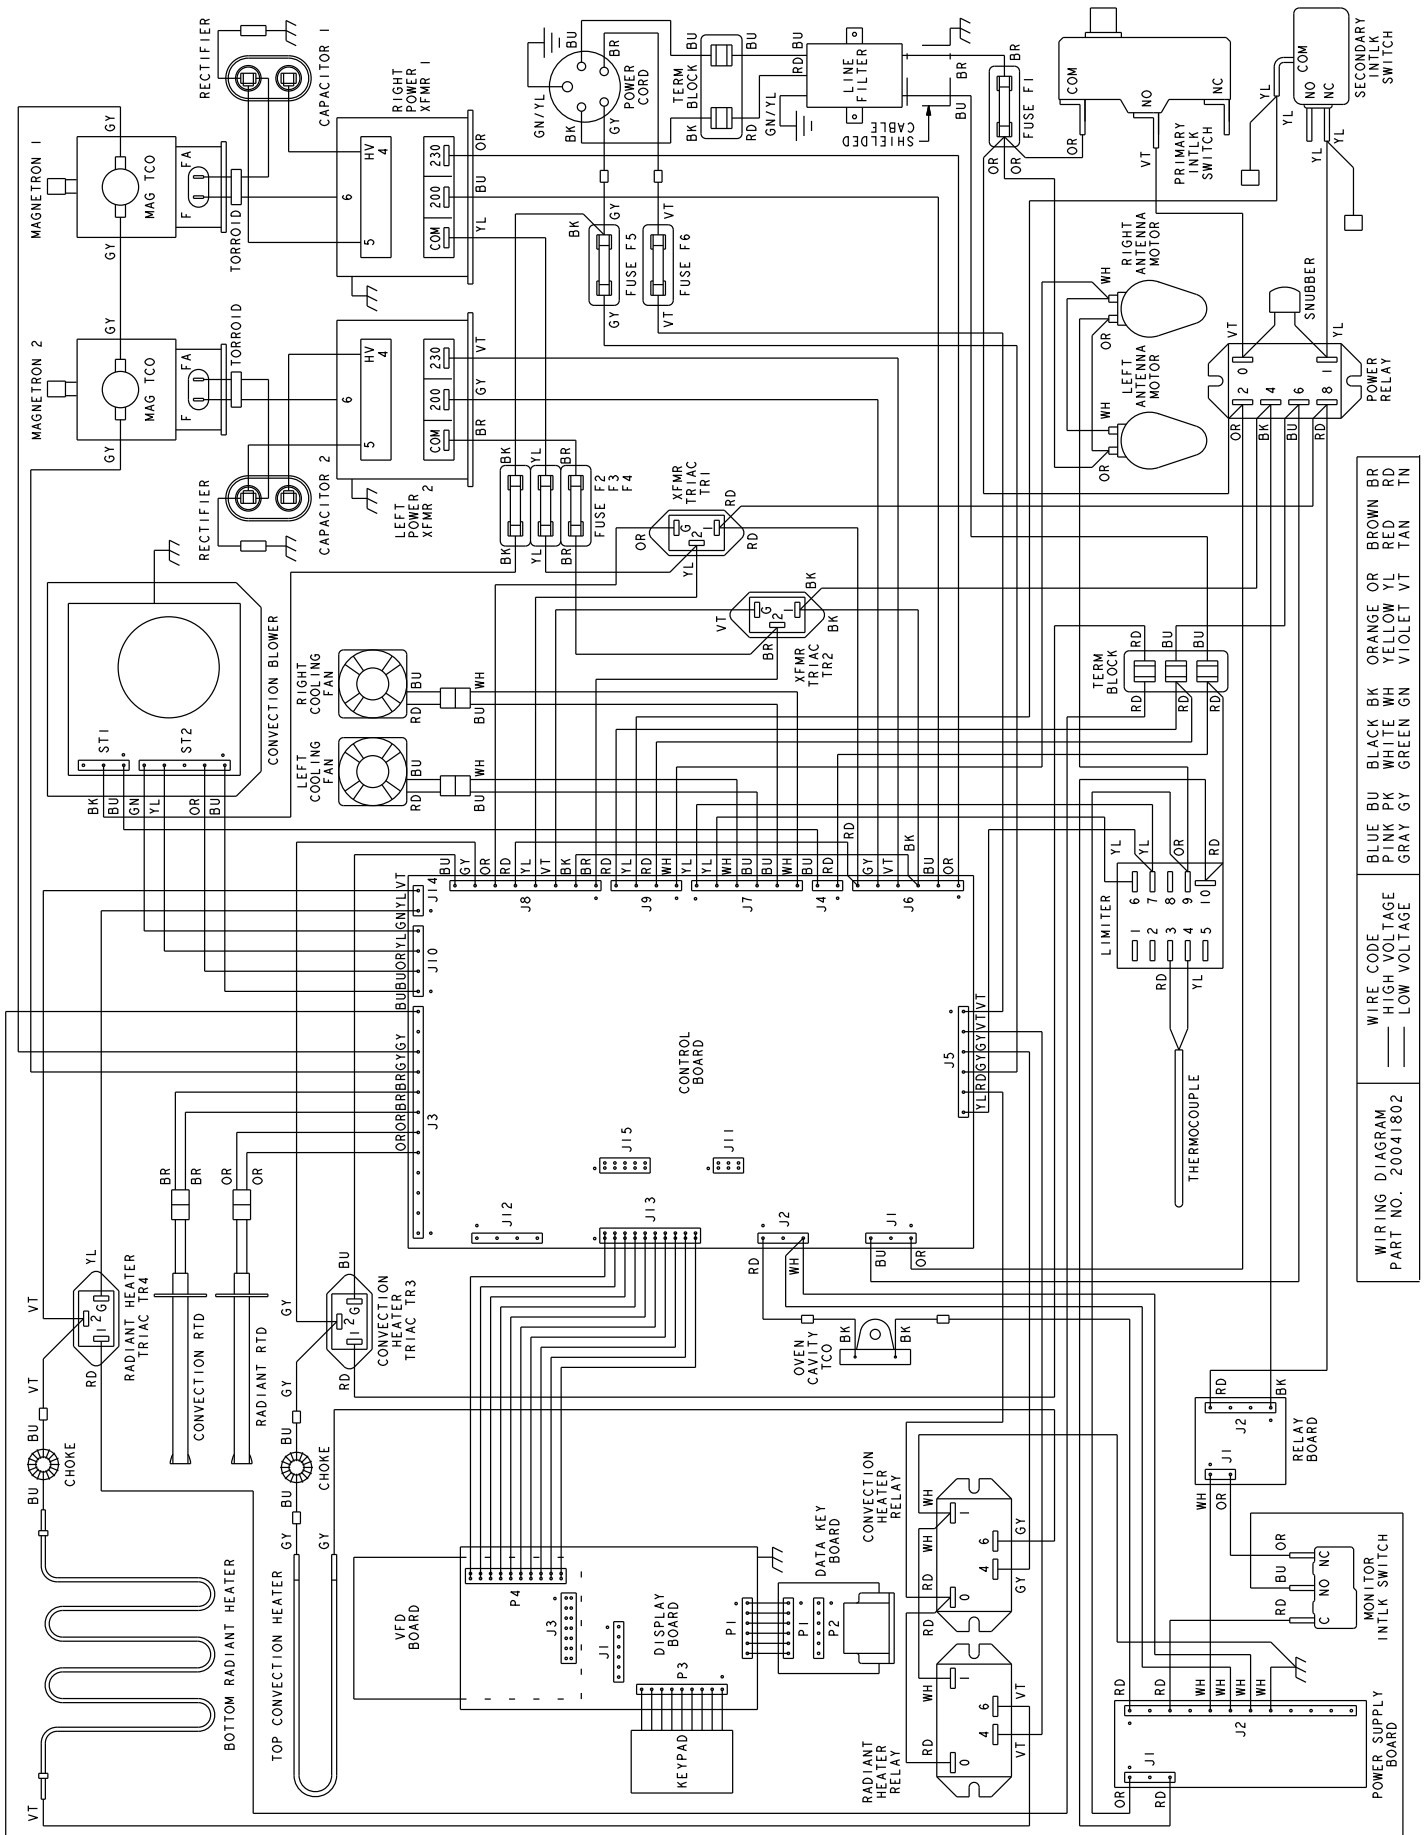

# Wiring Schematic Sample MXP5223

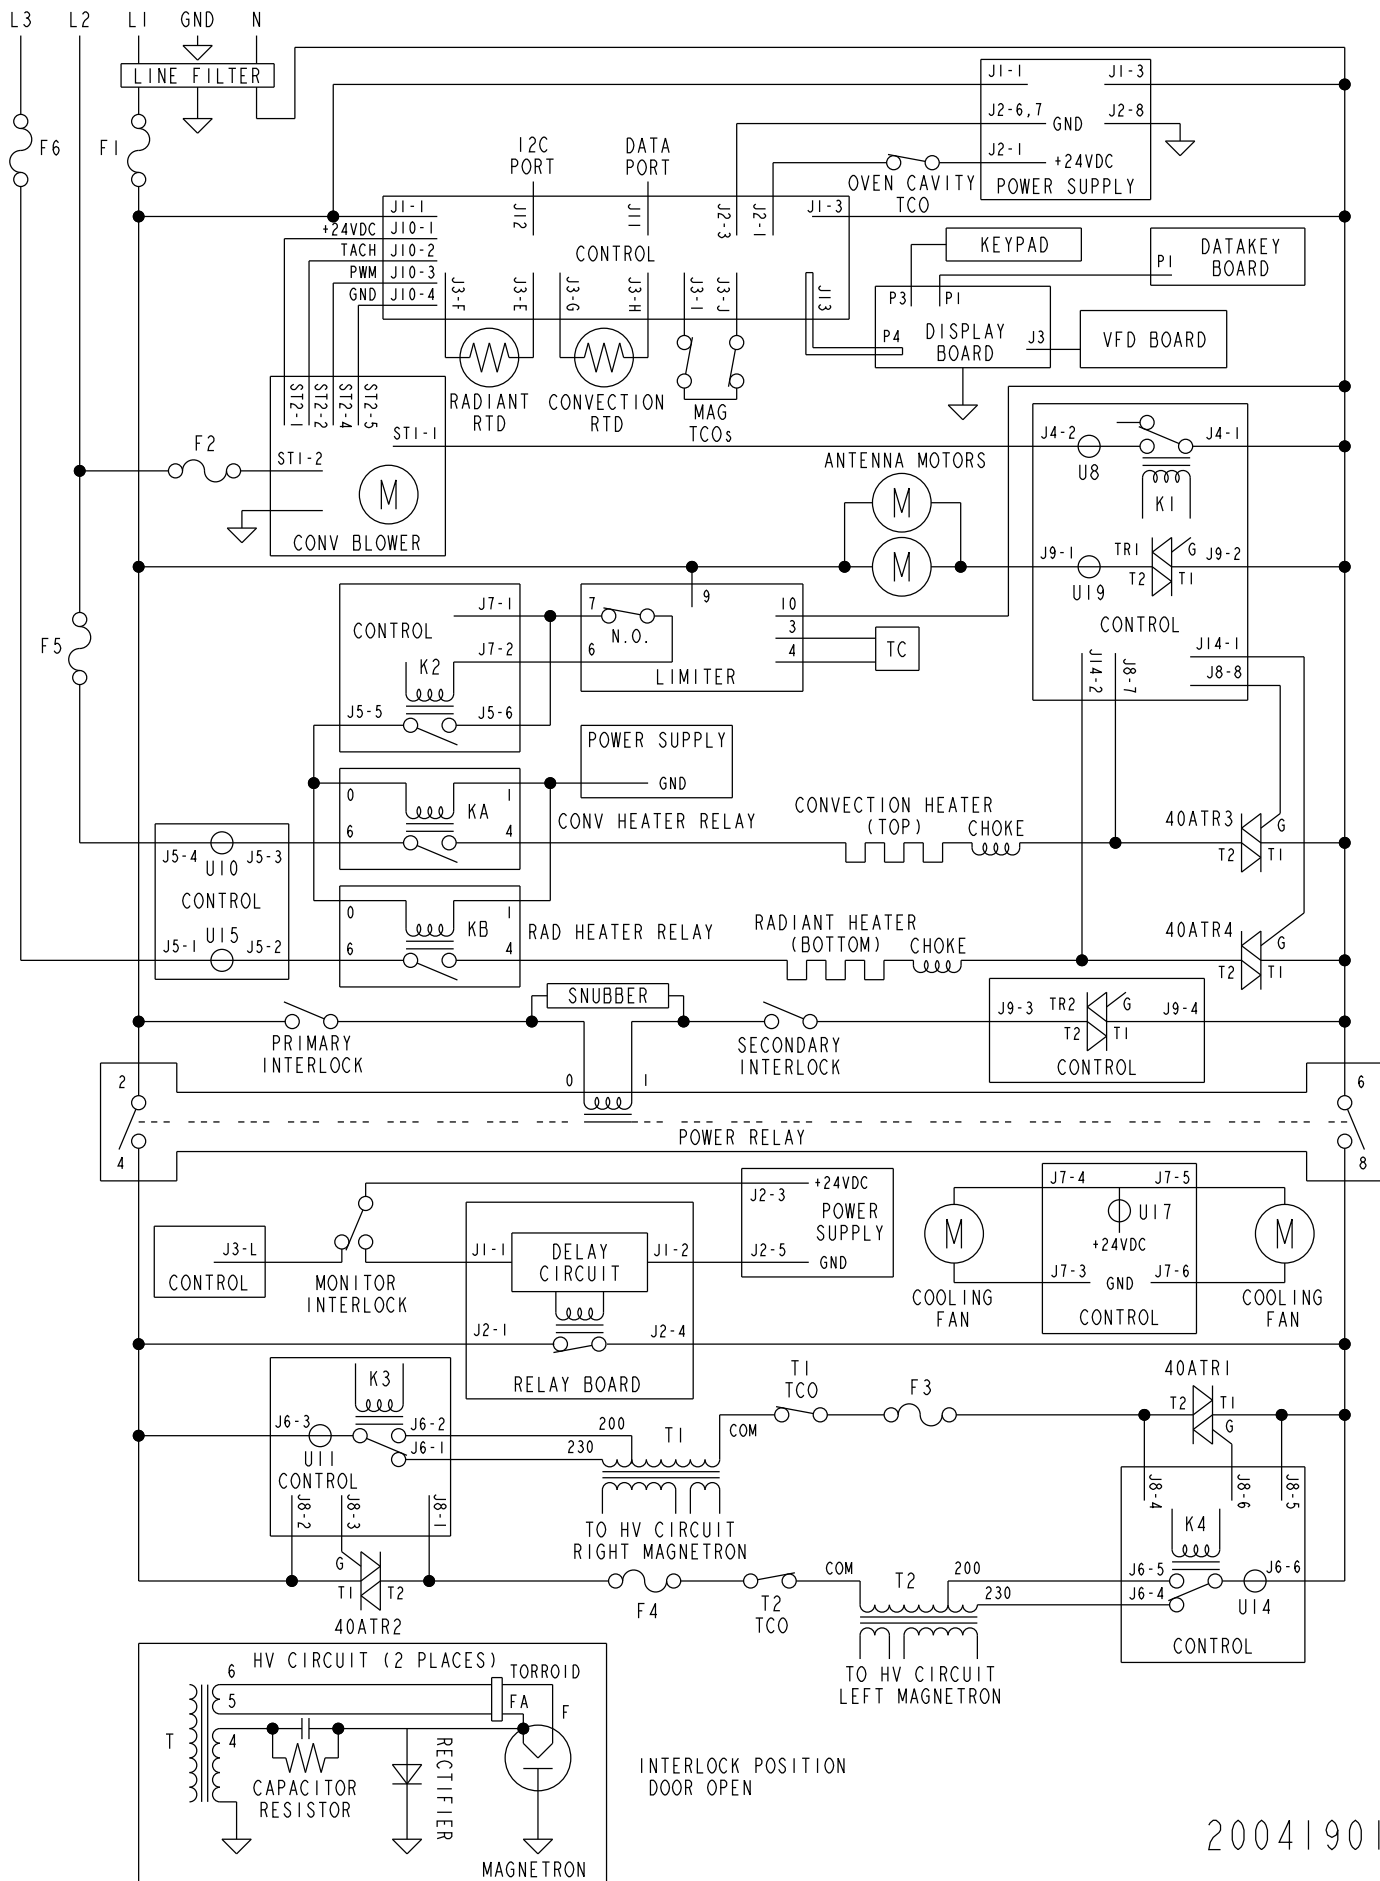

20041901

