


# Microwave Oven Exploded Drawing

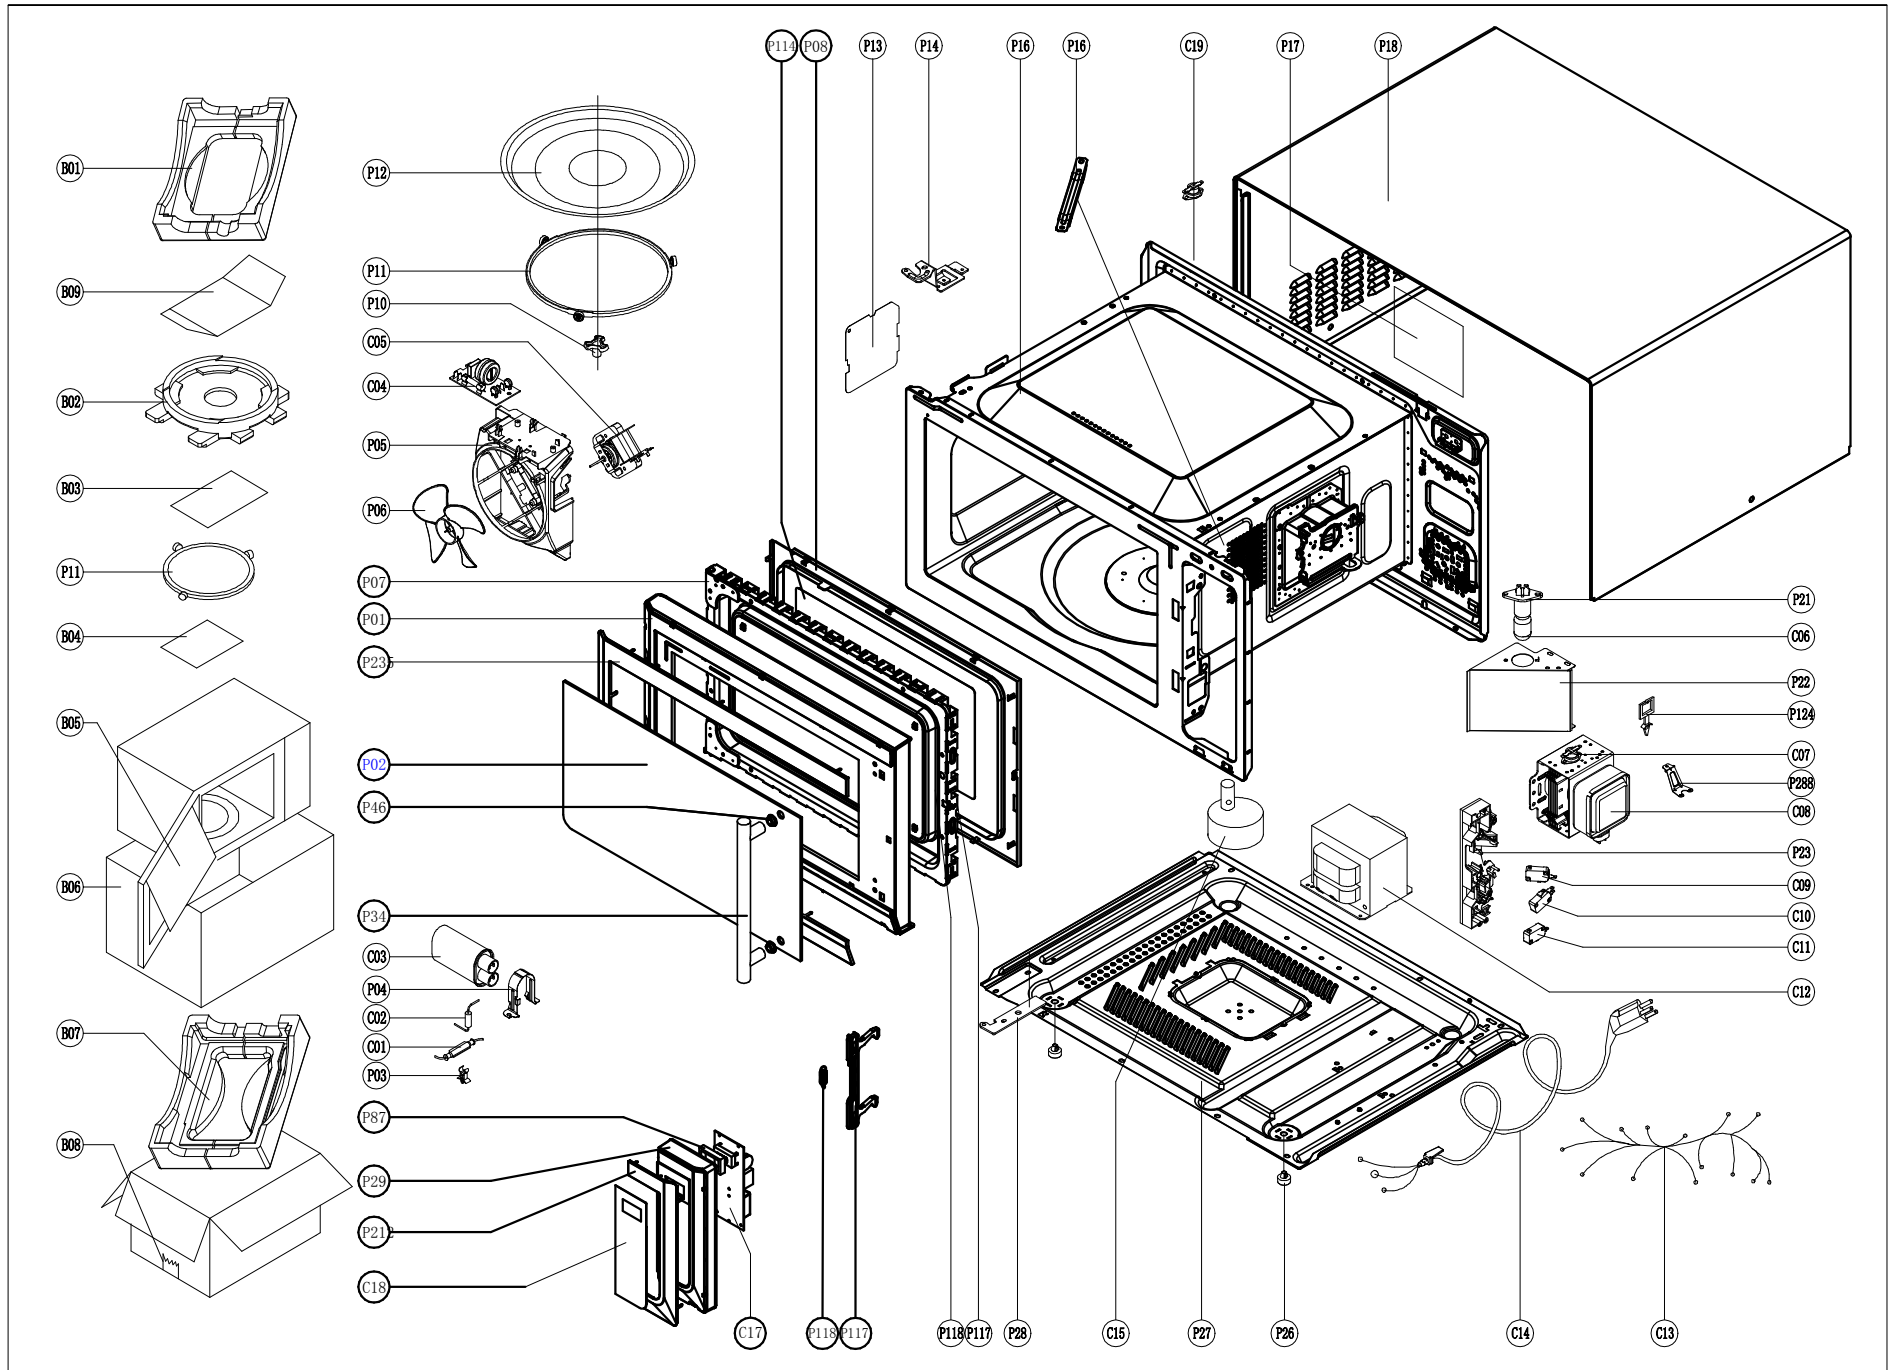

## MT16K3S Parts List

Part#	Name	Count	Part#	Name	Count
P01	door frame	1	C01	H.V.fuse	1
P02	door window board	1	C02	h.v diode	1
P03	fuse socket	1	C03	h.v. capacitor	1
P04	capacitor holder	1	C04	noisefilter/fuse	1
P05	fan bracket	1	C05	fan motor	1
P06	fan blade	1	C06	lamp	1
P07	door plate	1	C07	thermostat 1	1
P08	shielding board	1	C08	magnetron	1
P10	connector	1	C09	microswitch	1
P11	roller ring	1	C10	microswitch	1
P12	glass turntable	1	C11	microswitch	1
P13	splash shield mica sheer	1	C12	H.V.transformer	1
P14	upper hinge	1	C13	wiring harness	1
P16	cavity	1	C14	power cord	1
P17	rear nameplate	1	C15	turntable motor	1
P18	outer enclosure	1	C17	p.c.board	1
P21	lamp socket	1	C18	thin film switch	1
P22	air duct bracket	1	C19	thermostat	1
P23	switch mount	1			
P26	foot	4			
P27	base plate	1			
P28	lower hinge	1			
P29	face board	1			
P31	prop	1			
P32	button spring	2			
P33	button	1			
P34	handle	1			
P46	handle decoration	2			
P87	seal	1			
P95	roller	3			
P102	cavity prop	1			
P111	button pad	1			
P114	inlaid	1			
P117	door hinge	1			
P118	door hinge spring	1			
P124	clamp holder	1			
P126	mica flake	1			
P212	panel flake	1			
P235	door flake	1			
P288	magnetron bracket	1			