



AX-M20-00-000PC-1

AX-M20

72-AX20			
ACCPAC	NO.	NAME	QTY.
73-0242	1	#AXM20-01-001 TOP COVER FOR AX-M20	1 PC
73-0001	2	#11012-01-002 RETAINER- BEARING (AX-M20)	1 PC
73-0002	3	#11012-01-003 COVER PLUG (AX-M20)	2 PC
73-0003	4	#11012-01-004 GEAR HOUSE COVER (AX-M20)	1 PC
73-8532	5	#AXM20-01-005 CASE-TRANSMISSION	1 PC
73-8533	6	#11012-01-007 RETAINER-TRANSMISSION	1 PC
73-0539	7	#XL709-11A CONTROL PANEL M20,M30 W/EMERGENCY STOP(W/STICKER)	1PC
73-8534	8	#AXM20-01-006 U-TYPE SEAL	1PC
73-8535	9	#11012-02-005 29T GEAR	1PC
73-8536	10	#11012-02-006 CLUTCH COPPER BUSHING	2 PC
73-8537	11	#11012-02-008 38T GEAR	1PC
73-8538	12	#11012-02-009 WASHER	1 PC
73-8539	13	#11012-02-010 SPACER	1 PC
73-8540	14	#11012-02-016 MAIN SHAFT	1 PC
73-8541	15	#11012-02-017 DETAIN-FIXED COVER	1 PC
73-8542	16	#11012-02-018 GEAR	1 PC
73-8543	17	#11012-02-019 BEVEL GEAR	1 PC
73-8544	18	#11012-02-020 CLUTCH	1 PC
73-8545	19	#11012-02-021 SLEEVE DRIVE	1 PC
73-8546	20	#11012-02-022 WASHER	1 PC
73-0017	21	#11012-02-023 PIN	10 PC
73-0018	22	#11012-02-024 SPRING SHEET	10 PC
73-0246	23	#AXM20-01-008 SUPPORT OF COVER (AX-M20)	1 PC
73-0019	24	#11012-03-001B SHAFT GEAR (AX-M20)	1 PC
73-0072	25	#11031-03-002 32T GEAR (AX-M20, M30)	1 PC
73-8474	26	#D11001R STICKER OF PANEL	1 PC
73-0020	27	#11012-03-004 23T GEAR (AX-M20)	1 PC
73-0021	28	#11012-03-007 OIL BAFFLE (AX-M20 & M30)	1 PC
73-0022	30	#11012-04-003 WORM 4M (AX-M20 & M30)	1 PC
73-0023	31	#11012-04-004A SHAFT-WORM GEAR (AX-M20)	1 PC
73-0024	32	#11012-04-005 WORM GEAR (AX-M20 & M30)	1 PC
73-73-3	33	#11012-04-008 OIL BAFFLE	1 PC
73-0360	34	#GM20-04-009 SPACER (AX-M20, M30)	1 PC
73-0315	35	#CABLE-14-3C-UL POWER CABLE (AX-M20, M30, M40)	1 PC
73-0361	36	#GM20-05-001/110/60/1 MOTOR 110V	1 PC
73-0318	37	#CG-20 CABLE TIE (AX-M20, M30, M40)	1 PC
73-0028	38	#11012-06-001 35T BEVEL GEAR (AX-M20 & M30)	1 PC
73-0287	39	#BM20-06-003 HUB ATTACHMENT (AX-M20, M30)	1 PC
73-0162	40	#11091-06-004 PLUG	1 PC
73-0362	41	#GM20-06-005 THUMB SCREW (AX-M20, M30, M40)	1 PC
73-0029	42	#11012-06-006 OIL BAFFLE (AX-M20, M30, M40)	1 PC
73-0030	44	#11012-07-001 SHIFT HANDLE KNOB (AX-M12, M20)	1 PC
73-0031	45	#11012-07-002 SHIFT HANDLE (AX-M20)	1 PC
73-0363	46	#GM20-07-004 ECCENTRIC SHIFT SHAFT (AX-M20)	1 PC
73-0032	47	#11012-07-005 SHIFT SELECTOR (AX-M20, M40)	1 PC
73-0033	48	#11012-07-006 ECCENTRIC SHAFT (AX-M20, M40)	1 PC
73-0083	49	#11031-07-007 LOCK SCREW (AX-M30, 40)	2 PC
73-0084	50	#11031-07-008 PLUNGER SHAFT-SHIFTER (AX-M20)	2 PC
73-0034	51	#11012-07-009 SHIFTER FIXED SHAFT (AX-M20)	1 PC
73-0364	52	#GM20-07-010 SHIFT FORK (AX-M20, M30)	1 PC
73-0086	53	#11031-07-011 COMPRESSION SPRING (AX-M20, M30, M4)	2 PC
73-0087	54	#11031-07-012 COMPRESSION SPRING (AX-M20, M30, M40)	2 PC
73-0530	55	#20-55 SAFETY GUARD LIMIT SWITCH FOR AX-M12, V-153-1A5	1 PC
73-0035	56	#11012-08-001 19T GEAR (AX-M20)	1 PC
73-0036	57	#11012-08-002 INTERNAL GEAR (AX-M20)	1 PC
73-258A	58	#11012-08-004 PLANETARY HEAD (AX-M20)	1 PC
73-0038	59	#11012-08-005 AGITATING SHAFT (AX-M20)	1 PC
73-0319	60	#CP-300MF/125V START CAPACITOR 300MFD/125VAC	1 PC
73-0040	61	#11012-08-007 TAPERED PIN (AX-M20)	1 PC
73-0041	63	#11012-09-001B COLUMN (AX-M20)	1 PC
73-0245	64	#AXM20-01-007 REAR COVER-MIXER HEAD (AX-M20)	1 PC
73-0453	65	#S+R3/16X1/4 MAC. SCREW (AX-M40)	2 PC
73-0042	66	#11012-09-004 BASE (AX-M20)	1 PC
73-0365	67	#GM20-09-005 FRONT COVER-COLUMN (AX-M20)	1 PC
73-0494	68	#SHL-Q2155 BOWL LIMIT SWITCH FOR M20,M30	1 PC
73-0366	69	#GM20-10-001 BOWL SUPPORT (AX-M20)	1 PC
73-0043	70	#11012-10-002 BOWL PIN (AX-M20)	2 PC
73-0045	71	#11012-10-006A BOWL LOCKING PLATE (LEFT) (AX-M20)	1 PC
73-0046	72	#11012-10-006B BOWL LOCKING PLATE (RIGHT) (AX-M20)	1 PC
73-8487	73	#GM20-11-001 LIFTING BAR	1 PC
73-0282	74	#BM10-11-002 FIXED ANGLE CAR (AX-M12)	1 PC
73-0047	75	#11012-11-003 LIFTING HANDLE BRACKET (AX-M20)	1 PC
73-0368	76	#GM20-11-004 LIFT HANDLE (AX-M30)	1 PC
73-0048	77	#11012-11-005 COMPRESSION SPRING (AX-M20)	1 PC

73-8408	78	#11012-12-001 BOWL	1 PC
73-0050	79	#11012-12-002 BEATER 20 QT (AX-M20)	1 PC
73-0051	80	#11012-12-003 DOUGH HOOK FOR AX-M20	1 PC
73-8409	81	#11012-12-004 WIRE WHIP	1 PC
73-0053	83	#11012-13-001 SEAT OF SAFETY GUARD (AX-M20)	1 PC
73-0369	84	#GM20-13-002S SLIDING OPENER (AX-M20)	1 PC
73-0054	85	#11012-13-003A FIXED RING (AX-M20)	1 PC
73-0573	86	#TBC - AXM20-09-010 SEAT OF CONTROL BOX	1 PC
73-0306	87	#BR-6203Z BALL BEARING (AX-M20)	2 PC
73-0299	88	#BR-6005Z BALL BEARING (AX-M20)	1 PC
73-0301	89	#BR-6200Z (AX-M20)	4 PC
73-0308	90	#BR-6204Z BALL BEARING (AX-M20, M30)	1 PC
73-0476	91	#SB-6 STEEL BALL	2 PC
73-0426	92	#OR-G60 O RING (AX-M20, M30, M40)	1 PC
73-0424	93	#OR-33.5X37.5X2 O RING (AX-M20, M30, M40)	1 PC
73-0428	94	#OR-P35 O RING (AX-M20, M30)	1 PC
73-0439	95	#OS-TC32X47X10 OIL SEAL (AX-M20, M30)	1 PC
73-0435	96	#OS-TC25X40X07 OIL SEAL (AX-M20, M30)	1 PC
73-0436	97	#OS-TC25X47X08 OIL SEAL (AX-M20)	1 PC
73-746	98	#CR-S16 (AX-M20)	1 PC
73-0325	99	#CR-S20 (AX-M20)	1 PC
73-0320	100	#CR-R47 (AX-M20)	1 PC
73-0433	101	#OS-TC25X32X04 OIL SEAL (AX-M20)	1 PC
73-0509	102	#SPP-8X25 SPRING PIN	2 PC
73-0503	103	#SPP-6X22 SRPRING PIN	2 PC
73-8506	104	#SPP-4X24 SPP-4X24	1 PC
73-0527	105	#TP-4X32 TAPERED PIN	1 PC
73-0547	106	#YP-1/8X20	1 PC
73-0507	107	#SPP-8X20 SPRING PIN	2 PC
73-0400	108	#KRR-6X6X30 KEY (AX-M20, M60)	2 PC
73-0389	109	#KRR-1/8X1/8X1/2 KEY (AX-M20)	2 PC
73-0395	110	#KRR-5X5X15 KEY (AX-M12, M60)	1 PC
73-0390	111	#KRR-1/8X1/8X28 KEY (AX-M20, M30)	1 PC
73-0388	112	#KR-6X6X50 KEY	1 PC
73-0385	113	#KR-5X5X20 KEY	1 PC
73-0468	114	#S-3/8X1-1/4 BOLT	2 PC
73-0574	115	#S+R1/4X2-1/2 ROH MACH SCREW 1/4X 2-1/2	2 PC
73-0456	116	#S-1/2X1/2 BOLT 1/2X1/2 (AX-M60)	2 PC
73-8149	117	#S-3/8"X1/2 BOLT	4 PC
73-0454	118	#S+R3/16X3/8 MAC. SCREW (AX-M20)	6 PC
73-0459	119	#S-1/4X1/2 BOLT (AX-M60)	2 PC
73-761	120	#S-C-1/4X5/8 CAP SCREW	8 PC
73-0489	121	#S-C-5/16X1 CAP SCREW	4 PC
73-0489	122	#S-C-5/16X1 CAP SCREW	4 PC
73-761	123	#S-C-1/4X5/8 CAP SCREW	2 PC
73-0482	124	#S-C-1/4X1-1/4 CAP SCREW	6 PC
73-0512	125	#S-S5/16X2 SET SCREW	1 PC
73-0513	126	#S-S5/16X3/4 SET SCREW	1 PC
73-0511	127	#S-S5/16X1/4 SET SCREW	2 PC
73-769	128	#S+F3/16X1/2 MAC. SCREW (AX-M12)	4 PC
73-0454	129	#S+R3/16X3/8 MAC. SCREW (AX-M20)	18 PC
73-0451	130	#S+R1/4X3/8 MAC. SCREW (AX-M30)	3 PC
73-0455	131	#S+R5/32X3/8 MAC. SCREW (AX-M20)	1 PC
73-G071	132	#NUT-1/2X20NF NUT 1/2X20NF	3 PC
73-0418	133	#NUT-3/4X16NF (AX-M20, M30)	1 PC
73-0420	134	#NUT-3/8X24NF (AX-M20)	2 PC
73-773	135	#NUT-3/8X16NC (AX-M20, M30)	6 PC
73-771	136	#NUT-1/4X20NC (AX-M12, M20)	2 PC
73-0454	137	#S+R3/16X3/8 MAC. SCREW (AX-M20)	2 PC
73-0540	138	#XL-710-1 (110V) IC BOARD(110V)W/BOX	1 PC
73-774	139	#WB-3/8 FLAT WASHER	3 PC
73-0533	140	#WB-1/4 FLAT WASHER	2 PC
73-778	141	#SW-5/16 SPRING WASHER	4 PC
73-777	142	#SW-1/4 SPRING WASHER	2 PC
73-0524	143	#SW-3/8 SPRING WASHER	15 PC
73-0521	144	#SW-1/2 SPRING WASHER	2 PC
73-0523	145	#SW-3/4 SPRING WASHER	1 PC
73-2146	146	#ABESMT44+ABMS800M+ABAU8F01 STOP SWITCH	1 PC
73-2146		#ABESMT44+ABMS800M+ABAU8F01 STOP SWITCH	1 PC
73-2180		#ABAU8F01 SWITCH TERMINAL FOR AX M80	1 PC
73-0026	147	#11012-05-006/60HZ GOVERNOR PLATE (60HZ)	1 PC
73-0027	148	#GM20-05-001/1/2-4-60XLOTHER GOVERNOR (60HZ)	1 PC
73-0542	149	#XL710-L2 INTERNAL WIRE-PANEL/BOX	1 PC
73-0544	150	#XL710-L4 WIRES OF SAFETY GUARD SWITCH	2 PC