



Housing Assembly, Top View

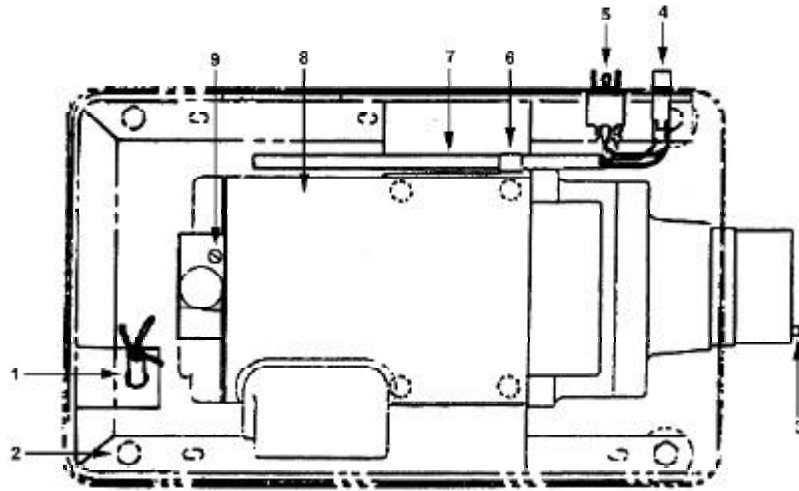

**Housing Assy., Top View**

No.	Description	Part Number
1	Power Cord, 110/60/1	4175-00031
	Power Cord, 230/60/1	4175-00043
	Bushing, Strain Relief	2675-00562
2	Screw	2175-03063
	Washer	2275-01060
	Lockwasher	2275-03065
	Nut	2175-05060
3	Pin	2275-00171
4	Pilot Light	2675-00053
5	Toggle Switch	2675-00069
	Toggle Switch Guard	2675-00647
6	Fiber Washer	2675-00650
7	Control Cord	4175-00421
8	Gear Motor, 115-230/60/1	4175-00396
9	Screw	2175-03431


Housing Assembly, Side View

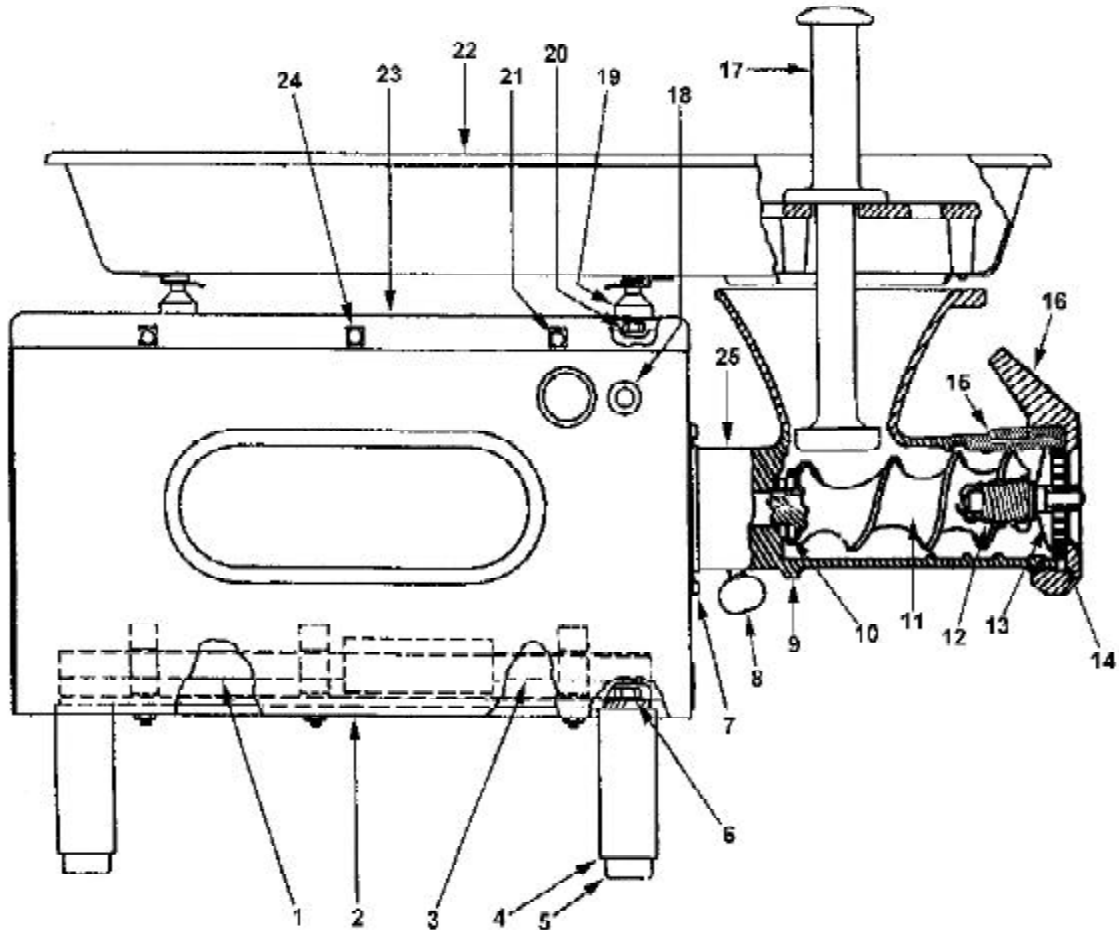

Housing Assy., Side View

No.	Description	Part Number	No.	Description	Part Number
1	Edge Liner, Long	3675-00218	14	Plate, 1/8"	K-04022-1
2	Housing Assy., Complete	4575-00894		Plate, 3/16"	K-04022-1B
3	Edge Liner, Short	3675-00217		Plate, 1/4"	K-04022-1D
4	Leg	230-25036		Plate, 3/8"	K-04022-1H
5	Rubber Foot	07320-3D	15	Screw	10916
6	Screw	2175-01073	16	Ring	K-01286-1
	Lockwasher	2275-01075	17	Rammer	K-01578-6
7	Trim Collar	230-25844	18	Hole Plug, 1/2"	3675-00231
	Screw	2175-00149	19	Post	230-25320
8	Thumbcrew	4575-00932	20	Screw	2175-03051
9	Bowl Assy.	4575-00883		Washer	2275-03051
10	Fiber Washer	2275-00567		Lockwasher	2275-03055
	Brass Thrust Washer	E-01993	21	Screw	2175-00429
11	Feedscrew Assy.	AK-03435	22	Tray Assy.	4575-00736
12	Stud	K-03436	23	Cover	3475-00685
13	Knife	K-04022-2	24	Nut	2175-00380
			25	Gear Motor, 115-230/60/1	4175-00396

Housing Assembly, Front View

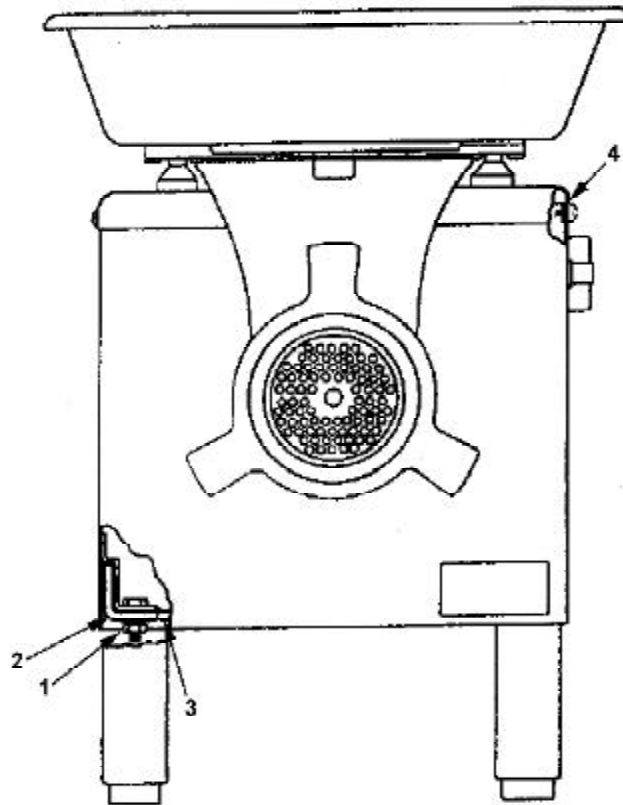

Housing Assy., Front View

No.	Description	Part Number
1	Screw	2175-01053
	Washer	<a href="#">2275-03051</a>
	Lockwasher	<a href="#">2275-03055</a>
	Nut	2175-05050
2	Frame Assy.	4575-00730
3	Bottom Cover	3475-00716
4	Nut	2175-00380