



REFRIGERATOR & FREEZER UCR/WTR/SPE – UCF/WTF

(Under Counter, Work Top and Sandwich Prep Models)

Installation, Operation and Troubleshooting Manual

R290 VERSION

3779 CHAMPION BLVD, WINSTON-SALEM, NC 27105

Phone: (888) 845-9800 Fax: (800) 253-5168 Website: www.beverageair.com

THANK YOU!

Thank you for purchasing a Beverage-Air cabinet. This series has passed our strict quality control inspection and meets the high standards set by Beverage-Air Refrigeration! You have made a quality investment that with proper maintenance will give you many years of reliable service!

Please read the following installation and maintenance instructions before installing or using your unit. If you have any questions, Please call our Technical Service Department at (800) 684-1195.

Important Information, Please Read

*** PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING, IF RECOMMENDED PROCEDURES ARE NOT FOLLOWED, WARRANTY CLAIMS MAY BE DENIED.**

* Your warranty registration information is located on the next page of this manual. Please complete the card and submit it to Beverage-Air Refrigeration **within TEN days** of installation. Failure to properly register equipment may limit or void the warranty.

* Beverage-Air Refrigeration reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions, or replacements for previously purchased equipment.

REMEMBER, SAFETY FIRST. PLEASE BE SAFE AT ALL TIMES

When using electrical appliances, basic safety measures should always be taken. These include, but are NOT limited to:

- following manufacturers installation instructions
- not allowing children to climb on or around equipment
- having service done only by qualified technicians

IMPORTANT – HC MODELS

- **Please use care when moving or handling this equipment. It is equipped with flammable refrigerant and damage to refrigerant tubing will increase the risk of a leak.**
- **When service is required, seek factory authorized technicians trained to safely maintain and service systems that utilize flammable refrigerants, such as R290. RSES offers such training and certification.**
- **Use factory authorized replacement parts to minimize the risk of possible ignition.**

IMPORTANT INFORMATION

This cooler has passed all Quality Control Inspections
and meets the high standards of Beverage-Air Refrigeration.
This inspection includes complete refrigeration system, cabinet construction, and finish

IMPORTANT PLEASE RETAIN FOR YOUR RECORDS

You may mail this completed page to Beverage-Air or register on line at www.beverage-air.com

NOTE: The mail-in form must be filled out and forwarded to Beverage-Air by the installer or customer within 10 days after start-up. Failure to do this may invalidate the warranties. Retain this information for your records.



3779 Champion Blvd,
Winston-Salem, NC 27105
TEL: (888) 845-9800
FAX: (800) 253-5168

Cabinet Model No. _____

Cabinet Serial No. _____

**WARRANTIES NOT VALID UNLESS REGISTERED AT FACTORY
WITHIN 10 DAYS AFTER START-UP DATE.**

ORIGINAL DATE OF
INSTALLATION _____

CUSTOMER
NAME _____ PHONE _____

STREET _____ STATE _____ ZIP CODE _____

DEALER'S
NAME _____ PHONE _____

STREET _____ STATE _____ ZIP CODE _____

LIMITED WARRANTY

(Continental US Only)

The Seller warrants to the original purchaser, equipment manufactured by the Seller shall be free from defects in material or workmanship for which it is responsible. The Seller's obligation under this warranty shall be limited to replacing or repairing at Seller's option, without charge, F.O.B. Seller's factory, any part found to be defective and any labor and material expense incurred by Seller in replacing or repairing such part, such warranty to be limited to a period of twelve (12) months from the date of installation, provided, however, installation occurs within three (3) months of date of purchase and equipment is in normal use and service and is installed in accordance with manufacturer's recommendations and provided terms of payment have been fully met. All labor shall be performed during regular working hours. Overtime premium charges shall be at the Buyers expense.

Proof of purchase must be provided to the Seller to validate warranty. This warranty is valid only if equipment is properly installed, started-up, and inspected by the dealer or authorized Beverage-Air Service agent.

Removal or alteration of the serial/data plate from any equipment shall be deemed to release Seller from all warranty obligations, expressed or implied.

This warranty does not cover Thermostat, Controller, Thermometer, or Defrost Timer calibration and/or adjustment, freight damage, normal maintenance items outlined in the Owner's Manual, adjustment of door mechanisms, or replacement of door gaskets, light bulbs, fuses, or batteries. The warranty does not cover installation, start-up, normal maintenance, food loss or other consequential damage.

Any repairs or replacement of defective parts shall be performed by Seller's authorized service personnel. Seller shall not be responsible for any costs if the work is performed by other than Seller's authorized personnel. Reimbursement claims for part(s) or labor service costs must be made in writing. Model, cabinet serial numbers and installation location must be shown on the claim. A receipted bill from the servicing agency must accompany the claim, together with full details of the service problems, diagnosis and work performed. Beverage-Air will determine at its sole discretion whether further documentation on a claim is to be submitted.

Seller shall not be liable for consequential damages of any kind which occur during the course of installation of equipment or which result from the use or misuse by Buyer, its employees or others of the equipment supplied. Hereunder, and Buyers sole and exclusive remedy against seller for any breach of the foregoing warranty or otherwise shall be for the repair or replacement of the equipment or parts thereof affected by such breach.

The foregoing warranty shall be valid and binding upon Seller if, and only if, Buyer loads operates and maintains the equipment supplied hereunder in accordance with the instruction manual provided to Buyer. Seller does not guarantee the process of manufacture by Buyer or the quality of the product to be produced by the equipment supplied hereunder and Seller shall not be liable for any prospective lost products or profits of Buyer.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER. SPECIFICALLY THERE ARE NO IMPLIED WARRANTIES OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE. The foregoing shall be sellers sole and exclusive obligation and Buyers sole and exclusive remedy for any action, whether in breach of contract or negligence. In no event shall Seller be liable for a sum in excess of the purchase price of the item.

TABLE of CONTENTS

1. Introduction	
1.1 Beverage-Air Refrigeration / Freezer	7
1.2 Glossary of Terms	7
2 Installation	
2.1 Receiving and Inspection	9
2.2 Uncrating	9
2.3 Placement	9
2.4 Set-up	10
A. Roll In	10
B. Reach In	10
2.5 Leveling, Shelves and Bumper Install	10
2.6 Cleaning	12
2.7 Power Supply	12
2.8 Controller	12
2.9 Installation Checklist	12
3 Unit Start-up	
3.1 Sequence of Operations	13
3.1.1 Refrigerator	13
3.1.2 Freezer	14
3.2 Electronic Controller	15
3.2.1 Control Panel Display	15
3.2.2 Control Panel Connections	15
3.2.3 Keyboard Functions	16
3.2.4 Changing the Set point	17
3.2.5 Viewing the current Probe Temperature	18
3.2.6 Electronic Controller Parameters	19
3.2.7 How To View Alarms	20
3.2.8 Entering StandBy Mode	21
3.2.9 Exiting StandBy Mode	21
4 Preventative Maintenance	
4.1 Daily Exterior	22
4.2 Weekly Interior	22
4.3 Monthly Condenser	22
4.4 Periodic Gaskets	22
4.5 Drawers	23
4.6 Effectively Cleaning Stainless Steel	24
5 Trouble Shooting Chart	
5.1 General	26
5.2 Refrigerator Ladder Diagram	27
5.3 Freezer Ladder Diagram	28

INTRODUCTION

1.1 Description

Beverage-Air Refrigeration products, refrigerators and freezers, are distinctly designed to accommodate a wide variety of food service needs and situations. Beverage-Air products are designed to keep refrigerated products at 38° F, while frozen products are kept at 0° F for maximum safety and freshness.

1.2 Glossary of Terms

Compressor - The compressor is the heart of the system. The compressor does just what it's name states. It compresses the low pressure refrigerant vapor from the evaporator and compresses it into a high pressure vapor. The inlet to the compressor is called the "Suction Line". It brings the low pressure vapor into the compressor. After the compressor compresses the refrigerant into a high pressure Vapor, the vapor is pumped into the "Discharge Line".

Condenser Coil - The "Discharge Line" leaves the compressor and runs to the inlet of the condenser coil located on top of the cabinet. Because the refrigerant is compressed, it is a hot high pressure vapor (as pressure goes up – temperature goes up). The hot vapor enters the condenser coil and starts to flow through the tubes. Cool air is blown across the outside of the finned tubes of the condenser coil (usually by a fan or water with a pump). Since air is cooler than the refrigerant, heat moves from the refrigerant to the cooler air (energy goes from hot to cold – "latent heat"). As the heat is removed from the refrigerant, it reaches it's "saturated temperature" and starts to condense (change states), into a high pressure liquid. The high pressure liquid leaves the condenser coil through the "liquid line" and travels to the "metering device". Sometimes running through a filter dryer first, removes any dirt or foreign particles.

Defrost - The term is used to identify the function of a refrigerator or freezer to remove frost or ice from the internal evaporator coil.

Differential - An increment between where the compressor turns on and off.

Setpoint - This is the refrigerator or freezer cut out temperature set by the operator. Prior to shipping, refrigerators are factory preset at 35°F and freezers are factory preset at -4°F.

INSTALLATION

WARNING: If it is necessary to move the cooler after removal from the skid, remove all doors and carefully push the unit at a point of no more than 36" from the bottom to avoid damage. It is an NSF requirement that all roll-in/roll-thru units be sealed to the floor upon installation.

2.1 Receiving and Inspecting

Prior to shipping, all Beverage-Air products are factory tested for performance and thoroughly inspected to ensure they are free of any defects. Upon receipt, carefully examine the unit for any damage that may have occurred during shipping and delivery. Any damage, discrepancies, overages, or shortages should be noted on the carrier's *Bill of Lading* and a freight claim must be immediately filed with the carrier. If damage is noted after receipt, contact the carrier's local terminal and file a freight claim. In either case, IT IS IMPORTANT THAT ALL ORIGINAL CARTONS, CRATES, AND INTERIOR PACKAGING MATERIAL ARE SAVED UNTIL INSPECTION HAS BEEN MADE BY THE DELIVERING CARRIER

NOTE: If the unit is laid down for any reason, the fluids in the compressor will drain out. To prevent damage to the unit it **MUST** be allowed to sit upright for a minimum of One (1) hour prior to starting up unit.

2.2 Uncrating

* Tools Needed: 3/4" box wrench, adjustable wrench, level, flat head screw driver, and box cutter.

1. First, remove the cardboard top capping, all clear tape, and all staples including those at the bottom of the cardboard carton and skid.
2. Next, start from the top of the carton. Using the box cutter, carefully make one continuous cut to the bottom of the skid. Remove cardboard carton and discard.

***Note:** additional clear plastic protective wrap is applied directly to any product with a glass door.

3. Then, move unit as close to final position as possible before removing the skid.

WARNING: UNIT MUST BE BLOCKED AND SECURED WHEN REMOVING SKID

4. Finally, tip the unit forward and remove the skid. Remove the shipping bolts using the 3/4" box wrench while cabinet is held in one direction. Then repeat the process while the cabinet is held in the opposite direction.

2.3 Placement

Consider the following when selecting a location for your cooler:

1. Clearance:
2. Floor Load: the floor on which the cooler is located must be even and level, free from vibrations, and strong enough to support the combined weights of the unit and maximum product load.
3. Ventilation
4. Power Outlet: Dedicated power outlet is located within 8 feet of length of cord.

INSTALLATION

2.4 Cooler Set-up for Reach In units

With Legs or Casters

WARNING: unit must be blocked and secured prior to installing casters

1. Legs and casters must be screwed in by hand. Use the threaded holes located on the bottom of the cabinet. None of the threads on the leg or caster stem should be visible once screwed in. Once the caster cannot be turned any further, use the $\frac{3}{4}$ ' box wrench to tighten the nut in between the mounting plate and the wheel of the caster until snug.
2. Tilt the cabinet in one direction approximately 8" and block it securely with pieces of 2x4 lumber or other suitable material.
3. Screw in the two accessible legs/casters
4. Repeat this procedure with unit secured in the opposite direction so as to access the remaining legs/casters

2.5 Leveling, Bumpers and Shelves

2.5.1 Leveling:

Cabinets must be leveled when installed. Level should be measured on the headrail. Failure to level your cabinet may result in door not sealing, closing correctly, or condensed water draining not draining properly.


For cabinets with legs, rotate the foot of the leg with an adjustable wrench to achieve desired height for leveling.

For cabinets with casters, leveling can be achieved by placing large washers in between the $\frac{1}{2}$ ' stud and the holes located on the bottom of the case.

2.5.2 Bumpers:

Bumpers and screws are included in the zip lock bag.

Remove one screw from each end of the top rear and discard screws. Attach the bumpers in the same locations, using the longer screws provided.

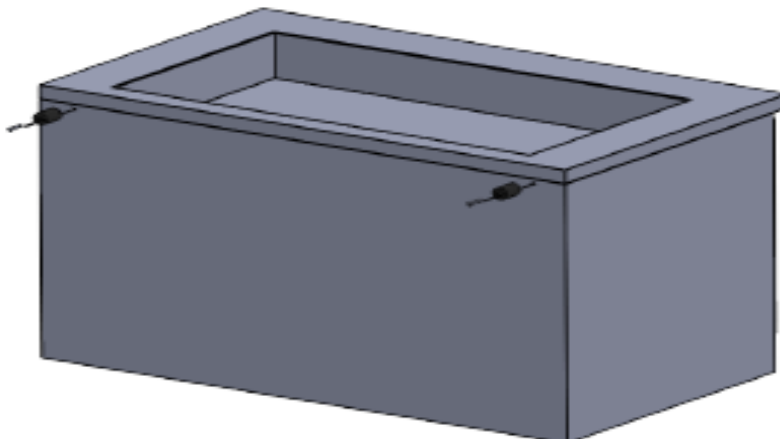

INSTALLATION


2.5 Leveling, Bumpers and Shelves

2.5.3 Shelves:

All cabinets with shelves are supplied with pilasters and shelf clip supports. Shelves are easily installed by inserting the shelf support clips into the pilasters so that they fit tightly.

Adjust the shelf so that the smaller fill wires run from front to rear and the shelf frame wire rest the shelf on the clips.

SHELVING ASSEMBLY

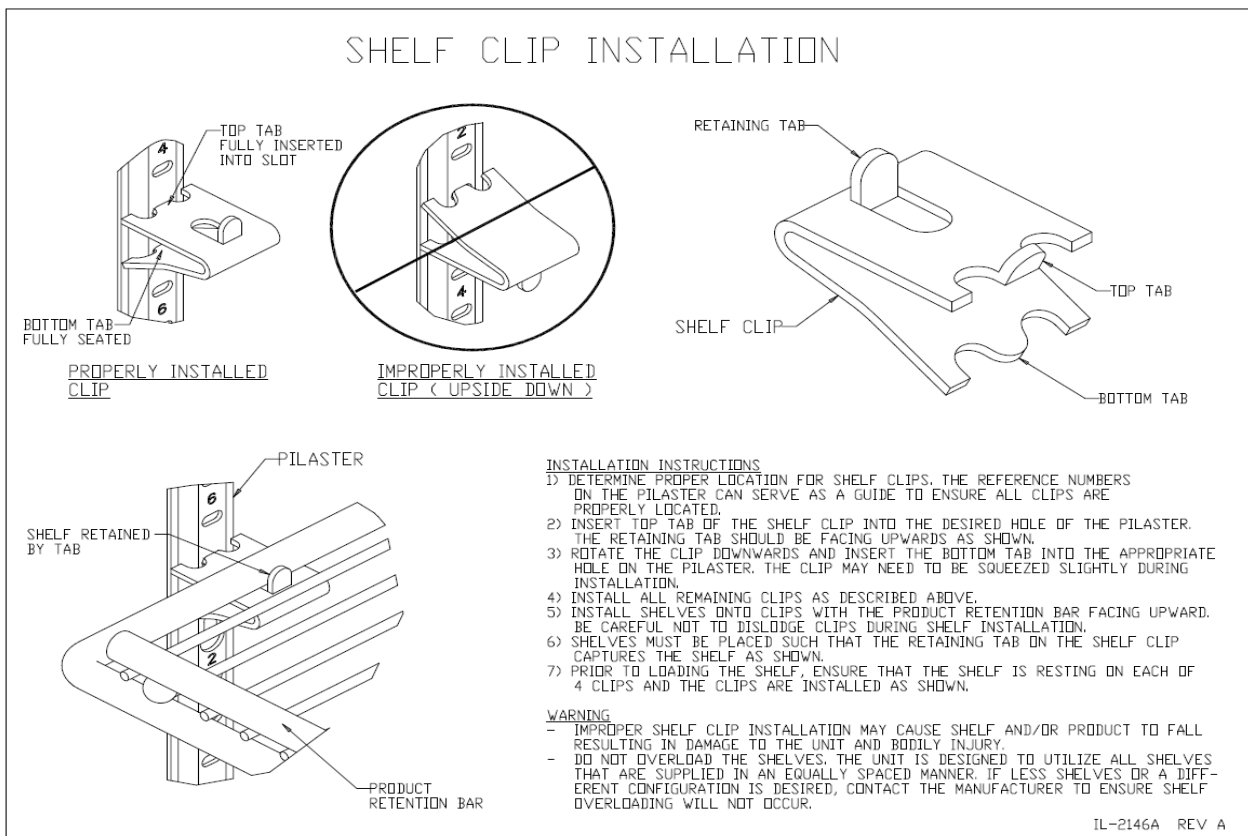

INSTALLATION

2.6 Cabinet Cleaning

WARNING: DO NOT clean with any product containing bleach or ammonia. Rinse with clean water before drying with clean cloth.

Prior to use, the interior and exterior surfaces of the cabinet should be cleaned thoroughly with warm water, mild detergent, and a soft cloth. Apply with a dampened cloth and wipe in the direction of the metal grain. Then allow to air dry with the doors open. Only use a clean soft cloth. See detailed cleaning instructions in the Preventative Maintenance section below.

2.7 Electrical supply

115 volt self-contained units are provided with a 15 or 20 amp power chord with plug that is shipped coiled on top of the cabinet. The power cord is equipped with a three prong (grounding) plug which is to be used in an appropriately rated and dedicated three prong (grounding) receptacle.

***NOTE: have a wall outlet checked by a qualified electrician for polarity and proper grounding prior to plugging in the power cord.**

For units not provided with a power cord, the electrical connection should be made by a qualified electrician and in accordance with local electrical codes. The electrical requirements are located on the rating (or data plate) located on the left hand side of the interior of the cabinet. Use of a dedicated circuit with separate grounding wire is required.

2.8 Controller

The controls are designed for the refrigeration units to maintain a product temperature of 38° F and the freezers to maintain a product temperature of 0° F. See section 3.1 for control display information.

2.9 Installation Checklist

After the cabinet has been installed, leveled, and cleaned as described above, refer to the following check list:

Warning: Cabinet MUST NOT SHARE A RECEPTACLE with another piece of equipment

- Check for proper electrical hook-up.
- Check that all clearances are in line with the aforementioned guidelines.
- Check that cabinet is level.


*** NOTE: Once the unit has been started and reaches proper storage temperatures, it may be loaded with product. For proper energy efficiency and airflow we recommend a minimum 1" clearance between product and side walls, 4" clearance between product and ceiling, and 1" clearance from the bottom of the unit.**

UNIT STARTUP

3.1 Sequence of Operations

3.1.1 Refrigerator

The refrigerator operates based on the air temperature measured by the probe located at the return air.

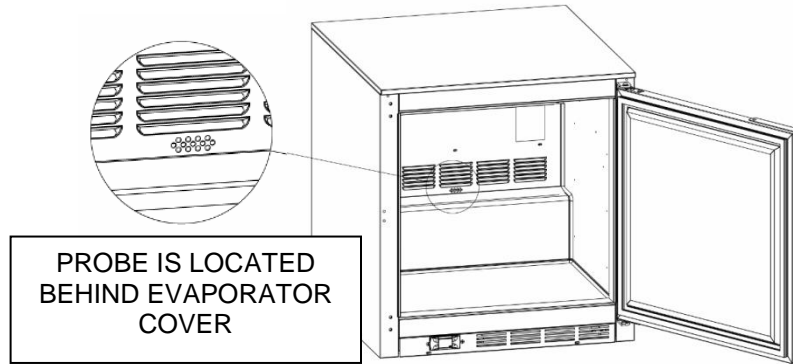


COMPONENT	ON		OFF	
	OPERATION	CONTROLLER ACTION	OPERATION	CONTROLLER ACTION
COMPRESSOR	Compressor turns on when the air temperature at the probe is above the sum of the set point and the dead band	The Compressor Contact is energized	Compressor turns off when the air temperature at probe is equal to or less than the set point	The Compressor Contact is de-energized
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
CONDENSER FAN	The Condenser Fan turns on when the Compressor is running	The Condenser Fan is wired to the Compressor Contact	The Condenser Fan turns off when the Compressor is not running	The Condenser Fan is wired to the Compressor Contact
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
EVAPORATOR FAN	The Evaporator Fan runs continuously. When the unit is plugged in, the Evaporator Fan will run.	The Evaporator Fan is connected directly to incoming power, not through the controller.	The Evaporator Fan runs continuously. When the unit is plugged in, The Evaporator Fan will run.	The Evaporator Fan is connected directly to incoming power, not through the controller.
LIGHT	The light will turn on when the is pressed	The Light Contact is energized	The light will turn off when the is pressed	The Light Contact is de-energized
		(nEW974 - Terminal #3)		(nEW974 - Terminal #3)

UNIT STARTUP

Condition	Compressor	Condenser Fan	Evaporator Fan	Lights
Cabinet Temp > Setpoint + Deadband	ON	ON	ON	ON or OFF
Cabinet Temperature <= Sepoint	OFF	OFF	ON	ON or OFF
Defrost	OFF	OFF	ON	ON or OFF

3.1.2 Freezer

The freezer operates based on the air temperature measured by the probe located at the return air.

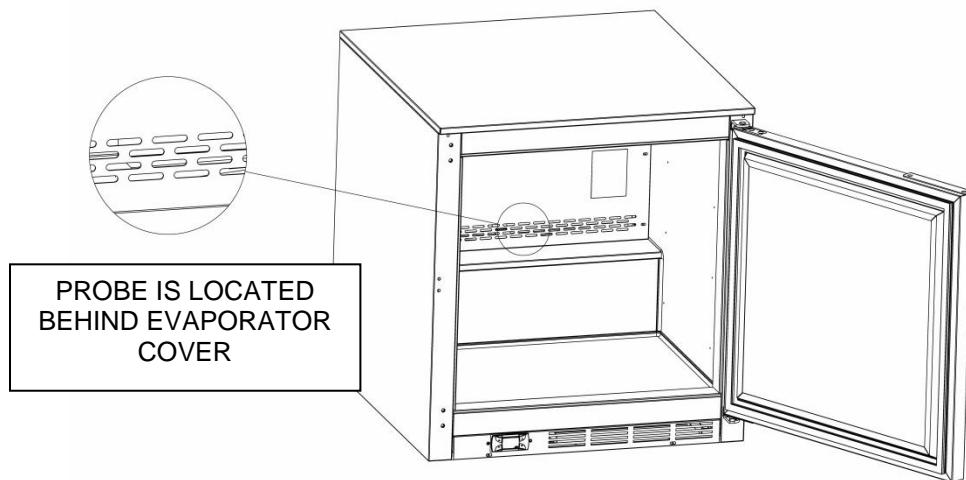


UNIT START UP

COMPONENT	ON		OFF	
	OPERATION	CONTROLLER ACTION	OPERATION	CONTROLLER ACTION
COMPRESSOR	Compressor turns on when the air temperature at the probe is above the sum of the set point	The Compressor Contact is energized	Compressor turns off when the air temperature at probe is equal to or less than the set point	The Compressor Contact is de-energized
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
CONDENSER FAN	The Condenser Fan turns on when the Compressor is running	The Condenser Fan is wired to the Compressor Contact	The Condenser Fan turns off when the Compressor is not running	The Condenser Fan is wired to the Compressor Contact
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
EVAPORATOR FAN	The Evaporator Fan turns on when the Compressor is running	The Evaporator Fan is wired to the Compressor Contact	The Evaporator Fan turns off when the Compressor is not running	The Evaporator Fan is wired to the Compressor Contact
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
DEFROST HEATER	The Defrost Heater is on a timer; set at 4 to 6 equally spaced defrost periods each day	The Defrost Heater Contact is energized	When either the defrost is not scheduled or the temperature at defrost probe has reached the defrost termination temperature.	The Defrost Heater Contact is de-energized
		(nEW974 - Terminal #2)		(nEW974 - Terminal #2)
FACE/DOOR HEATERS	The Face & Door Heaters turn on when the Compressor is running	The Door/Face Heater are wired to the Compressor Contact	The Face & Door Heaters turn off when the Compressor is not running	The Door/Face Heater are wired to the Compressor Contact
		(nEW974 - Terminal #4)		(nEW974 - Terminal #4)
LIGHT	The light will turn on when the ▼ is pressed	The Light Contact is energized	The light will turn off when the ▼ is pressed	The Light Contact is de-energized
		(nEW974 - Terminal #3)		(nEW974 - Terminal #3)

Condition	Compressor	Condenser Fan	Evaporator Fan	Defrost Heater	Face/Door Heater	Drain Heater	Lights
Cabinet Temp > Setpoint + Deadband	ON	ON	ON	OFF	ON	ON	ON or OFF
Cabinet Temperature <= Sepoint	OFF	OFF	OFF	OFF	OFF	ON	ON or OFF
Defrost	OFF	OFF	OFF	ON	OFF	ON	ON or OFF

UNIT STARTUP

3.2 Electronic Controller

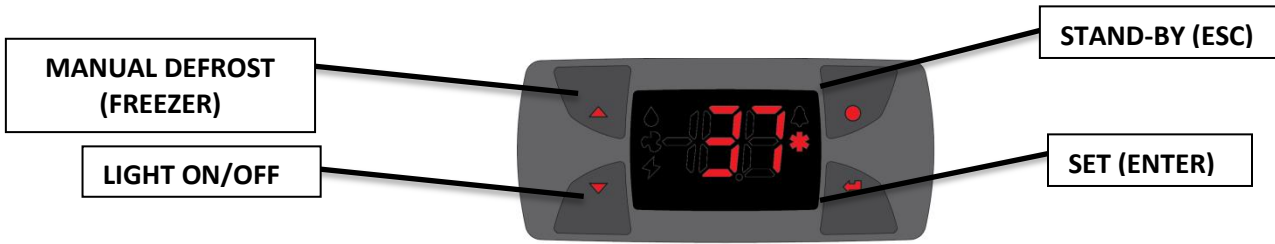

3.2.1 Control Panel Display



	Defrost LED			Alarm LED	
	On fixed:	Automatic defrost active		On fixed:	ALARM Present
	Flashing:	Manual defrost active		Flashing:	ALARM Silenced
	Off:	Defrost is off	Off:	No Alarm	
	Aux LED			Compressor LED	
	On fixed:	AUX output active		On fixed:	Compressor active
	Off:	AUX output Off		Flashing:	Delay, protection or activation blocked
			Off:	No Alarm	

NOTE: When switched on, the instrument panel performs a lamp test and for a few seconds, the display and LEDs flash to verify their condition and proper operation.

3.2.2 Keyboard Functions


UP	DOWN	STAND-BY (ESC)	SET (ENTER)
Press and release	Press and release	Press and release	Press and release
<ul style="list-style-type: none"> • Scrolls the menu items • Increases the values 	<ul style="list-style-type: none"> • Scrolls the menu items • Decreases the values 	<ul style="list-style-type: none"> • Returns up one level with respect to the current menu • Confirms the parameter value 	<ul style="list-style-type: none"> • Accesses the machine status menu and displays any alarms (if present)


3.2.3 Control Panel Connections

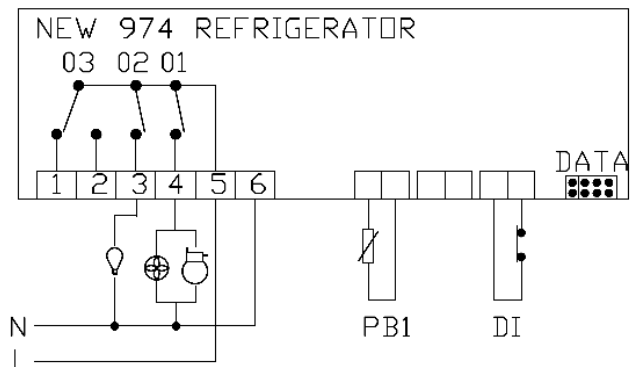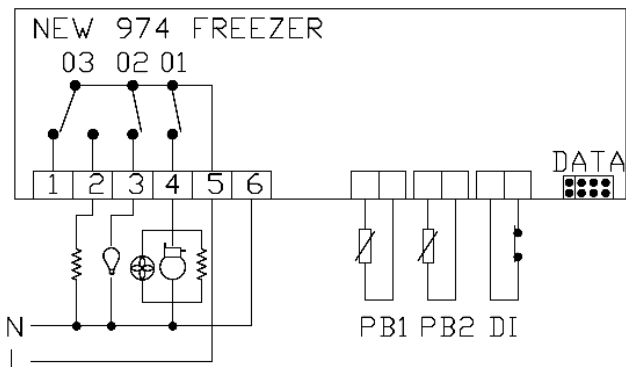

UNIT START UP


3.2.4 Changing the Setpoint

Press and release the  button to enter the machine status menu.

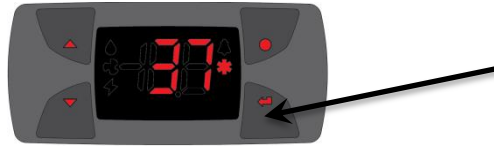




The screen will display SP



Press and release the  button again to see the current set point value (see image below).




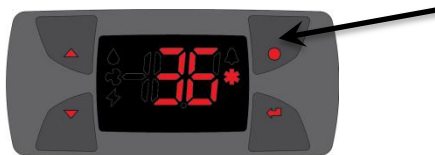
To adjust to a different value press and release the  and  buttons.

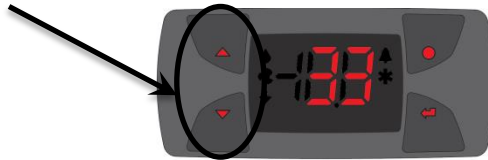

Press and release the  button to accept the value.




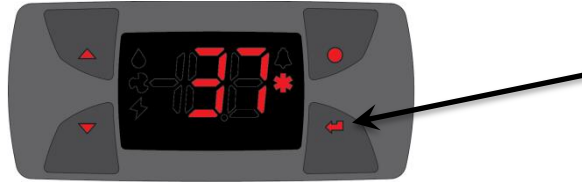
Press and release the  button to exit out of the machine status menu.



UNIT START UP



3.2.5 Viewing the current Probe Temperature


Press and release the  button to enter the machine status menu.




The screen will display SP



Use the  and  buttons to change the display to S1

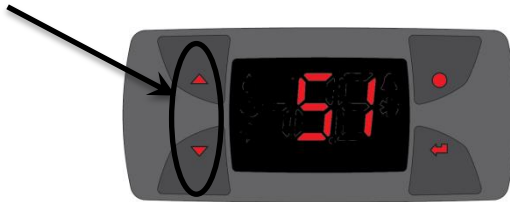


Press and release the  button to view the current sensor value.



UNIT START UP

3.2.6 Electronic Controller Alarms


The alarm condition is always signaled by the alarm icon . To turn off the relative icon will continue flashing.


NOTE: If alarm exclusion times are in progress (**AL** folder of the parameter table), the alarm is not signaled.

Label	Descripti	Cause	Effects	Troubleshooting
E1	Pb1probe error (cell)	<ul style="list-style-type: none"> • Reading of values outside the operating range • Probe is inoperable /short circuit/open 	<ul style="list-style-type: none"> • Display of label E1 • Fixed alarm icon • Disabling of the max/min alarm regulator • Compressor operation based on the parameters P0 and P1 	<ul style="list-style-type: none"> • Check the type of probe (NTC) • Check the probe wiring • Replace the probe
E2	Pb2 probe error (defrosting)	<ul style="list-style-type: none"> • Reading of values outside the operating range • Probe is inoperable/short circuit/open 	<ul style="list-style-type: none"> • Display of label E2 • Fixed alarm icon • Defrosting ends due to time out (d3) • The evaporator fans are disabled 	<ul style="list-style-type: none"> • Check the type of probe (NTC) • Check the probe wiring • Replace the probe
Ht	HIGH alarm Pb1 temperature	Value read by Pb1 > A2 after time equal to A7 . (see 'TEMP. ALARMS MAX/MIN')	<ul style="list-style-type: none"> • Recording of label Ht in the AL folder • Fixed alarm icon • No effect on regulation 	Wait for the value ready by Pb1 to return below A2-A1
Lt	LOW alarm Pb1 temperature	Value read by Pb1 < A3 after time equal to A7 . (see 'TEMP. ALARMS MAX/MIN')	<ul style="list-style-type: none"> • Recording of label Lt in the AL folder • Fixed alarm icon • No effect on regulation 	Wait for the value ready by Pb1 to return above A3+A1 .
EA	External alarm	Activation of the digital input (i3 = 6)	<ul style="list-style-type: none"> • Recording of label EA in the AL folder • Fixed alarm icon 	Check and remove the external cause that caused the alarm on D.I.
ES	Energy Saving + reduced set point	<ul style="list-style-type: none"> • Activation of the digital input (i3 = 1,5, 8) • Activation from key if H1...3=2 (see paragraph Key Functions) 	<ul style="list-style-type: none"> • Display of label ES alternating with the setpoint value • Regulation to the value set at C5 parameter. 	<ul style="list-style-type: none"> • D.I. Open • Press associated with the function key
OP	Alarm Door open	Activation of the digital input (i3 = 4) (for a time greater than r1)	<ul style="list-style-type: none"> • Recording of label OP in the AL folder • Fixed alarm icon 	<ul style="list-style-type: none"> • Close the door • Delayed function defined by A6

UNIT START UP



3.2.7 How to View Alarms

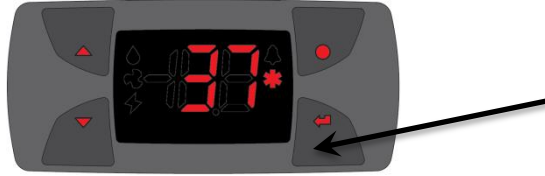
Press and release the  button to enter the machine status menu.



The screen will display SP




Use the  and  buttons to change the display to AL

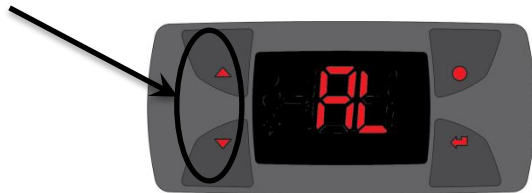

Press and release the  button to view the alarm(s)



If more than one alarm is present, use the  and  buttons to scroll through them.

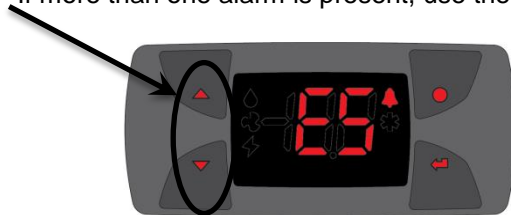


UNIT START UP


3.2.8 How to Enter the StandBy Mode


The Stand By Mode is used to remove power from the condensing unit (Compressor & Condensing Fan) so the coil can be cleaned or the unit defrosted without having to disconnect the power from the unit)


In Refrigerator models the Evaporator Fan will continue to run

In Freezer models, power is disconnected from the Evaporator Fan, so it does not run.


Press and release the  button for 5 seconds until St is displayed

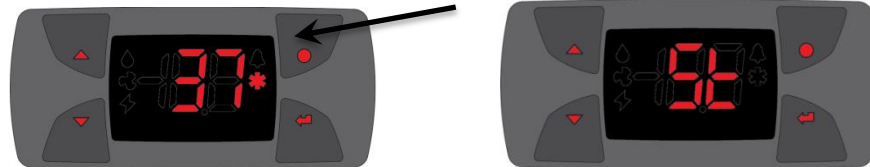



Press and hold the  button to confirm. OF will be displayed, the unit is now in Standby mode.

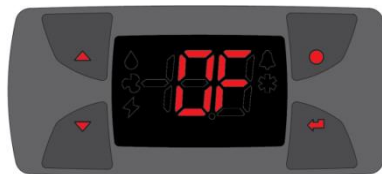

3.2.9 How to Exit the StandBy Mode

Press and release the  button for 5 seconds until St is displayed

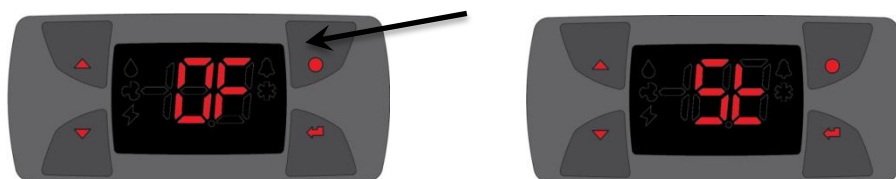

Press and hold the  button to confirm. The cabinet temperature will be displayed, the unit is now in Normal Operation



PREVENTATIVE MAINTENANCE

4.1 Daily, Exterior

- 1 - Clean the surface with a sponge and dilute mild detergent. Use a non-abrasive cleaner that does NOT contain chlorine.
- 2 - Rinse with clean water before drying with clean soft cloth.
- 3 - Polish with a soft cloth, wiping with the grain of the metal.
- 4 - Once a week wipe with a film cutting agent or stainless steel polish to maintain finish.

4.2 Weekly, Interior

- 1 - Remove all food, food related items, and shelves.
- 2 - Disconnect power to the cabinet at the main power supply circuit breaker
- 3 - Remove loose food particles from interior floors, walls, and ceiling
- 4 - Scrub all interior surfaces and door gaskets with a warm (100°-120°F) detergent solution and a soft nylon bristle brush
- 5 - Rinse with clean water and allow to air dry
- 6 - Re-install the shelves
- 7 - Restore power to the cabinet by resetting main power supply circuit breaker
- 8 - Return food to the cabinet when temperature indicator displays safe food temperature

4.3 Monthly, Condenser

The condenser coil is located right behind the front grille on top of the cabinet. It should be inspected once a month and cleaned as required. Vacuum clean all surfaces of the condenser. Make sure no fins are bent or damaged in the process. If there are bent fins, carefully straighten them so that air can flow through the coils. Failure to keep the condenser coil clean will lead to poor performance, excessive power consumption and compressor failure and may result in loss of property. Failure to keep the condenser coil clean may void the limited warranty.

4.4 Periodic, Gaskets

- 1 Visually inspect the door gaskets for a tight seal on all four sides. Inspect for any type of damage such as rips, tears, stiffness, or cracks.
- 2 If any such condition exists, the magnet will not seal and the gasket will need replaced.
- 3 Cleaning the gasket requires the use of mild dish detergent and warm water.
- 4 Next, thoroughly rinse and dry the gasket.

PREVENTATIVE MAINTENANCE


4.5 Drawer Maintenance

Drawer models are shipped with the drawers already installed in the cabinets. Drawers are designed with slides which have locking mechanisms to prevent drawers from coming off cabinets during normal opening and closing operations.


See Illustration below:

Drawers and slides can be removed from a cabinet for cleaning purposes. To remove a drawer from a cabinet follow these instructions:

- 1 - Open the drawer to full extension
- 2 - Push the white locking tabs forward on both sides of the drawer
- 3 - Press down the back of the tabs
- 4 - Slide the drawer out of the cabinet

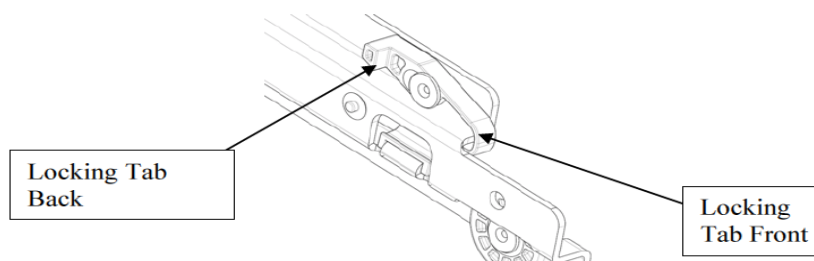

- 5 - To remove the sliding member (Middle slide), press the metal tab up and slide it
- 6 - To reinstall the sliding member, press the metal tab up and slide it in

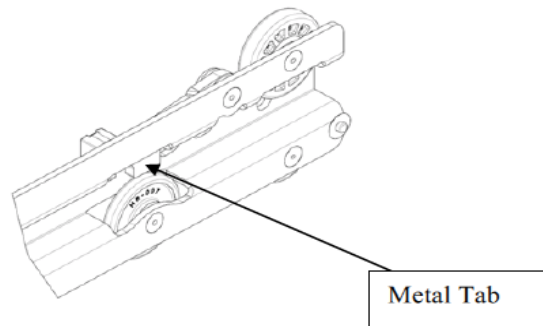

- 7 - To reinstall drawer, push the locking tab forward and press the back of the tab down
- 8 - Align the drawer slide members and moving slide members
- 9 - Slide the drawer in and lock the slide by pushing the front of the locking tab down and in

IL-2334A Rev. A

PREVENTATIVE MAINTENANCE

4.6 Effective Methods for Cleaning Stainless Steel

Type of Cleaning	Cleaning Agent	Method of Application	Effective Finish
Routine Cleaning	Soap or ammonia, or detergent and water.	Sponge with cloth, then rinse with clear water and wipe dry	Satisfactory for use on all finishes.
Smears and Fingerprints	Arcal 20, Lac-O-NU, Lumin Wash O'Cedar Cream Polish, Stainless Shine.	Rub with cloth as directed on the package.	Satisfactory for use on all finishes. Provides barrier film to minimize prints.
Stubborn Spots and Stains, Baked-On Splatter, and Other Light Discolorations	Allchem Concentrated Cleaner.	Apply with damp sponge or cloth	Satisfactory for use on all finishes.
	Samae, Twinkle or Cameo Copper Cleaner.	Rub with damp cloth.	Satisfactory for use on all finishes if rubbing is light.
	Grade FFF Italian pumice, whit- ing, or talc.	Rub with damp cloth.	Use in direction of polish lines on No. 4 (polished) finish. May scratch No. 2 (mill) and Nos. 7 and 8 (polished) finishes.
	Liquid NuSteal.	Rub with dry cloth. Use small amount of cleaner.	
	Paste NuSteal or DuBois Temp.	Rub with dry cloth using a small amount of cleaner.	
	Copper's Stainless Steel Cleaner Revere Stainless	Apply with damp sponge or cloth.	
	Household cleansers, such as Old Dutch, Lighthouse, Sun- brite, Wyandotte, Bab-O, Gold Dust, Sapolio, Bon Ami, Ajax, or Comet.	Rub with a damp cloth. May contain chlorine bleaches. Rinse thoroughly after use.	
	Grade F Italian pumice, Steel Bright, Lumin Cleaner, Zud, Restoro, Sta-Clean, or Highlite.	Rub with a damp cloth.	
	Penny-Brite or Copper-Brite.	Rub with a dry cloth using a small amount of cleaner.	

PREVENTATIVE MAINTENANCE

4.6 Effective Methods for Cleaning Stainless Steel

Type of Cleaning	Cleaning Agent	Method of Application	Effective Finish
Heat Tint or Heavy Discoloration	Penny-Brite or Copper-Brite.	Rub with a dry cloth.	Use in direction of polish lines on No. 4 (polished) finish. May scratch No. 2 (mill) and Nos. 7 and 8 (polished) finishes.
	Past NuSteel, DuBois Temp, or Tarnite.	Rub with a dry cloth or stainless steel wool.	
	Revere Stainless Steel Cleaner. Allen Polish, Steel Bright, Wyan- dotte, Bab-O, or Zud.	Rub with a damp cloth.	
	Revere Stainless Steel Cleaner.	Apply with damp sponge or cloth.	
Burnt-On Foods and grease Fatty Acids, Milkstone (where swabbing or rubbing is not practical)	Easy-Off, De-Grease-It, 4 to 6% hot solution of such agents as trisodium phosphate or sodium tripolyphosphate or 5 to 15% caustic soda solution.	Apply generous coating. Allow to stand for 10-15 minutes. Rinse. Repeated application may be necessary.	Excellent removal, satisfactory for use on all finishes.
Tenacious Deposits, Rusty Discolorations, Industrial Atmospheric Stains	Oakite No. 33, Dilac Texo 12, Texo N. Y., Flash-Klenz, Caddy Cleaner, Turco Scale 4368 or Permrag 57.	Swab and soak with clean cloth. Let stand 15 minutes or more according to directions on package, then rinse and dry.	Satisfactory for use on all finishes.
Hard Water Spots and Scale	Vinegar.	Swab or wipe with cloth. Rinse with water and dry.	Satisfactory for all finishes.
	5% oxalic acid, 5% sulfamic acid, 5 to 10% phosphoric acid, or Dilac, Oakite No. 33, Texo 12, Texo N. Y.	Swab or soak with cloth. Let stand 10-15 minutes. Always follow with neutralizer rinse, and dry.	Satisfactory for all finishes. Effective on tenacious deposits or where scale has built up.

TROUBLE SHOOTING



5.1 General

WARNING: ALL SERVICING MUST COMPLY WITH STATE AND FEDERAL REGULATIONS

SERVICE AND REFRIGERATION SYSTEM CHART ANALYSIS		
Malfunction	Possible Cause	Solution
Compressor will not start – no hum	Line cord not plugged in	Plug cord in
Compressor starts and runs but unit does not begin to cool on initial start-up (MT Bare Tube Condenser Models only)	Ambient is below 60°F	Warm unit to above 60°F prior to initial start-up.
Unit runs OK, but short cycles	Overload protector.	Check wiring diagram for correct wiring
	Cold control.	Differential set too close
	Overcharge.	Reduce refrigerant charge.
	Air in system.	Recover and recharge.
	Undercharge.	Fix leak and recharge with refrigerant.
Unit operates long or continuously	Dirty condenser	Clean condenser
	Shortage of refrigerant.	Fix leak, add charge, correct charge
	Temp control contacts stuck or frozen	Replace Temp control
	Evaporator coil iced.	Defrost
	Restriction in refrigeration system.	Determine location and remove.
Start capacitor open, shorted or blown.	Relay contacts not opening properly.	Replace relay
	Low voltage to unit.	Determine reason and correct.
	Improper relay.	Replace.
Run capacitor open, shorted or blown.	Improper capacitor.	Determine correct size and replace.
	Excessively high line voltage (110% of rated max).	Determine reason and correct.
Relay defective or burned out.	Line voltage too high or too low.	Determine reason and replace.
	Relay being influenced by loose vibrating mounting.	Remount rigidly.
Space temperature too high.	Control setting too high.	Reset control.
	Overcharged with refrigerant	Recover refrigerant and recharge with Proper charge specified on data plate
	Inadequate air circulation.	Improve air movement
Cooler freezing beverage	Temperature control	Reset control
Unit noisy	Loose parts or mountings	Find and tighten
	Tubing rattle	Reform to be free of contact
	Bent fan blade causing vibration	Replace blade
	Fan motor bearings worn	Replace motor

TROUBLE SHOOTING

5.2 Refrigerator Ladder Diagram

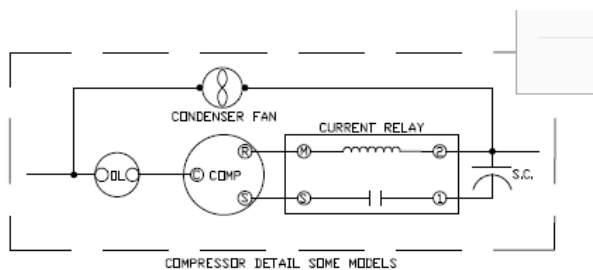
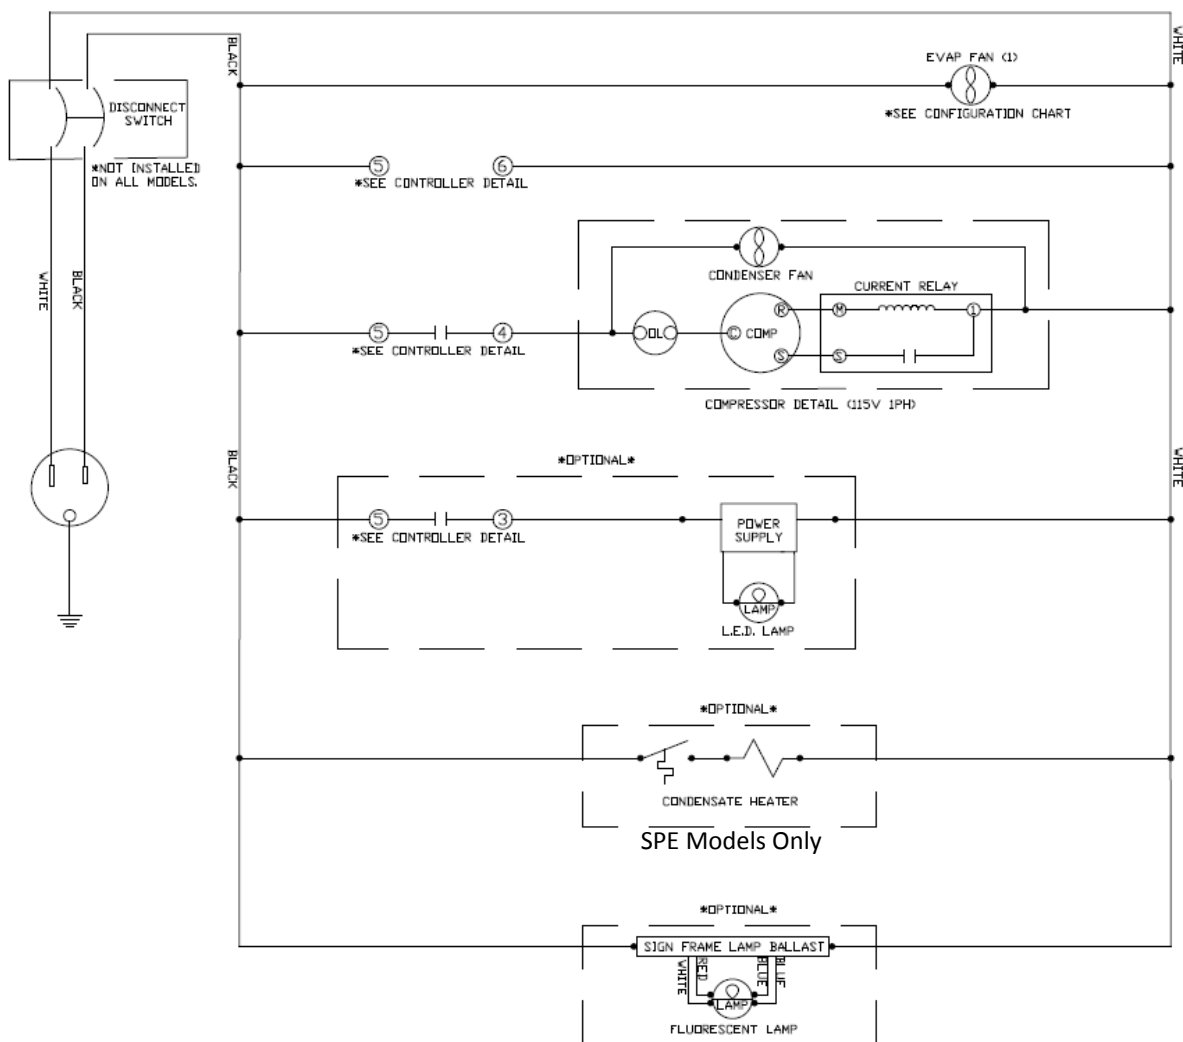


LEGEND

- RC – Run Capacitor
- SC – Start Capacitor
- OL – Overload
- ② - Eliwell Controller Terminal
- - Connection Point
- ICR – Control Relay

TROUBLE SHOOTING

5.3 Freezer Ladder Diagram

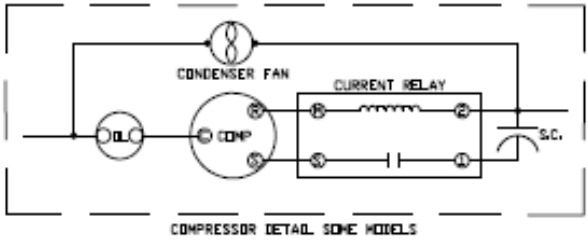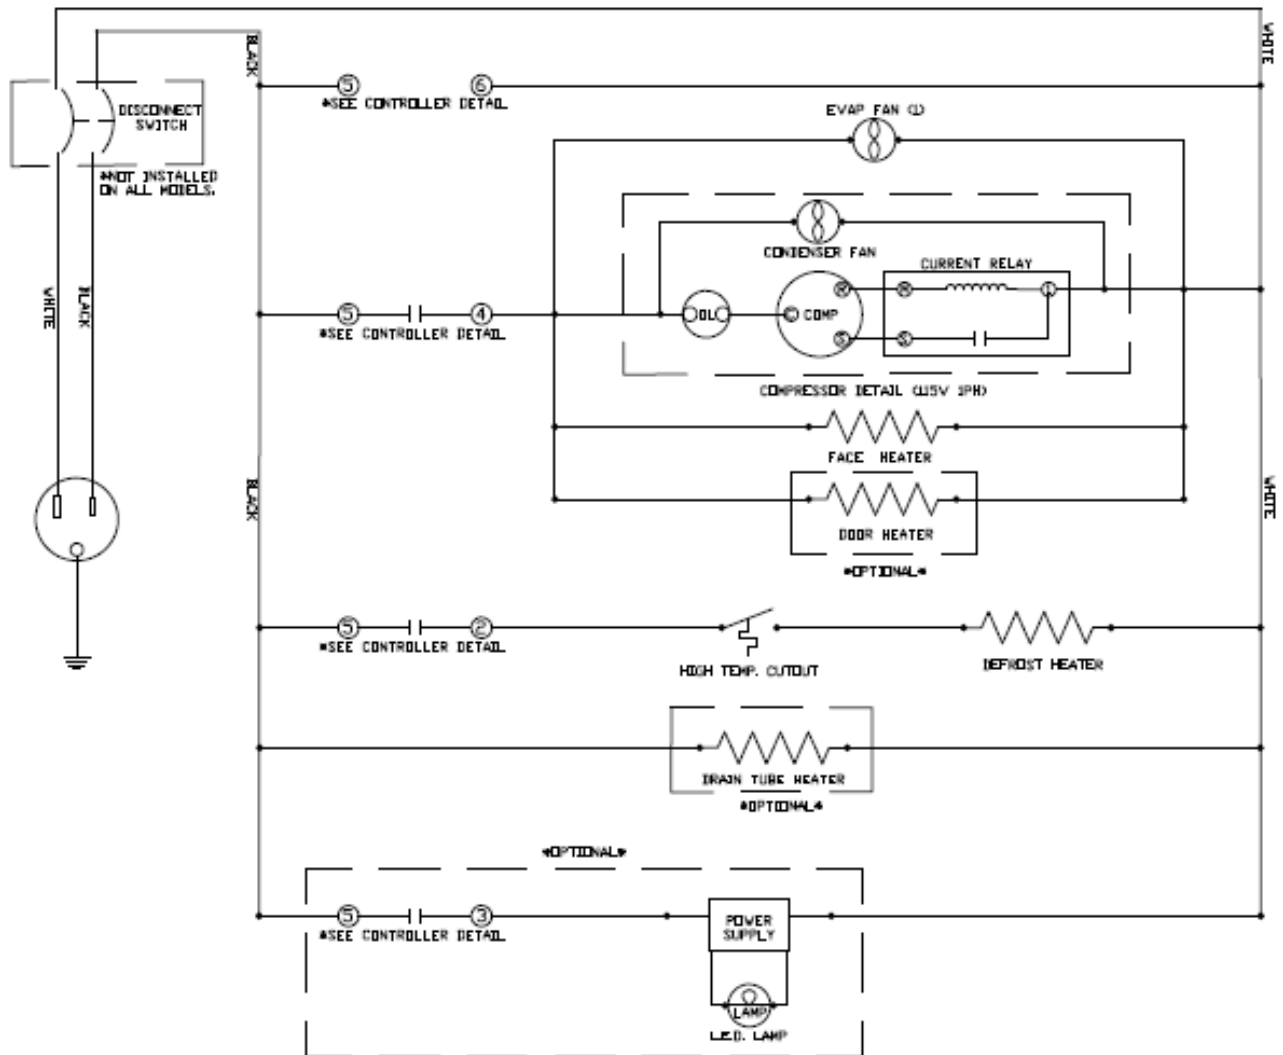

LEGEND	
RC	Run Capacitor
SC	Start Capacitor
OL	Overload
②	Eliwell Controller Terminal
●	Connection Point
ICR	Control Relay

