

BPFD54SS

REPLACEMENT PARTS LIST

15-15515	LIFT-UP ACRYLIC DOOR
15-15532	CENTER STRUT ACRYLIC
15-17878-L	END GLASS ACRYLIC LEFT HAND
15-17878-R	END GLASS ACRYLIC RIGHT HAND
39-12902	TWO LAMP BALLAST
39-12904	FOUR LAMP BALLAST
41-11066	LIGHT SWITCH
42-12583	LAMP F17/730 T8 – TOP LIGHT
42-15639	LAMP SHIELD – TOP LIGHT
42-15659	LAMP F32/30K T8 – SHELF LIGHT
42-15440	SOCKET TOMBSTONE – SHELF LIGHTS
42-15441	CAP, SOCKET TOMBSTONE – SHELF LIGHTS
43-11302	15 AMP POWER CORD
43-15260	SHELF LIGHT SOCKET
63-15529	WIRE SHELF – TOP
63-15530	WIRE SHELF – BOTTOM
66-11650	CAM LOCK – SHELF BRACKET
66-12649	HANDLE – LIFT-UP DOOR
M-10637	CLUTCH-DAMPER – LIFT-UP DOORS
M14042	SHELF STANDARD
M14048	REAR SHELF SUPPORT
SA2462-1	NAPKIN BOX HOLDER
SA3597-1	TOP SHELF LIGHT
SA3597-2	BOTTOM SHELF LIGHT
SA3598	BOTTOM SHELF BRACKET
SA3599	TOP SHELF BRACKET
SA3731	REAR SLIDING DOOR CLEAR
SA3731-1	REAR SLIDING DOOR REFLECTIVE
M-10798-1	BOTTOM TRACK
M-10799-1	TOP TRACK
M-10800-1	DOOR JAMB
56-80271	JAMB CAPS
55-17876-L	MIRROR – END LEFT HAND
55-17876-R	MIRROR – END RIGHT HAND
65-10675	CASTER 4” DIA
M14905	CASTER RAIL