



Cecilware®

Operator Manual

French Fry Warmer

FFW575M, FFW575Q



Model: FFW575

Table of Contents

Safety Information	2	Cleaning	3
Unpacking	3	Maintenance	3
Installation	3	Parts Diagram and List	4

Thank you for purchasing this quality Warmer. For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product. Properly instruct all operators. Keep training records. For future reference, record serial number here:

Grindmaster-Cecilware

4003 Collins Lane, Louisville, KY 40245 USA
Phone: 502.425.4776 Toll Free: 800.695.4500
Fax: 502.425.4664
Web: gmcw.com Email: info@gmcw.com

Grindmaster-Cecilware provides the industry's BEST warranty. Visit gmcw.com for warranty terms and conditions.



**Grindmaster
Cecilware**

Safety Information

Important Safety Information



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product.

DANGER: This term warns the user of imminent hazard that will result in serious injury or death.

WARNING: This term refers to a potential hazard or unsafe practice, which could result in serious injury or death.

CAUTION: This term refers to a potential hazard or unsafe practice, which could result in minor or moderate injury.

NOTICE: This term refers to information that needs special attention or must be fully understood.

⚠ WARNING

- Do not deform power cord.
- Follow national and local electrical codes.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Use only on a dedicated circuit load that is properly protected and capable of the rated load. Do not use extension cords, as this could result in electrical shock, overheating, and fire.
- Risk of electrical shock. Disconnect power before servicing or cleaning unit. Contact Grindmaster-Cecilware Technical Service for service assistance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents, or similarly qualified persons in order to avoid a hazard.
- Due to the heat a warmer may produce, it must be placed with at least 1 inch clearance from all surfaces at side and rear.

FAILURE TO COMPLY TO THE ABOVE RISKS PERSONAL INJURY, SHOCK HAZARD, FIRE, OR DAMAGE TO EQUIPMENT.

⚠ CAUTION

- Read and understand the operating instructions in this manual thoroughly. Only allow properly trained persons to operate this machine.
- Stay alert at all times during operation.
- Operate with care. Surfaces will get very hot and may cause serious burns.

NOTICE

- Keep operating area clean.

Unpacking

Carefully lift unit out of shipping container, and inspect immediately for shipping damage. Your French Fry Warmer was shipped in a carton designed to give it maximum protection. It was thoroughly inspected before leaving the factory. File any claims for shipping damage or irregularities directly with the carrier.

Installation

Distance required between combustible and non-combustible material: 1" rear and 1" sides.

The FFW575-Q and M are supplied with an attached cord and may be plugged into a standard 120 volt 15 amp/ grounded outlet. This unit has been shipped with the incandescent lamps installed. Remove the protective cardboard tube from lamps before turning the warmer on.

Cleaning

▲ CAUTION: To avoid burns, allow warmer to cool before cleaning.

Stainless steel exterior surfaces can be cleaned with a damp cloth.

Maintenance

▲ CAUTION: Disconnect power from warmer before attempting electrical repairs.

Lamp Replacement:

Simply unscrew lamp from socket, discard defective lamp and screw new lamp into socket.

Heating Element Replacement:

Place warmer on its side. Remove two screws from access covers at the front and rear of the unit and remove the covers. Remove flag terminals from heater ends and remove heater. Push flag terminals on to ends of new heater, making sure terminals are pushed on securely, as a loose terminal will cause arcing. Position the element in unit so that groove in porcelain end cap is nested in notch of bracket. Hold the element in place and replace one access cover, making sure that vertical leg of access cover is between element holder and reflector, secure with two screws. Install second access cover in the same manner.

Switch Replacement:


Remove the front access cover. Remove nut securing switch to the front of the housing and pull the switch out from inside housing. Disconnect switch wires taking note of their location. Reconnect wires to new switch and re-install by reversing removal procedure.

If you need help, call Grindmaster-Cecilware Technical Service Department, (502) 425-4776 or (800) 695-4500 (USA & Canada only) (Monday through Friday 8 AM - 6 PM EST). Please have the model and serial number ready so that accurate information can be given.

Prior authorization must be obtained from Grindmaster- Cecilware for all warranty claims.

Grindmaster-Cecilware provides the industry's BEST warranty. Visit our website at GMCW.com for warranty terms and conditions.

Parts Diagram and List

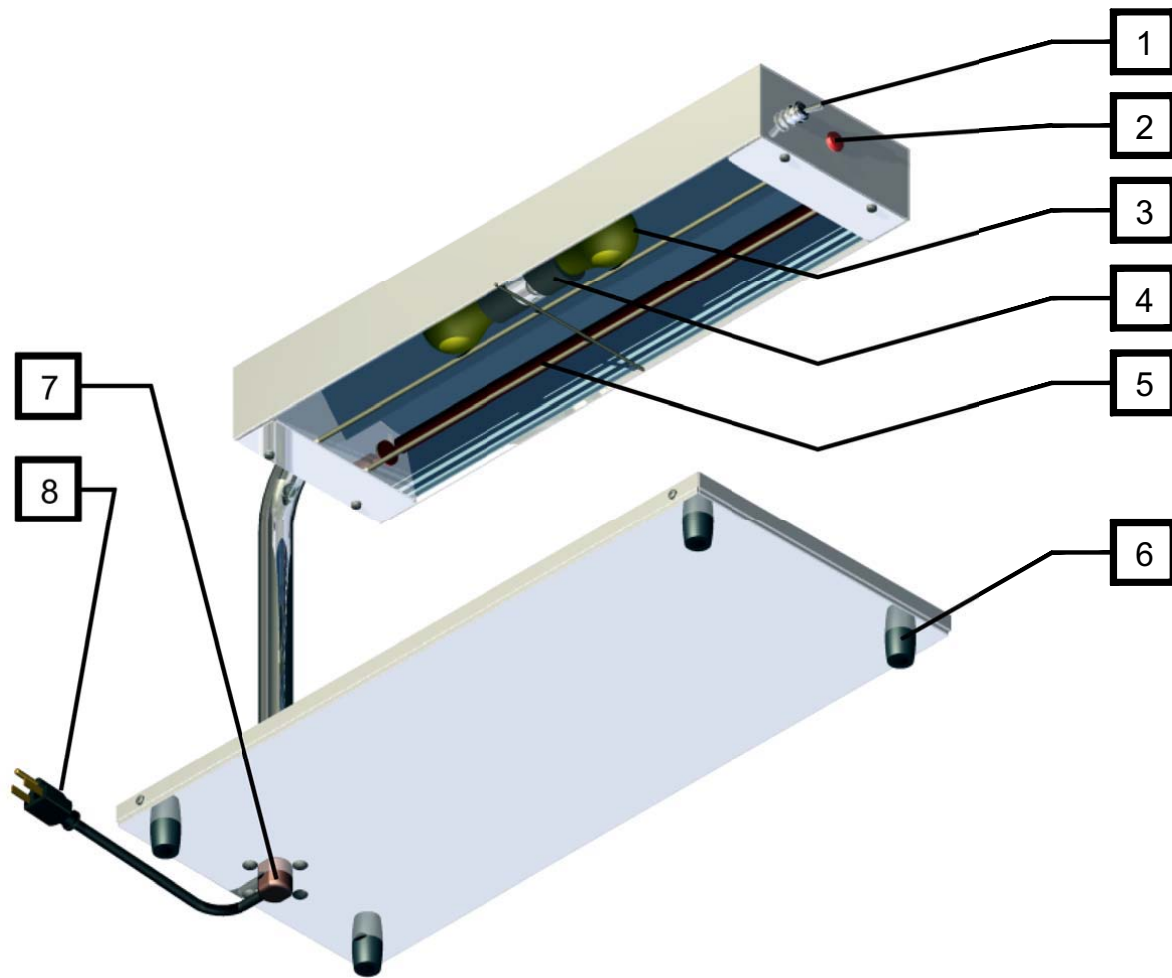

ITEM	DESCRIPTION	PART #
1	TOGGLE SWITCH	L232A
2	PILOT LIGHT	C165AL
3	LAMP (120V) (2 REQ'D)	V126A
4	LAMP SOCKET, DUAL	B057A
5	HEATING ELEMENT (120V) QUARTZ	G132A
5	HEATING ELEMENT (120V) METAL	G189A
6	LEG (4 REQ'D)	M363A
7	STRAIN RELIEF	B076A
8	LINE CORD ASSEMBLY (120V)	C032AL

Grindmaster-Cecilware

4003 Collins Lane, Louisville, KY 40245 USA
 Phone: 502.425.4776 Toll Free: 800.695.4500
 Fax: 502.425.4664
 Web: gmcw.com Email: info@gmcw.com

©2016 Grindmaster-Cecilware
 Printed in USA

Grindmaster-Cecilware provides the industry's BEST warranty. Visit gmcw.com for warranty terms and conditions.



**Grindmaster
Cecilware**

0916 Form # CW-340-01
 Part # 390-00085