
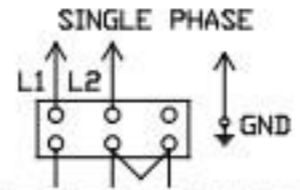


L1 L2 L3 N






208-240V 1 DR 3 PHASE
1 PHASE-CIRCUIT CAPACITY 80AMPS
1 PHASE-MAX BREAKER 80AMPS
3 PHASE-CIRCUIT CAPACITY 50AMPS
3 PHASE-MAX BREAKER 50AMPS

FOR THREE PHASE OPERATION REMOVE JUMPER BETWEEN L2 AND L3.
FOR SINGLE PHASE OPERATION LEAVE THE JUMPER INSTALLED AND
CONNECT HEATERS AS SHOWN BELOW.

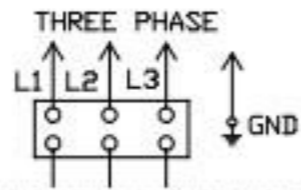

! ATTENTION - VERY IMPORTANT ! -
CIRCUIT BOARD PART NUMBER AND JUMPER POSITION
SETTINGS (JB1, JB2, JB3) PER MACHINE MODEL AND
SERIAL NUMBER AS INDICATED IN TABLE BELOW.
IMPROPER JUMPER SETTINGS MAY CAUSE ERRATIC
OPERATION.

| MODEL | MACHINE SERIAL NUMBER | BOARD PART NUMBER | JUMPER SETTING | |
|-----------|-----------------------|-------------------|----------------|------|
| | | | JB1 | JB2 |
| DH/MD2000 | D09037592 | 114470 | OPEN | OPEN |

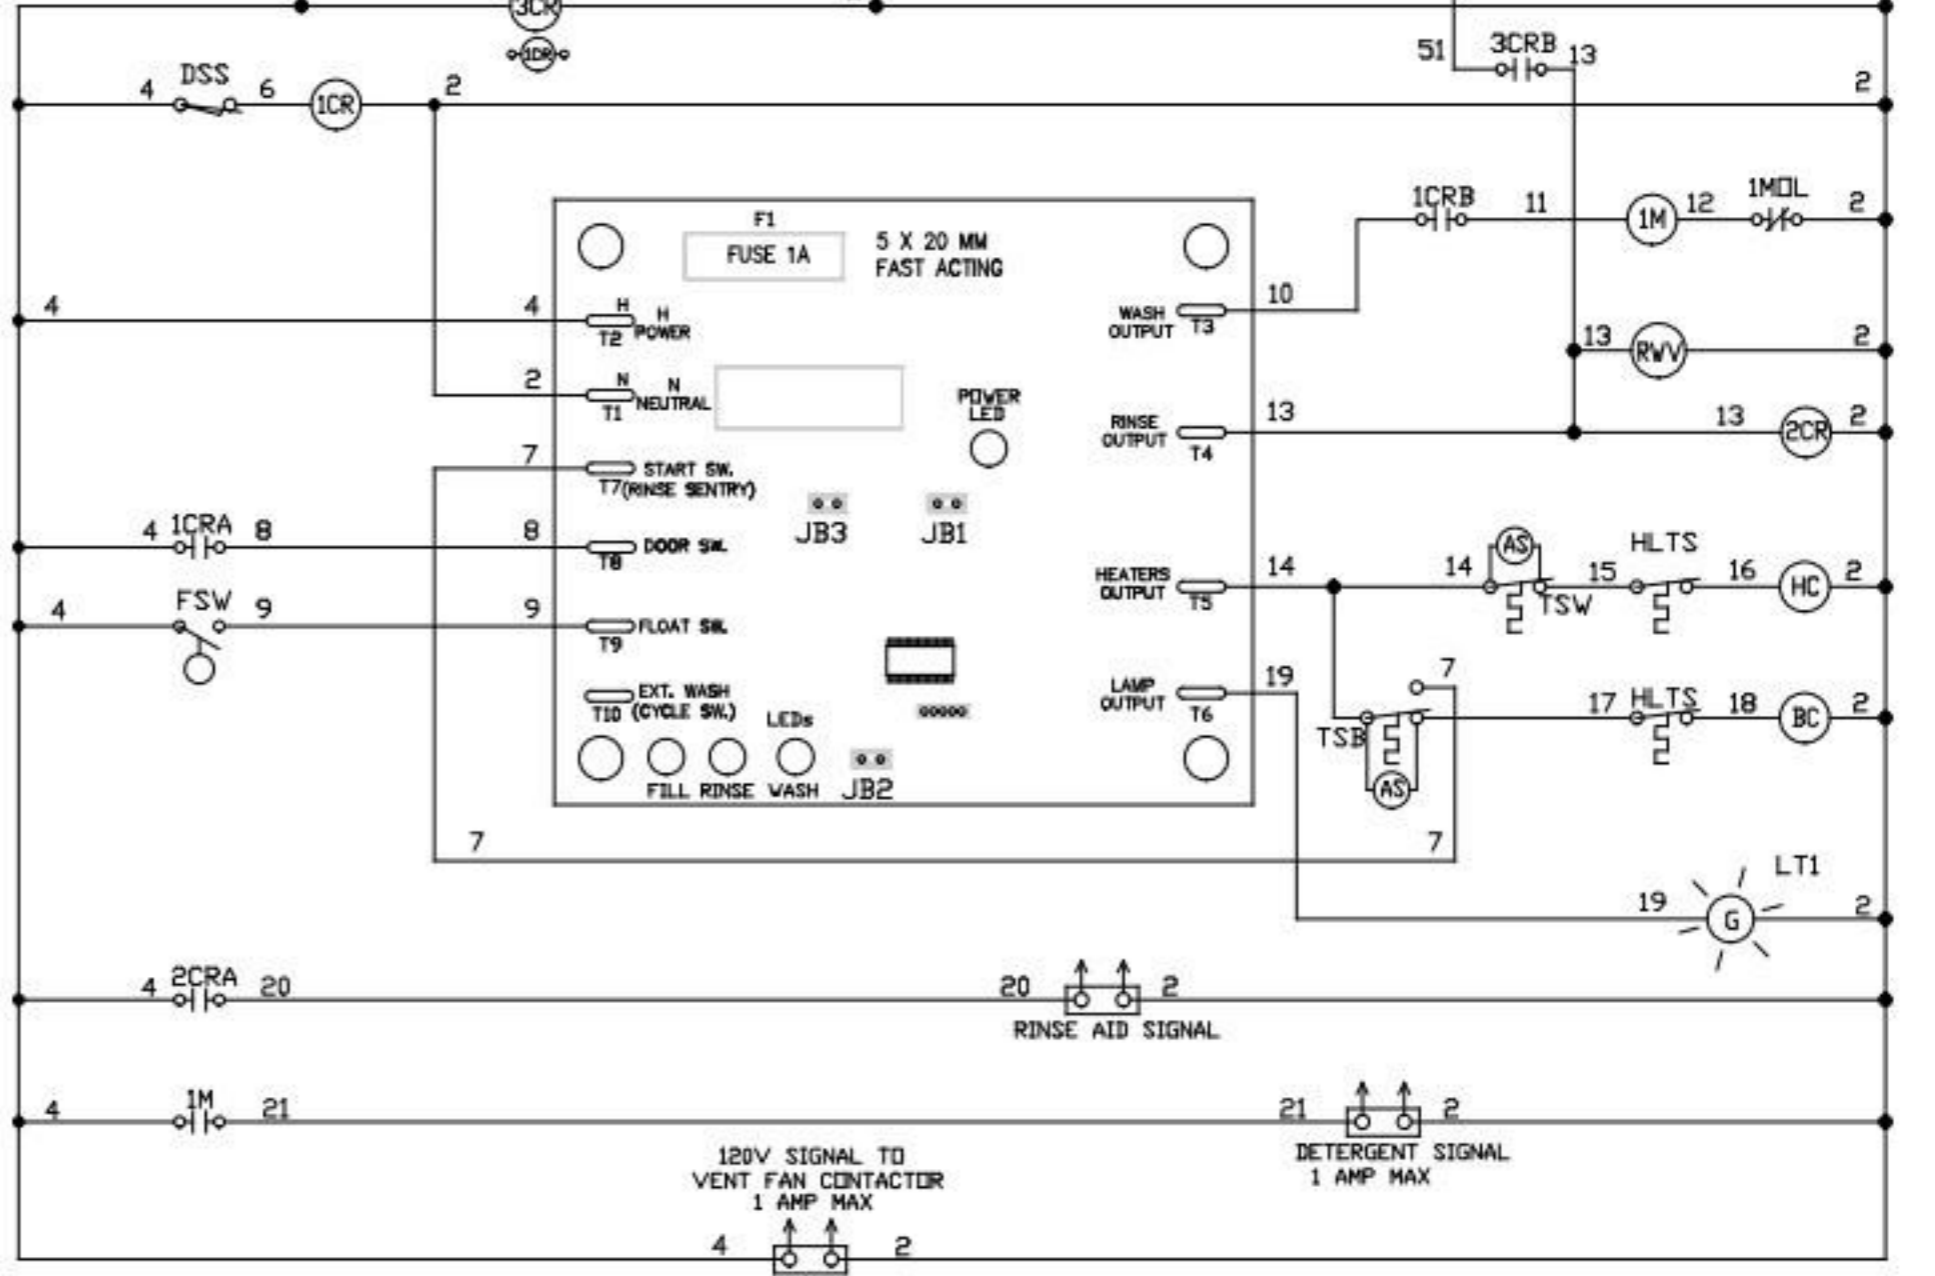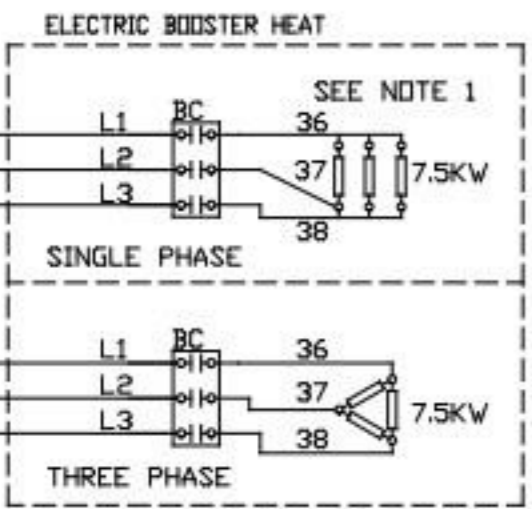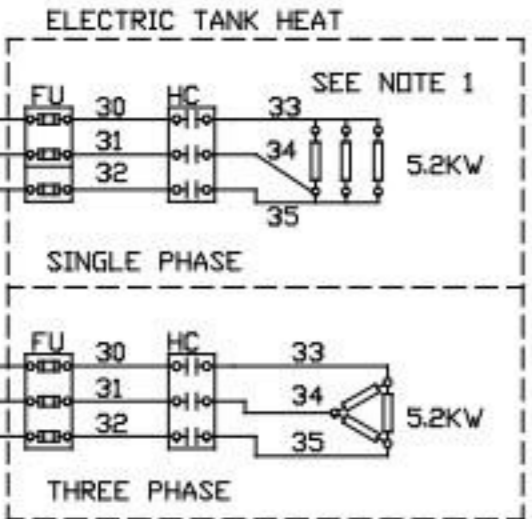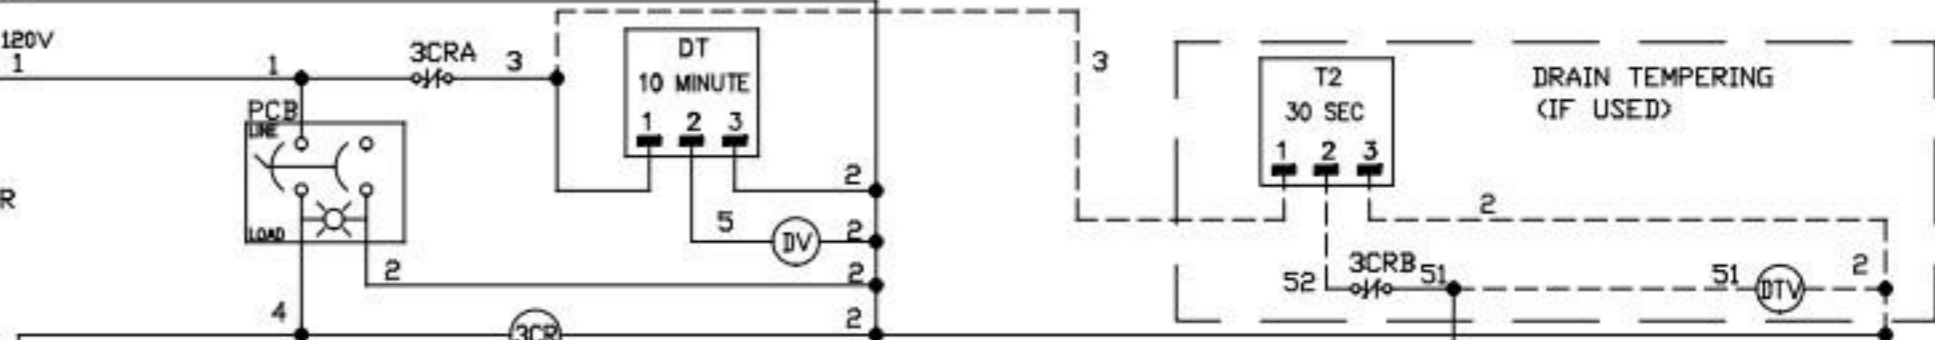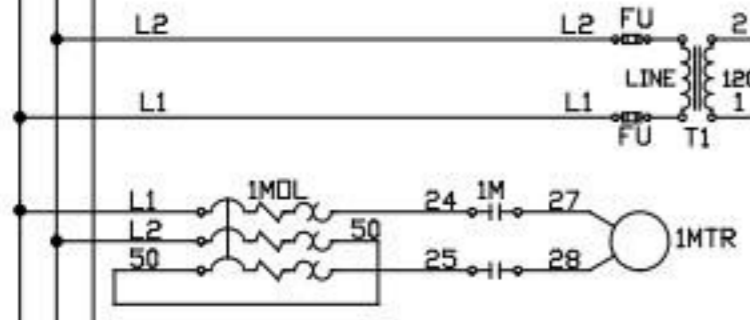

120V SIGNAL TO VENT FAN CONTACTOR 1 AMP MAX

DETERGENT SIGNAL 1 AMP MAX

