

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet


#### ELECTRICAL SPECIFICATIONS:

| Model No.                         | Volts | Watts | Amps | Hertz | Phase | NEMA  |
|-----------------------------------|-------|-------|------|-------|-------|-------|
| H137S96BC<br><i>USA only</i>      | 120   | 1500  | 12.5 | 60    | 1     | 5-15P |
| H137S96BC CAN<br><i>USA / CAN</i> | 120   | 1500  | 12.5 | 60    | 1     | 5-20P |
| H137S96BC 208<br><i>USA / CAN</i> | 208   | 2000  | 9.6  | 60    | 1     | 6-15P |
| H137S96BC 240<br><i>USA / CAN</i> | 240   | 2000  | 8.3  | 60    | 1     | 6-15P |

Note: The above model numbers are basic models. They may be followed by letters **L**, **D**, or ending with an **S**.

#### HOW TO INSTALL UNIT:

- Place cabinet on level floor.
- Plug cord end into proper wall outlet.

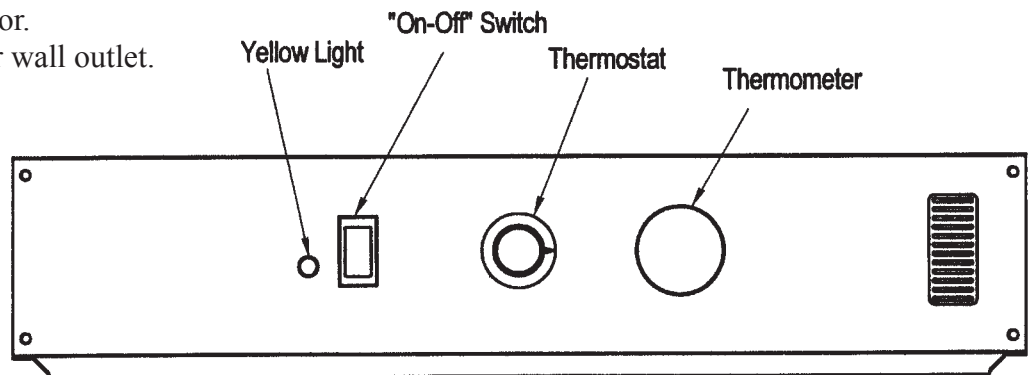


#### HOW TO START UNIT:

- Turn the POWER switch on. The *yellow* light will turn on.
- Turn thermostat to #7.
- Preheat cabinet for 60 minutes.
- Put food into cabinet.
- Turn thermostat to #8 and close door.  
 No. 8 setting = approx. 185°F (85°C)  
 No. 6 setting = approx. 160°F (71°C)  
 No. 4 setting = approx. 130°F (54°C)

Proper food holding temperature is 140°F (60°C) or higher.


#### TO TURN OFF UNIT:

Push the POWER switch off.  
The *yellow* light will go out.



### WARNING

RISK OF FIRE OR ELECTRIC SHOCK  
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE

REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

|                           |                |
|---------------------------|----------------|
| Insulated Banquet Cabinet | <b>FL-2258</b> |
| Rev. 7 (5/13)             | Page 2 of 4    |

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet

#### HOW TO CLEAN THE CABINET:

**! WARNING** *BEFORE* cleaning the cabinet:

1. Allow cabinet to cool.
2. Remove Hot unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.

#### Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

#### HOW TO CLEAN THE UNIT:

|  | SOIL                     | CLEANER  | METHOD   |
|--|--------------------------|--|--|
| <b>STAINLESS STEEL</b>   | DIRT                     | Mild detergent* and hot water, or mild abrasive cleaner. | 1. Use soft, damp cloth.<br>2. Rinse with hot water.<br>3. Wipe dry. |
|  |                          | Steam (no strong alkaline additive)                      | 1. Rinse after steam cleaning.<br>2. Wipe dry.                       |
| <b>BANQUET CABINET</b>   | FINGERPRINTS, GREASE OIL | Chemical oven cleaner for aluminum.                      | Follow oven cleaner manufacturer's directions.                       |
|  |                          | Mild abrasive cleaner; oily or waxy cleaner.             | Apply with soft, clean cloth.  |
|  | WATER SPOTS              | Mild abrasive cleaner.                                   | 1. Wipe with damp cloth.<br>2. Rinse and dry.                        |
| <i>* Mild detergents include soaps and non-abrasive cleaners</i> |                          |  |  |

**NOTE:** Gaskets are removable for cleaning.

#### TROUBLE-SHOOTING CHART:

| FAILURE                                  | POSSIBLE CAUSE   |
|--|--|
| 1. Yellow light at switch does NOT light | 1a. Circuit breaker/fuse to wall outlet is blown.<br>1b. Cord is unplugged from wall outlet.<br>1c. Switch is "OFF". |
| 2. Unit does not heat.                   | 2a. Thermostat set too low or is "OFF".<br>2b. Switch is "OFF".  |
| 3. Unit gets too hot or won't shut off.  | 3a. Defective electrical parts. <b>UNPLUG UNIT FROM WALL OUTLET.</b>   |
| 4. Blower does not work or make noise.   | 4a. Defective blower.  |

*If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.*

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet

#### REPLACEMENT PARTS: H137S96BC Series Banquet Cabinets

| Description                       |                   | 120 Volt    | 208 Volt    | 240 Volt    |
|-----------------------------------|-------------------|-------------|-------------|-------------|
| Power Unit                        |                   |             |             |             |
| <i>Canada/USA</i>                 | 1500w/20A         | 0675-011    | 0675-010    | 0675-010    |
| <i>USA only</i>                   | 1500w/15A         | 0675-006    | 0675-010    | 0675-010    |
| Blower Kit                        |                   | 0769-180-K  | 0769-182-K  | 0769-182-K  |
| Heater Kit                        |                   | 0811-265    | 0811-269    | 0811-270    |
| High Limit                        |                   | 0848-060    | 0848-060    | 0848-060    |
| Power Cord                        | -1500w USA only   | 0810-029-02 | 0810-039-02 | 0810-039-02 |
|                                   | -1500w Canada/USA | 0810-029-03 | 0810-039-02 | 0810-039-02 |
| Power Light                       |                   | 0766-094    | 0766-095    | 0766-095    |
| Power Switch                      |                   | 0808-116-K  | 0808-116-K  | 0808-116-K  |
| Terminal Block                    |                   | 0852-093    | 0852-093    | 0852-093    |
| Thermometer                       | -analog           | 5238-030-K  | 5238-030-K  | 5238-030-K  |
| Thermometer                       | -digital          | 5238-034-K  | 5238-034-K  | 5238-034-K  |
| Thermostat                        | -analog           | 0848-062-K  | 0848-062-K  | 0848-062-K  |
| Transformer (digital thermometer) |                   | 0769-159    | 0769-159    | 0769-159    |
| Vent fan                          |                   | 0769-165    | 0769-174    | 0769-174    |
| Door Catch                        |                   |             | 1006-144-K  |             |
| Door Gasket, Complete             |                   |             | 0861-238-K  |             |
| Door Hinge                        |                   |             | 0519-084    |             |
| Door Latch                        |                   |             | 1006-143-K  |             |
| Door, complete                    |                   |             | 1221-528-K  |             |
| Wire Grids                        |                   |             | 1170-206    |             |

|                           |                |
|---------------------------|----------------|
| Insulated Banquet Cabinet | <b>FL-2258</b> |
| Rev. 7 (5/13)             | Page 4 of 4    |

**OPERATING and MAINTENANCE INSTRUCTIONS**  
**Model: H137S96BC Series Banquet Cabinet**

**WIRING DIAGRAM:**

