

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: EB Banquet Warming Cabinets

#### ELECTRICAL SPECIFICATIONS:

| Model No.         | Volts | Watts | Amps | Hertz | Phase | NEMA   |
|-------------------|-------|-------|------|-------|-------|--------|
| EB-64<br>EB-96    | 120   | 1500  | 12.5 | 60    | 1     | 5-15P  |
| EB-120<br>EB-150A | 208   | 1500  | 7.3  | 60    | 1     | 6-15P  |
| EB-150-XX         | 240   | 1500  | 6.3  | 60    | 1     | 6-15-P |

*Models are designed for AC Service.*

*Model Nos. may include suffixes: L, U, US, W, ST, Z and S.*

#### HOW TO INSTALL UNIT:

1. Remove all packing material from inside the cabinet and clean cabinet thoroughly.
2. Install all channels and shelves before the unit is put into operation.
3. Plug the power cord into the proper wall outlet.
4. For “W” Humidity Models: Add water to pan in hot unit.

#### HOW TO START UNIT:


1. Turn the *POWER* switch “ON”. The yellow light will turn on.
2. Turn the thermostat to no. 10.
3. Preheat (assuming a “cold” cabinet of 75°F/25°C):  
 To 150°F/65°C takes about 30 mins.  
 To 175°F/79°C takes about 45 mins.  
 To 190°F/88°C takes about 1 hour.
4. Put food into the cabinet.
5. Turn the thermostat to the required temperature.

**NOTE:** No. 8 is about 180°F/82°C  
 No. 7 is about 160°F/71°C  
 No. 6 is about 145°F/63°C

Proper food holding temperature is 140°F / 60°C or higher.

#### TO TURN OFF UNIT:

Push the *POWER* switch to “OFF”.  
 The *yellow* light will go out.

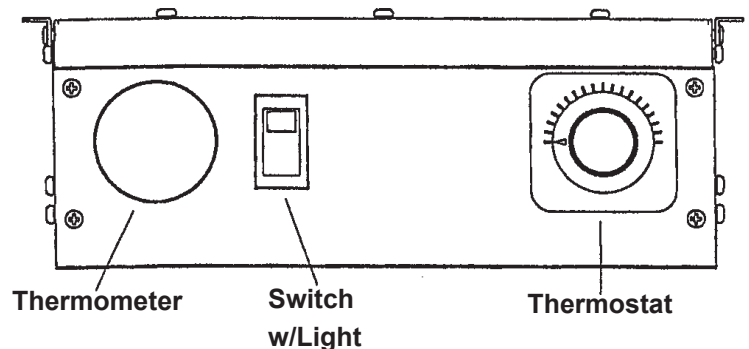

|                           |                |
|---------------------------|----------------|
| Insulated Banquet Cabinet | <b>FL-2370</b> |
| Rev. 1 (10/14)            | Page 2 of 4    |

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: EB Banquet Warming Cabinets

### **WARNING**

#### MAINTENANCE:

##### Hot Unit Removal Instructions

1. Unplug power cord from wall outlet and remove cord from clip.
2. Lift up the bottom shelf; then lift up the hot unit about 5 inches and pull out.

#### HOW TO CLEAN THE UNIT:

##### *BEFORE* Cleaning the Cabinet:

1. Allow cabinet to cool.
2. Remove hot unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.
4. High pressure cleaning is recommended for cabinet exterior.

#### Cleaning hints:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.
7. Do not use "Cres Clean" on plastic parts or labels.

|  | Soil                        | Cleaner                                | Method   |
|--|-----------------------------|--|--|
| <b>CABINETS</b><br>(Stainless Steel)                             | Routine Cleaning            | Soap, ammonia, or detergent* and water | 1. Sponge on with cloth.<br>2. Rinse.  |
|  | Stubborn spots and stains   | Mild abrasive made for stainless steel | 1. Apply with damp cloth.<br>2. Rub lightly.   |
|  | Burnt-on foods or grease.   | Chemical oven cleaner                  | 1. Apply generous coating.<br>2. Allow to stand for 10-15 minutes.<br>3. Rinse.<br>4. Repeat application if necessary. |
|  | Hard water spots and scale. | Vinegar                                | 1. Swab or wipe with cloth.<br>2. Rinse dry.   |
| <i>*Mild detergents include soaps and non-abrasive cleaners.</i> |                             |  |  |



5925 Heisley Road • Mentor, OH 44060-1833

|                           |                |
|---------------------------|----------------|
| Insulated Banquet Cabinet | <b>FL-2370</b> |
| Rev. 1 (10/14)            | Page 3 of 4    |

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: EB Banquet Warming Cabinets

#### TROUBLE-SHOOTING CHART:

**FAILURE:**

1. *Yellow* light at switch does NOT light.
2. Unit does not heat.
3. Unit gets too hot or won't shut off.
4. Blower does not work or makes noise.
5. Excess moisture in cabinet.

**POSSIBLE CAUSE:**

- 1a. Circuit breaker/fuse to wall outlet is blown
- 1b. Cord is unplugged from wall outlet.
- 1c. Switch is "OFF."
- 2a. Thermostat set too low or is "OFF."
- 2b. Switch is "OFF."
- 3a. Defective electrical parts.
- 4a. Defective blower
5. "Slack out" foods from oven or fryer for 5 minutes before putting in hot cabinet.

***UNPLUG UNIT FROM WALL OUTLET***

*If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400*

#### REPLACEMENT PARTS:

| DESCRIPTION     | 120 VOLT    | 208 VOLT      | 240 VOLT      |
|-----------------|-------------|---------------|---------------|
| Power Unit      | 1254-065    | 1254-066      | 1254-067      |
| Blower Kit      | 0769-180-K  | 0769-182-K    | 0769-182-K    |
| Heater Kit      | 0811-244    | 0811-245      | 0811-246      |
| Thermostat Kit  | 0848-062-K  | 0848-062-K    | 0848-062-K    |
| Thermometer Kit | 5238-030-K  | 5238-030-K    | 5238-030-K    |
| Power Cord      | 0810-029-02 | 0810-039-03   | 0810-039-03   |
| Power Switch    | 0808-113-K  | 0808-113-01-K | 0808-113-01-K |
| Terminal Block  | 0852-091    | 0852-091      | 0852-091      |
| Water Pan       | 1017-129    | 1017-129      | 1017-129      |

| CABINET MODEL NOS:      | EB-64      | EB-96      | EB-120     | EB-150A/EB-150XX |
|-------------------------|------------|------------|------------|------------------|
| Door Latch              | 1006-143-K | 1006-143-K | 1006-143-K | 1006-143-K       |
| Door Strike             | 1006-151-K | 1006-151-K | 1006-151-K | 1006-151-K       |
| Door Hinge              | 0519-084   | 0519-084   | 0519-084   | 0519-084         |
| Door Gasket Kit         | 0861-285-K | 0861-285-K | 0861-281-K | 0861-282-K       |
| Door Assembly, Complete | 1221-615   | 1221-615   | 1221-607   | 1221-611         |
| Wire Grid               | 1170-232   | 1170-228   | 1170-205   | 1137-231         |
| Pull Handle             | 0911-087   | 0911-087   | 0911-119   | 0911-119         |

| For Sterno "ST" Models: |          |               |
|-------------------------|----------|---------------|
|                         | 5037-012 | RH Can Holder |
|                         | 5037-013 | LH Can Holder |
|                         | 0977-083 | Sterno Cover  |

|                           |                |
|---------------------------|----------------|
| Insulated Banquet Cabinet | <b>FL-2370</b> |
| Rev. 1 (10/14)            | Page 4 of 4    |

## OPERATING and MAINTENANCE INSTRUCTIONS

### Models: EB Banquet Warming Cabinets

