

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet


#### ELECTRICAL SPECIFICATIONS:

Model No.	Volts	Watts	Amps	Hertz	Phase	NEMA
H137S96BC <i>USA only</i>	120	1500	12.5	60	1	5-15P
H137S96BC CAN <i>USA / CAN</i>	120	1500	12.5	60	1	5-20P
H137S96BC 208 <i>USA / CAN</i>	208	2000	9.6	60	1	6-15P
H137S96BC 240 <i>USA / CAN</i>	240	2000	8.3	60	1	6-15P

Note: The above model numbers are basic models. They may be followed by letters **L**, **D**, or ending with an **S**.

#### HOW TO INSTALL UNIT:

1. Place cabinet on level floor.
2. Plug cord end into proper wall outlet.

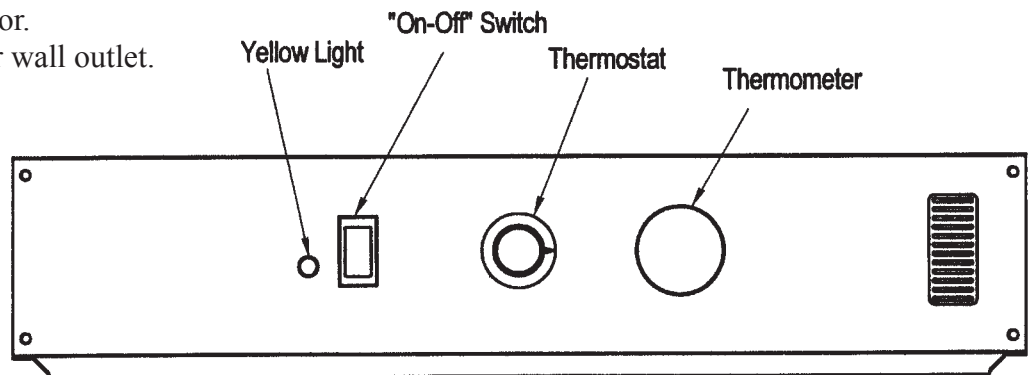


#### HOW TO START UNIT:

1. Turn the POWER switch on. The *yellow* light will turn on.
2. Turn thermostat to #7.
3. Preheat cabinet for 60 minutes.
4. Put food into cabinet.
5. Turn thermostat to #8 and close door.  
 No. 8 setting = approx. 185°F (85°C)  
 No. 6 setting = approx. 160°F (71°C)  
 No. 4 setting = approx. 130°F (54°C)

Proper food holding temperature is 140°F (60°C) or higher.


#### TO TURN OFF UNIT:

Push the POWER switch off.  
The *yellow* light will go out.



### WARNING

RISK OF FIRE OR ELECTRIC SHOCK  
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE

REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

Insulated Banquet Cabinet	<b>FL-2258</b>
Rev. 7 (5/13)	Page 2 of 4

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet

#### HOW TO CLEAN THE CABINET:

**! WARNING** *BEFORE* cleaning the cabinet:

1. Allow cabinet to cool.
2. Remove Hot unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.

#### Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

#### HOW TO CLEAN THE UNIT:

	SOIL	CLEANER	METHOD
<b>STAINLESS STEEL</b>	DIRT	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Steam (no strong alkaline additive)	1. Rinse after steam cleaning. 2. Wipe dry.
<b>BANQUET CABINET</b>	FINGERPRINTS, GREASE OIL	Chemical oven cleaner for aluminum.	Follow oven cleaner manufacturer's directions.
		Mild abrasive cleaner; oily or waxy cleaner.	Apply with soft, clean cloth.
	WATER SPOTS	Mild abrasive cleaner.	1. Wipe with damp cloth. 2. Rinse and dry.
<i>* Mild detergents include soaps and non-abrasive cleaners</i>			

**NOTE:** Gaskets are removable for cleaning.

#### TROUBLE-SHOOTING CHART:

FAILURE	POSSIBLE CAUSE
1. Yellow light at switch does NOT light	1a. Circuit breaker/fuse to wall outlet is blown. 1b. Cord is unplugged from wall outlet. 1c. Switch is "OFF".
2. Unit does not heat.	2a. Thermostat set too low or is "OFF". 2b. Switch is "OFF".
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts. <b>UNPLUG UNIT FROM WALL OUTLET.</b>
4. Blower does not work or make noise.	4a. Defective blower.

*If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.*

## OPERATING and MAINTENANCE INSTRUCTIONS

### Model: H137S96BC Series Banquet Cabinet

#### REPLACEMENT PARTS: H137S96BC Series Banquet Cabinets

Description		120 Volt	208 Volt	240 Volt
Power Unit				
<i>Canada/USA</i>	1500w/20A	0675-011	0675-010	0675-010
<i>USA only</i>	1500w/15A	0675-006	0675-010	0675-010
Blower Kit		0769-180-K	0769-182-K	0769-182-K
Heater Kit		0811-265	0811-269	0811-270
High Limit		0848-060	0848-060	0848-060
Power Cord	-1500w USA only	0810-029-02	0810-039-02	0810-039-02
	-1500w Canada/USA	0810-029-03	0810-039-02	0810-039-02
Power Light		0766-094	0766-095	0766-095
Power Switch		0808-116-K	0808-116-K	0808-116-K
Terminal Block		0852-093	0852-093	0852-093
Thermometer	-analog	5238-030-K	5238-030-K	5238-030-K
Thermometer	-digital	5238-034-K	5238-034-K	5238-034-K
Thermostat	-analog	0848-062-K	0848-062-K	0848-062-K
Transformer (digital thermometer)		0769-159	0769-159	0769-159
Vent fan		0769-165	0769-174	0769-174
Door Catch			1006-144-K	
Door Gasket, Complete			0861-238-K	
Door Hinge			0519-084	
Door Latch			1006-143-K	
Door, complete			1221-528-K	
Wire Grids			1170-206	

Insulated Banquet Cabinet	<b>FL-2258</b>
Rev. 7 (5/13)	Page 4 of 4

**OPERATING and MAINTENANCE INSTRUCTIONS**  
**Model: H137S96BC Series Banquet Cabinet**

**WIRING DIAGRAM:**

