

OPERATING and MAINTENANCE INSTRUCTIONS for H135WUA11 Hot Cabinet (Aluminum) H135WSUA11 Hot Cabinet (Stainless Steel)

| Model No. | Volts | Watts | Amps | Hertz | Phase | NEMA |
|-------------------------------|-------|-------|------|-------|-------|-------|
| H135WUA11 H135WSUA11 | 120 | 2000 | 16 | 60 | 1 | 5-20P |
| H135WUA11208 H135WSUA11208 | 208 | 2000 | 9.6 | 60 | 1 | 6-15P |
| H135WUA11240 H135WSUA11240 | 240 | 2000 | 8.6 | 60 | 1 | 6-15P |

All are designed for AC service. The above model numbers may be followed by “M”, “L”, “D”, “R” and ending with “S” or “Z”.

HOW TO INSTALL UNIT:

1. Place cabinet near warm ovens. Do NOT place cabinet in drafty areas or near ventilating systems.
2. Plug end into proper wall outlet.
3. Fill with 2 qts.(1.8 liters) of clean, hot water.




CAUTION Use of treated or soft water may be required for proper operation and to maintain warranty.

HOW TO PROOF:

1. Fill water pan (See “How to Install”)
2. Push “POWER” switch to “ON.” The yellow light will come on.
3. Push “MODE SELECTION” switch to “PROOF”. The yellow light will come on.
4. Turn “HUMIDITY” dial to No. 8.
5. Turn “AIR” dial to “OFF.”
6. Preheat for 30 minutes. “
7. Put fresh or fully thawed dough into cabinet.

NOTE: The cabinet temperature will drop temperature inside cabinet if cold dough is added.

Do NOT put frozen dough into cabinet

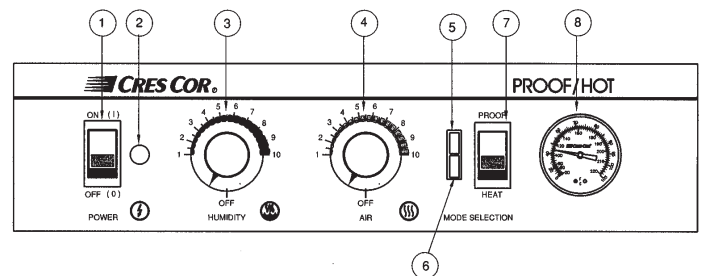

CONTROL PANEL PARTS IDENTIFICATION

- | | |
|------------------------|--------------------------|
| 1. Switch-Power | 5. Yellow Light-Proof |
| 2. Yellow Light-Power | 6. Red Light-Heat |
| 3. Thermostat-Humidity | 7. Switch-Mode Selection |
| 4. Thermostat-Air | 8. Thermometer |

NOTE: No. 8 setting will give you an approximate temperature of 95°F (35°C), and 90-95% humidity. Experiment with different “HUMIDITY” and “AIR” settings to get the exact temperature and humidity you need. The thermometer shows the temperature inside the cabinet.

NOTE: Check water level in water pan if you are proofing longer than 90 minutes. Fill with clean, hot water.

| | |
|---------------|----------------|
| Hot Cabinets | FL-2334 |
| Rev. 2 (3/13) | Page 2 of 4 |

OPERATING and MAINTENANCE INSTRUCTIONS for H135WUA11 Series Hot Cabinet

HOW TO HOLD

1. Push "POWER" switch to "ON." The yellow light will come on.
2. Push "MODE SELECTION" switch to "HEAT." The red light will come on.
3. Turn "AIR" dial to temperature needed.

NOTE: No. 8 is about 175°F (79°C).

No. 6 is about 165°F (74°C).


Proper food holding temperature is 140°F (60°C) or higher.

4. Preheat cabinet for 30 minutes.
5. Put food into cabinet.

HOW TO TURN UNIT OFF:

Push "POWER" switch to "OFF" position.

MAINTENANCE:

| | | |
|--|----------------|---|
|  | WARNING |  |
| RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN | | |
| <p>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,</p> <p>DO NOT REMOVE COVER (OR BACK)</p> <p>NO USER-SERVICEABLE PARTS INSIDE</p> <p>REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY</p> | | |

HOT UNIT REMOVAL INSTRUCTIONS:

1. Unplug power cord from wall outlet.
2. Pull entire unit out the front of the cabinet.

WARNING

BEFORE CLEANING THE CABINET:

1. Allow cabinet to cool.
2. Remove Hot Unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.

Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.
7. Empty water pan at least once a week.

CAUTION

DELIME OR DESCALE RESERVOIR PARTS AS REQUIRED TO PREVENT DAMAGING BUILD-UP.

WARRANTY COVERAGE MAY BE AFFECTED WITHOUT PROPER CLEANING.

OPERATING and MAINTENANCE INSTRUCTIONS for H135WUA11 Hot Cabinet (Aluminum) H135WSUA11 Hot Cabinet (Stainless Steel)

HOW TO CLEAN UNIT:

| | Soil | Cleaner | Method |
|---|---|--|--|
| DOORS Vinyl (Out) Aluminum (In) | Dirt, Grease and Oil | Mild Detergent* and water. | 1. Wipe with soft, damp cloth. 2. Rinse well. |
| CABINETS (H137WUA11 is Aluminum) (H137WSUA11 is Stainless Steel) | Dirt | Mild detergent* and hot water, or mild abrasive cleaner. | 1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry. |
| | | Steam (No strong alkaline additive) | 1. Rinse after steam cleaning. 2. Wipe dry. |
| | Fingerprints, Grease and Oil | Chemical oven cleaner for cabinet material | Follow oven cleaner manufacturer's directions |
| | | Mild abrasive cleaner; oily or waxy cleaner | Apply with clean, soft cloth. Wipe with damp cloth. |
| Water Spots | Mild abrasive cleaner. Oily or waxy cleaner. | Apply with soft, clean cloth. Wipe with damp cloth. | |

**Mild detergents include soaps and non-abrasive cleaners.*

TROUBLE-SHOOTING CHART:

| FAILURE | POSSIBLE CAUSE |
|---|---|
| 1. Indicator lights do NOT light. | 1a. Circuit breaker/fuse to wall outlet blown. 2a. Cord unplugged from wall outlet or cabinet. 3a. Switch is "OFF." |
| 2. Unit does not heat | 2a. Thermostats set too low or are off. 2b. Switch is "OFF." |
| 3. Unit gets too hot or won't shut off | 3a. Defective electrical parts. 3b. UNPLUG UNIT FROM WALL OUTLET |
| 4. Humidity is low. | 4a. Water in pan may be low 4b. Thermostat set too low |
| 5. Blower does not work or makes noise. | 5a. Defective Blower |

NOTE: Optional digital thermometer will flash if cabinet temperature is below 140°F or above 250°F.
Call the Factory if you need different settings.

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

CABINET

Door Assembly, Aluminum
Door Assembly, Red
Door Assembly, Stainless Steel
Door Gasket
Door Hinge
Door Latch
Pan Slides

W/BLACK FRAME

1200-495-BL-K
1200-499-BL-K
-
0861-259-K
0519-104-K
1006-154-01-K
0621-281-K

W/O BLACK FRAME

1221-571-K
1221-571-RK
1221-571-SS
0861-271-K
0519-104-K
1006-154-01-K
0621-281-K

OPERATING and MAINTENANCE INSTRUCTIONS for H135WUA11 Series Hot Cabinet

REPLACEMENT PARTS:

| DESCRIPTION | 120 VOLT | 208 VOLT | 240 VOLT |
|--------------------------|-------------|-------------|-------------|
| Hot Unit (135WUA11) | PHU-747-071 | PHU-747-072 | PHU-747-073 |
| Hot Unit (135WSUA11) | PHU-747-080 | PHU-747-081 | PHU-747-082 |
| Heater (Reservoir) | 0811-285 | 0811-286 | 0811-287 |
| Pan (Reservoir) | 1017-097 | 1017-097 | 1017-097 |
| Heater (Air) | 0811-214-K | 0811-250 | 0811-215 |
| Thermostat Kit | 0848-062-K | 0848-062-K | 0848-062-K |
| Thermometer Kit (Analog) | 5238-030-K | 5238-030-K | 5238-030-K |
| Power Cord | 0810-065-1 | 0810-039 | 0810-039 |
| Proof & Heat Lights | 0766-093 | 0766-093-1 | 0766-093-1 |
| Power Light | 0766-094 | 0766-095 | 0766-095 |
| Switch (Power) | 0808-116-K | 0808-116-K | 0808-116-K |
| Switch (Mode Selection) | 0808-117-K | 0808-117-K | 0808-117-K |
| Blower Kit | 0769-180-K | 0769-182-K | 0769-182-K |
| Drip Pan Kit | 1017-058 | 1017-058 | 1017-058 |

