



The Life of the Kitchen.®


PARTS CATALOG

Electric Range with Inducton Cooktop Models RR30NS, RR30NFS, RR30NIS, RR30NIFS

Page #	Description
2	Cooktop Assembly
3	Control Panel Assembly
4	Door Assembly
5	Oven Cell Assembly
6	Outer Assembly
7	Outer Assembly Parts
8	Base Assembly
9	Miscellaneous

Revised 05-14-2013


RR30N Range Cooktop Assembly

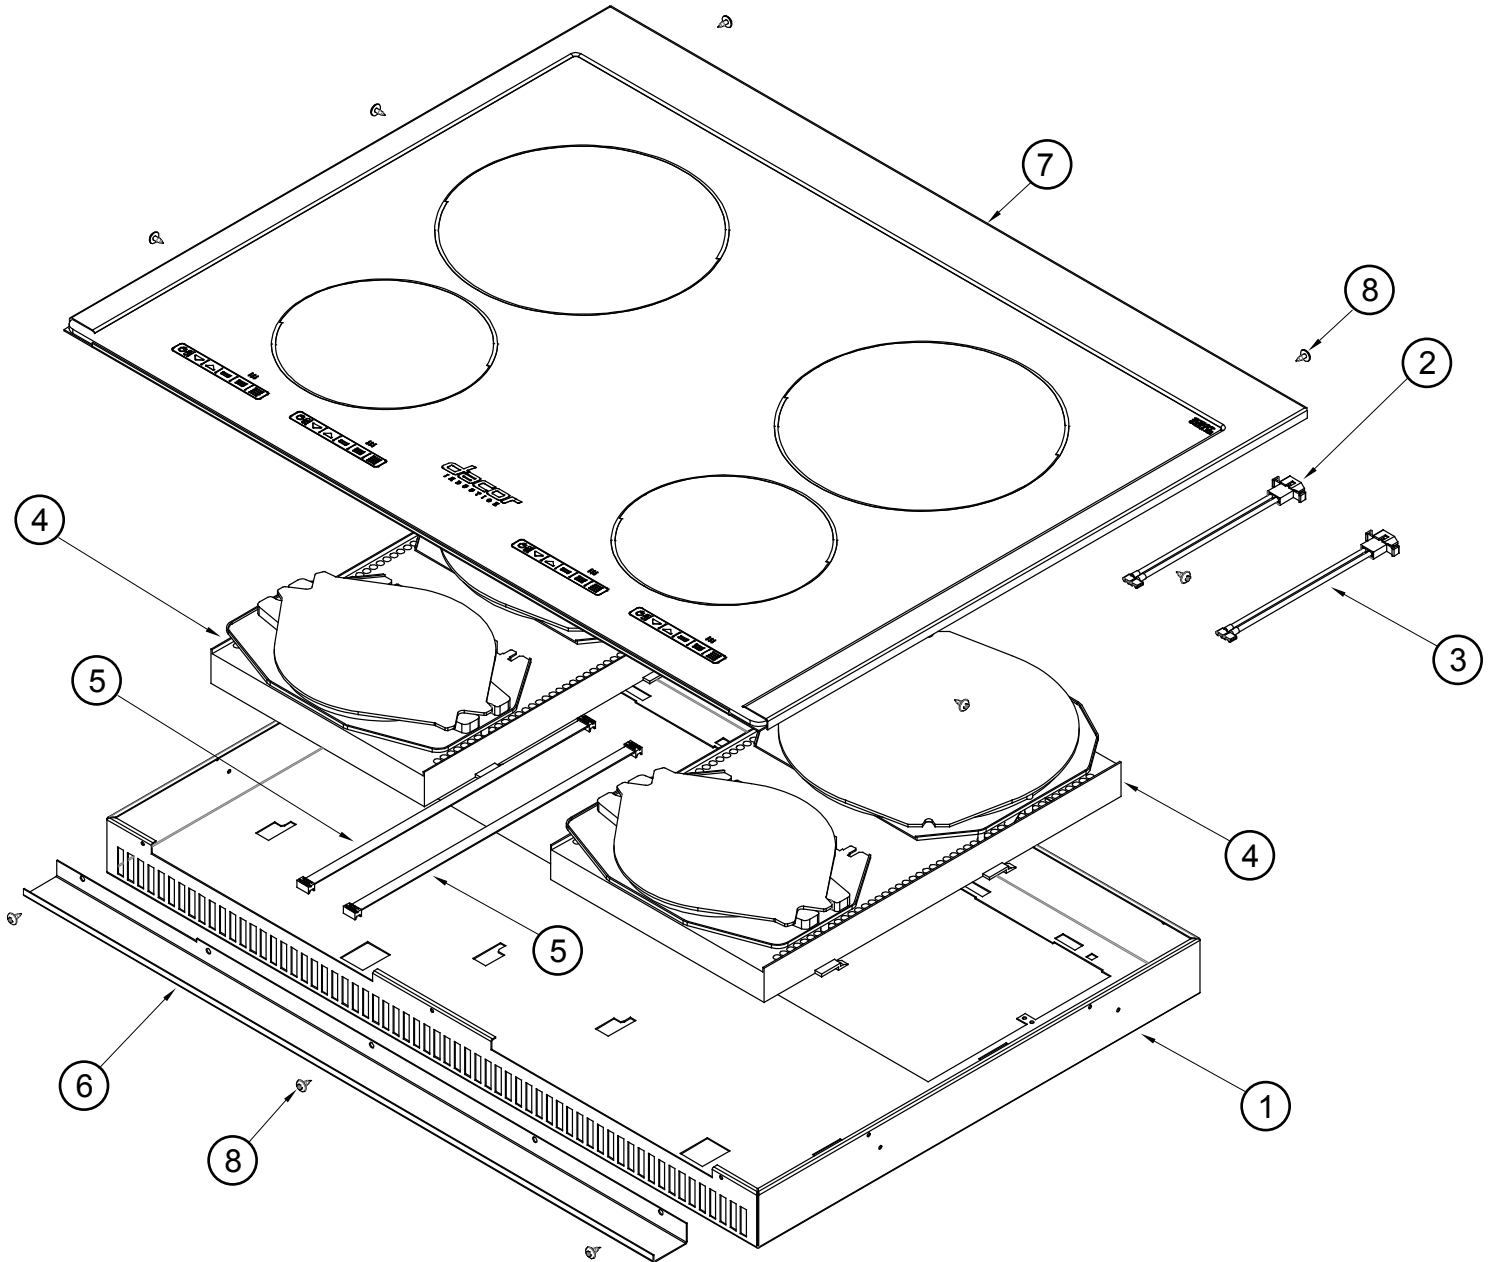

Item	Part#	Description
1	107281	Induction Box
2	107331	Harness w/Molex Plug, LH
3	107332	Harness w/Molex Plug, RH
4	107380	Generator, 16/22 1x3WR

Item	Part#	Description
5	107383	Ribbon Cable
6	36834	Gutter, Top Section
7	701751	Glass Panel Assembly
8	83024	Screw, Phil TRS, #8 X 3/8


RR30N Range Control Panel Assembly

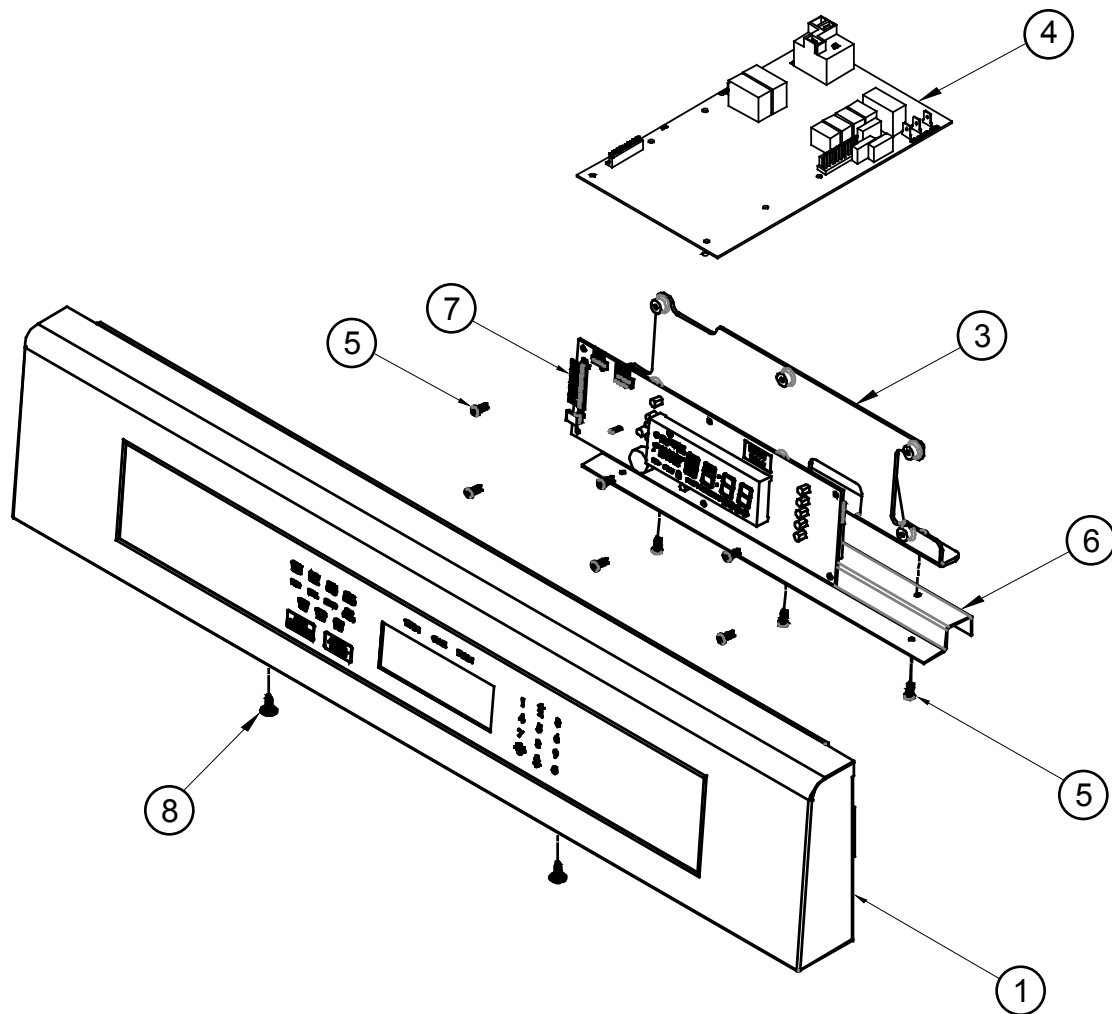

Item	Part #	Description
1	701829	Control Panel, Assembly
2	83538	PCB Support (not shown)
3	105334	Controller Mount
4	102377	Relay Board
5	105486	Screw, 6-18 x 3/8", Plastic

Item	Part #	Description
6	107270	Support, LED Display
7	107392	Display Module, LED
8	83708	Screw, Torx Wfr Hd, #8 x 1/2"
9	107329	Wire Harness, Power (not shown)

RR30N Range Door Assembly

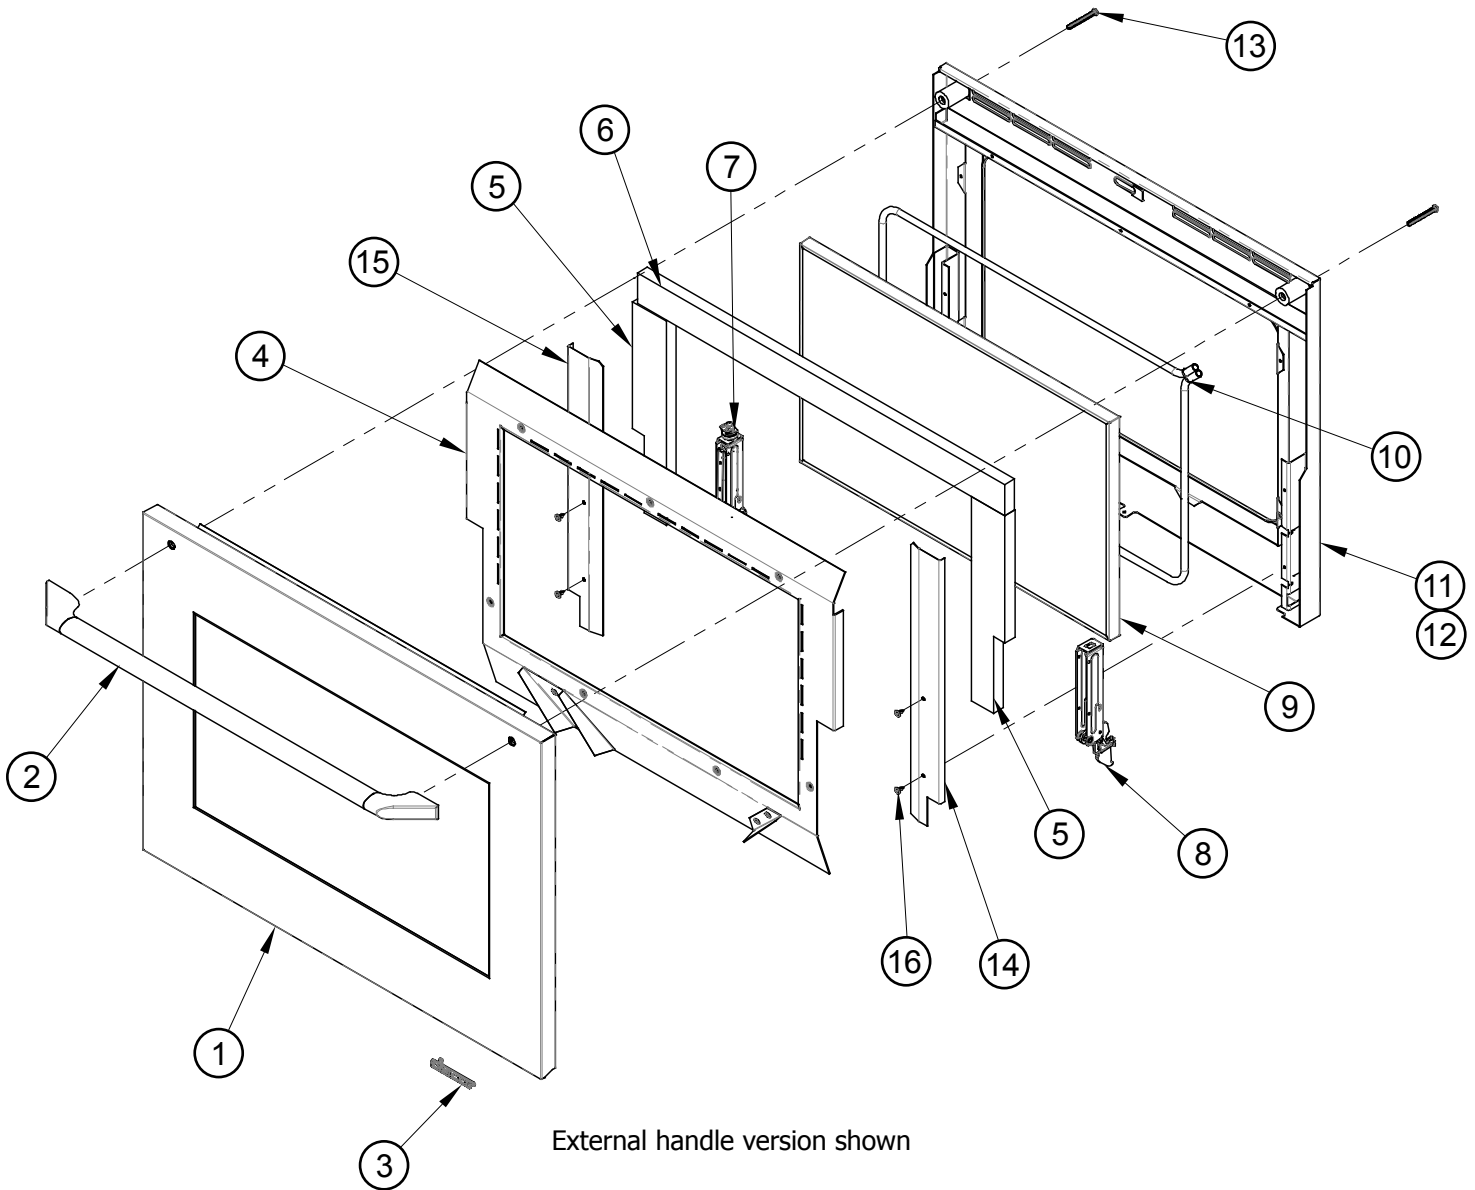

Item	External Handle Part #	Built-in Handle Part #	Description
1	701427-02 ¹	701697 ²	ASSEMBLY, DOOR SKIN
2	13659-001	NA	ASSEMBLY, DOOR HANDLE
3	72511CH	72511CH	LOGO, DACOR, 4", CHROME
4	107221B	107221B	HEAT SHIELD
5	105353	105353	INSULATION, SIDE DOOR
6	105352	105352	INSULATION, TOP DOOR
7	72711	72711	HINGE, LEFT
8	72710	72710	HINGE, RIGHT

Item	External Handle Part #	Built-in Handle Part #	Description
9	72968	72968	WINDOW PACK
10	100015	100015	GASKET, WINDOW PACK
11	701428-04 ³	701428-05 ³	ASSEMBLY, DOOR LINER
12	701430BP ⁴	701430BP ⁴	DOOR LINER
13	100026	NA	SCREW, #10-32 X 2.0, TORX
14	105510-01	105510-01	HINGE BRACKET COVER, RIGHT
15	105510-02	105510-02	HINGE BRACKET COVER, LEFT
16	83263	83263	SCREW, PHIL TRS, #8 X 3/8


¹ For complete door assembly, order part # 701426-03 which includes handle and Dacor logo on front.

² For complete door assembly, order part # 701698-02 which includes Dacor logo on front.

³ Pre-assembled, includes door liner, window pack with gasket, hinges, hinge covers, all insulation, heat shields and air deflectors.

⁴ Door liner alone.

RR30N Range Oven Cell Assembly

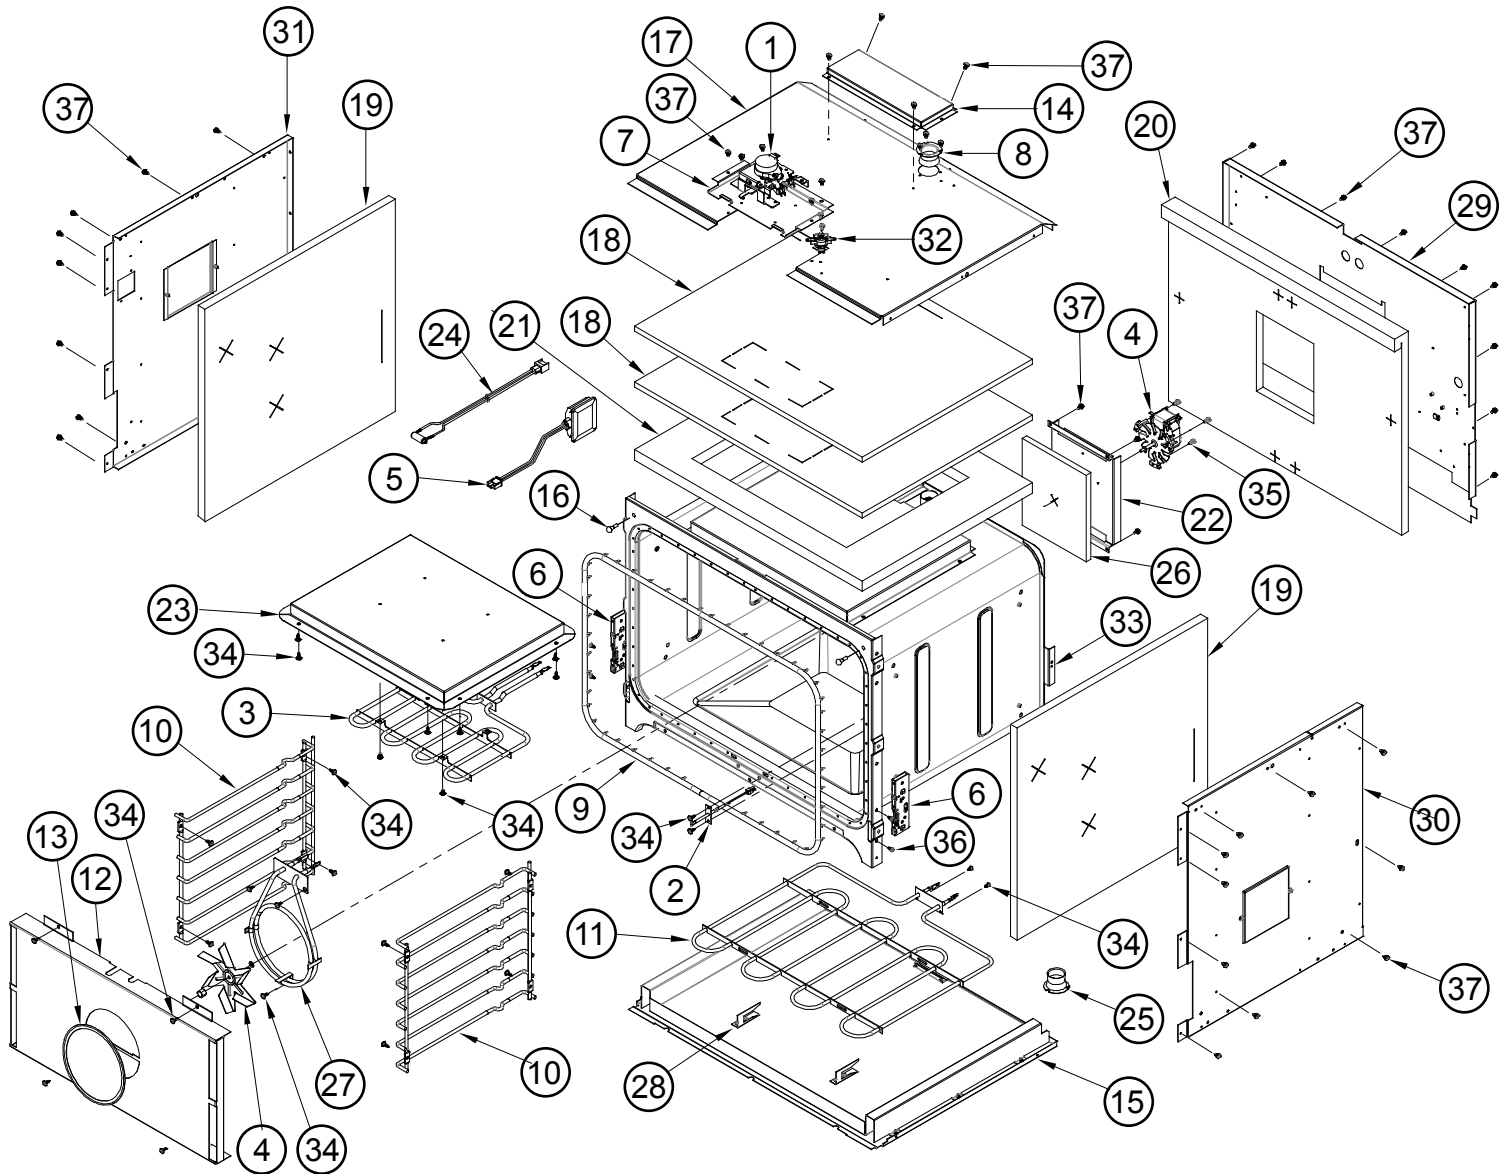

Item	Part #	Description
1	100090	Door Latch
2	72752	Temperature Sensor
3	102369	Broil, Element
4	700633 ¹	Convection Fan Motor ¹
5	107111 ²	Assy, Light, Halogen ²
6	72348	Receptacle, Hinge
7	105991	Latch Plate
8	105485	Smoke Eliminator, Top
9	105366	Gasket, Cell
10	106991	Support, Rack
11	106573	Bake, Element


¹ Includes fan blade, hex nut and washer

² Includes light bulb

Item	Part #	Description
12	105329BP	Convection Baffle
13	82891	Filter, Convection
14	107116	Duct, Smoke Eliminator
15	105919	Bake Pan
16	83618	Rubber Bumper
17	105917	Case Top
18	106976	Insulation, Broil, Top
19	106977	Insulation, Case Side
20	106978	Insulation, Case Back
21	107104	Insulation, Broil
22	36280	Mounting Plate, Conv Mtr
23	107105	Broil Pan
24	72717	Socket, Meat Probe

Item	Part #	Description
25	72755	Smoke Eliminator, Bot.
26	80168	Insulation, Conv. Motor
27	82377	Convection Element
28	107239	Holder, Bake Element
29	701770	Case Back
30	701692	Case Side, RH
31	701693	Case Side, LH
32	92321	Switch, Hi Limit
33		Not replaceable
34	83708	Screw, #8 x 1/2, Torx
35	83379	Screw, Slot, #8 x 1/2"
36	83709	Screw, Torx, #10 x 1/2", Black
37	83023	Screw, Slot, #10 x 3/8"

RR30N Range Outer Assembly

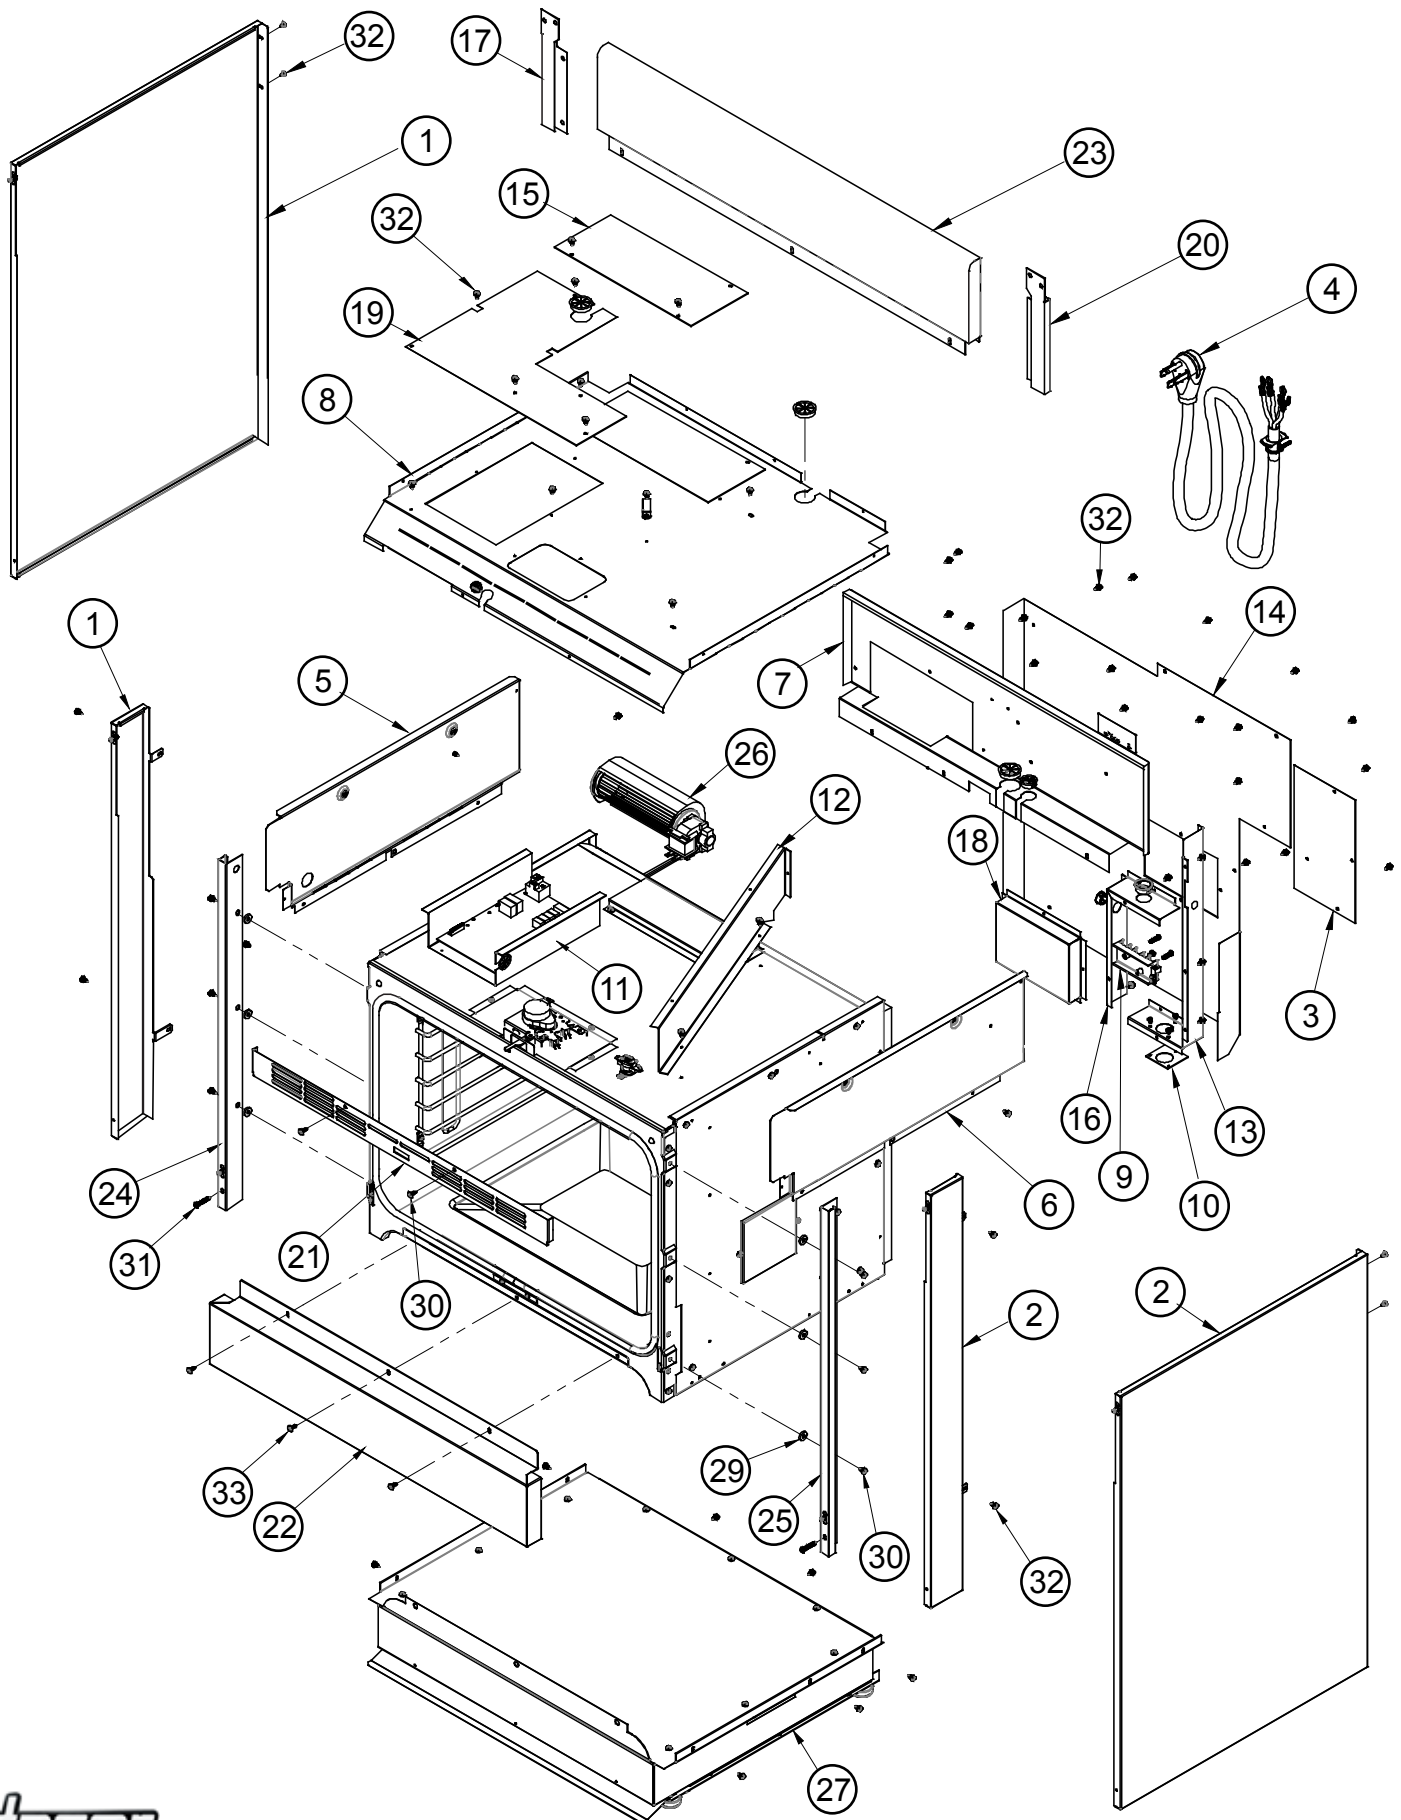

RR30N Range Outer Assembly Parts

Item	Part # Freestanding Units	Part # Slide-In Units	Description
1	701676-01 ¹	NA	Panel, Side, LH
	NA	701677-01 ²	Panel, Side, LH, 3 1/4"
2	701676-02 ¹	NA	Panel, Side, RH
	NA	701677-02 ²	Panel, Side, RH, 3 1/4"
3	107316	107316	Cover, Electrical
4	102554-02	102554-02	Power Cord, 50 Amp
5	107264	107264	Side Support, LH
6	107265	107265	Side Support, RH
7	107266	107266	Rear Panel, Top
8	107267	107267	Electrical Chassis
9	102384	102384	Terminal Block
10	102385-02 ³	NA	Adaptor, 1.125
11	105988	105988	Relay Board Support
12	105322	105322	Air Deflector, Cool Fan
13	107307	107307	Rear Exhaust, Right
14	107282	107282	Rear Cover
15	107368	107368	Cover, Cooling Fan
16	107308	107308	Box, Electrical
17	107289-01	107289-01	Backguard Bracket, Left
18	107117	107117	Box, Rear Panel
19	107119	107119	Cover, Relay
20	107289-02	107289-02	Backguard Bracket, Right
21	107202B	107202B	Grill, Intake
22	701659	701659	Panel, Kick
23	107715-02	107715-02	Backguard, 3"
	107715-01	107715-01	Backguard, 6"
	107715-03	107715-03	Backguard, 9"
24	701739-01	701739-01	Post Trim, LH
25	701739-02	701739-02	Post Trim, RH
26	82986	82986	Cooling Fan
27	NA	NA	Base (see page 8)
28	102403	102403	Ground Screw (not shown)


Item	Part # Slide-In Units	Description
29	83555	Screw, Washer, Fiber
30	83263	Screw, #8 x 3/8, Black
31	105737	Screw, #8 x 1 1/4
32	83023	Screw, Slot, #10 x 3/8"
33	83708	Screw, #8 x 1/2, Torx
-	107283	Wiring Harness, Main (not shown)
-	102403	Grounding Screw, #10 (not shown)
-	92191-01	Bushing, Split, .75 dia
-	92191-02	Bushing, Split, 1.0 dia
-	92191-03	Bushing, Split, 1.375 dia

¹ Models RR30NS[-C], RR30NFS[-C]

² Models RR30NIS, RR30NIFS

³ Not used on models that end in -C


RR30N Range Base Assembly

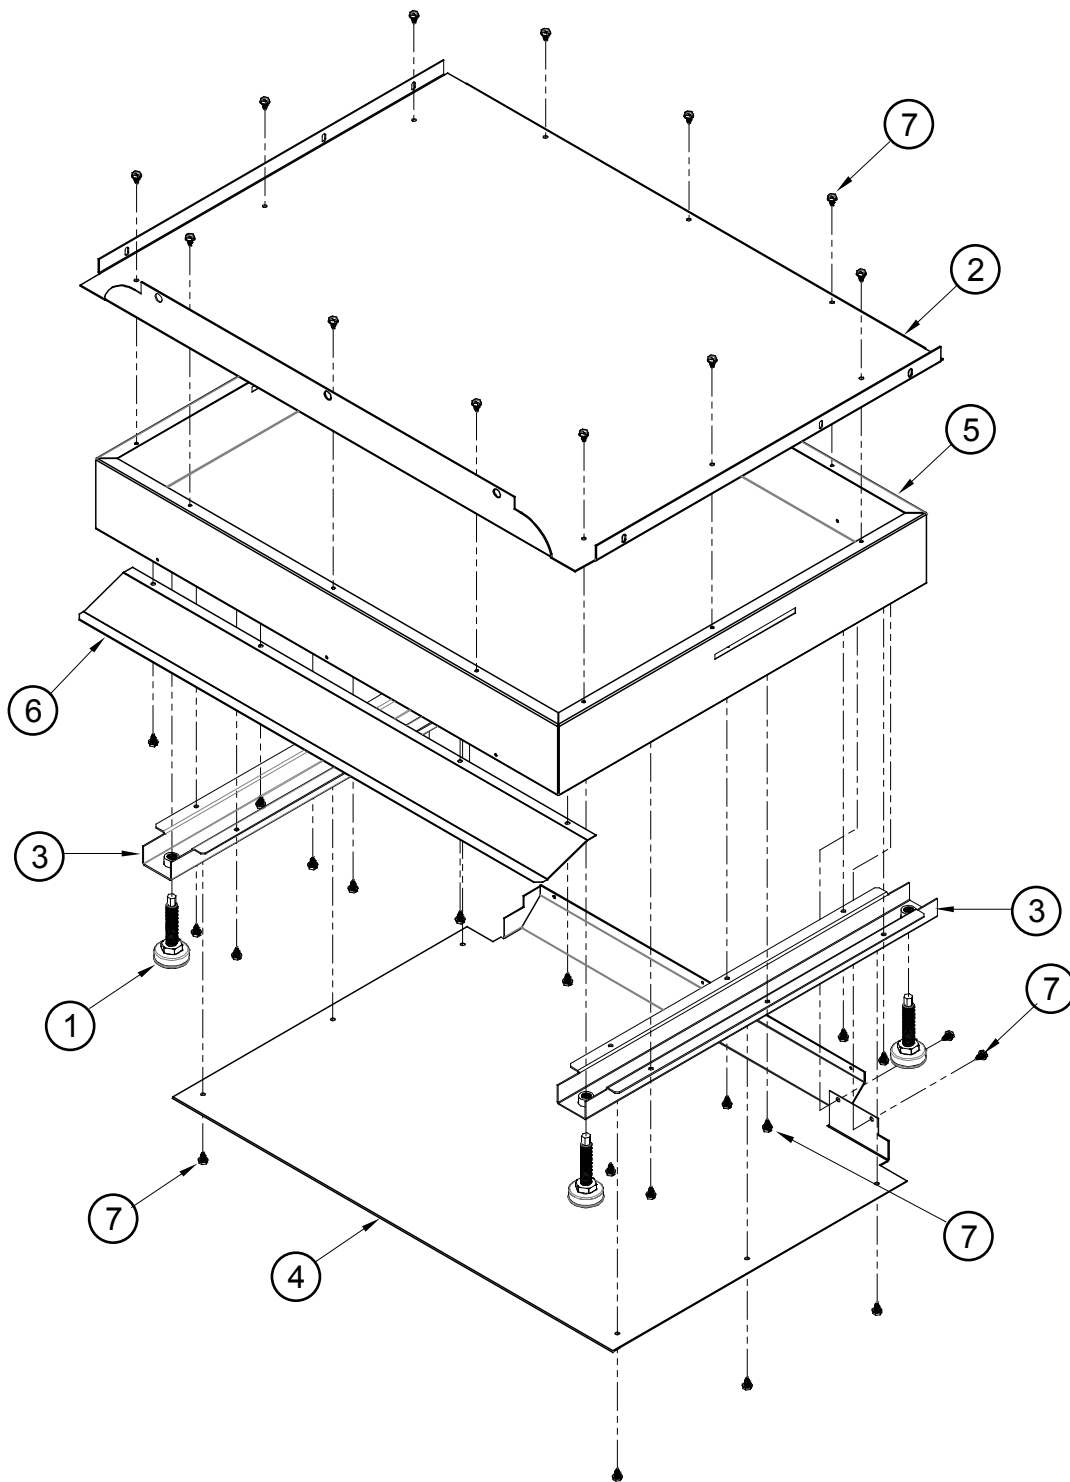

Item	Part #	Description
1	83359	Leg
2	107212	Panel, Base
3	701724	Base Leg Rail
4	105922	Exhaust Plate
5	107210	Base Box

Item	Part #	Description
6	107213	Exhaust Deflector
7	83023	Screw, Slot #10 x 3/8
-	105733-02	Anti-Tip Bracket (not shown)
-	701555	Hardware Kit Anti-Tip Bracket (not shown)

RR30N Range Accessories

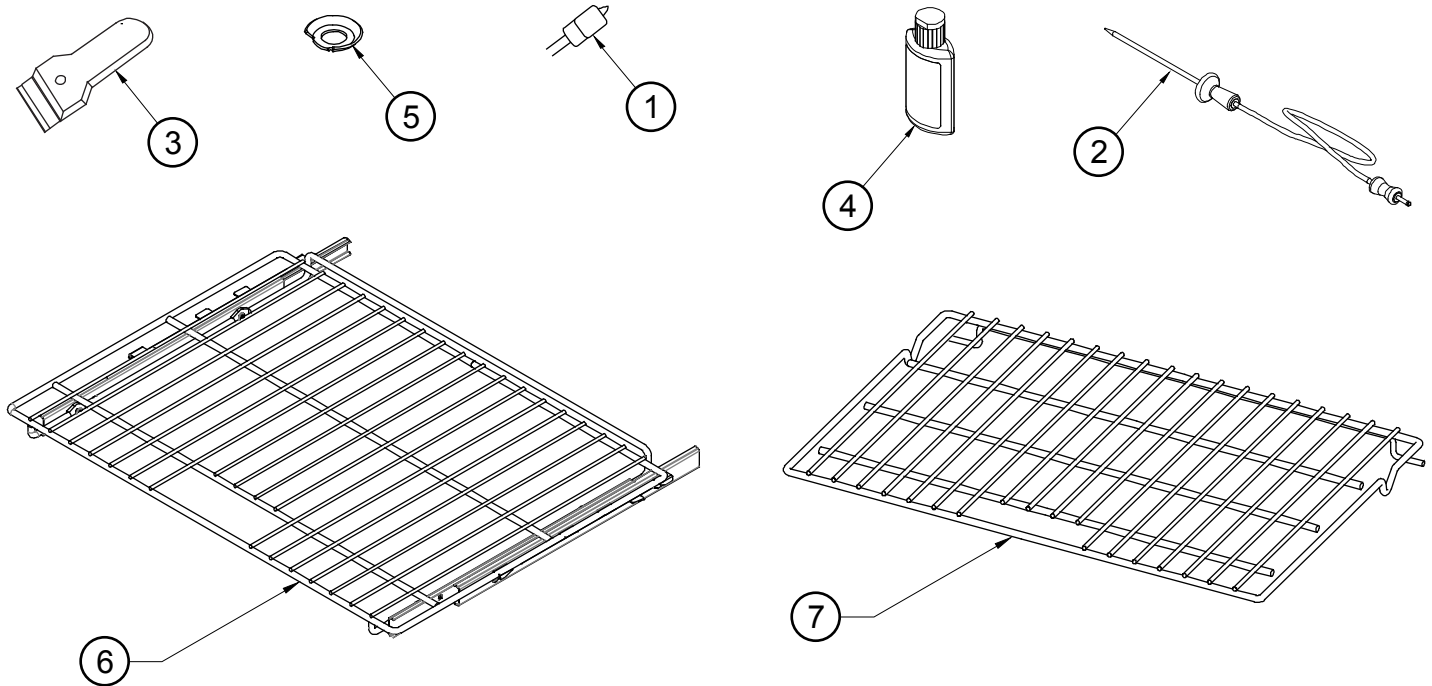

Item	Part #	Description
1	107112	Light Bulb, 120 Vac, 20 Watt
2	72723	Meat Probe
3	82499	Scraper, Ceran
4	A300	Cleaning Creme, Ceran
5	102402	Cup Washer
6	701464	GlideRack Oven Rack
7	106992	Standard Oven Rack