



DE'LONGHI
CA US CG104

| Pos. | Code | Description |
|------|------------|-------------------------|
| 01 | 536335 | LENS |
| 02 | 513080 | LAMP |
| 03 | 5979100300 | PUSH BUTTON COVER BLACK |
| 04 | 5379100900 | PUSH BUTTON COVER BLACK |
| 05 | 5379100000 | PUSH BUTTON COVER BLACK |
| 06 | 7079104000 | PLATE |
| 07 | 7079101000 | HINGE UPPER |
| 08 | 7079101100 | HINGE UPPER |
| 09 | 537419 | HANDLE |
| 10 | 537420 | DOOR |
| 11 | 537418 | HANDLE |
| 12 | 5179100000 | HEATING Element |
| 13 | 7179101000 | PUSH BUTTON COVER BLACK |
| 14 | 7079101200 | HINGE LOWER |
| 15 | 7079101300 | HINGE LOWER |
| 16 | 7079102500 | PUSH BUTTON COVER BLACK |
| 17 | 612023 | SPRING |
| 18 | 622367 | FEELER |
| 19 | 5279100000 | THERMOSTAT |
| 20 | 609247 | PUSH BUTTON COVER BLACK |
| 23 | 5279100100 | FUSE |
| 24 | 612026 | SPRING |
| 27 | 609241 | SPRING |