



**DE'LONGHI**  
**US D14D**

Pos.	Code	Description
03	612011	STOP
05	534703	GASKET
08	7325103500	HANDLE
09	7312576469	BASKET
10	534992	TRAY
11	534993	SUPPORT
12	707885	PAN
13	611780	SPRING
14	611782	PIN
15	737996	CASING
16	536784	HOOK
17	521096	TIMER 20'
18	622269	PROTECTION
19	ES000	*NOT AVAILABLE
20	592751	DOOR
23	7325103100	TIMER BUTTON 20
24	5925101100	PUSH BUTTON BLACK
25	512404	WARNING LIGHT
26	592776	SLIDER
27	5125105200	SWITCH
28	536782	PEDESTAL
29	552583	BOTTOM
30	536256	GEAR
31	521375	THERMOSTAT
32	5325120600	STOPPER
33	535235	TUBE
34	532509	CLIP CLAMP
35	532524	GASKET
36	622063	PIN
37	534574	BUSH
38	ES000	*NOT AVAILABLE
39	532233	RUBBER PAD
40	505946	TCO
41	ES000	*NOT AVAILABLE
44	611779	SPRING