



DE'LONGHI
US D677UX

Pos.	Code	Description
01	5325112900	HINGE LEFT
02	6125102600	SPRING
03	6125101900	PIN
04	6125102500	SPRING
05	5325113000	HINGE RIGHT
06	5325113600	GRID
07	5325114100	COVER
08	6925102800	INNER COVER
09	5325143300	GASKET
10	7025105700	BASKET
11	7325117300	COVER
12	7312570509	BASKET AND HANDLE
13	ES000	*NOT AVAILABLE
14	7325113900	PAN
15	511854	MICROSWITCH
16	5225101300	THERMOSTAT
17	5325120200	GEAR
18	5325120100	LEVER
19	9824800015	CLIP CLAMP
20	536159	TUBE
21	5325120600	STOPPER
22	536330	BRUSH
23	5325114000	SPACER
24	5325113900	SPACER
25	5325104700	SPACER
26	5325146200	CASING
27	5925117400	CONTROL PANEL
28	6125103400	SPRING
29	5325127300	PUSH BUTTON
30	513080	LAMP
31	536685	LENS
32	5325120000	SLIDER
33	6125102900	PIN
34	5925125300	DOOR
35	511816	FUSE
36	5525107300	PEDESTAL
37	5325148100	RUBBER PAD

DE'LONGHI
US D677UX

38	5325106400	BUSH
42	5325115200	GLASS
43	5225102100	CONNECTOR
44	6025105200	PLATE
45	5325148000	SUPPORT
46	5525107400	BOTTOM
47	7312577519	CABLE