



DE'LONGHI
US D895U

Pos.	Code	Description
001	5325112900	HINGE LEFT
002	6125100300	SPRING
003	6125100400	PIN
004	6125103000	SPRING
005	5325113000	HINGE RIGHT
006	5325118900	PUSH BUTTON COVER BLACK
007	ES000	*NOT AVAILABLE
008	5325103500	GLASS
009	ES000	*NOT AVAILABLE
010	5325146700	GASKET
011	7325115400	COVER
012	5325104800	SPACER
013	5325104900	SPACER
014	5325104700	SPACER
016	5525100200	HOOK
017	6125100800	SPRING
018	5325120700	PUSH BUTTON COVER BLACK
019	536330	BRUSH
020	7325112400	PAN
021	5525101300	BLOCK
022	9824800015	CLIP CLAMP
023	536159	TUBE
024	5325120600	STOPPER
025	511816	FUSE
026	6225101200	STOP
027	5525103100	PUSH BUTTON COVER BLACK
028	5325106900	DRAWER
029	611912	SPRING
030	5325106400	BUSH
031	ES000	*NOT AVAILABLE
032	7312576469	BASKET
033	5332285000	COVER
034	5525100800	FILTER
035	5325127200	CONTAINER
036	7312572119	HANDLE
037	5225100700	THERMOSTAT 145
038	5225100200	TIMER

DE'LONGHI
US D895U**D895U**

039	ES000	*NOT AVAILABLE
040	5325104600	PUSH BUTTON
041	5325107000	SUPPORT
042	5325107100	PUSH BUTTON
043	5325102500	KNOB
044	9824800014	CLIP CLAMP
045	5325103900	BUSH
046	5325104000	BUSH
047	5325102600	EXTENSION
048	5125105200	SWITCH
049	513080	LAMP
050	536685	LENS
051	5925106400	DOOR
052	6225101300	FLANGE
053	5325111100	GASKET
054	532524	GASKET
055	622063	PIN
056	532509	CLIP CLAMP
057	9821002346	WASHER
058	9815002086	NUT
059	ES000	*NOT AVAILABLE