



DE'LONGHI
US XA34BL

Pos.	Code	Description
	6918111800	
	709303	ENAMEL PLATE FOR ELECTRIC OVENS
	690083	
	551930	COOKING STONE FOR ELECTRIC OVENS
	7018120500	LECCARDA DIETETICA NERA
	6118105200	SHAPED GRILL
	702399	
001	7018110700	HOUSING
002	690523	REAR PANEL
003	531646	SPACER
004	5518105900	FOOT
005	513148	LAMP
006	690514	SEPARATOR
007	7318130100	CAVITY
008	6918107400	BOTTOM
009	7018102000	FRAME
010	537384	GLASS
011	7118102900	SUPPORT
012	5318101000	GLASS
013	611228	SPRING
014	7318124200	SUPPORT
015	5318107300	HANDLE
016	7318140800	DOOR
017	7018120500	LECCARDA DIETETICA NERA
018	ES000	*NOT AVAILABLE
019	611229	WIRE RACK
021	5318116900	SUPPORT
022	5918125200	CONTROL PANEL
023	5518113900	KNOB
024	5518114000	KNOB 7
025	5518114100	KNOB 120
026	602650	RING
027	5518101000	THERMOSTAT KIT
028	5218102800	TIMER 120
029	5218102400	TIMER 7
030	513080	LAMP
031	6118100000	ROD

DE'LONGHI
US XA34BL**XA34BL**

032	531693	PROTECTION
033	531147	WIRE CLAMP
034	5318102700	GEAR
035	5318125500	EXTENSION
037	535681	LENS
038	ES000	*NOT AVAILABLE
039	ES000	*NOT AVAILABLE
041	531847	RUBBER PAD
042	537004	BUSH
043	6918111800	
044	7018100600	LEVER
045	512113	MICROSWITCH