



Your Solutions Partner

Instruction Sheet

RFHU Power Cord Removal and Installation



TOOLS NEEDED



Phillips Screw Driver



Channel Locks



3/8 Nut Driver

CAUTION: Please read these instructions completely before attempting to install, operate or service this equipment.

 **WARNING for CA residents: go to www.dukemfg.com/prop65 for prop 65 warning**

*This manual is Copyright © 2021 Duke Manufacturing Co. All rights reserved.
Reproduction without written permission is prohibited. Duke is a registered
trademark of the Duke Manufacturing Co.*

**P/N 229349
REV A 06/15/2022**

INSTRUCTIONS

1 Turn off unit and disconnect power cord.


2 Remove side access panel by removing all screws holding panel in place.




4 Using channel locks loosen and move strain relief nut back on wire.



3 A. Using a 3/8 nut driver disconnect the main ground wire.
B. Disconnect the two main wires.

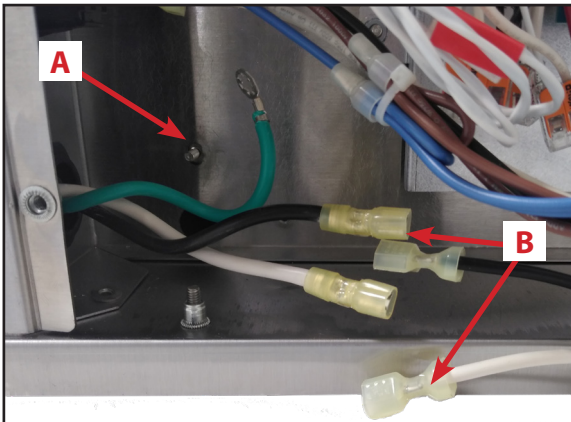

5 Gently pull power cord out from strain relief.

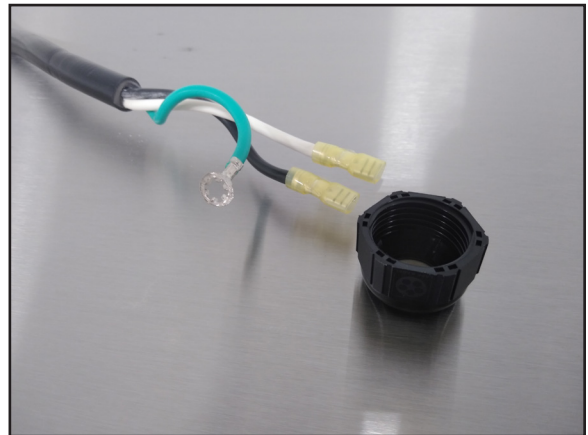

1 Reverse operation to install new or current power cord.

2 Reconnect power cord to power and test unit for proper operation.



Your Solutions Partner

Duke Manufacturing Co.
2305 N. Broadway
St. Louis, MO 63102

Phone: 314-231-1130
Toll Free: 1-800-735-3853
Fax: 314-231-5074

www.dukemfg.com