

Quick Start Guide Model TSC-6/18 Proofer Oven

Row 1: Power On

- Oven Panel (Left):** Touch to turn ON oven. Green dot shows power ON. Oven lights will turn on & the oven will start preheat. Touch to select desired oven recipe.
- Proofer Panel (Right):** Touch to turn ON proofer. Green dot shows power ON. Proofer lights will turn on & the Proofer will start preheat. Touch to select desired proofer recipe.

Row 2: Preheating

- Oven Panel (Left):** Recipe name: OVEN - BREAD. Recipe Temperature: TEMP 350°F. Actual Temperature of oven: ACTUAL 320°F. Blinking PREHEAT message if oven is more than 15°F below the recipe set point. Touch to cancel selected recipe.
- Proofer Panel (Right):** Recipe name: PROOFER - 60 MINUTES. Recipe Temperature: TEMP 105°F. Actual Temperature of proofer: ACTUAL 105°F. Blinking PREHEAT message until proofer reaches recipe set point. 10 minute heat & humidity soak timer begins after reaching set point the first cycle after powering ON the unit. Recipes cannot be started until heat & humidity soak time expires.

Row 3: Starting

- Oven Panel (Left):** Recipe Time: TIME 14:00. Recipe Temperature: TEMP 350°F. START button shows the oven is ready to bake. Touch to start recipe timer after loading. Message if oven door is open: DOOR OPEN. Touch to cancel selected recipe.
- Proofer Panel (Right):** Recipe Time: TIME 1:00. Recipe Temperature: TEMP 105°F. Recipe Humidity with running adjustments (+/-): RH% 80. Start timer for any one or all of the top, middle, or bottom 1/3rd of the proofer after loading trays. Timer shows green button & timer count down when selected.

Row 4: Baking Progress

- Oven Panel (Left):** Adds 1 min. to timer at any point during bake. START button turns green & recipe timer starts counting down with touch. *Cancel with touch & hold for 2 to 3 seconds.* Timer counts down, blinks "0:00" when expired, & sounds alarm. *Stop alarm by touching "0:00" button or opening the oven door.* Window shows progress of bake with a red line.
- Proofer Panel (Right):** Adds another 5 min. to an expired (0:00) timer. 1/3rd timer countdown alarm beeps for load of the next proofer section. Touch to START the timer for the next loaded section. *Stop alarm by touching "0:00" button.* *A running timer can only be canceled by touch & hold of the timer button for 2 to 3 seconds.*

▶ Load the next batch & press START to continue cycles of the same recipe.



Your Solutions Partner

Duke Manufacturing Company

2305 N. Broadway • St. Louis, MO 63102
 1-800-735-3853 • 314-231-1130 • 314-231-5074
www.dukemfg.com

512497B