

# FETCO®

## LUXUS® L4D & L4S Thermal Dispensers User's Guide



**L4D-10**  
1 gallon  
D448



**L4D-15**  
1½ gallon  
D449



**L4D-20**  
2 gallon  
D450

©2017-2020 Food Equipment Technologies-FETCO®  
600 Rose Rd. Lake Zurich, IL 60047-0429 USA  
☎: (800) 338-2699 or (847) 719-3000  
website: [www.fetco.com](http://www.fetco.com) email: [info@fetco.com](mailto:info@fetco.com)  
To purchase products or parts: [orders@fetco.com](mailto:orders@fetco.com)  
For parts or service inquires: [techsupport@fetco.com](mailto:techsupport@fetco.com)  
PATENTED PATENTS: [WWW.fetco.com/patents](http://WWW.fetco.com/patents)

# LUXUS®


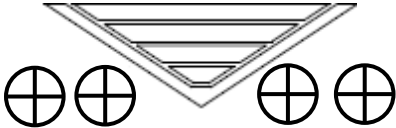
 










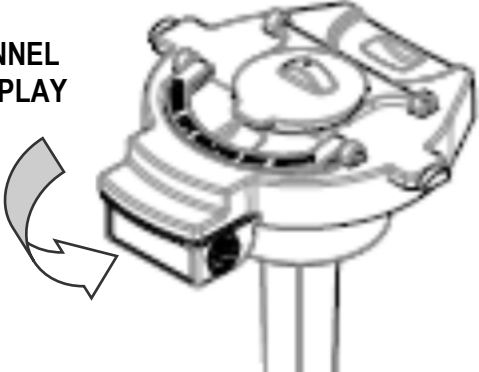






[fetco.com](http://fetco.com)

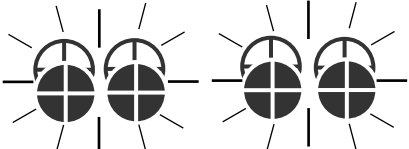

**P157 Rev.:001** January 2020

# BREW FUNNEL DISPLAY

 Freshness Timer®	FETCO indicator funnel	Volume Indicator
Quad icons, each divided into quarter hours segments—The four icons represent a time range of four hours	Blank indicator funnel display is shown, dispenser is "Ready" for brewing	Lower "VEE"+ four upper bars represent 20% increments of fill level of the dispenser
	<b>BLANK: Empty—Ready To Brew</b> 	<b>"READY" TO BREW</b> 
1-15...minute time range	 	<b>Fifth Level-FULL</b> 
16-30...minute time range	 	<b>Fourth Level=80% filled</b> 
<p><b>...Some displays are omitted for clarity</b></p> <p><i>Slowly pulsing display: ...more than 4 hours</i></p>	 <i>...Active On &amp; Off...</i>	<b>Third Level= 60% filled</b> 
<p>Time is reset when dispenser is completely emptied, when funnel is removed, or when enough liquid is added to increase the volume by at least one level</p>	 <b>NO DISHWASHER</b>	<b>Second Level=40% filled</b> 
<p><b>FUNNEL DISPLAY</b></p> 	 <b>NO MICROWAVE</b> <i>Clean and dry funnel by hand only</i>	<b>First Level=20% filled</b>  <b>DISPENSER EMPTY</b> 

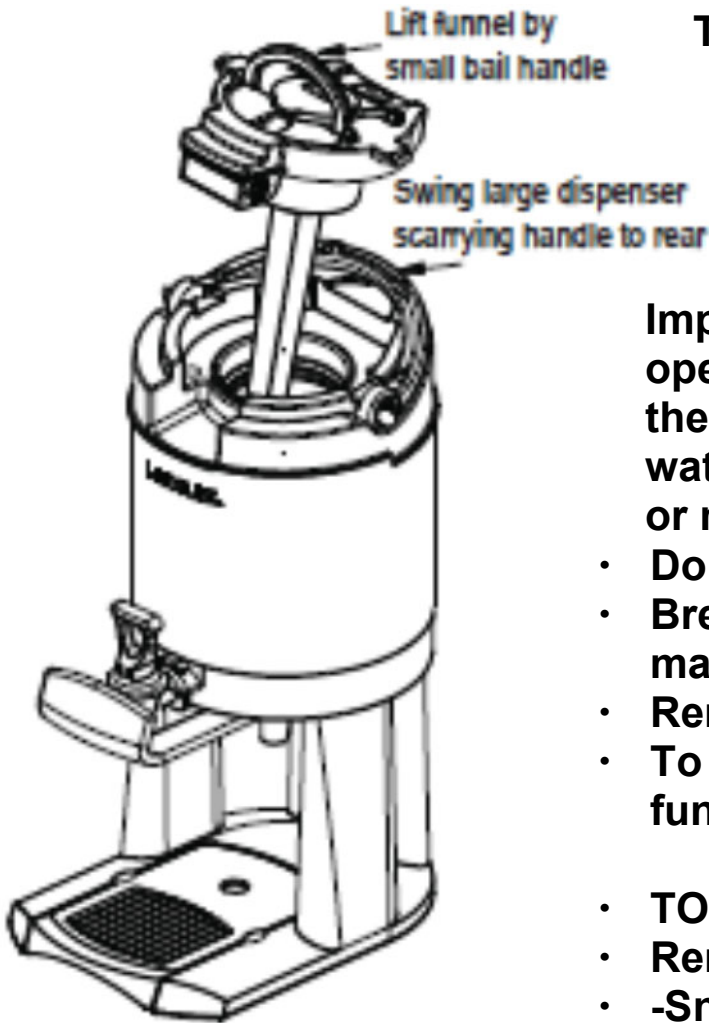

## TO REMOVE FUNNEL ASSEMBLY

### NOTE:

- NEVER carry dispenser by the bail handle
- Swing large carrying handle to rear
- Lift funnel by small bail handle



**Important Notice:** To maintain proper operation of the funnel display, clean the funnel stem daily under running water with detergent and sponge, or non-abrasive pad or towel.

- Do not submerge
- Brew funnel must be removed for manual filling of dispenser.
- Removing the funnel resets timer.
- To extend battery life, remove the funnel when not in use.

(Battery cannot be replaced.)

- **TO ACCESS BREW FUNNEL**
- Remove both plug and bail handle
- -Snap cover out at OPEN hinge knuckle
- -Squeeze funnel bail inward at knuckles to remove

## Maintaining The L4 Funnel

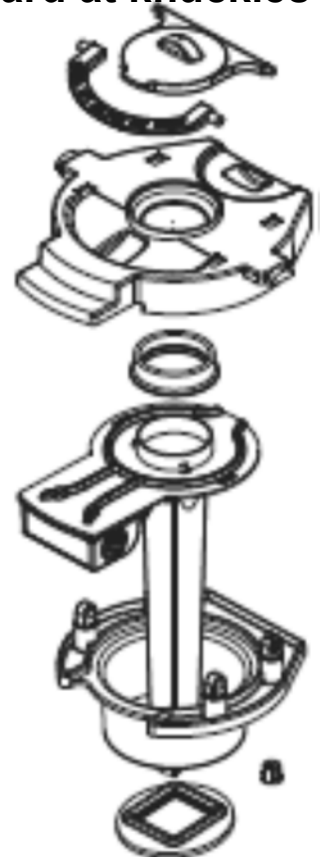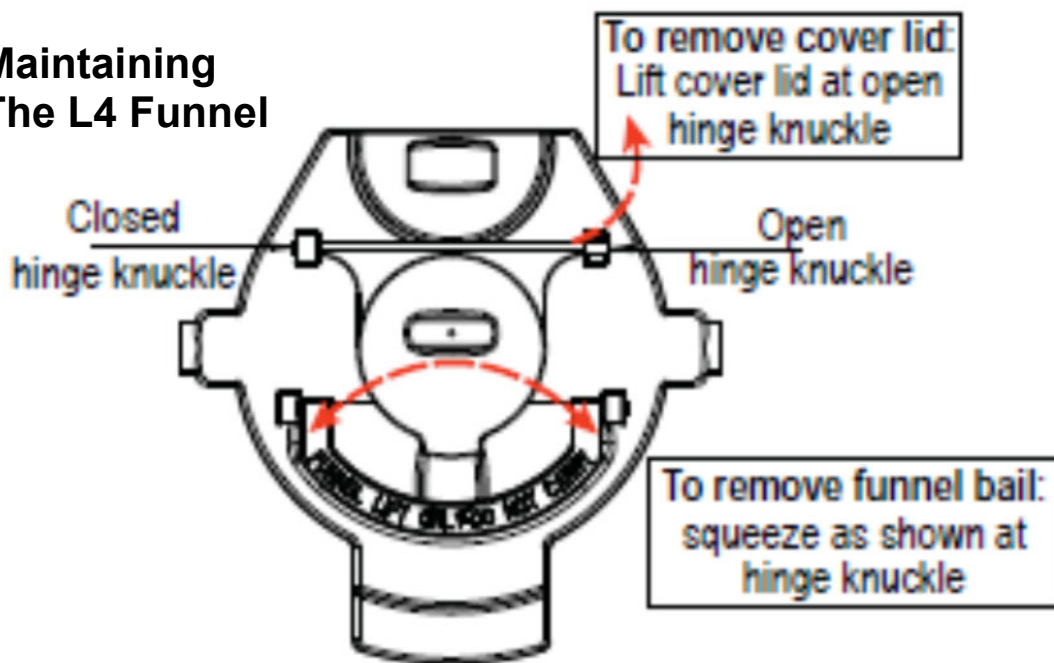

## IMPORTANT SAFEGUARDS

- ▶ To prevent overflows, make sure the dispenser is completely empty before brewing.
- ▶ Always remove the funnel for manual filling of the dispenser.
- ▶ Use only the large handle to lift or carry the dispenser.
- ▶ NEVER use the small funnel bail to lift or carry the dispenser
- ▶ Do not use the faucet guard to pull or lift the dispenser.
- ▶ Do not submerge the brew funnel
- ▶ Do not use bleach or cleaners containing chlorides.
- ▶ Do not use solvent based cleaner or polish on this equipment
- ▶ Never use a cleaner on any food equipment that contains the solvent diethylene glycol butyl ether (DGBE) .
- ▶ Use only non-metallic brushes and non-abrasive cleaning pads.

## CLEANING AND MAINTENANCE

Detailed instructions are available on our web site, [www.fetco.com](http://www.fetco.com).

Daily:



***Important Notice: To maintain proper operation of the funnel display, clean the funnel stem daily under running water with detergent and a non-abrasive sponge or towel.***

**DO NOT SUBMERGE FUNNEL OR DISPENSER.**


- ▶ Use any commercial beverage urn cleaner to clean the inside of the dispenser. Follow the cleaner manufacturer's instructions. Make sure to thoroughly rinse the dispenser after cleaning.
- ▶ Wash the drip tray and other plastic parts with dish detergent. Avoid abrasives.
- ▶ To sanitize the dispenser before filling, brew a batch of water only (no coffee) into the dispenser and allow it to rest for 10 minutes.

Weekly, or as needed:

- ▶ Remove the faucet upper assembly and inspect the seat cup for wear. Clean or replace if necessary.

# Accessing Dispenser Parts


## REMOVING THE DRIP TRAY

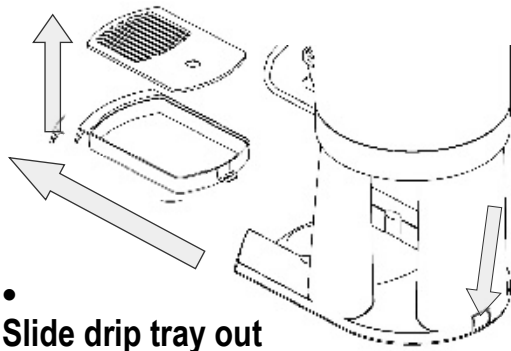


• Slide drip tray out

## REMOVING THE FAUCET GUARD


- 1) Unscrew knob approximately four turns
- 2) Slide faucet guard out.

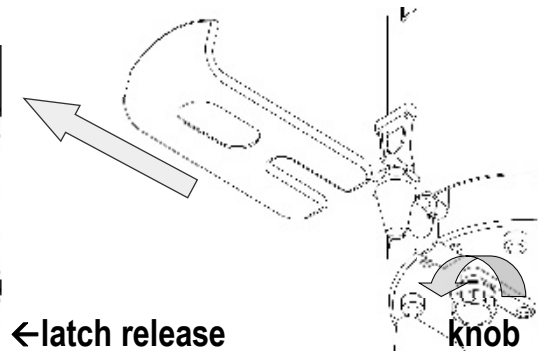


## REMOVING THE FAUCET

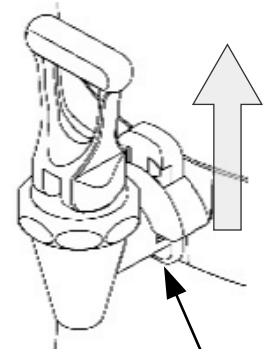


Press faucet release latch up.

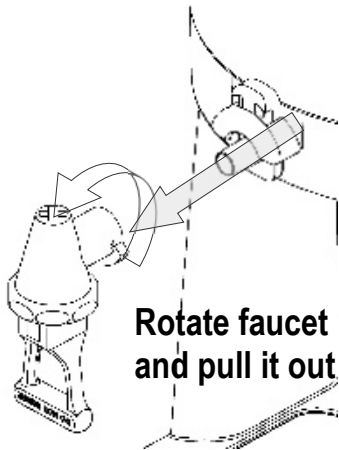

Rotate faucet 180° and pull it out

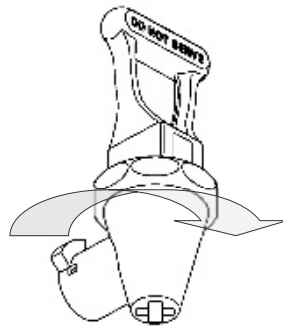


Unscrew faucet upper assembly to clean or replace seat cup. Hand tighten only!

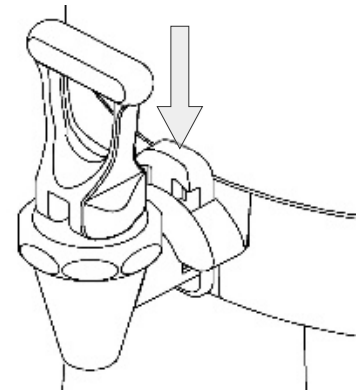


Reverse procedure to re-install faucet. Press release latch down to lock faucet into place--!!Click!! Last: Reinstall faucet guard

# Replacement Parts

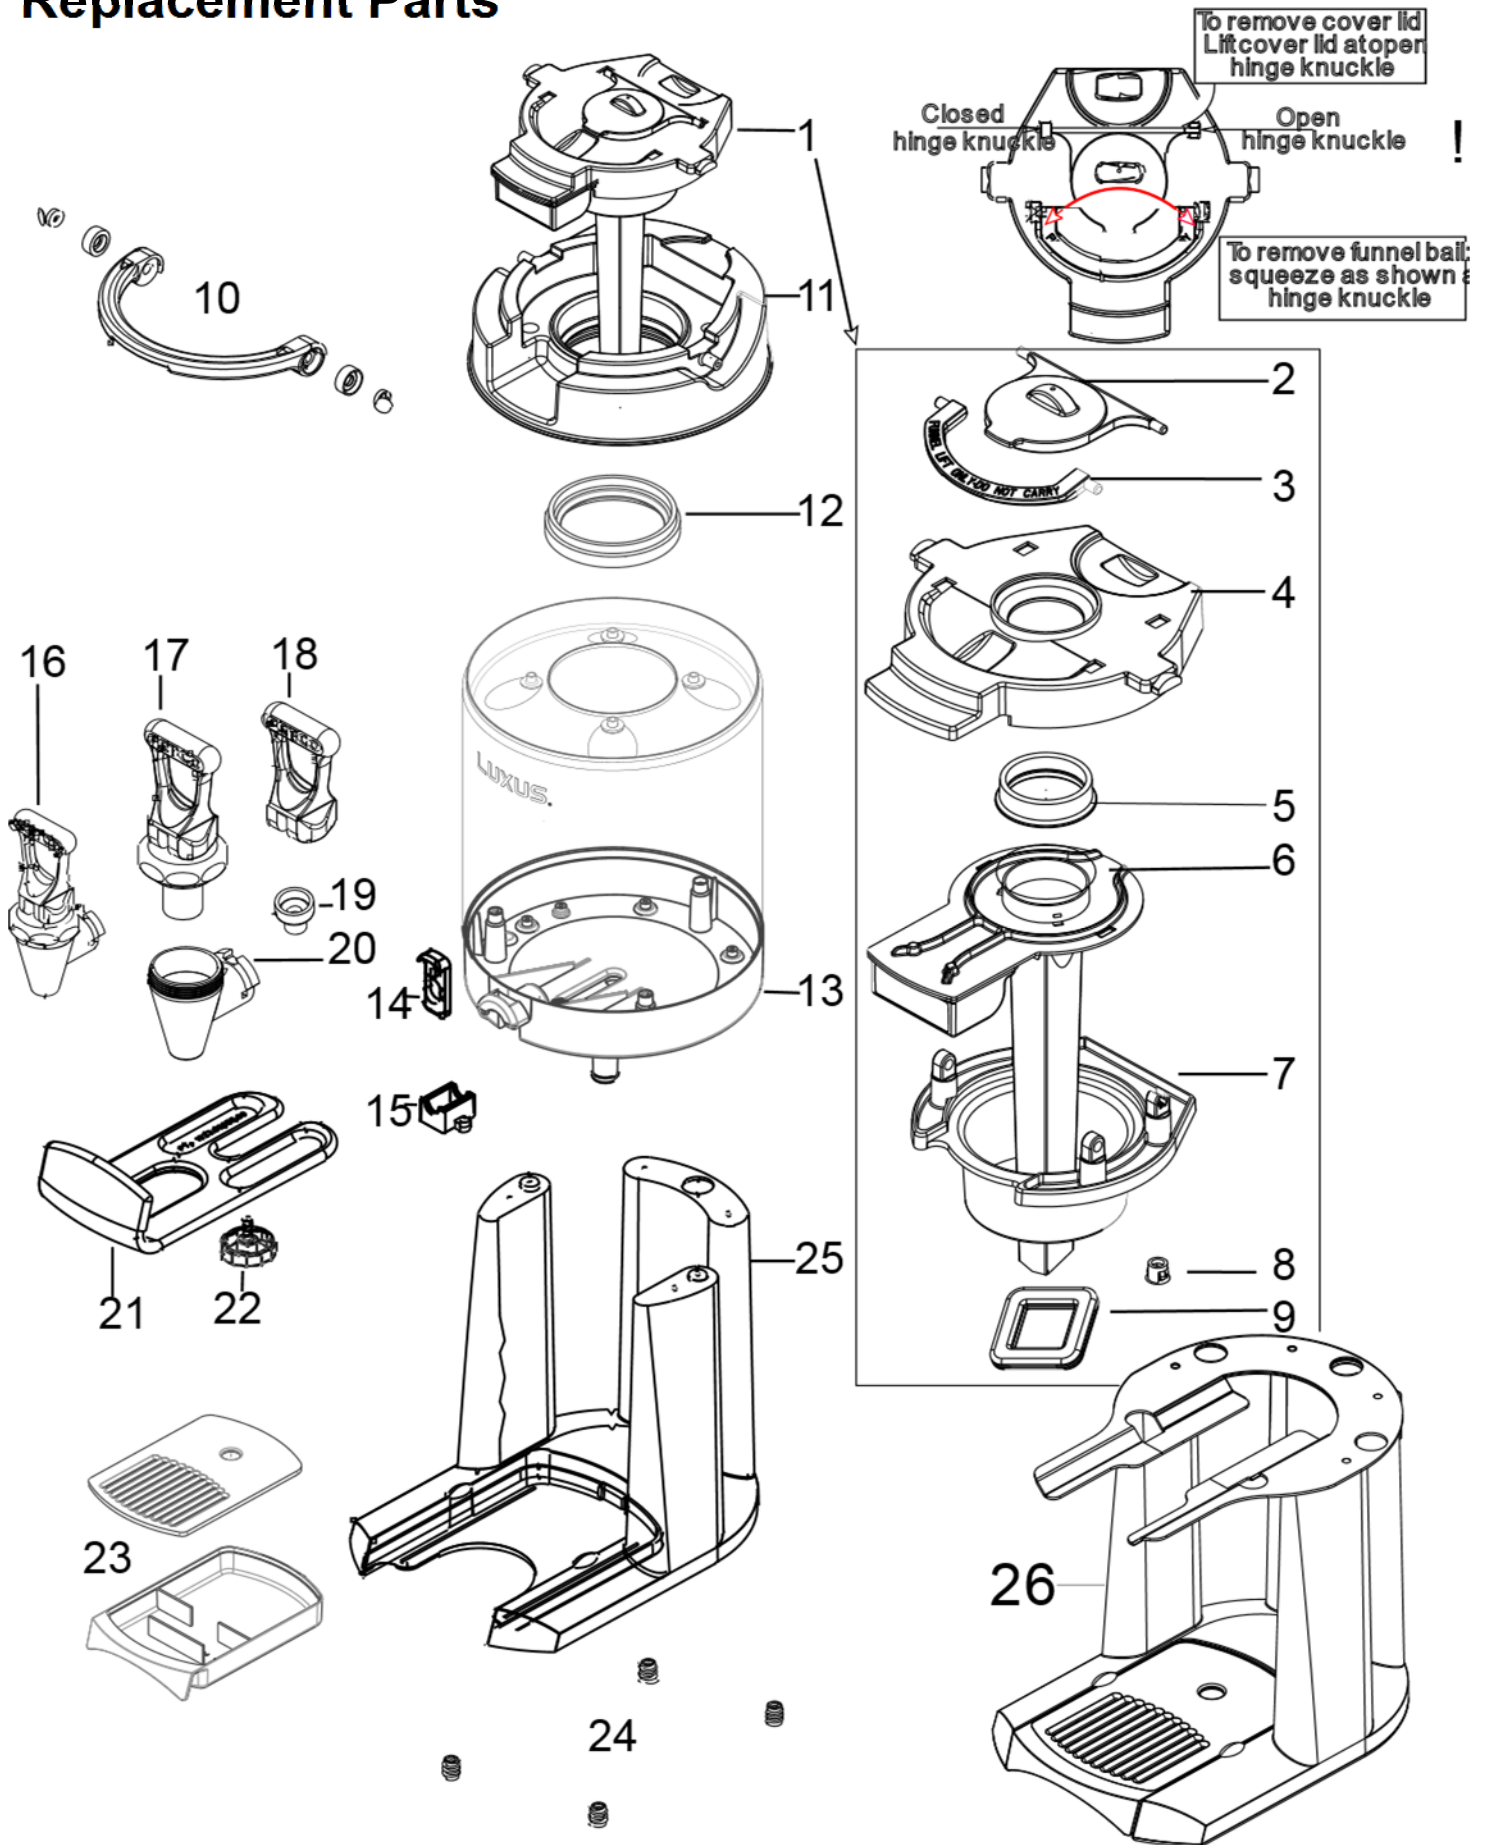

#	Description	L4D10 & L4S10	L4D15 & L4S15	L4D20 & L4S20
1	Funnel Assembly complete Black plug 1.0	1102.00350.BK		
1	Funnel Assembly complete Grey plug 1.0	1102.00350.GY		
1	Funnel Assembly complete Black plug 1.5		1102.00347.BK	
1	Funnel Assembly complete -Grey plug 1.5		1102.00347.GY	
1	Funnel Assembly complete Black plug 2.0			1102.00366.BK
1	Funnel Assembly complete -Grey plug 2.0			1102.00366.GY
2	Plug Cover - Gray [GR]	1023.00277.GY	1023.00277.GY	1023.00277.GY
2	Plug Cover - Black [BK]	1023.00277.BK	1023.00277.BK	1023.00277.BK
3	Funnel Bail Handle	1023.00278.00	1023.00278.00	1023.00278.00
4	Funnel Top Cover	1023.00283.00	1023.00279.00	1023.00279.00
5	Funnel Top Gasket	1029.00014.00	1029.00016.00	1029.00016.00
6	Indicator Funnel (L410)	1102.00142.00		
6	Indicator Funnel (L4S/L4D 15)		1102.00149.00	
6	Indicator Funnel (L4S/L4D 20)			1102.00175.00
7	Funnel Cup (L410; L4S/L4D 15/20)	1023.00285.00	1023.00281.00	1023.00281.00
8	Funnel Plug	1029.00010.00	1029.00010.00	1029.00010.00
9	Funnel Bottom Gasket (L410; L4S/L4D 15/20)	1029.00013.00	1029.00015.00	1029.00015.00
10	Handle With Hardware (L410; L4S/L4D 15/20)	1000.00111.00	1000.00112.00	1000.00112.00
11	Top L4D (L4S/L4D 15/20)	1023.00286.00	1023.00282.00	1023.00282.00
12	Neck Gasket	1024.00070.00	1024.00070.00	1024.00070.00
13	Bottom (L410; L4S/L4D 15/20)	1102.00363.00	1102.00361.00	1102.00361.00
14	Faucet Lock	1023.00069.00	1023.00069.00	1023.00069.00
15	Insert, Bottom	1023.00083.00	1023.00067.00	1023.00067.00
16	Faucet Assembly Complete	1102.00055.00	1102.00055.00	1102.00055.00
17	Faucet Upper Assy Black (Standard)	1071.00020.00	1071.00020.00	1071.00020.00
*17B	Faucet Upper Assy Orange Handle "DECAF"	1071.00030.00	1071.00030.00	1071.00030.00
*17C	Faucet Upper Assy Green Handle	1071.00031.00	1071.00031.00	1071.00031.00
*17D	Faucet Upper Assy Blue Handle	1071.00032.00	1071.00032.00	1071.00032.00
18	Faucet Handle, Black (Standard)	1071.00022.00	1071.00022.00	1071.00022.00
* 8B	Faucet Handle, Red "HOT WATER"	1071.00040.00	1071.00040.00	1071.00040.00
19	Faucet Seat Cup	1071.00013.00	1071.00013.00	1071.00013.00
20	Faucet Housing Assy	1000.00012.00	1000.00012.00	1000.00012.00
21	Faucet Guard (L410; L4S/L4D 15/20)	1023.00076.00	1023.00055.00	1023.00055.00
22	Knob & Washer (Faucet Guard)	1000.00010.00	1000.00010.00	1000.00010.00
23	Drip Tray Assy (L410; L4S/L4D 15/20)	1000.00013.00	1000.00014.00	1000.00014.00
24	Anti-Slip Foot	1024.00069.00	1024.00069.00	1024.00069.00
25	Stand Assy (L410; L4S/L4D 15/20)	1000.00015.00	1000.00016.00	1000.00016.00
26	Stand Assy (L410; L4S/L4D 15/20) Single	A14700000	A15000000	A15000000
*26B	Stand Assy (L410; L4S/L4D 15/20) Twin	A14800000	A15100000	A15100000
*26C	Stand Assy (L410; L4S/L4D 15/20) Triple	A14900000	A15200000	A15200000

\* (NOT SHOWN)

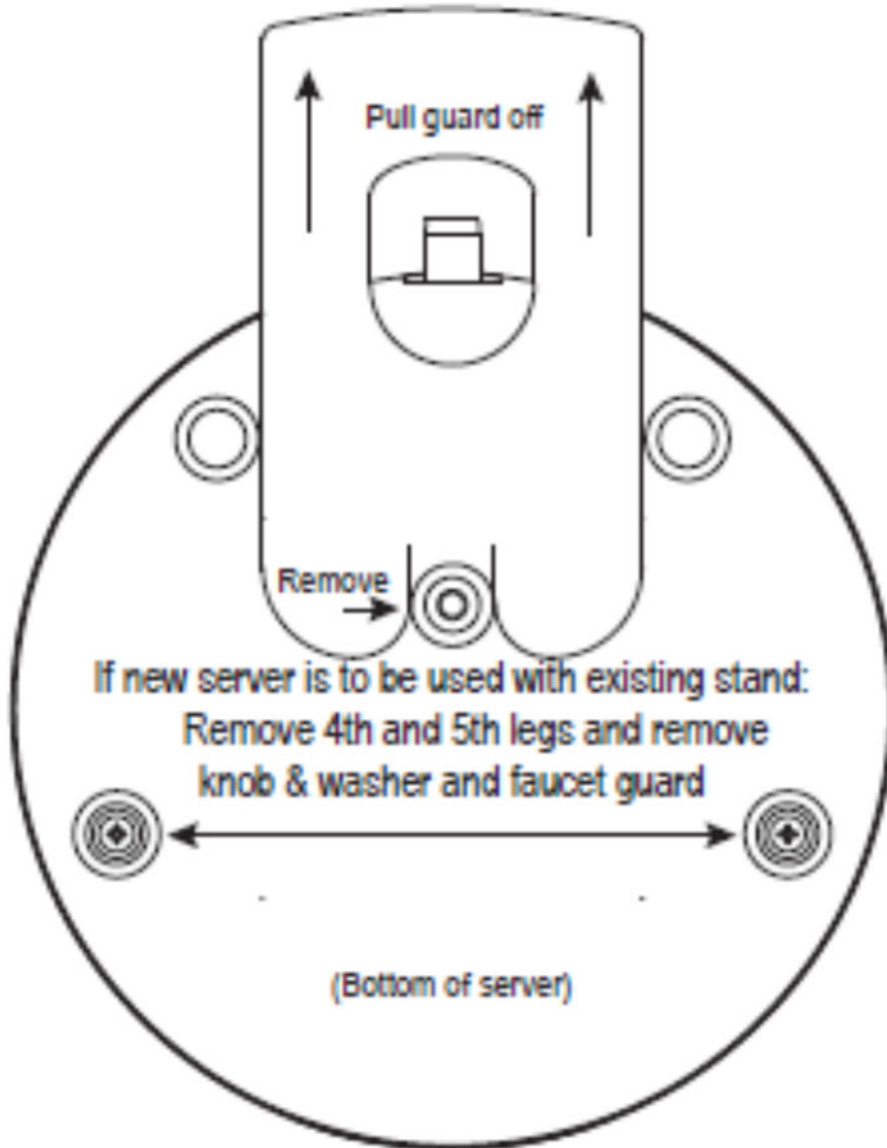

**LUXUS®**