

[Click Here](#)



Frigidaire gallery washer gltf2940fs operating manual

Frigidaire model gltf2940fs1. Gltf1040as0 manual. Frigidaire gltf2940fs1 manual. Gltf2940fs2 manual. Frigidaire gltf2940fs2 manual.

Page 22This guide provides general operating instructions for your washer, as well as information about features for other models. However, your washer may not have every feature mentioned here. Use only your washer in accordance with this guide and the included operating instructions. A pedestal accessory, specifically designed for your washer, is available to elevate it for easier use. Failure to use certified accessories could result in injury, damage, or harm to your washer. IMPORTANT SAFETY INSTRUCTIONS follow on pages 3-4. Washing Procedures are outlined from page 4-6, while Stain Removal techniques can be found on page 6-7. Common Washing Problems and their solutions are discussed on page 8, followed by Care and Cleaning instructions on page 9. Avoid Service Checklist is provided on page 10, along with Warranty information on page 11. Français translation can be found from page 12-22. Read all instructions before using your washer. This guide contains valuable information about • operation • care • service. Keep it in a safe place and record your Model and Serial Numbers. The model and serial numbers are located on the washer serial plate inside the door opening. Record and retain these numbers. Model Number _____ Serial Number _____ Purchase Date _____ Disposal of this product is critical for environmental and human health safety. Ensure you properly dispose of it by handing it over to a recycling collection point for electrical and electronic equipment. For more information, contact your local city office, household waste disposal service or the shop where you purchased the product. Your safety and the safety of others are crucial. Always read and obey important safety messages throughout this guide, operating instructions, installation instructions and on your appliance. Symbol Alert: Hazardous Conditions Ahead Safety alerts will be accompanied by the warning symbol and words "DANGER" or "WARNING". These signals indicate that following instructions is crucial to avoid severe consequences. **Critical Safety Instructions** Failure to comply with these warnings may result in serious personal injuries. Some key precautions include: - Avoid washing items previously cleaned, soaked, or spotted with gasoline, cleaning solvents, kerosene, cooking oils, waxes, etc. - Do not store these hazardous substances near the washer as they can ignite vapors or cause chemical reactions. - Never put oily rags or clothing on top of the washer, as they can also ignite. - Refrain from adding flammable substances to wash water, as they can ignite or explode. - When using a hot water system that hasn't been used for 2 weeks, turn on all faucets and let water flow for several minutes before washing. **Protect Children** - Keep children away from the washer at all times under close supervision. - Teach children safe appliance usage as they grow older. - Dispose of packaging materials after unpacking the washer to prevent accidental entrapment or misuse. **Prevent Shock Hazard and Ensure Stability** - Install the washer according to local codes, with a qualified service person who follows proper grounding procedures. Refer to installation instructions for guidance. - Move the washer to a new location and have it reinstalled by a qualified service person if necessary. - Always plug the electrical power cord into a properly grounded and polarized 3-prong outlet to prevent personal injury or damage to the washer. Never connect washing machine directly to gas pipe. Don't use extension cords or adapters, as specified on the label. Follow instructions when using laundry products - incorrect usage can release deadly gases and cause severe injury or death. Combine different products only in one load if explicitly stated on the label. Never mix chlorine bleach with ammonia or vinegar. To prevent serious damage to the washer and personal injury: Hire a certified technician for any repairs unless recommended in this manual. Use genuine parts only. - Don't tamper with controls. - Avoid exposing the washer to weather conditions. - Install the washer on a solid floor, possibly reinforcing it to prevent vibration. Items that are heavier than usual can cause an unbalanced load in the washer. To balance the load, add 1 or 2 similar items to it. Some heavy items like bedspreads should be washed separately from other clothes. Do not pack clothes tightly together as this may cause a blockage in the washer. The door should close easily and not make any loud noises. The washer should never be used near water or exposed to electrical shocks. Never use an adaptor plug, extension cord, or remove the grounding prong from the power cord as this can cause serious injury, fire or death. # Adjust washer settings according to water temperature, hardness, load size, and soil level for best results. Avoid oversudsing. To remove stains: 1. **Food-based stains**: Apply prewash stain remover or non-flammable dry cleaning fluid. For tougher stains, use a product containing enzymes and soak for 30 minutes or more. Wash using cold water and bleach-safe fabric. 2. **Ink-based stains**: Scrape off surface wax, then apply prewash stain remover or rub with bar soap. Wash using bleach-safe fabric. 3. **Wax-based stains**: Place stain face down between paper towels, press with warm iron until absorbed. Replace towels frequently. Treat remaining stain with prewash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent. 4. **Tar-based stains**: Apply non-flammable dry cleaning fluid to the back of the stain. Replace towels under stain frequently. Rinse thoroughly and wash using hottest water safe for fabric. 5. **Ink-based stains (some may be impossible to remove)**: Use prewash stain remover, denatured alcohol, or non-flammable dry cleaning fluid. Wash with chlorine bleach if fabric allows or soak in oxygen bleach and hot water before washing. 6. **Mildew-based stains**: Brush off dry mud, then pretreat or soak with product containing enzymes. Pretreat with prewash stain remover and wash using bleach-safe fabric. 7. **Paint-based stains**: Rinse fabric in cool water while stain is wet. Wash once paint is dry, cannot be removed. Oil-based and varnish stains require a solvent recommended on the can label. 8. **Baby formula, dairy products, egg, adhesive tape, chewing gum, rubber cement**: Treat these stains with prewash stain remover or non-flammable dry cleaning fluid. Remember to avoid leaving the washer door open as it may entice children. Apply ice, scrape off excess, and place stain face down on paper towels before treating. Always follow the manufacturer's instructions for any cleaning products used. Common Fabric Stains and How to Remove Them When preparing wash load don't overload washer. Use correct temperature and amount of detergent, water and wash time. Add fabric softener in washer to lubricate fibers. When ironing use spray starch or fabric finish on collars and cuffs. Turn items inside out to reduce abrasion. Increase water temperature using hottest water safe for fabric. Use liquid detergent or nonprecipitatin water conditioner with granular detergent. Remove items from washer as soon as cycle is completed. Use liquid fabric softener. Select correct wash cycle and use correct amount of detergent. Wash synthetics frequently using hot or warm water. Use nonprecipitatin water softener. Before washing, run hot water for a few minutes to clear lines. Drain water heater occasionally. For an ongoing problem install iron filter in your water supply system. If the door or console becomes stained, clean with diluted chlorine bleach [1/2 cup (120 ml) in 1 quart (.95 L) water]. Rinse several times with clear water. Remove glue residue from tape or labels with a mixture of warm water and mild detergent. Or, touch residue with the sticky side of the tape or label. When cleaning chrome parts use Windex with ammonia or any of the cleaning items mentioned for cleaning the cabinet. Before moving the washer, place a strip of cardboard or thin fiberboard under the front leveling legs to prevent floor damage. Washer Troubleshooting Guide: If power outage occurs, reset circuit breaker or replace fuse; do not increase fuse capacity. Have electrician correct circuit overload, call local electric company for power outage. Turn on water supply faucets if they are off. Washer motor stops when overheated; automatically restarts after 30 minutes. Close dispenser drawer, washer door, and check load size. Add items to balance small loads or heavily soiled items. Check drain hose straightness, water supply pressure, and faucet openings. Avoid using hot water elsewhere while washing, ensure hot water heater temperature is adequate. Check for kinked water inlet hoses, loose fill hose connections, and wrong detergent usage. Run rinse cycle with low-sudsing detergent if necessary. Verify correct water supply connections, drain hose standpipe height, and house drain pipe clog clearance. Warranty Exclusions: 1. Products with altered or unreadable serial numbers. 2. Transferred products. 3. Abused or neglected products. 4. Products not installed according to instructions. 5. Consumable parts and normal wear and tear. Warranty Exclusions: 1. Transfer of ownership: If the original owner sells the appliance to another party outside the USA or Canada. 2. Rust on interior or exterior surfaces of the unit. 3. Products sold "as-is" are not covered by this warranty. 4. Food loss due to refrigerator or freezer failures. 5. Commercial use of appliances. 6. Service calls for non-malfunction issues, such as incorrect installation or usage instructions. 7. Costs related to making appliances accessible for servicing, like removing trim or cabinets. 8. Service calls for replacing light bulbs, air filters, water filters, knobs, handles, or other cosmetic parts. 9. Surcharges for after-hour, weekend, holiday, toll, ferry trip, or mileage expense service calls to remote areas. 10. Damage caused by unauthorized services, non-genuine parts, or external factors like abuse, accidents, fires, or acts of God. 11. Claims based on implied warranties, including merchantability and fitness for a particular purpose, are limited to one year. Electrolux contact information for US and Canadian customers: - United States address: America P.O. Box 212378 in Augusta, GA 30907 - Toll-free phone number for the US: 1.800.668.4606 - Address for Electrolux Canada Corp.: 5855 Terry Fox Way in Mississauga, Ontario L5V 3E4