

Quick Start Guide for the **GSP30B** Scale

SLP-V Lite Scale and PC Label Cataloging & Printing Program



Serial #: _____

*This software program will work for
Globe **GSP30B** Scales with
serial number 100128507 and above.*

IMPORTANT INFORMATION:

Owners should ensure that no customers, visitors or other unauthorized personnel come in contact with this equipment. Please remember that Globe cannot anticipate every circumstance or environment in which its equipment will be operated. It is the responsibility of the owner and the operator to remain alert to any hazards posed by the function of this equipment. If you are ever uncertain about a particular task or the proper method of operating this equipment, ask your supervisor.

System Requirements: PC based machine operating on Windows 7, 8.1, 10, or XP Professional, or Vista (XP Home edition is not supported). A Pentium II or later CPU with 256MB or more memory is recommended. The system requirements depend on factors such as the size of the database (number or PLUs ect.) and number of simultaneous users. If installing at a large site, selection of a server machine with larger memory size and more powerful CPU than listed above is strongly recommended for satisfactory performance. Select the Windows icon in the bottom left corner of your screen, right-click "Computer", then select "Properties". Under System Type, it will list your operating system.

Microsoft Windows is a registered trademark of Microsoft Corporation.

For Service

1. Visit our website at www.globefoodequip.com
2. Or call the Globe Service Department at 937-299-8625 and ask for contact information for your local service company.

Visit our website for information on additional products available from Globe.

www.globefoodequip.com

Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers & Scales



Quick Start Guide - PC & Scale Set Up

The **GSP30B** with SLP-V Lite is supplied with the components listed below. Ensure that your PC meets the System Requirements according to those listed on the front page of this Quick Start Guide and that all of the items listed below are available prior to beginning this installation.

- **GSP30B** Scale
- This Quick Start Guide for the **GSP30B** Scale
- Instruction Manual for Globe Label Printing Scale (supplied with the scale)
- SLP-V Lite Software User Guide for Globe Label Printing Scale
- Globe SLP-V Lite Software

Transfer ScaleLink Pro 5 Lite Software Scale Data to the **GSP30B** Scale with USB Flash Drive:

A USB Flash Drive (not supplied) can be used to transfer ScaleLink Pro 5 Lite software scale data to the **GSP30B** scale without a PC or Network connection.

1. Refer to Quick Start Guide - PC & Scale Set Up, Install SLP5Lite for the First Time to install the ScaleLink Pro 5 Lite software.
2. Open ScaleLink Pro 5 Lite software to create PLUs, UNI-3 Presets, Store Settings, ect. Refer to SLP-V Lite Software User Guide for Globe Label Printing Scale for instructions on how to use the ScaleLink Pro 5 Lite software.
3. Once PLUs, UNI-3 Presets, Store Settings, ect. are created within the ScaleLink Pro 5 Lite software, it is possible to transfer scale data to scales not connected to a PC or Network with the use of a USB flash drive. Refer to SLP-V Lite Software User Guide for Globe Label Printing Scale, ScaleLink Pro 5 Lite, Send and Receive, Export to CSV in Scale Format for instructions on how to transfer scale data with a USB flash drive.

Connect **GSP30B** Scale to a PC (without Network Connection):




DO NOT update PC Network settings without the help of your system administrator.


PC Setup:

NOTE: Two fixed IP addresses are required. One for the scale and one for the PC. Also required, is the subnet mask, default gateway and the preferred DNS server addresses.


1. Contact your system administrator to gain access to two unique IP addresses.
2. Select Start Menu.
3. Select Control Panel.
4. Select "Network and Sharing Center" from Control Panel.
5. Select "Local Area Connection."

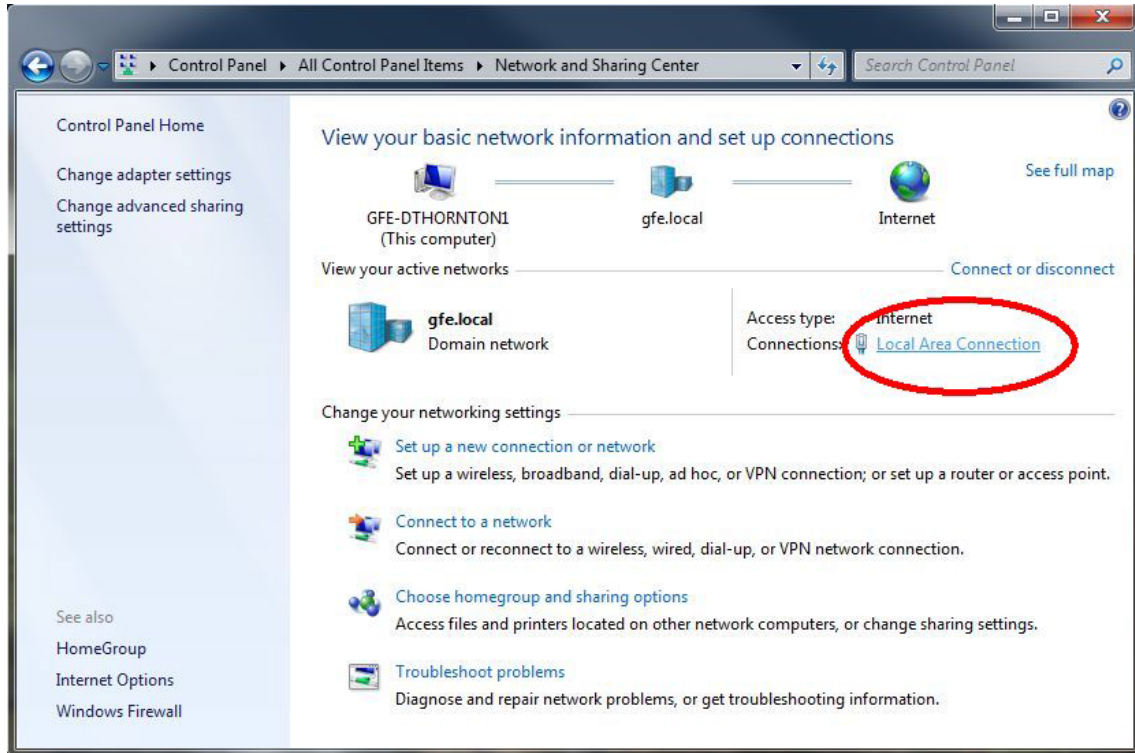



6. Select Properties.
7. Select Internet Protocol Version 4 (TCP/IPv4) and Properties.

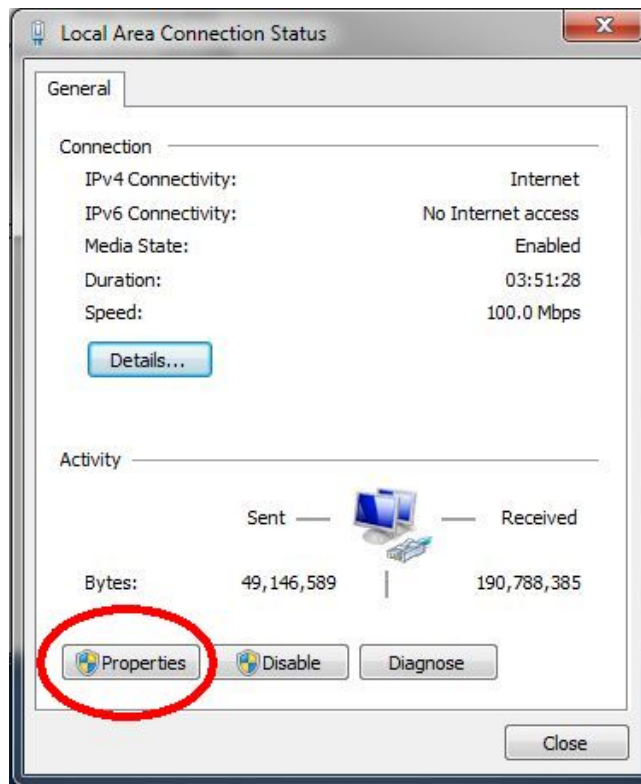

8. Select "Use the following IP address."

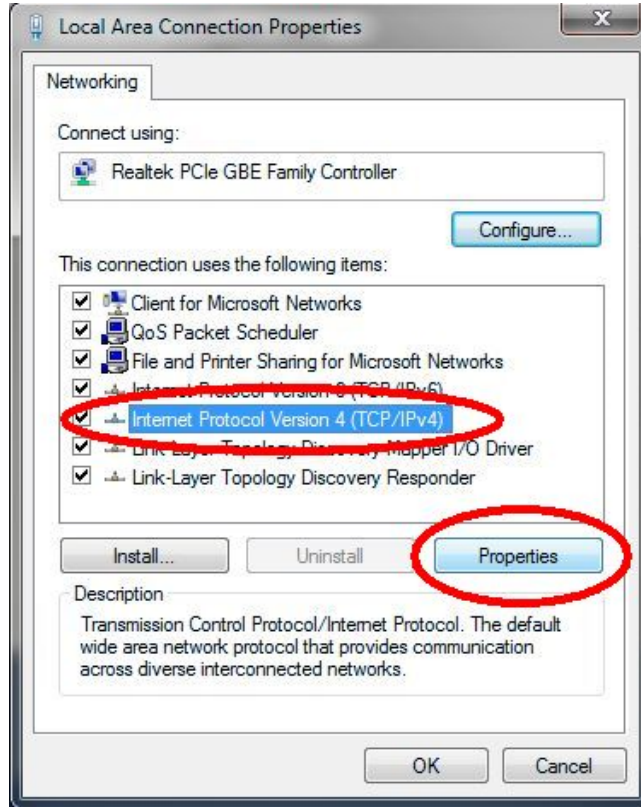

9. Enter the IP address, Subnet mask and Default gateway information obtained by your system administrator.

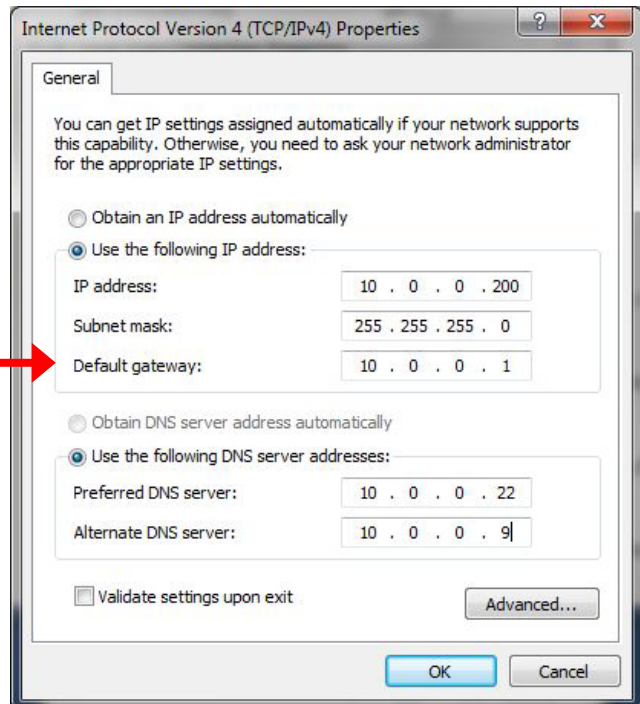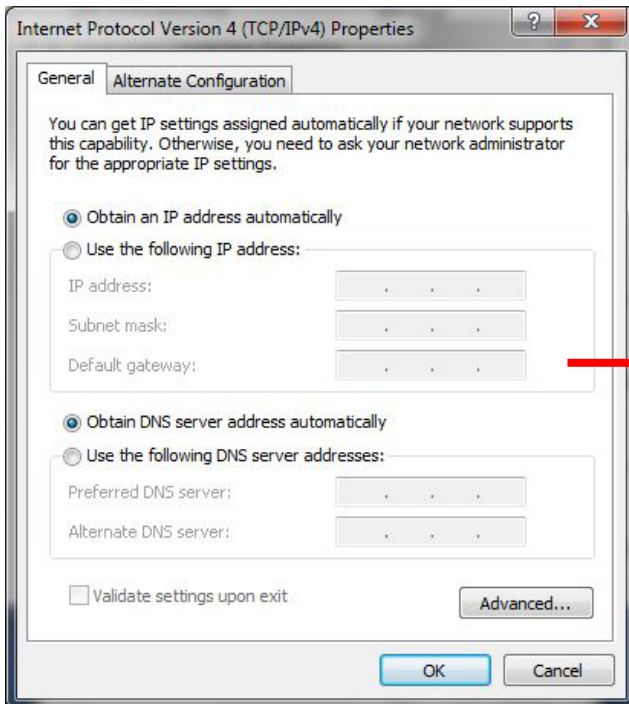

10. Select OK to close the Internet Protocol Version 4 (TCP/IPv4) Properties menu.

11. Select Close to close the Local Area Connection Properties menu.

12. Select Close to close the Local Area Connection Status menu.



Scale Setup:

1. Key in 6000 and press the Mode key. The display will show: < B00 SETUP >
2. Key in 495344 and then press the PLU key. The display will not change.
3. Press ENTER key. Display will show: B01 MACHINE No. [COMMS]
4. Press ENTER key. Display will show: B01-01 < BASIC >
5. Press the → key. Display will show: B01-02 < IP ADDR >
6. Press ENTER key. Display will show: B01-02-01 #.##.##
7. Key in the unique IP address given by the system administrator FOR THE SCALE or key in as the example below. Ignore the decimals and make sure all digits including the preceding zeros are entered. Example: With IP address 10.0.0.234, type in 010000000234.
8. Press ENTER key twice. Display will show: B01-02-02 255.255.255.0
9. If this matches the subnet mask of your network, press ENTER once. Otherwise key in the correct subnet mask, ignoring the decimals and making sure all digits including the preceding zeros are entered, press ENTER twice. Display will show: B01-02-03 #.##.##
10. Key in the default gateway, ignoring the decimals. Make sure all digits including preceding zeros are entered.
11. Press ENTER key three times. Display will show: B01-02 < IP ADDR >
12. Press the → key. Display will show: B01-03 < PC COM >
13. Press ENTER key. Display will show: B01-03-01 #.##.##
14. Key in the unique IP address given by the system administrator FOR THE PC or key in as it was entered in the Internet Protocol Version 4 (TCP/IPv4) properties menu on your PC. Ignore the decimals and make sure all digits including the preceding zeros are entered. Example: With IP address 10.0.0.200, type in 010000000200.
15. Press ENTER key twice. Display will show: B01-03-02 PORT NO 8071
16. Press MODE key three times to return to normal operations.
17. For SLP-V Lite PC to scale communication setup, refer to page 20 of the quick start guide and page 23 of the SLP-V Lite Scale and PC Label Cataloging & Printing Program.

Connect Scale to PC:

To use ScaleLink Pro 5 software with the **GSP30B** scale, an Ethernet Cable (not supplied) is required to connect the **GSP30B** Scale to a PC.

1. With the **GSP30B** scale turned off, attach one end of the Ethernet Cable to the LAN port on the left side of the scale and the other end to the back of the PC.
2. Turn on the power to the **GSP30B** Scale.
3. Refer to Quick Start Guide - PC & Scale Set Up, Install SLP5Lite for the First Time to install the ScaleLink Pro 5 Lite software.
4. Refer to SLP-V Lite Software User Guide for Globe Label Printing Scale for instructions on how to use the ScaleLink Pro 5 Lite software.

Connect the **GSP30B** Scale to a Network:




DO NOT update PC Network settings without the help of your system administrator.

PC Setup:


NOTE: A unique IP address is required for the scale. Also required, is the subnet mask, default gateway and the preferred DNS server addresses.

To use ScaleLink Pro 5 software with the **GSP30B** scale within a network, an Ethernet Cable (not supplied) and a port on the network is required.


1. Contact your system administrator to gain access to a unique IP address.
2. Select Start Menu.
3. Select Control Panel.
4. Select "Network and Sharing Center" from Control Panel.
5. Select "Local Area Connection."

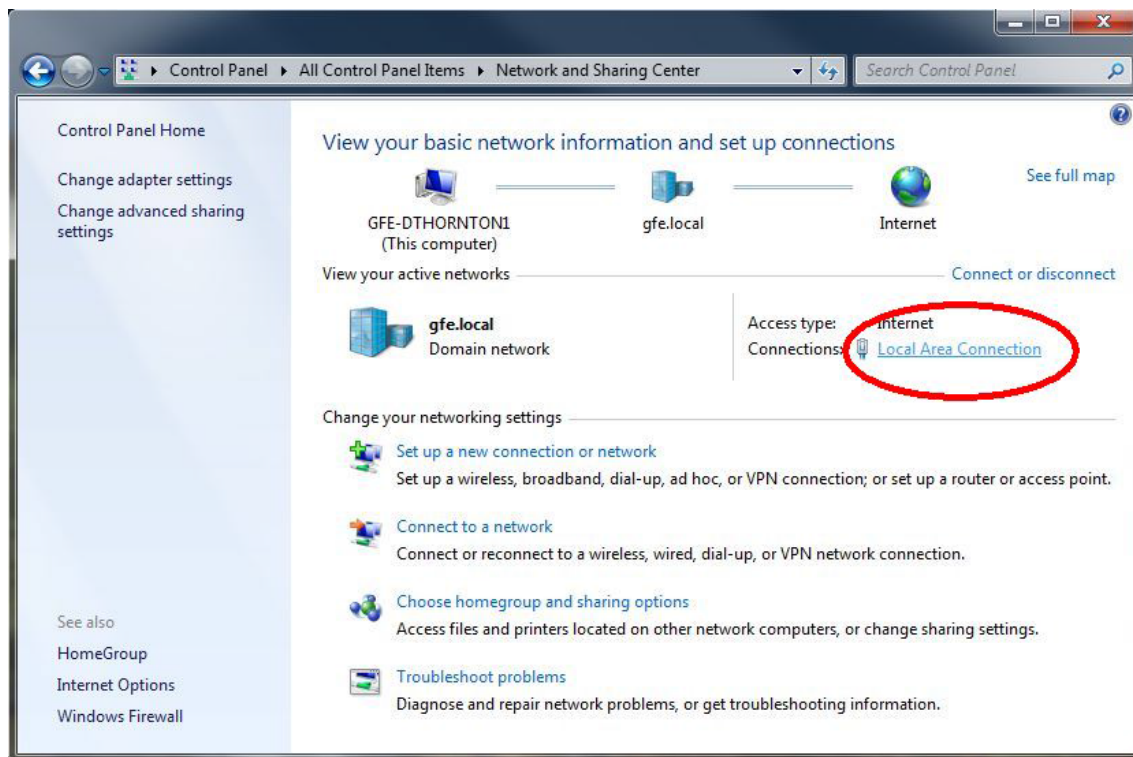


6. Select Properties.
7. Select Internet Protocol Version 4 (TCP/IPv4) and Properties.

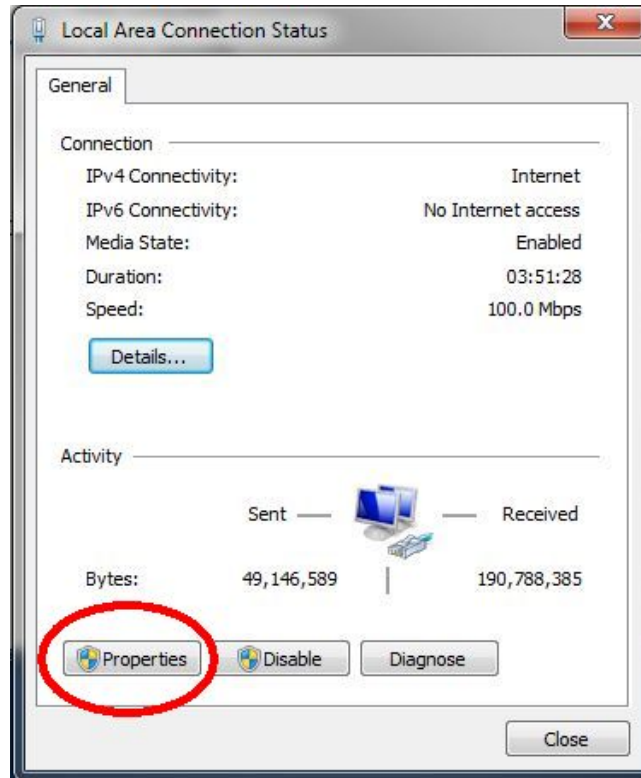

8. Select "Use the following IP address."

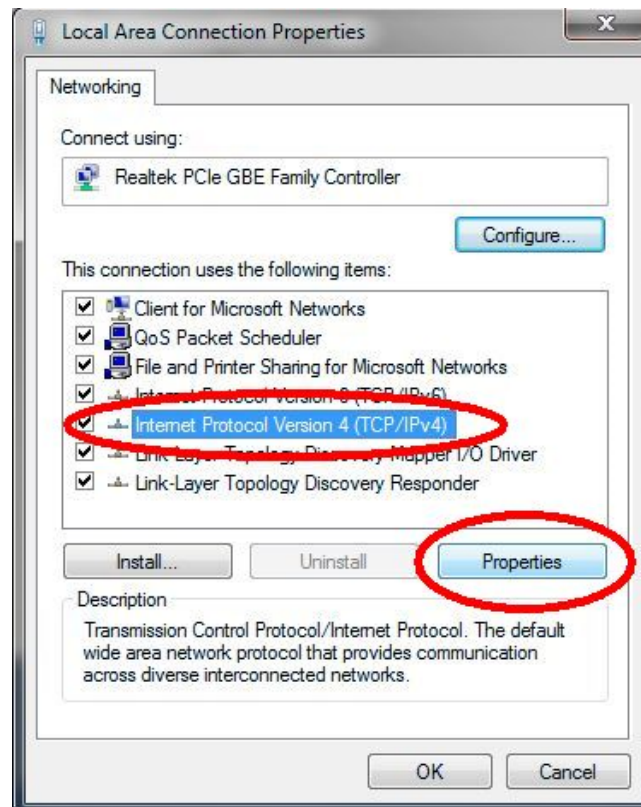

9. Enter the IP address, Subnet mask and Default gateway information obtained by your system administrator.

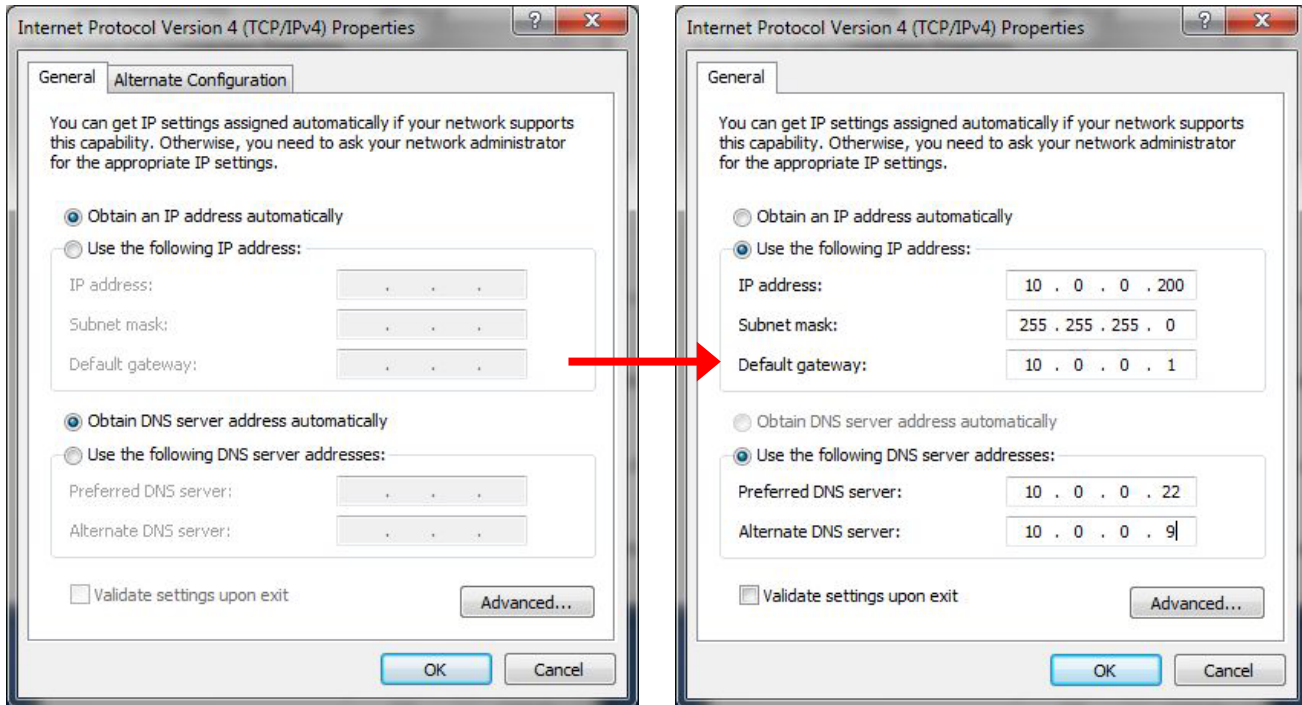

10. Select OK to close the Internet Protocol Version 4 (TCP/IPv4) Properties menu.
11. Select Close to close the Local Area Connection Properties menu.
12. Select Close to close the Local Area Connection Status menu.

Scale Setup:

1. Key in 6000 and press the Mode key. The display will show: < B00 SETUP >
2. Key in 495344 and then press the PLU key. The display will not change.
3. Press ENTER key. Display will show: B01 MACHINE No. [COMMS]
4. Press ENTER key. Display will show: B01-01 < BASIC >
5. Press the → key. Display will show: B01-02 < IP ADDR >
6. Press ENTER key. Display will show: B01-02-01 ###.##
7. Key in the unique IP address given by the system administrator FOR THE SCALE. Ignore the decimals and make sure all digits including the preceding zeros are entered. Example: With IP address 10.0.0.234, type in 010000000234.
8. Press ENTER key twice. Display will show: B01-02-02 255.255.255.0
9. If this matches the subnet mask of your network, press ENTER once. Otherwise key in the correct subnet mask, ignoring the decimals and making sure all digits including the preceding zeros are entered, press ENTER twice. Display will show: B01-02-03 ###.##
10. Key in the default gateway, ignoring the decimals. Make sure all digits including preceding zeros are entered.
11. Press ENTER twice. Display will show: B01-02-08 PING TO PC>ZR
12. Press MODE three times to return to normal operations.
13. For SLP-V Lite PC to scale communication setup, refer to page 20 of the quick start guide and page 23 of the SLP-V Lite Scale and PC Label Cataloging & Printing Program.



Connect Scale to PC:

1. With the **GSP30B** scale turned off, attach one end of the Ethernet Cable to the LAN port on the left side of the scale and the other end to an available port on the network.
2. Turn on the power to the **GSP30B** Scale.
3. Refer to Quick Start Guide - PC & Scale Set Up, ScaleLink Pro 5 Lite Software Installation for directions on how to install the ScaleLink Pro 5 Lite software.
4. Refer to SLP-V Lite Software User Guide for Globe Label Printing Scale for directions on how to use the ScaleLink Pro 5 Lite software.




ScaleLink Pro 5 Lite Software Installation

System Requirements


ScaleLink Pro 5 Lite requires a PC running Windows 7, 8.1, 10 or XP Professional, or Vista (XP Home edition is not supported).

Install SLP5Lite for the First Time.

1. Go to <https://globefoodequip.com/products/scales/label-printing/gsp30b.html>. to download the SLP5Lite software.

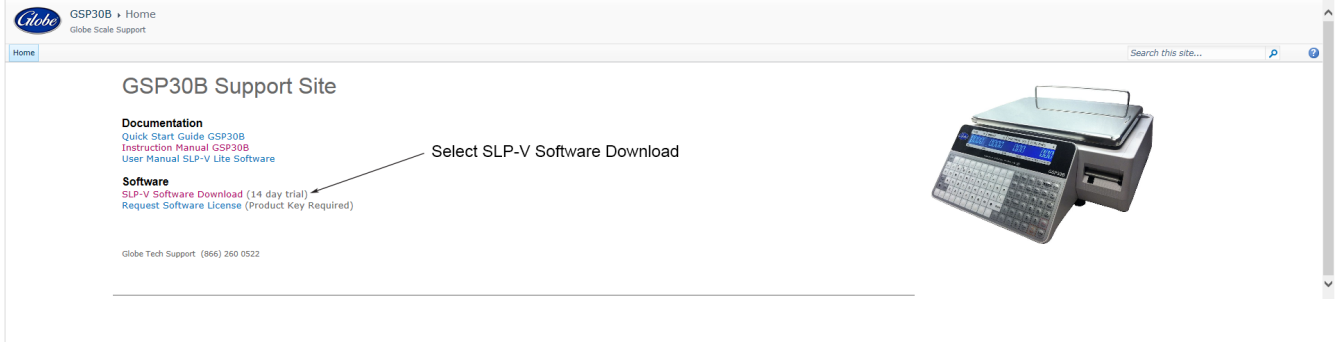

2. Select SLP-V Software Download (14 day trial).
3. You will be asked "Do you want to save SLP5Lite_220c_GLOBE_111115.zip (24.4 MB) from <https://globefoodequip.com/products/scales/label-printing/gsp30b.html>?"

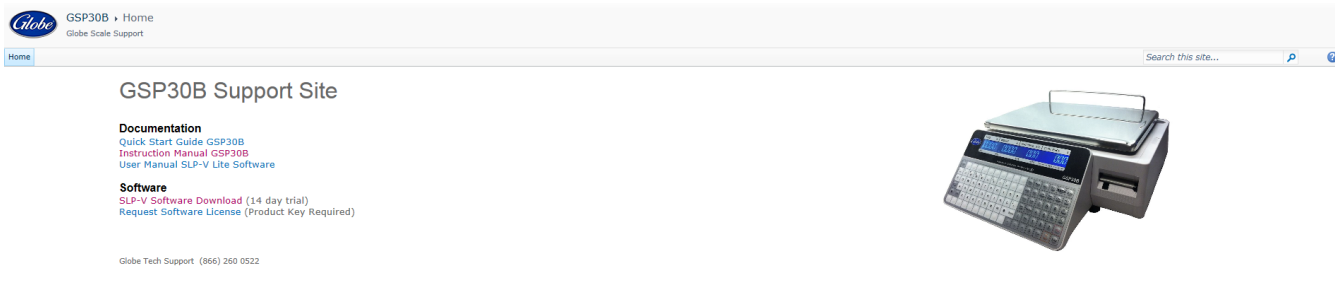


Select Save



4. Select Save.

5. "The SLP5Lite_220c_GLOBE_111115.zip download has completed." Select Open folder.

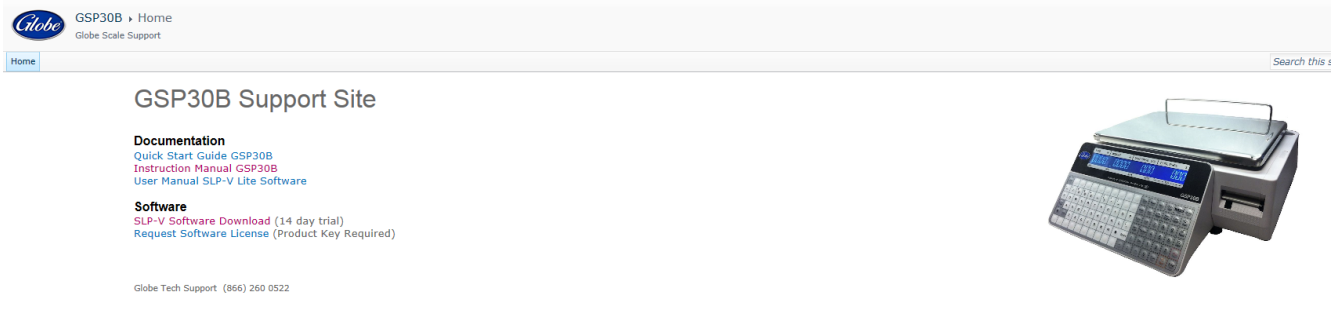


The screenshot shows the GSP30B Support Site. At the top left is the Globe logo and the text "GSP30B Home" and "Globe Scale Support". Below this is a navigation bar with "Home" and a search box. The main content area is titled "GSP30B Support Site" and contains two sections: "Documentation" with links for "Quick Start Guide GSP30B", "Instruction Manual GSP30B", and "User Manual SLP-V Lite Software"; and "Software" with links for "SLP-V Software Download (14 day trial)" and "Request Software License (Product Key Required)". On the right side of the page is an image of a scale. At the bottom left, it says "Globe Tech Support (866) 260 0522".

Select Open Folder




6. Create a directory on your local C drive and copy the SLP5Lite_220c_GLOBE_111115.zip into directory.
7. Unzip SLP5Lite_220c_GLOBE_111115.zip.
8. Double click on SLPLite.exe to begin installation.


Note: ScaleLink Pro 5 Lite - Install Wizard will appear to step you through the process of setting up your copy of ScaleLink Pro 5 Lite.

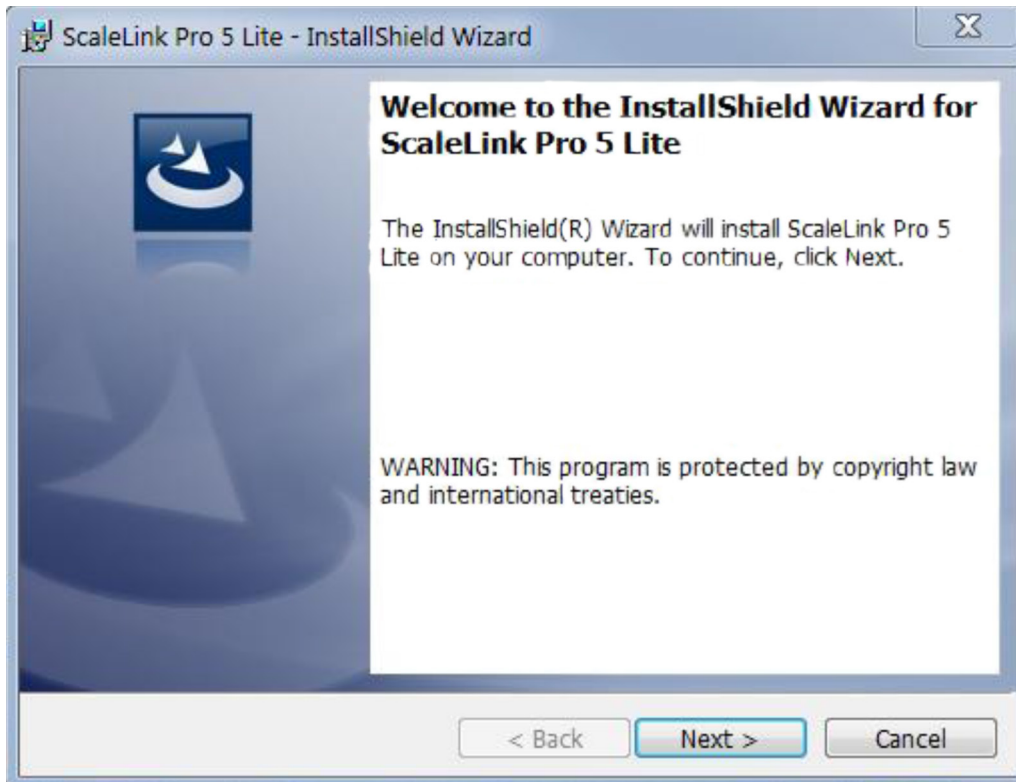


Click the Next button to move to the next step in the setup process.

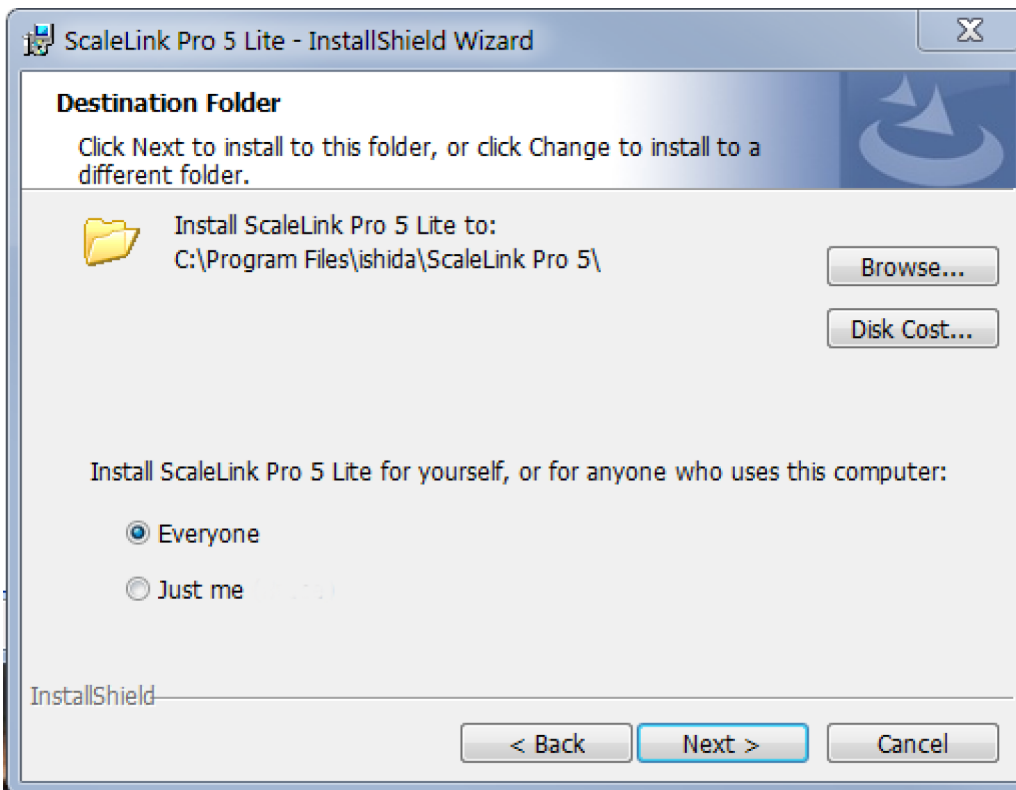


Click the Next button to move to the next step in the setup process.

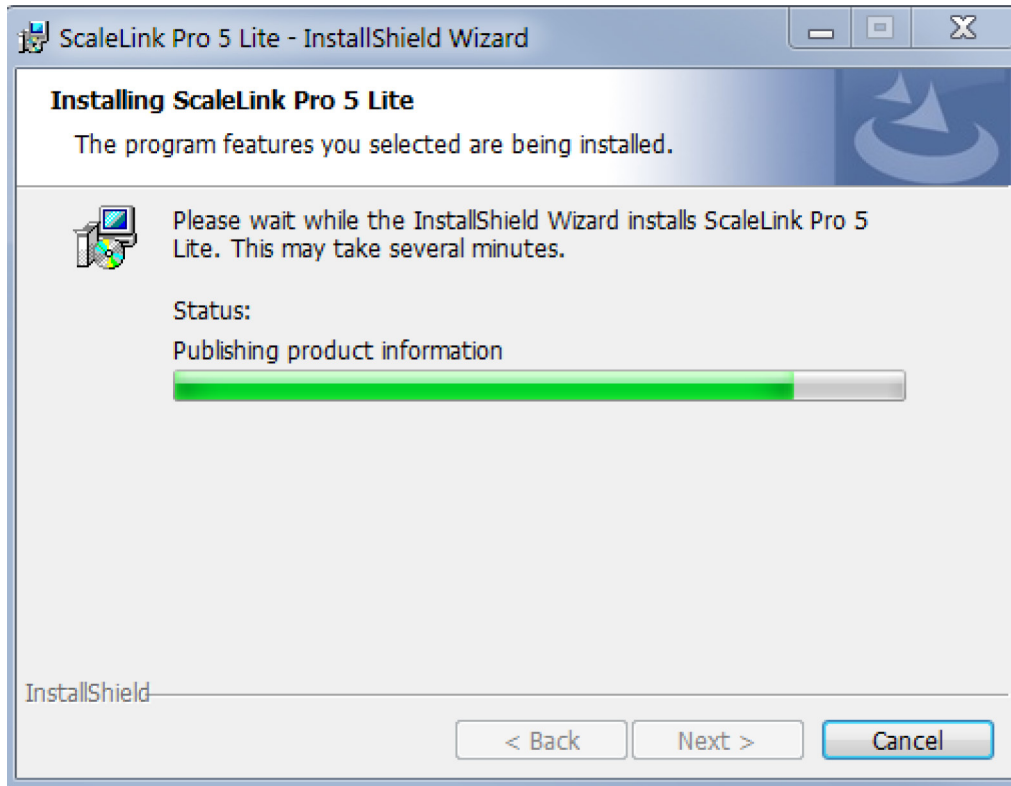

The following window can display when installing ScaleLink Pro 5 to your computer.

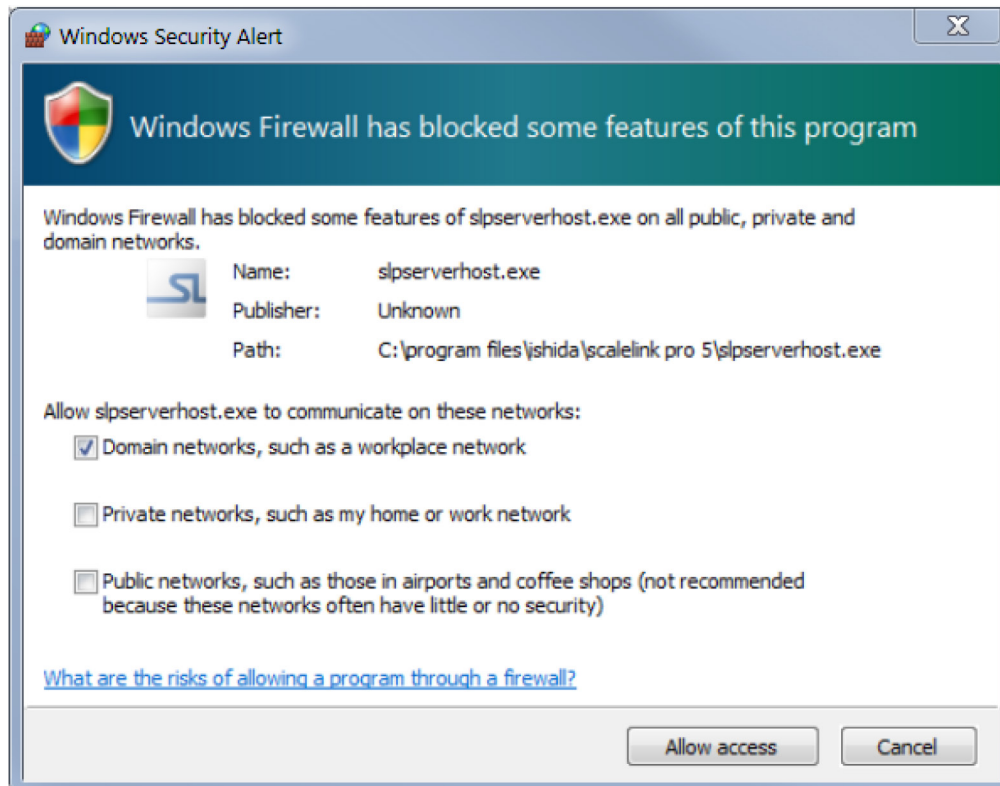

Select the Allow access button to allow all the features of ScaleLink Pro 5 software to function properly.

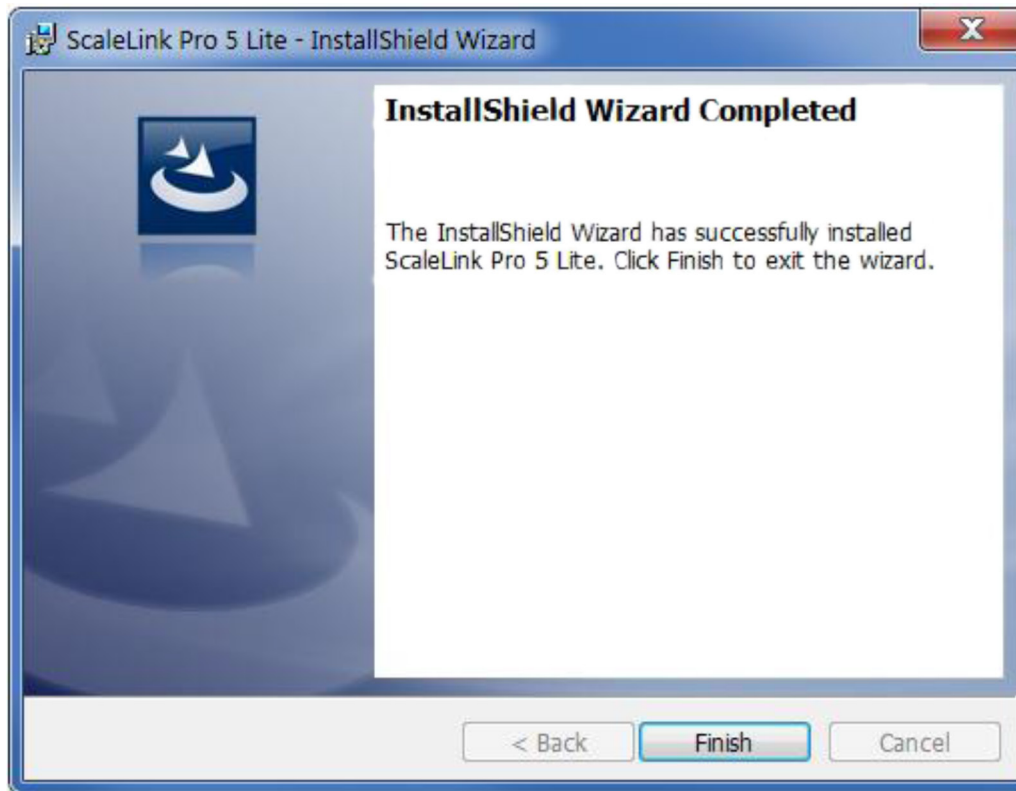


Click the Finish button to exit the ScaleLink Pro 5 Lite - InstallShield Wizard.

Installing SLP5Lite adds an “ScaleLink Pro 5 Lite” & “ScaleLink Pro 5 Lite Maintenance Utility” icon to the <Programs> sub menu of your Windows <Start> menu.



Open ScaleLink Pro 5 Lite Maintenance Utility for the First Time.

The following window will display. This starts the activation procedure.

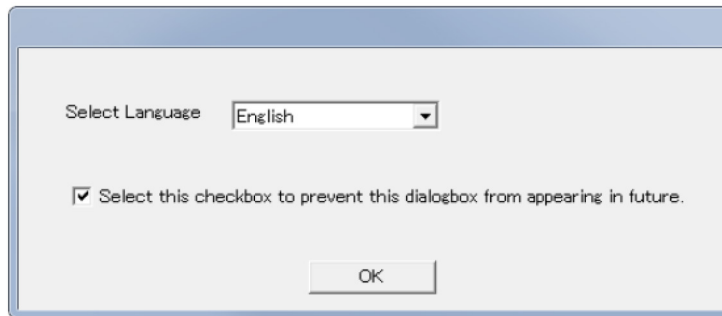


Select "English" and click OK.





1. Go to <https://globefoodequip.com/products/scales/label-printing/gsp30b.html> to request your license key.

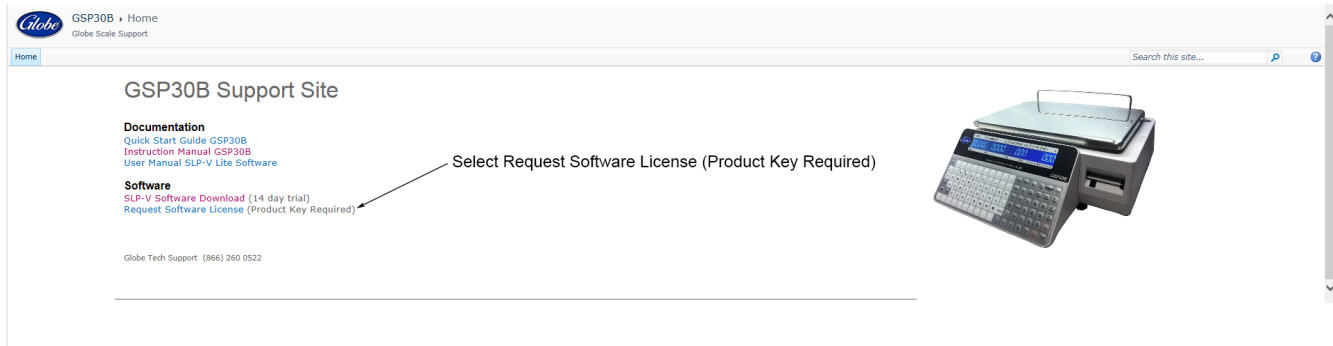

2. Select Request Software License (Product Key Required).
3. Complete the request license key form.

| | |
|-----------------------|--------------------------------|
| First Name * | <input type="text"/> |
| Last Name * | <input type="text"/> |
| Company | <input type="text"/> |
| Address * | <input type="text"/> |
| City * | <input type="text"/> |
| State * | <input type="text"/> |
| ZIP code * | <input type="text"/> |
| Country * | <input type="text" value="v"/> |
| E-mail address * | <input type="text"/> |
| Phone Number * | <input type="text"/> |
| Product Key* | <input type="text"/> |
| Scale Serial Number * | <input type="text"/> |

4. Select "Send License Request".

GSP30B Support Site

Thank you for requesting a license key for your SLP-V Lite Software.
You will receive an e-mail within 2 to 3 business days with the license code.

[HOME](#)

5. A email notification will be sent verifying that the request license key form information has been received.


Note: If you do not receive an email verifying that the request for License Request has been received within 24 hours, please contact Globe Food Equipment Tech Support at 1-866-260-0522.

Note: Please allow 2-3 business days to receive an additional email notification with your license key attached.

Note: The software can be used for 14 days without validating your license. If the 14 day trial period expires before you validate your license, you will be blocked from starting the software.

6. If you have not received the license key, select the Verify later button.

The following window will appear when you select the Verify later button.

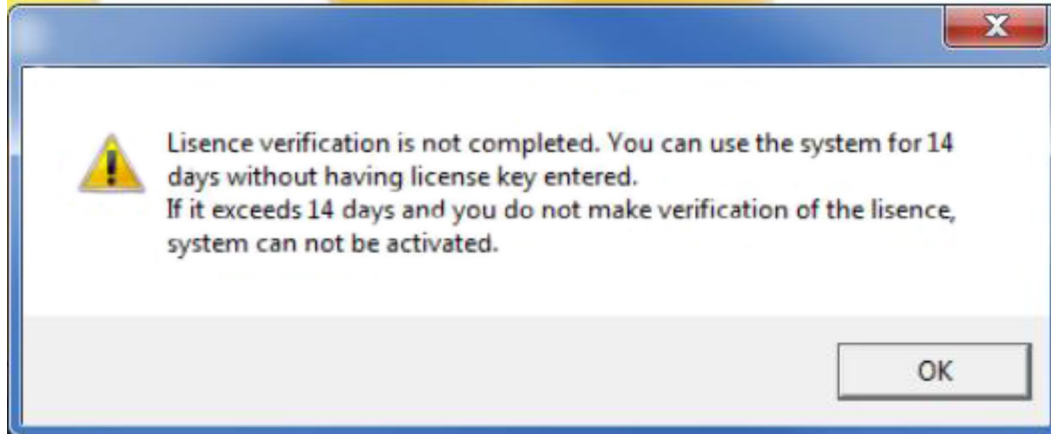


Note: Make sure to validate your license within the **14** day trial period.


If you have not already connected the Ethernet Cable from the LAN port on the scale to your PC you will need to do that now in order to communicate between the SLP-V Lite software and your computer.

Note: To transfer data to other scales not connected by use of an Ethernet Cable, use a USB thumb drive to backup and restore data. Refer to the USB Scale Backup and Restore in the Instruction Manual for Globe Label Printing Scale.


The following window displays when ScaleLink Pro 5 Lite is ran for the first time after the initial activation procedure.

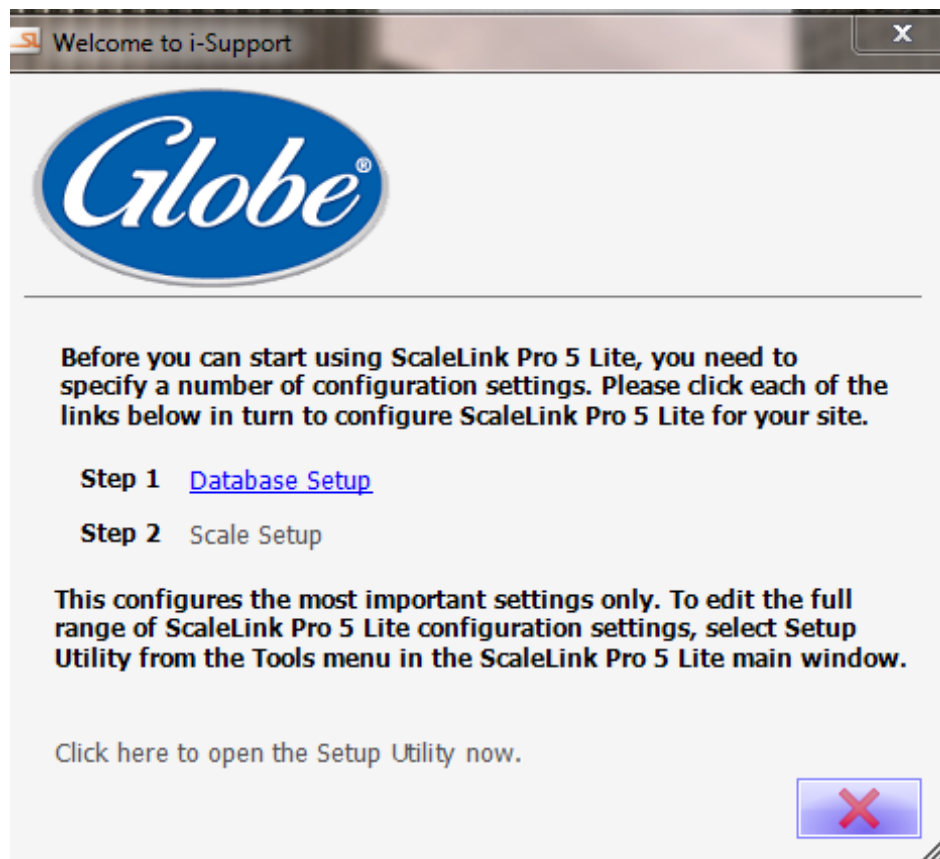


Select Step 1 Database Setup.

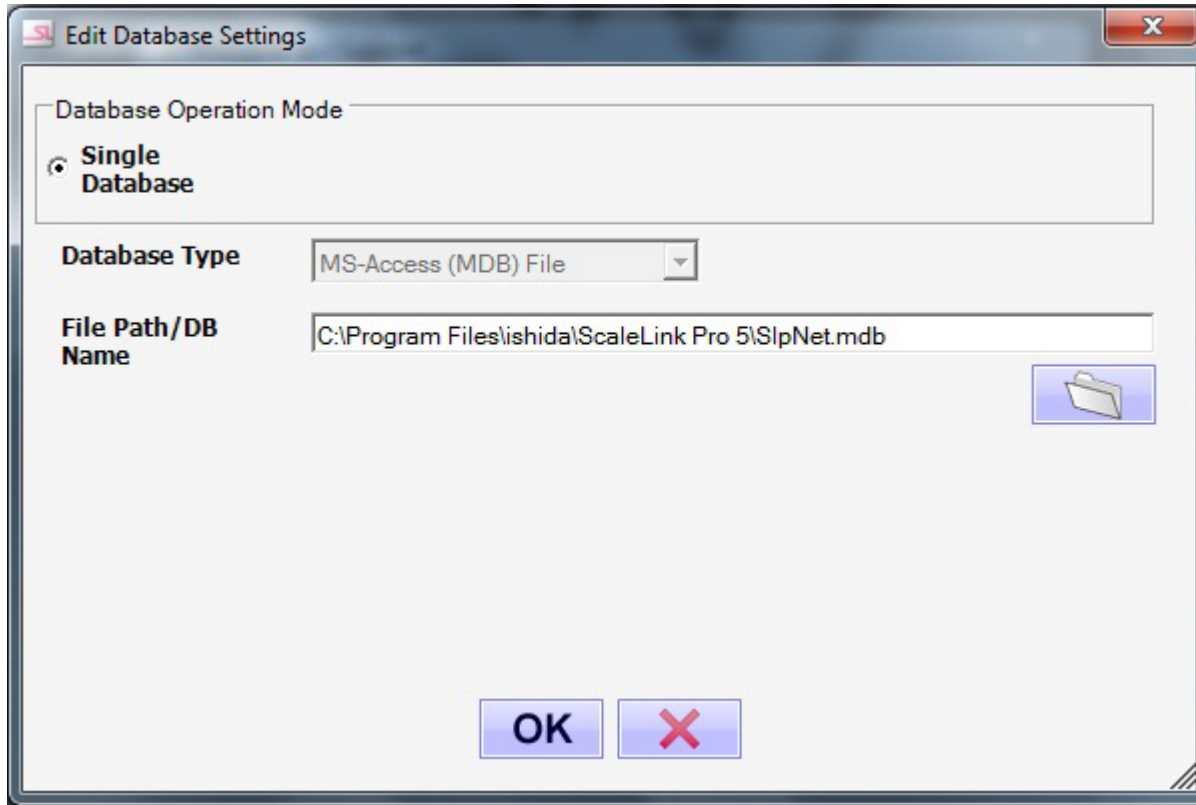

Select Single Database Setup and click on OK.

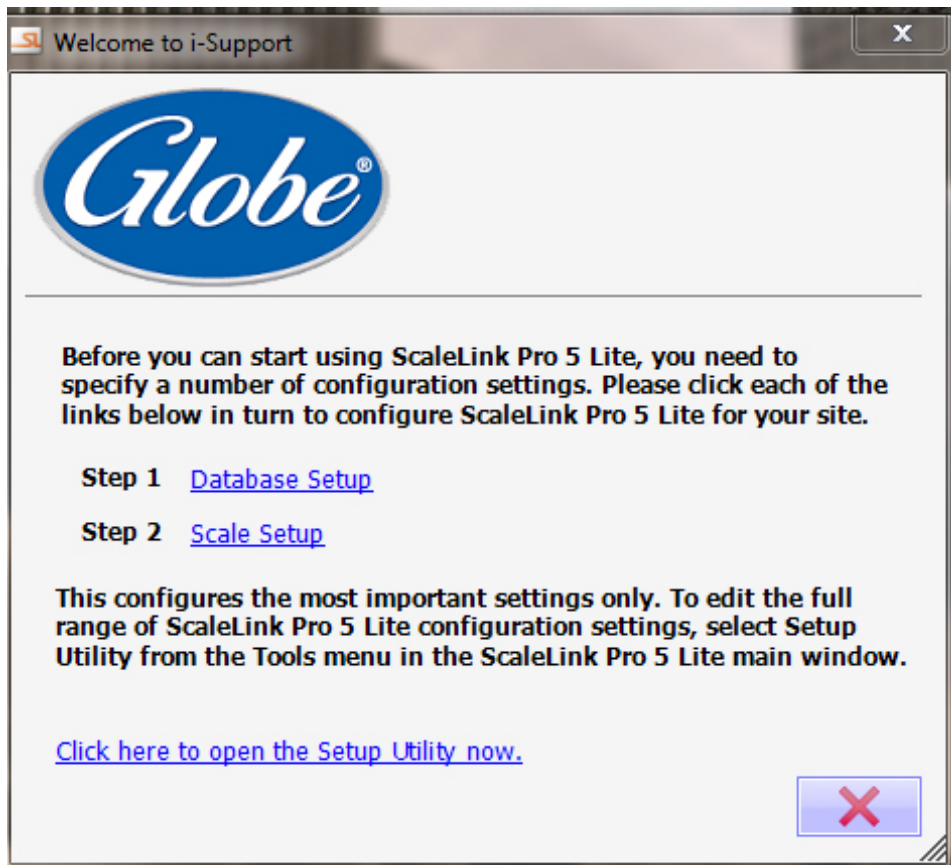


Select Scale Setup.

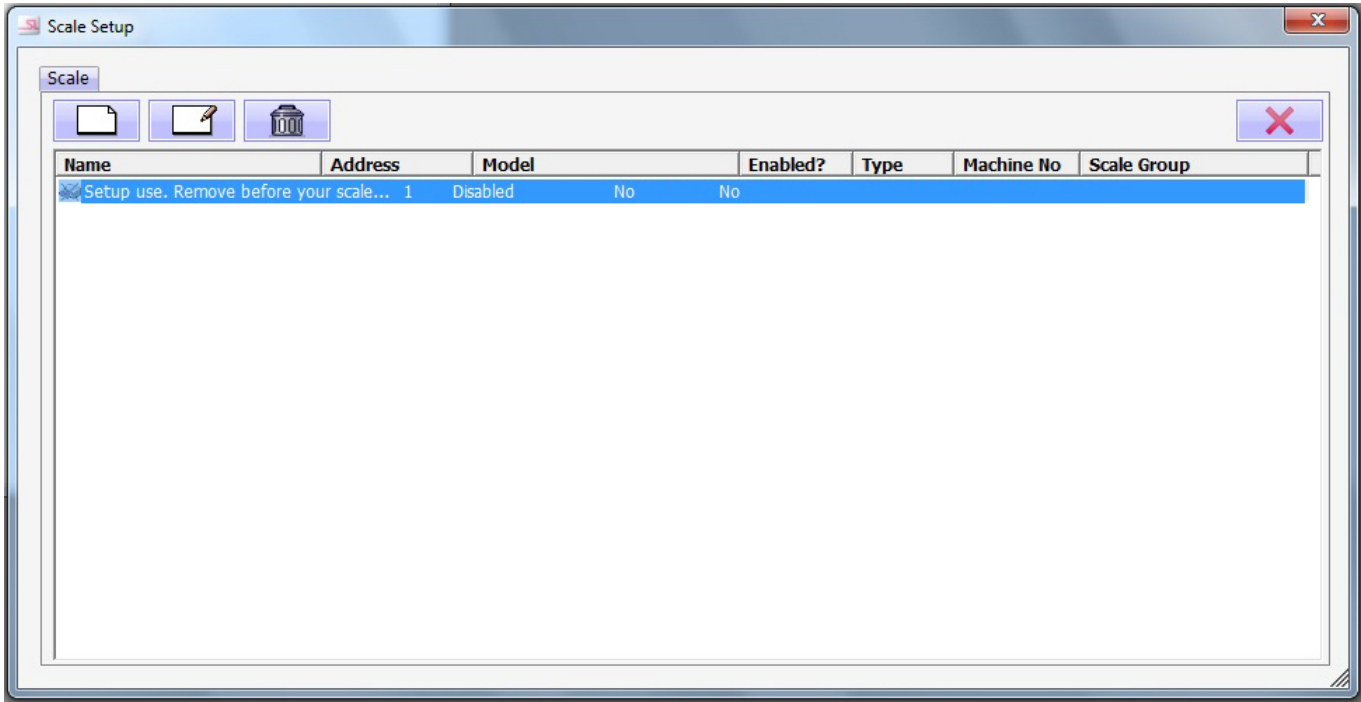

Select New from the Scale Setup toolbar.

Note: Contact your system administrator to gain access to an available IP Address within your network.

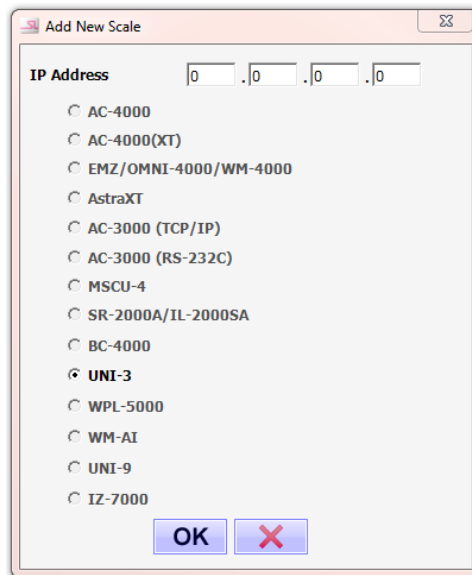

Key in the available IP Address.
Select UNI-3 and click OK.



Edit Scale

Name: 10.0.0.234 Scale ID: 0

Scale Model: UNI-3

IP Address: 10 .0 .0 .234

Machine No.: 0

Scale Type: Bench Hanging

Enable Scale: Enable Comms Log:

x.xdlb Tare Format (divide by 10):

FTP Settings:


User Name: _____ Password: _____

Send Folder Path: C:\Program Files (x86)\ishida\ScaleLink Pro 5\Scale

Note: Specify a path on a PC that the ScaleLink Pro 5 Lite installed.

OK X

Verify that the IP Address is correct and that Scale Type is Bench. Select OK.

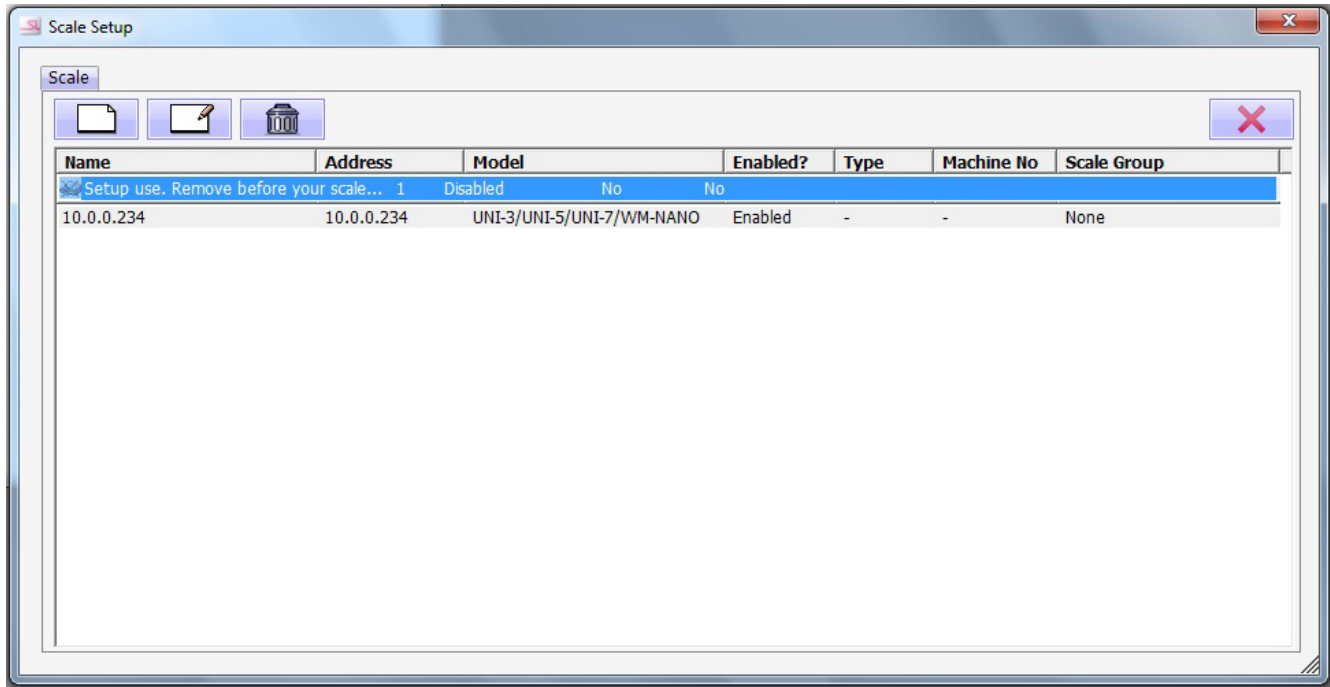

Select "Setup use. Remove before your scale..." and then select the Delete button on the Scale Setup tool bar.

Close the Scale Setup dialog box.


Close the Welcome to i-Support display window.



ScaleLink Pro 5 Lite Maintenance will open. Scale Communication Status Monitor will display.

Refer to the Scale Communications Status Monitor display window to verify that the scale is now connected to your network.

Note: If necessary, select the Refresh Link button in the bottom left corner to refresh the Scale Communications Status Monitor display.

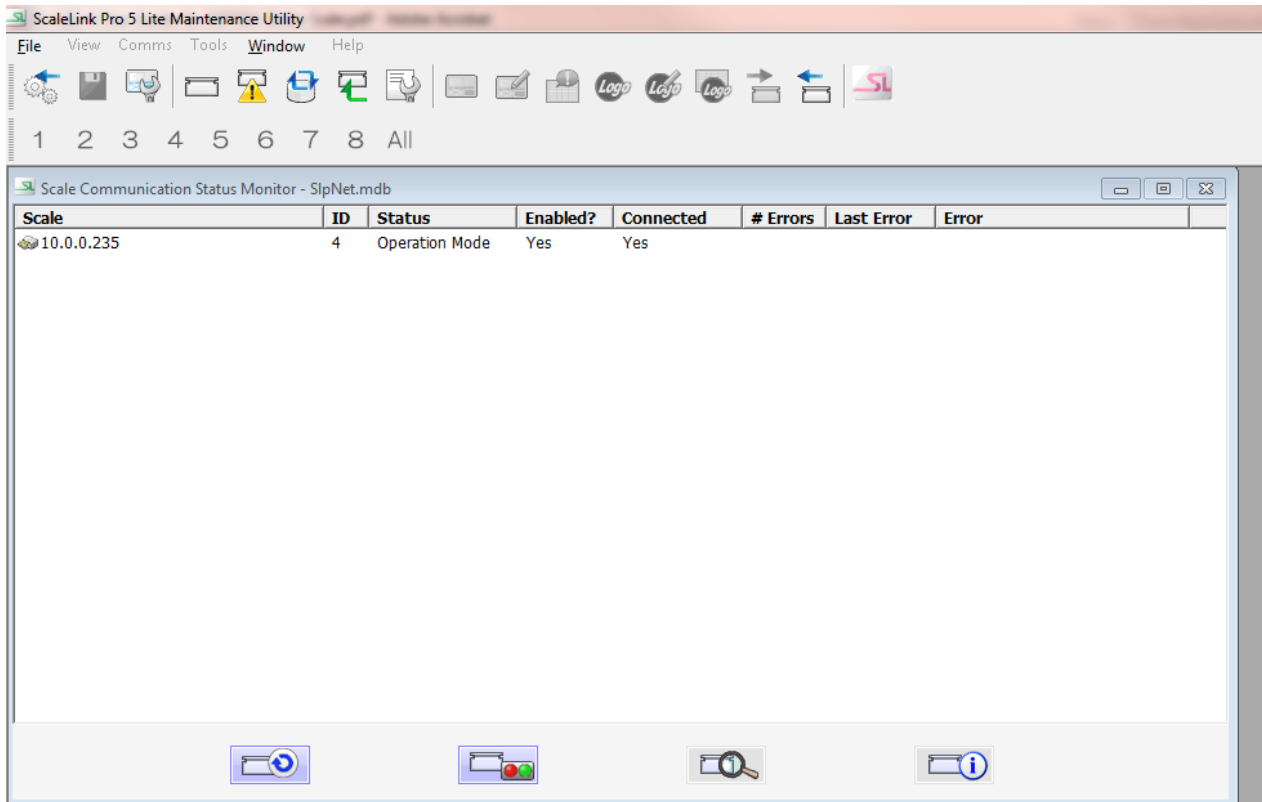


Quick Look at SLP-V Lite

If you are setting up SLP-V Lite to use with the [E13](#) Ingredient Label, refer to the *Instruction Manual for Globe Label Printing Scale* supplied with your scale and the *SLP-V Lite User Guide for Globe Label Printing Scale GSP30B* contained on the CD provided.

Click on the ScaleLink Pro 5 Lite Maintenance Utility Icon on your desktop to activate the ScaleLink Pro 5 Lite Maintenance Utility program.



Starting ScaleLink Pro 5 Lite Maintenance Utility for the second and subsequent times will automatically load the Scale Communication Status Monitor display window below.

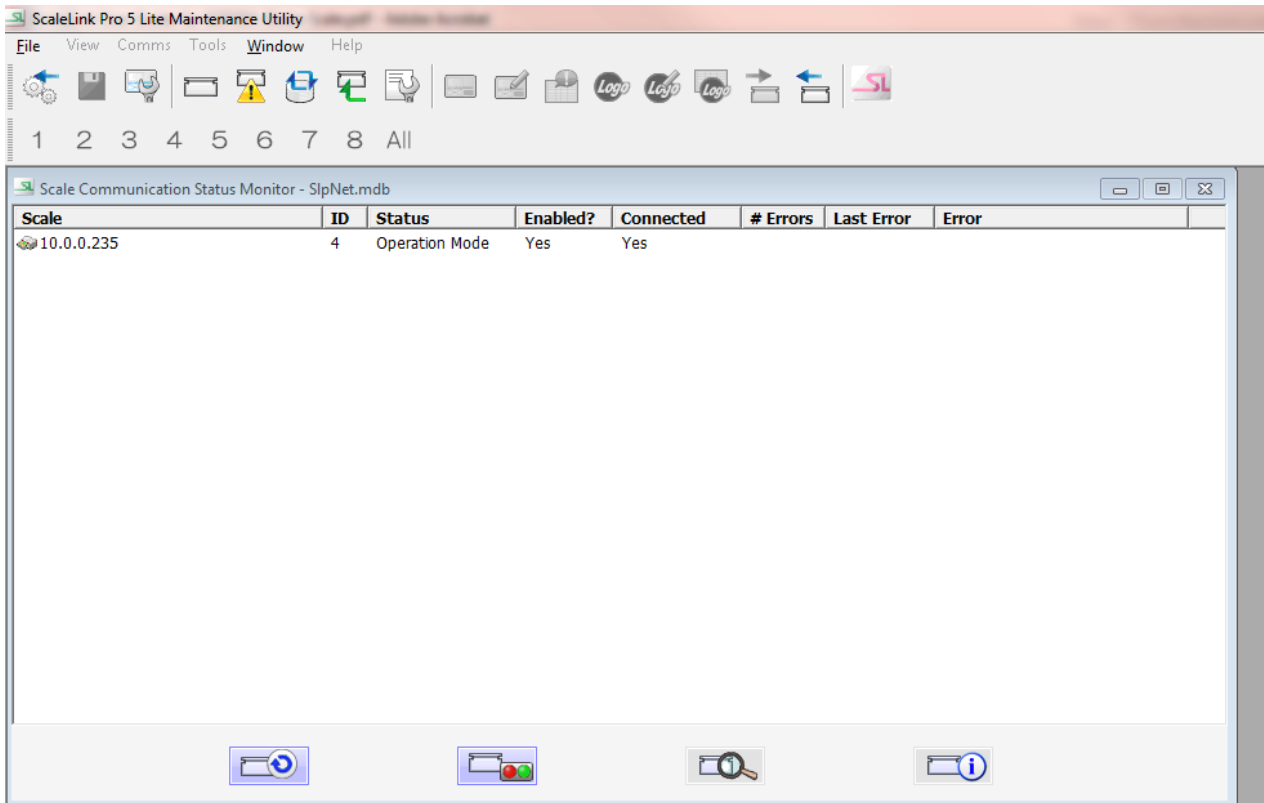



Click on the ScaleLink Pro 5 Lite Icon on your desktop to activate the ScaleLink Pro 5 Lite program.



Starting ScaleLink Pro Lite for the second and subsequent times will automatically load the Add/Modify/Delete PLUs display window below.

*Add a new PLU. Open PLU Edit window to edit currently selected PLU. Delete currently selected PLU. Open PLU price change dialog box. Active/Inactive Nutrition

Click here to list all PLUs. Use the ↑, ↓, PgUp and PgDn keys to scroll the PLU list.

PLU list. Double click on a PLU to edit.

Click here to enter a search string. The list only displays PLUs that match the search.

| PLU No. | Barcode | Description | Price |
|---------|---------|-------------|-------|
| 1 | 1 | HAM | 1.30 |
| 2 | 2 | Roast Beef | 2.30 |
| 3 | 3 | Cheese | 1.50 |
| 4 | 4 | Steak | 3.50 |

Record Count: 4

Refer to the SLP-V Lite Software User Guide for Globe Label Printing Scale for information on how to use ScaleLink Pro 5 Lite Maintenance Utility and ScaleLink Pro 5 Lite software with your [GSP30B](#) Scale.