
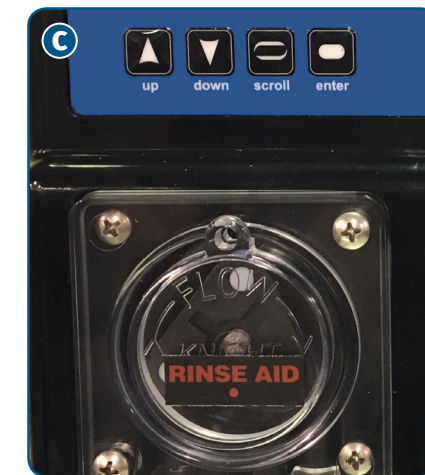


TO OPERATE:

1. Ensure strainer pan, scrap basket, and rack track are in position in the dishwasher tank. **A**
2. Close the door and push the **ON** button. The word **FILL** will be displayed. **B**
3. When fill is complete, the readout will display the wash water temperature. Select the wash cycle: 1 for normal serving ware; 2, 4 or 6 for heavier soiled items. Toggle through cycle options by pressing the **CYCLE** button. After filling the dishrack, open the door and slide the rack in the machine.
4. Close the door, the machine will start automatically, the cycle light will turn on and the door will lock. There may be a short delay between cycles while the word **FILL** blinks in the display and the wash water reheats **B**. The machine automatically starts when minimum temperature is reached.
5. When the rinse cycle is complete, the rinse symbol disappears, the cycle light will turn off and the door will unlock. Remove the rack of clean dishes.

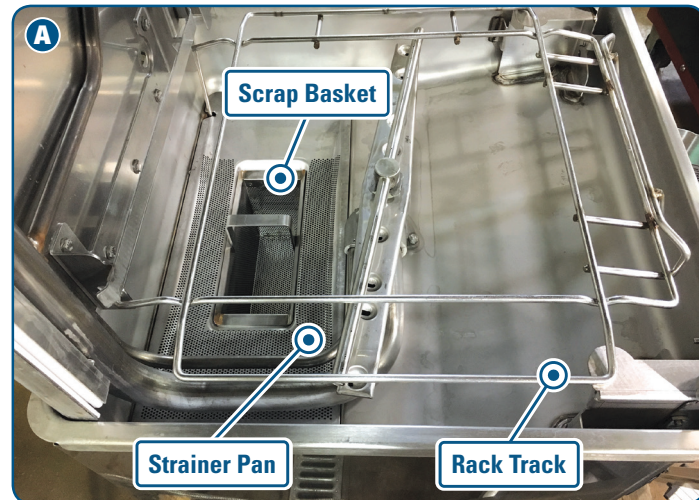

OPERATIONAL TIPS:

- PRE-SCRAP WARE to remove large food particles and debris.
- Check, empty, rinse, and replace the scrap basket as needed.
- Do not stack dishes or dishracks one on top of another.
- Use only commercial detergents and rinse aid with the AM15SVL.
- Deliming instructions are located on the front panel in the lower right hand corner of the machine.

NOTE: When the machine is out of detergent, **ADD DETERGENT** and a **WRENCH ICON** will show in the display, an alarm will sound and the machine will pause operation. To continue operation, replace the detergent and allow the chemical pump to auto prime.

To prime the chemical pump after replacing chemicals; **PRESS** and **HOLD** the appropriate button combination **C** until the machine is primed. Visually inspect the tubes, then ensure they contain chemical. Use the following button combinations:

CHEMICAL	BUTTON COMBINATION
Detergent	■ ■ □ □
Rinse Aid	■ □ ■ □

NOTE: The machine will not resume operation until the pump is primed. Turn power off and back on again to reset.

TO CLEAN:

1. Close the door and push the **OFF** button. **B**
2. Wait for the machine to drain, unlock the door and power off, then open the door.
3. Remove rack track, strainer screen and scrap basket; wash and rinse thoroughly. **A**
4. Remove the pumped drain screen, wash and rinse inside and out. **D**
5. Thoroughly cleanse and flush the dishwasher interior. Remove any remaining food soil.
6. Make sure both upper and lower wash and rinse arms rotate freely and are clear of any obstructions. If not, remove arms and clean out obstructions.
7. Re-assemble the machine:
 - a. Replace pumped drain screen, strainer pan, and scrap basket.
 - b. Install both upper and lower wash and rinse arms (if removed).
 - c. Replace rack track.
8. Wipe down machine exterior with a clean, wet dishcloth. **DO NOT USE STEEL WOOL, A SCOURING PAD OR ABRASIVE MATERIAL TO CLEAN THE MACHINE. DO NOT SPRAY THE EXTERIOR WITH A HOSE.**

NOTE: For end of day cleaning, complete steps 1 through 8 and leave the door open to allow the interior to air out and dry.

