



## DAILY OPERATION



- 1 Place strainer and scrap basket into the dishwasher. Make sure to line up arrows. 
- 2 Close the door. Push **POWER** button. 
- 3 When fill is complete, the readout will display **READY**.
- 4 Select the **WASH CYCLE**: 1, 2, 4, 6 minutes. To load a dishrack, open the door and slide the rack in the machine. 
- 5 Close the door, the machine will start automatically. The **PLAY** button turns blue, and a progress bar will appear at the bottom of the screen. 
- 6 Once the screen shows a check mark and reads **CYCLE COMPLETED**, the dishrack may be removed. 
- 7 To power off machine and drain, hold the **POWER** button down for 5 seconds. 

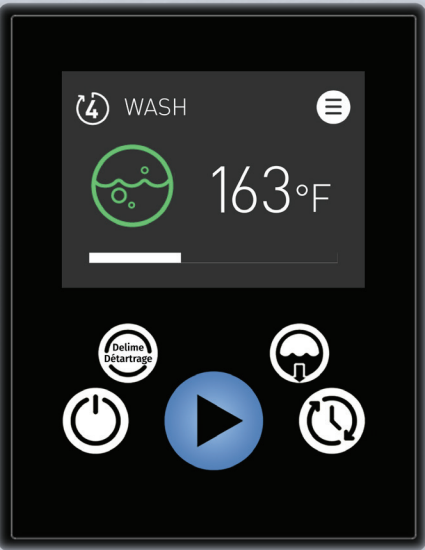

- Wash Cycle**
- Wash 
  - Rinse 
  - Condense (Ventless) 
  - Complete 

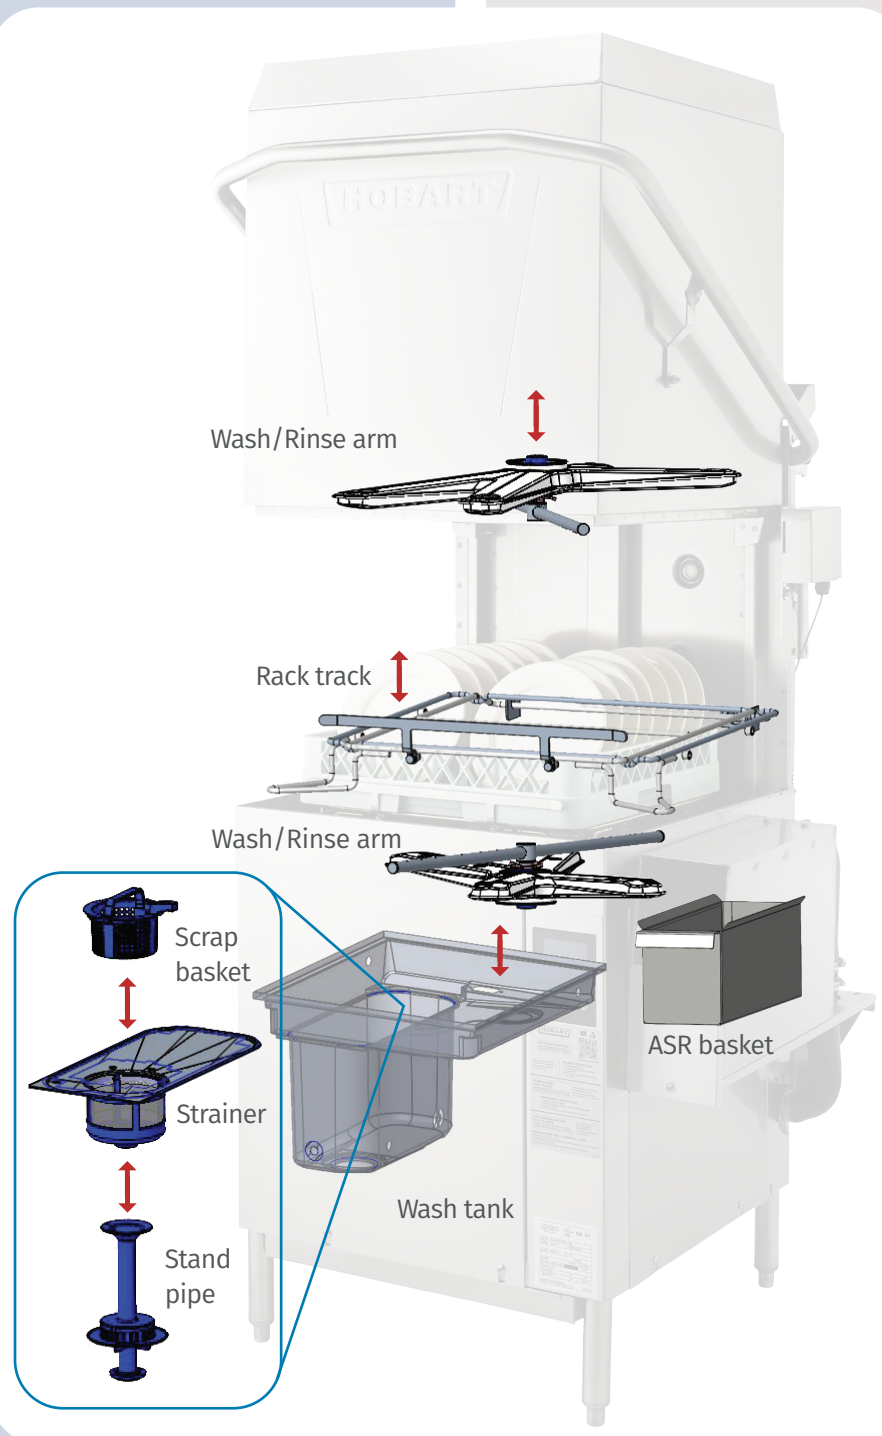

## DAILY CLEANING




- 1 Spray down the inside of the machine and scrub any hard-to-reach spots with a clean, damp cloth.
- 2 Remove **rack track**, **strainer**, **scrap basket** and **ASR basket\*** to clean and rinse.
- 3 Make sure the **upper** and **lower wash and rinse arms** rotate freely and are clear of any obstructions.
- 4 Re-assemble the machine.
  - a. Replace **strainer** and **scrap basket**,
  - b. Install **wash and rinse arms** (if removed)
  - c. Replace **rack track**
  - d. Replace **ASR basket** if necessary
- 5 Close the door. Hold the **POWER** button for 5 seconds to shut down. Power button will turn half green and lights will turn off when machine is fully drained. 
- 6 After machine is drained, open hood and clean **inside of the machine** with a damp cloth.
- 7 If there is water remaining in the tank, drain remaining water by holding down the **DRAIN** button for 3 seconds while the machine is off. 
- 8 After cleaning, wipe down **machine exterior** with a damp cloth. Open machine door.

**Blue Bold Text** = Clean Daily

### REPLACING CHEMICALS

1. When the machine is out of **SANITIZER** or **DETERGENT** an alarm will sound & the machine will automatically pause operation. **SANITIZER EMPTY** or **DETERGENT EMPTY** and an **ICON** display on the machine control screen.
2. Replace the sanitizer or detergent. **NOTE:** Use only commercial detergents & sanitizers with the AM16.
3. Chemical pumps will prime automatically once the **ENTER** button is pressed.

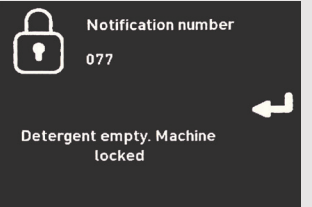

## OPERATIONAL TIPS – GET THE MOST OUT OF YOUR DISHWASHER

-  **PRE-SCRAP DISHES**
-  **USE COMMERCIAL DISHWASHER CHEMICALS ONLY**

Do not use any other chemicals with the dishwasher. Use PPE for handling.
-  **DELINE THE MACHINE**

The unit will alert you when deliming is required. When prompted, follow the instructions on the display. *Note: Delime instructions will vary based on model. Scan QR code for more information.*



## PROPER RACKING WILL PROVIDE THE BEST CLEANING RESULTS.

