

CLe WAREWASHING

TO OPERATE:

1. Ensure all strainer pans, baskets, curtains, drain standpipe, and upper and lower wash arms are installed. ①



2. Close all access doors.
3. Push the power button. ②



4. Once filled, push the "start" button. If auto shutdown activates, restart by pushing a rack into dishwasher, or push the "start" button. ③



5. To stop, push the "stop" button.

TO CLEAN:

⚠ WARNING Disconnect the electrical power to the machine and follow lockout/tagout procedures before you begin cleaning. There may be multiple circuits. Be sure all circuits are disconnected.


1. Push the "power" button to turn machine off.
2. Clean debris and water from dishtables into dishwasher.
3. Open all access doors.
4. Lift drain lever inside door opening. ④



5. Remove curtains and clean with a warm water - mild detergent solution and a soft bristled scrub brush.
6. Remove wash arms, check for plugged wash arm nozzles, remove any obstructions. ⑤



7. Remove and clean strainer pans and scrap basket. ⑥

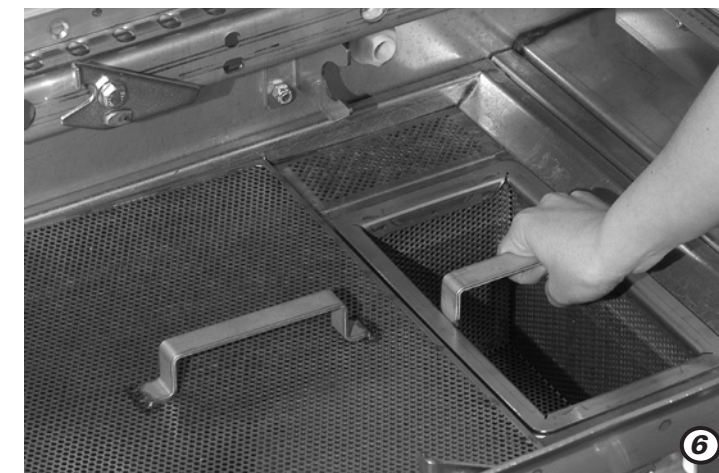

8. Spray down machine interior with water.
9. Inspect tank interiors, remove any remaining soil.

10. Wipe down exterior with a wet wash cloth - DO NOT SPRAY THE EXTERIOR WITH A HOSE.


11. Clean the standpipe and attached pump intake screen. ⑦



12. Reassemble the machine:

- Install strainer pan(s) and scrap basket(s)

13. Leave doors open to air out machine interior. ⑧

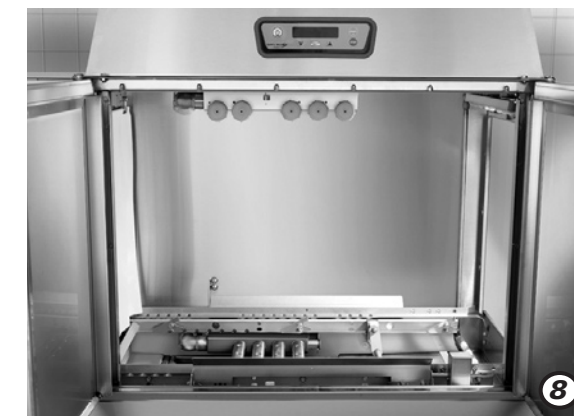

HOBART

701 S Ridge Avenue, Troy, OH 45374-0001
Phone: (937) 332-3000 www.hobartcorp.com