



CATALOG OF


REPLACEMENT PARTS



FLASHBAKE OVENS

HFB2-1
HFB2-2

ML-126584
ML-126585

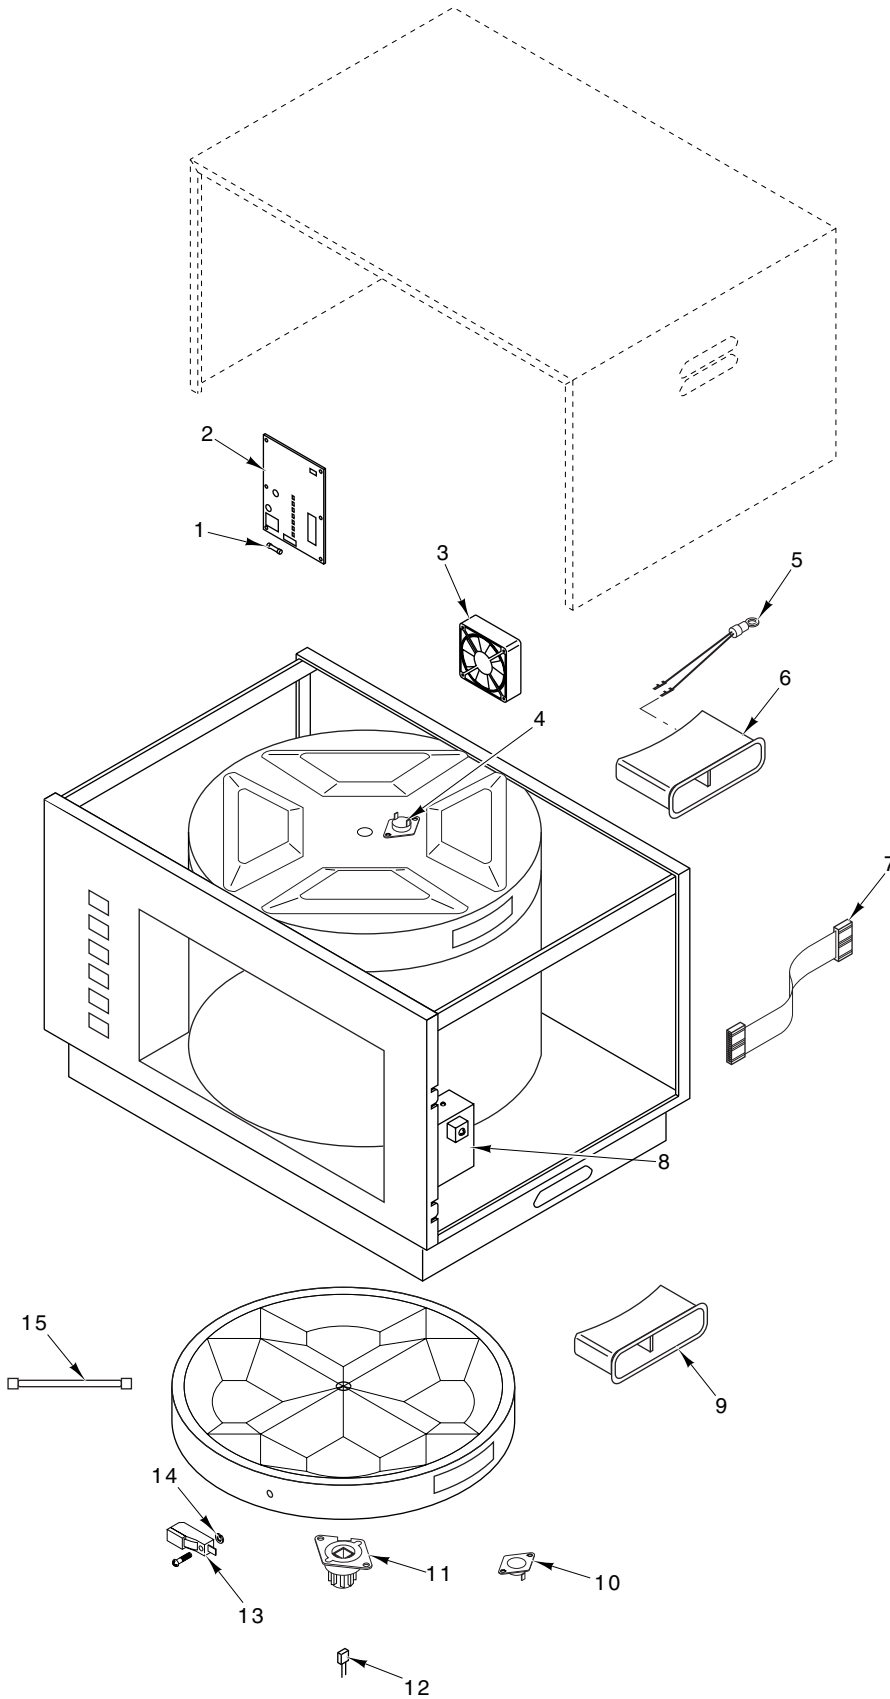


PL-55491

INTERIOR PARTS

INTERIOR PARTS

ILLUS. PL-55491	PART NO.	NAME OF PART	AMT.
1	00-853168-00016	Fuse	1
2	00-853168-00011	Board – Power Control	1
3	00-853168-00009	Fan	1
4	00-853168-00029	Thermostat – High Limit	1
5	00-853168-00031	Thermistor	1
6	00-853168-00017	Duct – Upper Exhaust	2
7	00-853168-00015	Cable – Ribbon Control	1
8	00-853168-00006	Latch Assy.	1
9	00-853168-00018	Duct – Lower Exhaust	2
10	00-853168-00029	Thermostat – High Limit	1
11	00-853168-00030	Post – Center Lamp	1
12	00-853168-00032	Sensor – Pan	1
13	00-853168-00001	Socket – Lamp	8
14	00-853168-00002	Nut (3 mm)	8
15	00-853168-00003	Lamp	8

FLASHBAKE OVEN REPLACEMENT PARTS

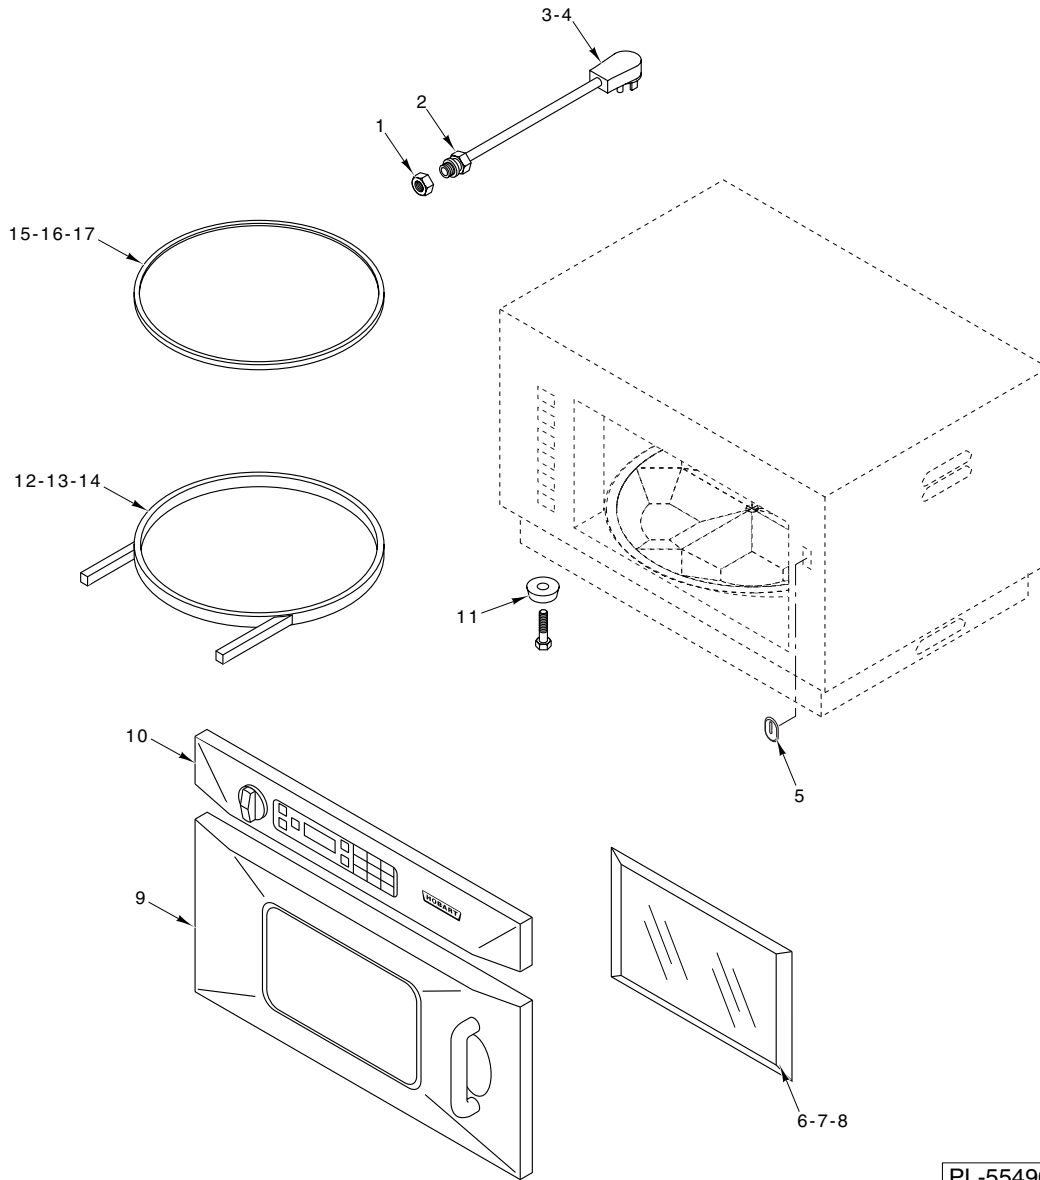

PL-55490

EXTERIOR AND COOKING SURFACE

ILLUS. PL-55490	PART NO.	NAME OF PART	AMT.
1	00-853168-00022	Nut – Strain Relief	1
2	00-853168-00021	Strain Relief – Power Cord	1
3	00-853168-00019	Cord – Power (Domestic)	1
4	00-853168-00020	Cord – Power (Canadian)	1
5	00-853168-00012	Bumper – Door	1
6	00-853168-00008	Glass – Inner Door Service Assy. (Includes Items 7 & 8)	1
7	00-853168-00027	Window – Inner (W/Film)	1
8	00-853168-00028	Gasket – Inner Window	1
9	00-853168-00007	Door – Outer Assy.	1
10	00-853168-00013	Bezel Assy. (SST)	1
11	00-853168-00010	Foot	4
12	00-853168-00005	Glass – Lower Service Assy. (Includes Items 13 & 14)	1
13	00-853168-00025	Glass – Lower	1
14	00-853168-00026	Gasket – Lower Glass	1
15	00-853168-00004	Glass – Upper Service Assy. (Includes Items 16 & 17)	1
16	00-853168-00023	Glass – Upper	1
17	00-853168-00024	Gasket – Upper Glass	1