

Hoshizaki Wire Pan Slide Kit Instructions
HS-5092 and HS-5093
For Use with Hoshizaki Reach-Ins

Check to ensure that all parts are included:

| HS Kit No. | Description | Part Number | Qty. |
|------------|----------------|-------------|------|
| HS-5092 | Wire Pan Slide | 2A7048-01 | 2 |
| | Pilaster Clip | 4A5560-01 | 4 |
| HS-5093 | Wire Pan Slide | 2A7048-01 | 8 |
| | Pilaster Clip | 4A5560-01 | 16 |

WARNING! This appliance should be serviced only by qualified service personnel to reduce the risk of death, electric shock, serious injury, or fire.

Installation Instructions for Commercial Series 1 Section Reach-Ins and All Professional Series Reach-Ins

- 1) Move the power switch to the "OFF" position, then unplug the appliance.
- 2) Remove the pilaster clips from the appliance.
- 3) Place the new pilaster clips into the pilasters. Indexing holes are provided on the pilasters in evenly spaced intervals to assist you in positioning the pilaster clips at the same height.
- 4) Place the wire pan slides in position on the pilaster clips. See Fig. 1.

Installation Instructions for Commercial Series 2 and 3 Section Reach-Ins

Installation requires HS-5027.

- 1) Move the power switch to the "OFF" position, then unplug the appliance.
- 2) Follow the instructions included with HS-5027.
- 3) Place the new pilaster clips into the pilasters. Indexing holes are provided on the pilasters in evenly spaced intervals to assist you in positioning the pilaster clips at the same height.
- 4) Place the wire pan slides in position on the pilaster clips. See Fig. 1.

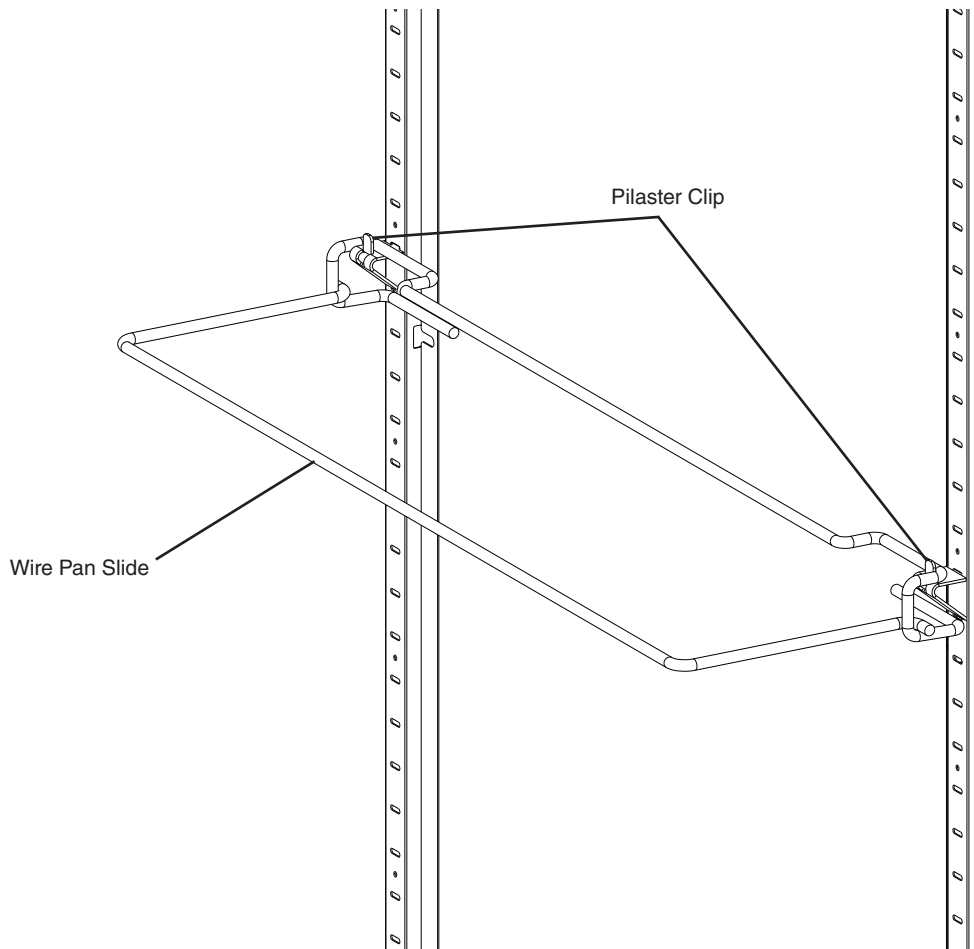


Fig. 1