




30" SLIDE IN GAS CONVECTION RANGE

MODELS:

KSGG700EBS1 (Black Stainless)


COOKTOP PARTS

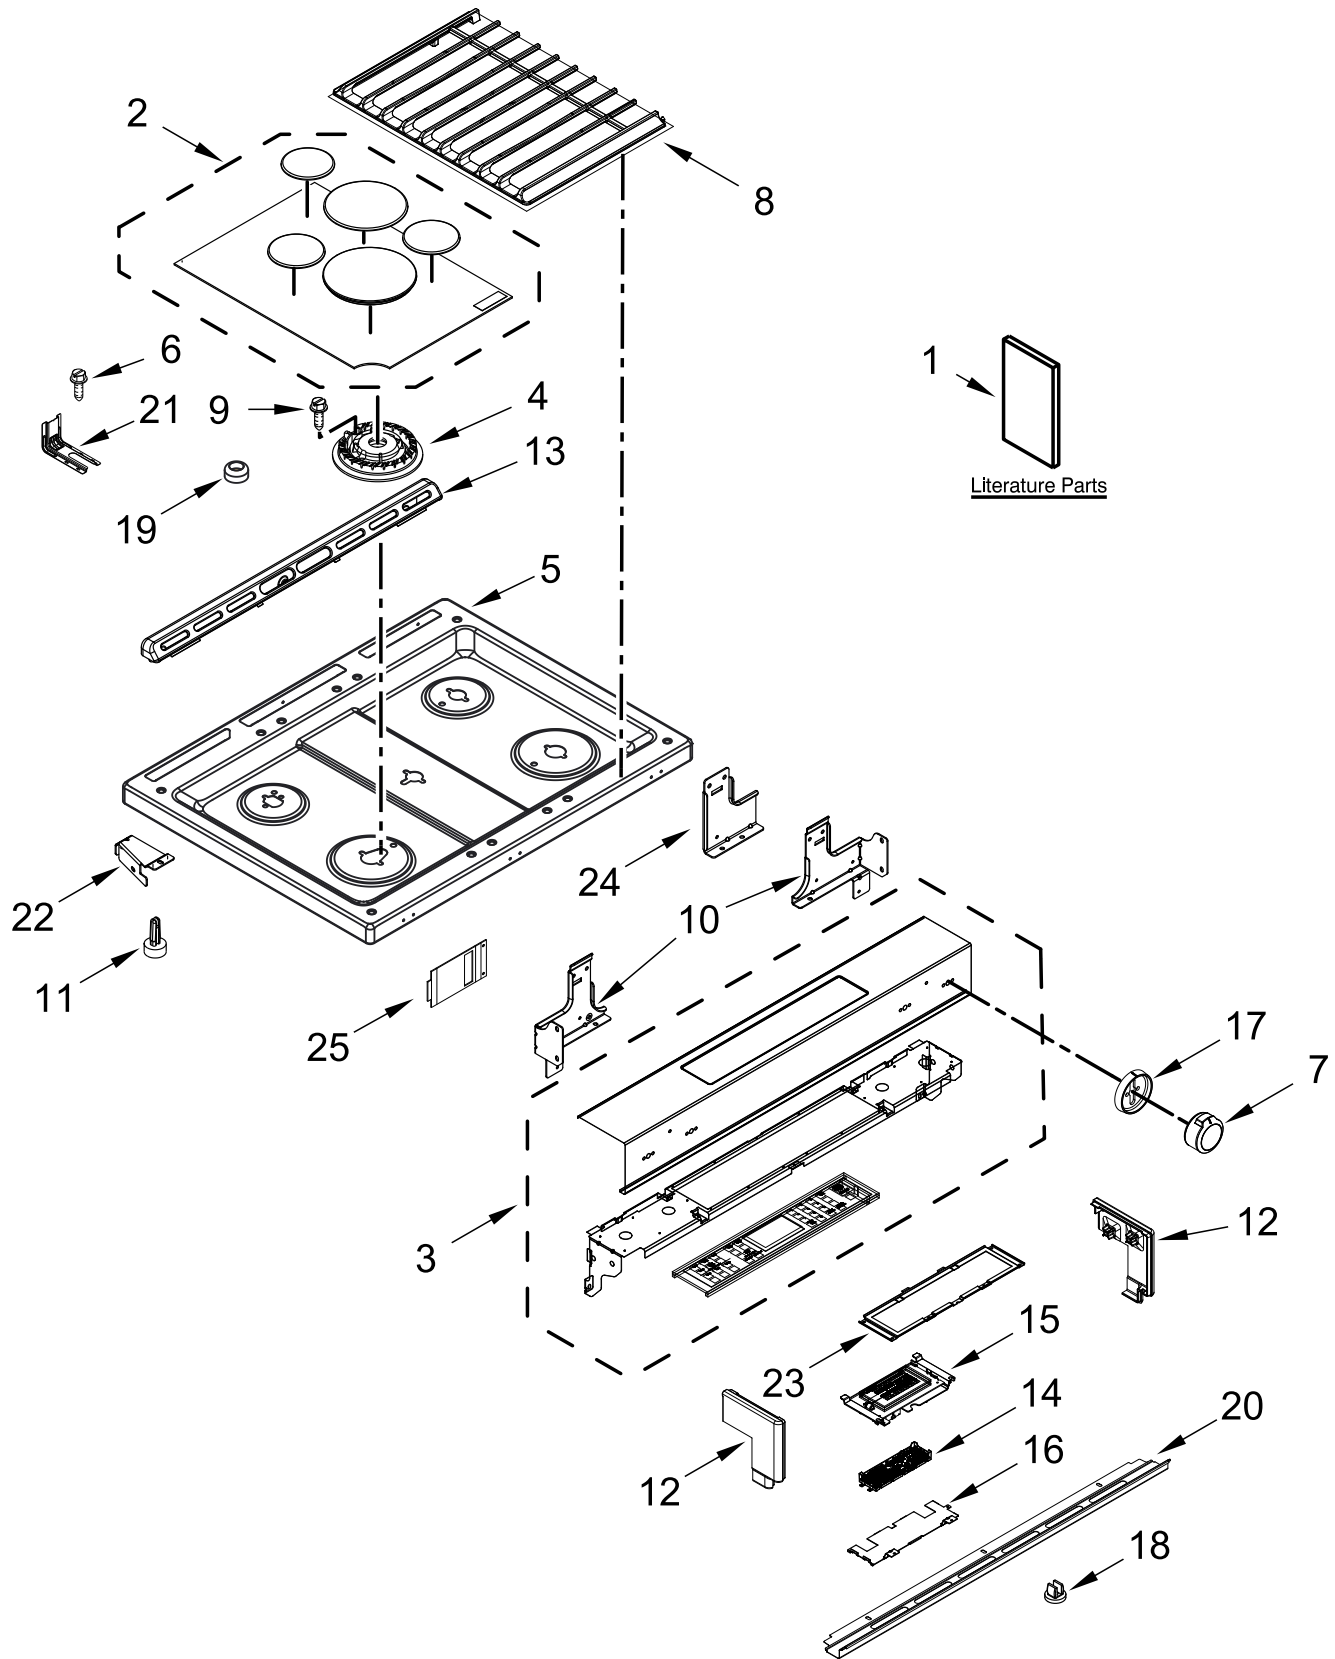

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Cooktop	18	W10645947	Grommet
	W10665256	Instructions, Installation		W10536181	Black	19	W10664705	Bumper
	W10896670	Guide, Use & Care	6	7101P485-60	Screw, Anti-Tip Kit	20		Console, Lower Panel
	W10844271	Sheet, Tech	7		Knob		W10860957	Black
	W10903847	Diagram, Wiring		W10786065	Stainless	21	W10606241	Bracket, Anti-Tip
	9762761	Tips, Safe Cooking (English)			(All except Left Front)	22	W10162253	Brace, Corner (Left)
	W10065852	Tips, Safe Cooking (French)		W10786064	Stainless		W10162252	Brace, Corner (Right)
	W10400066	Guide, Quick Start (English)	8		Kit, Grate	23	W10555923	Bracket, User Interface
	W10400067	Guide, Quick Start (French)		W10432520	Black	24	W10598048	Bracket, Console (Center)
2		Kit, Burner Cap	9	3196169	Screw	25	W10757531	Keypad, Shield
	W10479989	Black	10	W10289170	Support, Cooktop (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3		Console		W10289169	Support, Cooktop (Right)		W10580231	Harness, Main
	W10861022	Black Stainless	11	8016P022-60	Glide, Main Top		W10754419	Harness, Bake/Broil
4	W10495853	Spreader, Flame (Left Front)	12		Endcap		W10598169	Harness, Display
	W10464795	Spreader, Flame (Left Rear)		W10913412	Black (Left)		W10575120	Harness, Keypad
	W10256028	Spreader, Flame (Right Front)	13	W10913413	Black (Right)		313438	Clip, Harness
	W10256025	Spreader, Flame (Right Rear & Center)			Trim, Vent		3196520	Clip, Wire
			14	W10577781	Black		W10182767	Tie, Manifold Wire
			15	W10759285	Control, MRC2		W10580229	Wire, Ground
			16	W10603096	Assembly, Display		W10681410	Kit, LP Conversion
			17	W10558372	Bracket, Control		W10566535	Kit, LP Conversion (Bake/Broil)
					Bezel			
				W10785119	Stainless (Kit of 5)			


CHASSIS PARTS

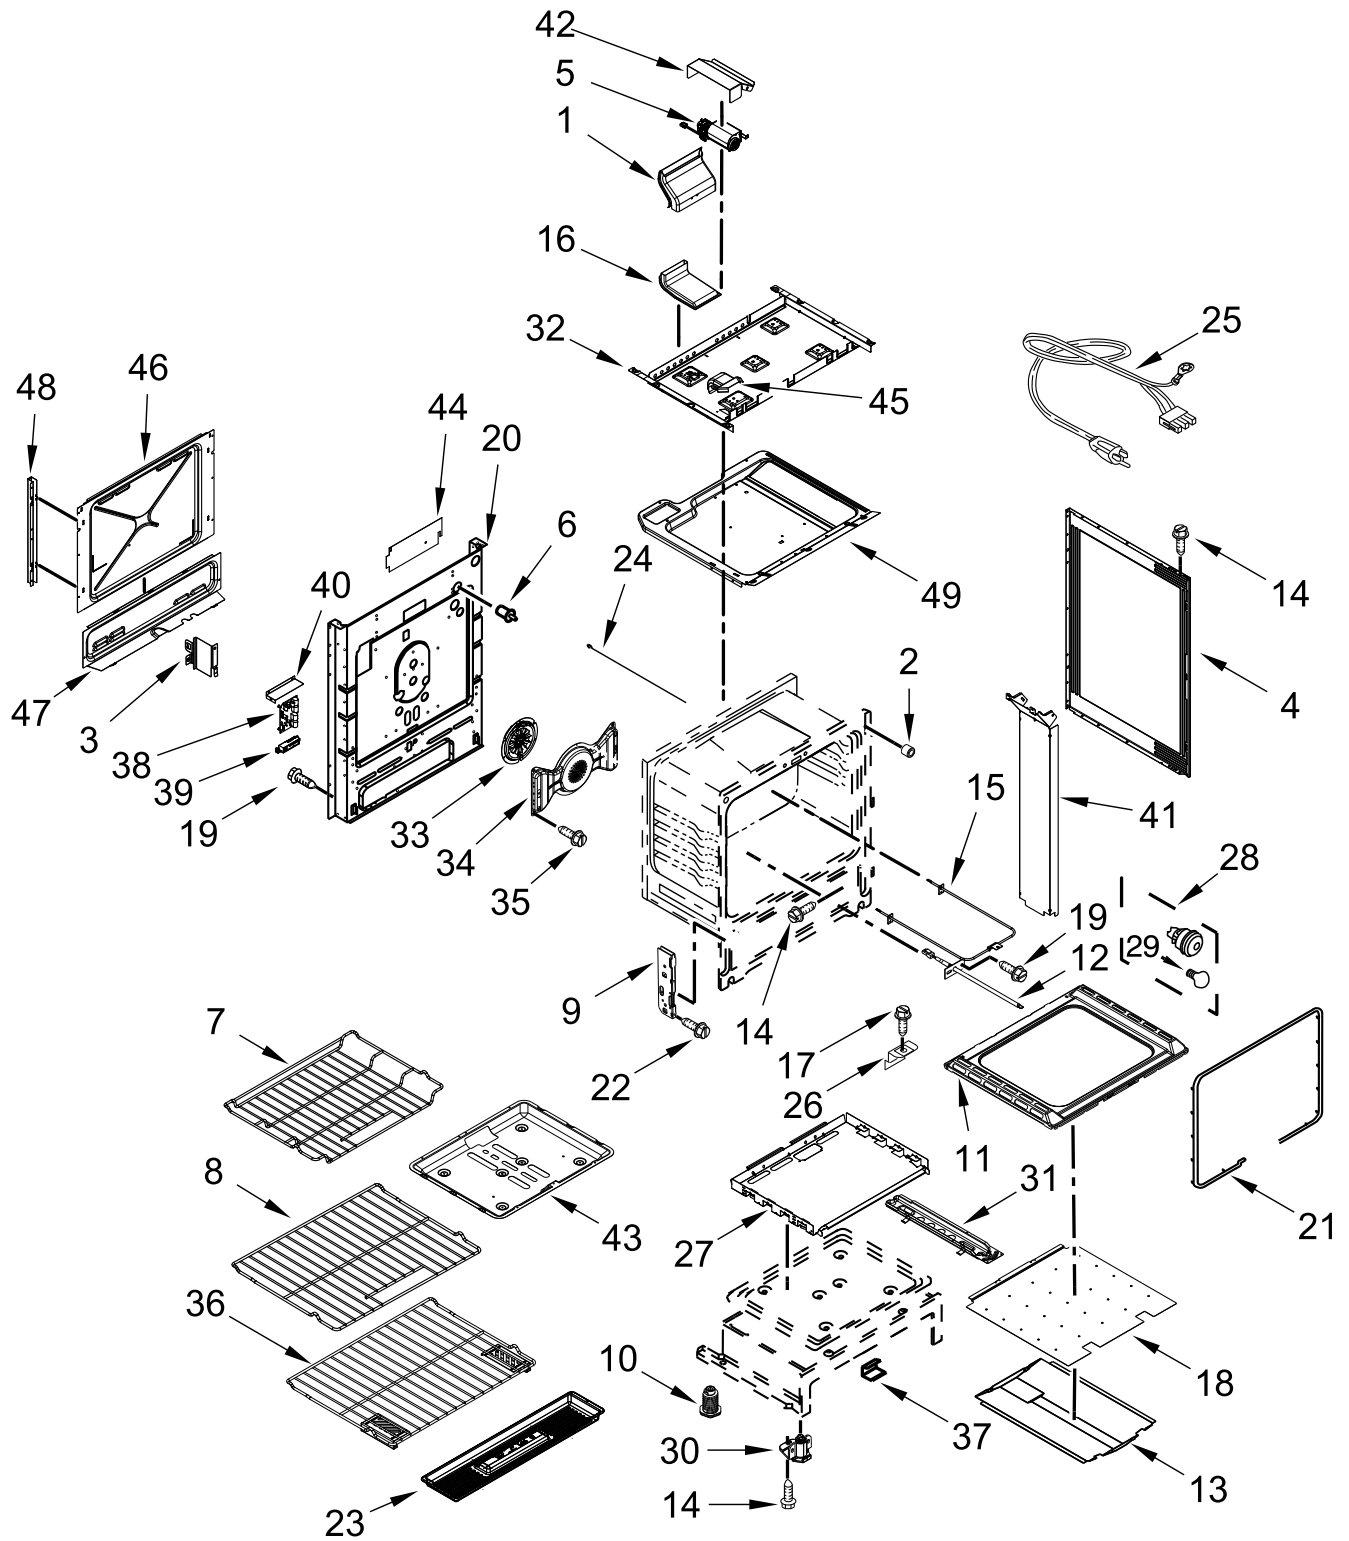

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	19	3196178	Screw	37	W10137382	Clip, Panel
2	9758701	Spacer, Door	20	W10289166	Back, Main	38	W10457998	Module, Spark (0+2)
3	W10273002	Bracket, Oven Support	21	W10162385	Gasket, Door	39	W10475149	Module, Spark (5+0)
4		Panel, Side	22	W10031780	Screw	40	W10655451	Guard, Splash
	W10162245	Black	23	W10686408	Kit, Reservoir (Steam Rack)	41	W10162254	Duct, Cooling
5	W10780482	Assembly, Cooling Fan	24	W10273192	Rod, Door Switch	42	W10162255	Duct, Cover
6	W10627802	Switch, Door	25	W10889764	Cord, Power	43	W10273204	Pan, Bake
7	W10554006	Rack, Maximum Capacity	26	W10035900	Support, Oven Bottom	44	W10813366	Shield, Wire
8	W10554005	Rack, Heavy Duty	27	W10541959	Shield, Bake	45	W10162257	Duct, Cooktop
9	W10289077	Receiver, Hinge	28	W10454648	Assembly, Light	46	W10289172	Cover, Back
10	W10058460	Foot, Leveling	29	311255	Bulb, Oven Light	47	W10162249	Cover, Wire
11	W10211368	Bottom, Oven	30	W10341186	Assembly, Front Foot	48	W10162241	Channel, Rear
12	W10586204	Sensor	31	W10390008	Assembly, Base Rail (Left)	49	W10289168	Box, Burner SI
13	3601P356-45	Baffle, Bake Burner		W10390007	Assembly, Base Rail (Right)			INSULATION
14	3196178	Screw					4820F015-59	Insulation, Strap
15	W10552502	Element, Broil Assist	32	W10558276	Box, Burner Gas		W10289173	Insulation, Wrap
16	W10311326	Assembly, Flue (Upper)	33	W10874477	Assembly, Convection		W10162240	Insulation, Back
17	W10362924	Screw	34	W10346153	Baffle, Full Convection		W10716764	Insulation, Burner Box
18	W10323077	Diffuser, Flame	35	W10362924	Screw			
			36	W10554007	Rack, Steam			


MANIFOLD PARTS

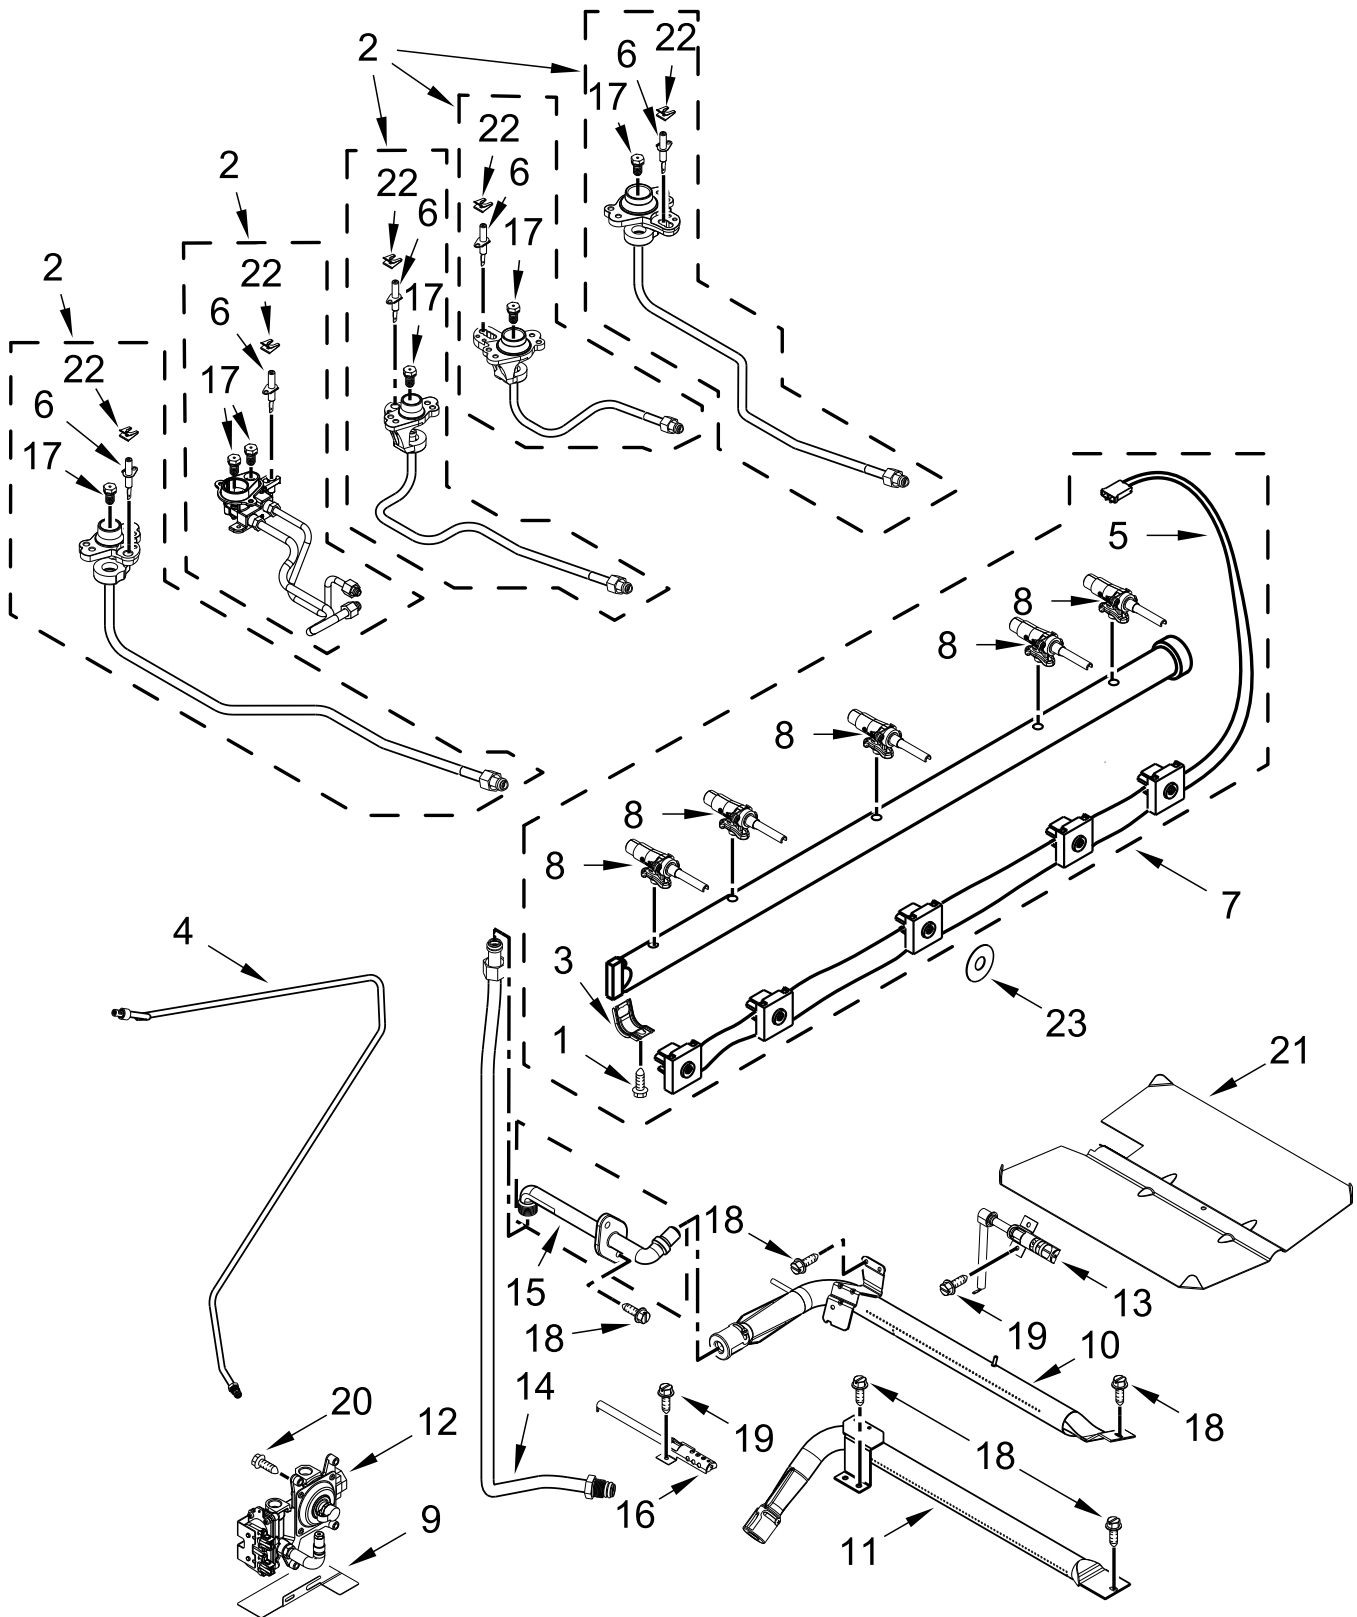

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10673618	Screw	8	W10432224	Valve, Gas Duel (Left Front)	17	W10506739	Orifice (17K) (Left Front)
2	W10552123	Orifice, Assembly (Left Front)		W10831591	Valve, Gas (Left Rear)		W10256132	Orifice (1.2K) (Left Front)
	W10552121	Assembly, Orifice (Left Rear)		W10566062	Valve, Gas (Right Front)		W10515054	Orifice (Left Rear)
	W10552120	Assembly, Orifice (Right Front)		W10566057	Valve, Gas (Right Rear & Center)		W10434277	Orifice (Right Front)
	W10552119	Assembly, Orifice (Right Rear)	9	W10224921	Bracket, Aegis		W10657949	Orifice (Right Rear)
	W10552124	Assembly, Orifice (Center)	10	W10439242	Burner, Broiler		W10657947	Orifice (8K) (Center)
3	W10295996	Bracket, Saddle Valve	11	W10680035	Burner, Bake	18	3196178	Screw
4	W10432252	Tube, Gas Supply	12	W10554066	Valve, Regulator	19	3196385	Screw
5	W10432517	Harness, Switch Spark	13	W10324262	Igniter, Bake	20	3400016	Screw
6	W10496874	Electrode (Left Front)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)	21	3601P336-45	Baffle, Broil Burner
	W10464799	Electrode (Left Rear)	15	W10583216	Fitting, Broil Burner	22	W10575401	Clip, Spring (Electrode)
	W10496870	Electrode (Right Front & Center)	16	W10333842	Electrode, Broil	23	W10140571	Seal, Switch Shaft
	W10496872	Electrode (Right Rear)						
7	W10826727	Assembly, Manifold						


DOOR PARTS

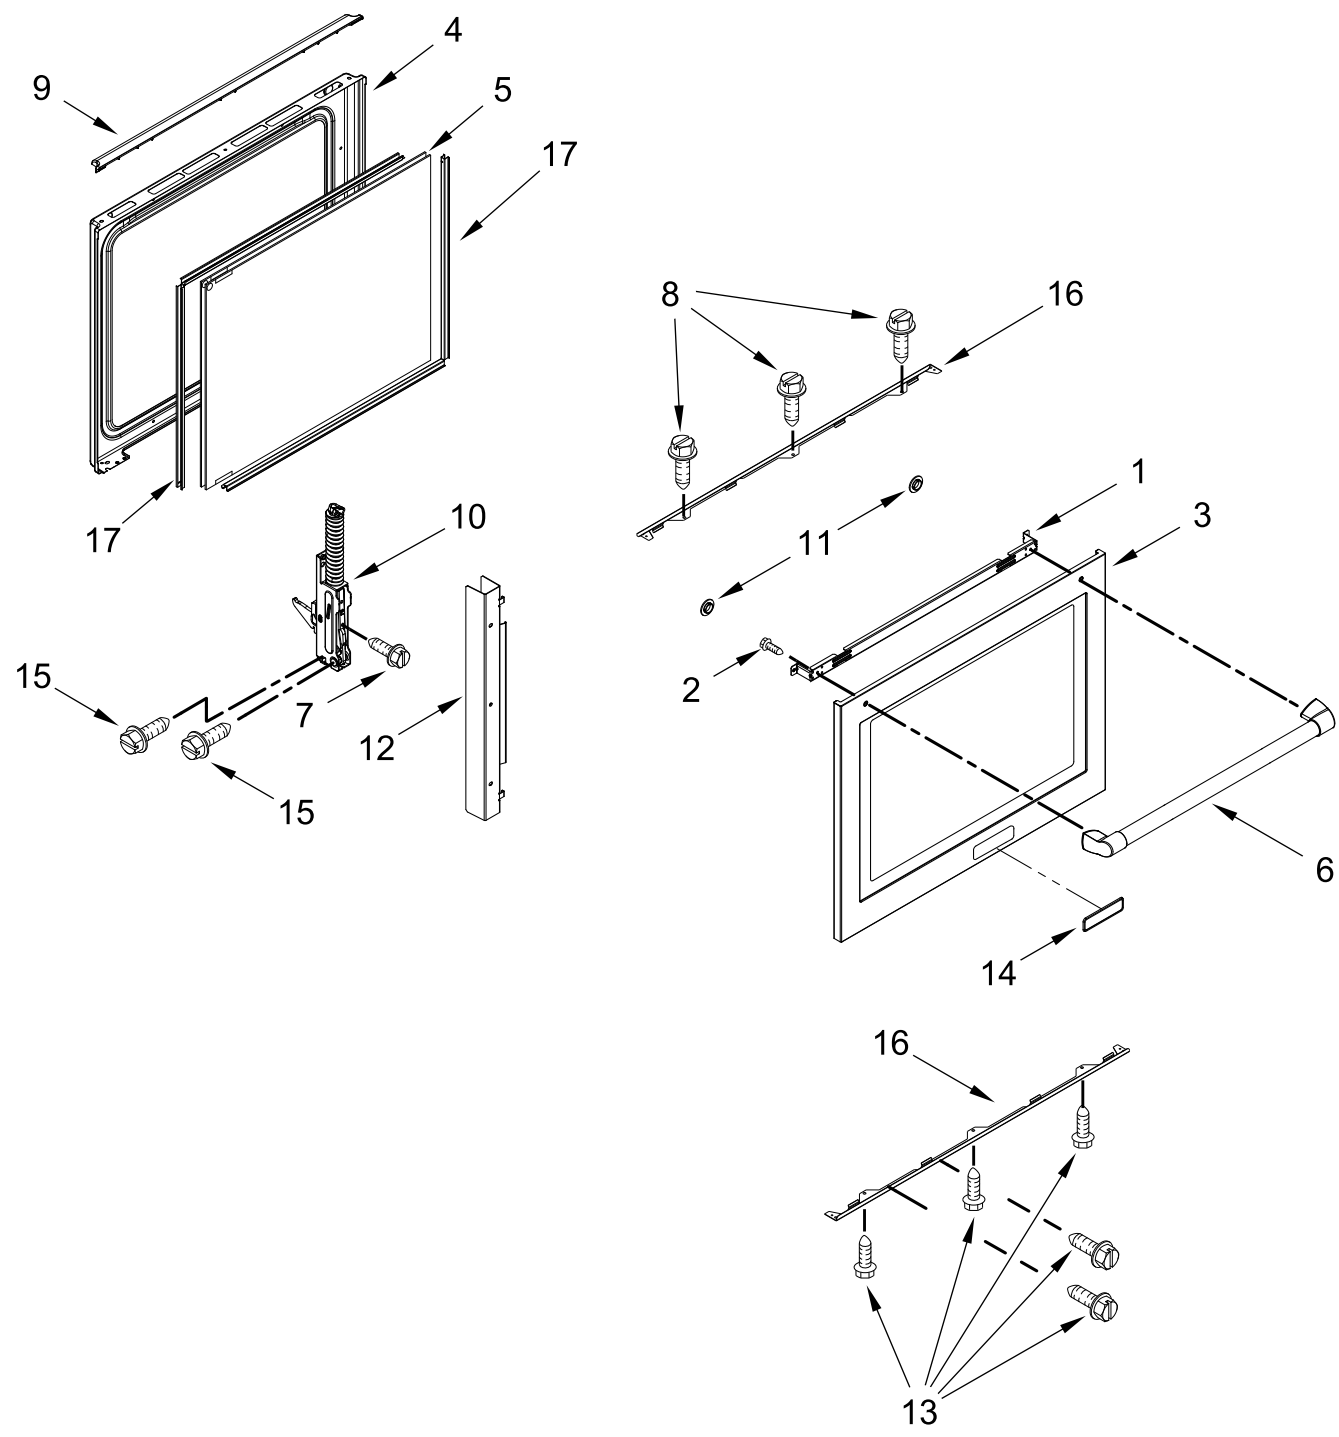

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	7	W10031780	Screw	15	W10327235	Screw
2	8533988	Screw	8	9780274	Screw	16	W10813140	Rail, Horizontal Support
3		Assembly, Outer Door	9		Scoop, Door	17	W10813142	Spacer, Glass
	W10861021	Black		W10613791	Black			
4	W10826568	Liner, Door	10	W10885519	Hinge, Door (Active)			
5	W10813616	Glass, Inner	11	W10319024	Washer, Door			
6		Assembly, Door Handle	12	W10813139	Rail, Vertical Support			
	W10551000	Stainless	13	W10031790	Screw			
			14		Badge			
				W10518672	Grey			

DRAWER PARTS

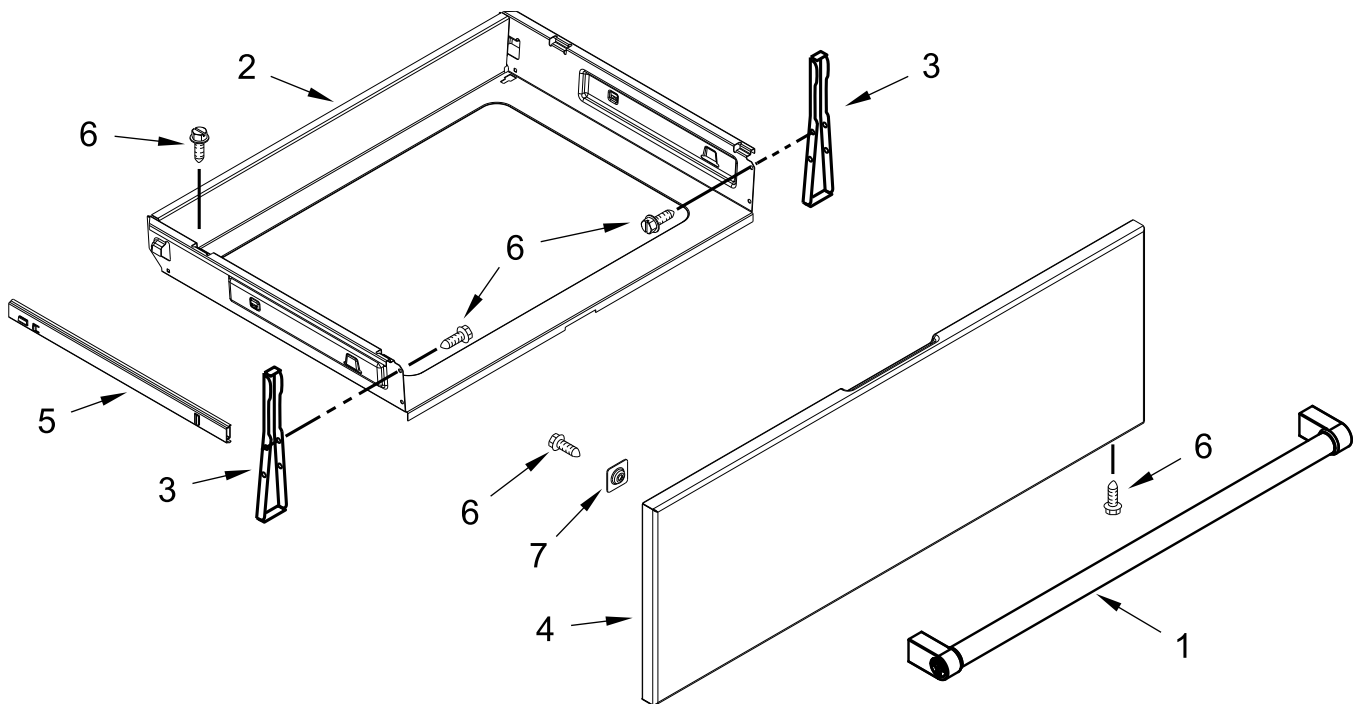

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	8533988	Screw
	W10551000	Stainless		W10441805	Slide, Drawer (Right)	7	3823F017-45	Spacer, Handle
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10860958	Black						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31463A	Protectant, Cooktop
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	WA906B	Scraper, Cooktop
	242905	Kit, Canning Unit
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432545	Kit, Grill
	W10432544	Griddle
	W10432019	Alt Cleaning Kit Assembly, Trim (5/8")
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8")
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless