

KitchenAid KSIB900ESS Slide-In Induction Range User Guide

KitchenAid KSIB900ESS Slide-In Induction Range User Guide

Operating Instructions

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Using Your Oven

Step 1. Select oven function

Step 2. Set the temperature

Step 3. Press Start

Step 4. Place food inside the oven once set temperature is reached. Close the oven door.

Step 5. (Optional) Enter time to cook

Step 6. The Cancel button can be use to cancel the function during or after cook time.

NOTE: For more detailed instructions on specific functions, see the online Control Guide.

Using Your Range




To use press power, touch respective display area to turn on the desired heating element.



Select a heat setting from “1” through “9” by touching/sliding on the power slider.

REMEMBER: When range is in use, the entire cooktop area may become hot.

POSITIONING RACKS AND BAKEWARE

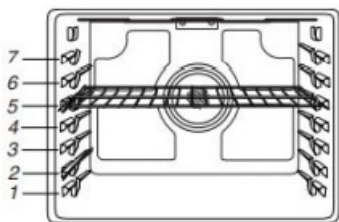

IMPORTANT: To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.


Racks

- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Make sure racks are level.

To position a rack, pull it out to the stop position, raise the front edge, and then lift out. Use the following illustration as a guide.

For hamburger patties to have a well-seared exterior and a rare interior, use a flat rack in rack position 7. Side 1 should cook for approximately 2 1/2 to 3 1/2 minutes. Side 2 should cook for approximately 4 to 5 minutes. Expect a moderate degree of smoke when broiling.

BAKING COOKIES AND LAYER CAKES ON 2 RACKS

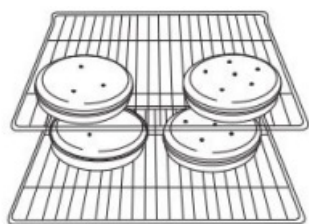

Baking Layer Cakes

For best results when baking cakes on 2 racks, use the Bake function, a flat rack in rack position 3, and a roll-out rack in rack position 5. Place the cakes on the racks as shown. Keep at least 3" (7.6 cm) of space between the front of the racks and the front cakes.

Baking Cookies

For best results when baking cookies on 2 racks, use the Convection Bake function, a flat rack in rack position 3, and a roll-out rack in rack position 5.

ALUMINUM FOIL

IMPORTANT: To avoid permanent damage to the oven bottom finish, do not line the oven bottom with any type of foil or liner.

For best cooking results, do not cover entire oven rack with foil because air must be able to move freely.

Care must be taken to prevent aluminum foil and meat probes from contacting heating elements.



A. Oven vent

OVEN VENT

The oven vent releases hot air and moisture from the oven, and should not be blocked or covered. Blocking or covering the oven vent will cause poor air circulation, affecting cooking and cleaning results. Do not set plastics, paper or other items that could melt or burn near the oven vent.

OVEN LIGHT

The oven light is a 40 W halogen bulb. Before replacing, make sure the oven and cooktop are cool and the control knobs are in the Off position.

To Replace:

1. Disconnect power.
2. Turn the glass bulb cover in the back of the oven counterclockwise to remove.
3. Remove bulb from socket.
4. Replace bulb, using tissue or wearing cotton gloves to handle bulb. To avoid damage to or decreasing the life of the new bulb, do not touch bulb with bare fingers.
5. Replace bulb cover by turning clockwise.
6. Reconnect power.

IMPORTANT: Do not use lamps rated higher than 40 W.

SABBATH MODE:

The Sabbath Mode sets the oven to remain on in a bake setting until disabled.

For guidance on usage and a complete list of models with Sabbath Mode, visit www.star-k.org or contact us as per the information given below.

Online Ordering Information

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

For information on any of the following items, the full cycle guide, detailed product dimensions, or for complete instructions for use and installation, please visit <https://www.kitchenaid.com/service-and-support>, or in Canada <https://www.kitchenaid.ca/service-and-support>. This may save you the cost of a service call.



However, if you need to contact us, use the information listed below for the appropriate region.

United States:

1-800-253-1301

KitchenAid Brand Home Appliances

Customer eXperience Center

553 Benson Road

Benton Harbor, MI 49022-2692

Canada:

1-800-807-6777

KitchenAid Brand Home Appliances
Customer eXperience Centre
200–6750 Century Ave.
Mississauga, Ontario L5N 0B7

IMPORTANT: Retain this guide for future use.

®/™ ©2020 KitchenAid. All rights reserved. Used under license in Canada.



Documents / Resources



KSIB900ESS Slide-In Induction Range
User Guide · KSIB900ESS, Slide-In Induction Range



KSIB900ESS Slide In Induction Range
Owner's Manual · KSIB900ESS, KSIB900ESS Slide In Induction Range, Slide In Induction Range, Induction Range, Range

Published: February 11, 2022
Updated: February 12, 2022

Related Topics

- Slide-In Induction Range
- KSIB900ESS