



PARTS LIST

Illus	Part No.	Name of part	QTY	Illus	Part No.	Name of part	QTY
1	B10-01-19	Mixing shaft	1	25	B10-04-00	Motor	1
2	GB9877.1-88	Seal FB20x40x7	1	26	B10-02-04	Connecting rod	1
3	GB278-82	Bearing 60203	4	27	B10-02-06	Brace	1
4	B10-01-15	Collecting oil plate	1	28	B10-01-08	Cover of body	1
5	B10-01-21	Gear Z=18	1	29	B10-01-07	Seal ark	1
6	B10-01-17	Rotating seat	1	30	B10-02-08	Washer	3
7	B10-01-16	Internal gear Z=62	1	31	B10-02-09	Spring L=60	1
8	B10-01-01	Body	1	32	B10-01-26	Gear Z=14	1
9	GB9877.1-88	Seal FB25x47x7	1	33	GB894.1-86	Shield ring of shaft	1
10	GB278-82	Bearing 60204	2	34	B10-01-28	Handle seat	1
11	B10-01-02	Closing cover plastic	1	35	B10-01-25	Yoke shaft	1
12	B10-01-04	Main shaft	1	36	B10-01-24	Yoke	1
13	B10-01-06	Duplex gear	1	37	B10-01-27	Hand shaft	1
14	B10-01-03	Changed speed shaft	1	38	GB308-77	Steel ball	1
15	B10-01-09	Cover pedestal	1	39	B10-01-23	Spring L=21	1
16	B10-01-31	Closing cover	1	40	B10-02-03	Carriage	1
17	GB893.1-86	Shield ring of hole 47	1	41	B10-02-01	Seat	1
18	GB893.1-86	Shield ring of hole 40	1	42	B10-06	Bowl	1
19	B10-01-11	Sleeve of pad	1	43	B10-02-02	Positioning pin	2
20	B10-01-10	Big belt pulley	1	44	B10-02-05	Upright post	1
21		Belt	1	45	B10-02-07	Platen	2
22	B10-01-12	Small belt pulley	1	46	B10-02-10	Cranking bar	1
23	B10-01-13	Flange	1	47	B10-F2	Protect cover	1
24	B10-01-14	Plate of belt pulley	1	48	B10-F3/F4	Support	1