
UNDERCOUNTER REFRIGERATORS AND FREEZERS

Installation, Operation and Maintenance

Instructions

INSPECTION

When the equipment is received, all items should be carefully checked against the Bill of Lading to insure all crates and cartons have been received. Do not sign the freight bill clear until the freight has been properly inspected for damage. All units should be inspected for damage including concealed damage by uncrating immediately. If any damage is found, it should be reported to the carrier at once, noted on the Bill of Lading and a claim should be filed with the carrier. This equipment has been inspected and tested in the manufacturing facility and has been crated in accordance with transportation rules and guidelines. The manufacturer is not responsible for freight loss or damages.

INSTALLATION

The exterior of the cabinet and doors have been protected by a plastic covering. Peel this protective covering before installation. After removing the covering, clean the interior and exterior surfaces of the unit with soap and water and a rinse with clean water. Do not use chlorinated cleaners on the surfaces as they can cause corrosion.

If the door(s) have come out of alignment during shipping they will need to be adjusted. This can be accomplished by opening the door(s) and loosening the screws that hold both the top and bottom hinges to the cabinet. After adjusting the door so it is aligned correct, tighten the screws to securely hold the hinges and door(s) in place.

The shelves and self clips are packaged inside the unit. Install the shelf clips on the pilasters inside the unit and set the shelves on the clips. The shelves are adjustable in ½" increments. One (1) shelf can support up to 132 lbs (60 kg).


The refrigeration system located in the rear of the unit requires free air access for proper operation. Allow a minimum of seven inches between the back of the cabinet and the wall. Do not locate the unit next to heat generating equipment or in direct sunlight.

Confirm that the proposed electrical outlet has the correct voltage, frequency and current carrying capacity for the requirements of the unit. This information is noted on the data plate on the inside left wall of the unit. The unit should be isolated on a circuit.

Do not use an extension cord to get power to the unit. Improper electrical installations will void the compressor warranty. To prevent shock and fire, be sure the unit is properly grounded.

The temperature controller is located at the top, right corner inside the cabinet. Adjust the temperature to fit your needs.

Install casters per the following diagram.

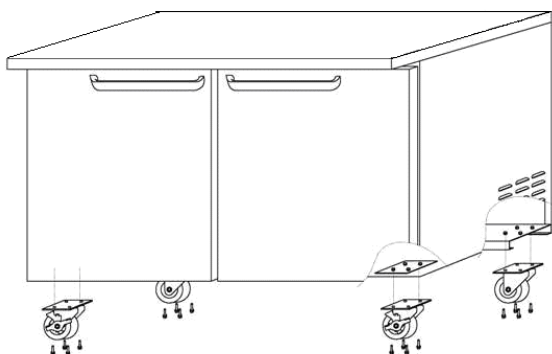

Note: The casters with brakes should be installed to the front of the cabinet.

MAINTENANCE

General Cleaning

Beginning with the initial installation, the interior surfaces of the cabinet should be periodically cleaned with a solution of warm water and baking soda. This solution will remove any odors from spillage that has occurred. The exterior of the cabinet should also be cleaned frequently with a commercial stainless steel cleaner, glass cleaner or mild soap solution. Do not use chlorinated cleaners on the stainless steel surfaces.

The door gaskets should be cleaned in place with a mild soap solution to extend their life.

The shelving can be cleaned in a sink with a mild soap solution and a soft bristled brush.

Condenser Coil Cleaning

Prior to cleaning the condenser coil disconnect the unit from power. Periodic cleaning of the condenser coil will aid the heat transfer of the refrigeration system and increase its efficiency. To accomplish this, remove the rear grill from the cabinet. The condenser coil is located behind the grill. Use a soft bristled brush to remove any dirt particles that are on the fins of the condenser coil. Use a vacuum cleaner or compressed air to remove the loosened particles. Replace the grill and reconnect the unit to power. Failure to clean the condenser coil can lead to performance loss and compressor failure.

Stocking

When loading the cabinet with contents, do not block the fans in the back. Blocking the air flow may decrease performance.

TROUBLESHOOTING

Problem	Remedy
Compressor will not start	• Check the power cord and make sure it is plugged in. • Check the temperature controller. If it is in the “OFF” position, turn it clockwise to set a desired temperature. - If there is an on/off switch, make sure it is in the “ON” position.
Poor performance	• Move the unit from direct sunlight. • Move the unit away from heating devices. • Install the unit in a well ventilated place, with at least 7 inches of clearance on all sides. • Clean the condenser if heavy dust is collected. • Clear contents from blocking the air duct. • Check the temperature controller for incorrect setting. • Check the refrigerant level, it may need to be charged. • Check the door and be sure it is completely closed.
Unit noisy	• Install the unit on a level surface. • Maintain 7 inches of clearance from the wall. • Check for loose part or mounting. • Keep the tubing free from any contact to avoid rattle.
Condensation on cabinet exterior and/or floor	• Reduce humidity where the unit is installed. • Repair or replace the gasket on the door.

SPECIFICATIONS

PRODUCT		UNDERCOUNTER REFRIGERATORS/FREEZERS			
MODEL	REF	UR27	UR48	UR60	UR72
	FRZR	UF27	UF48	UF60	UF72
Capacity		7 CuFt (170 liter)	13 CuFt (368 liter)	16 CuFt (453 liter)	20 CuFt (566 liter)
Exterior Dimensions (including casters)	(W)	27.5"	48.2"	60.4"	72.4"
	(D)	30.0"	30.0"	30.0"	30.0"
	(H)*	35.9"	35.9"	35.9"	35.9"
Doors		1 Swing	2 Swing	2 Swing	3 Swing
Shelves		2	4	4	6
Compressor	REF	1/5 HP	1/5 HP	3/8 HP	3/8 HP
	FRZR	3/8 HP	1/2 HP	1/2 HP	3/4 HP
Power Voltage		115V / 60Hz			
Plug In-Installation		NEMA 5-15P			
Amps	REF	3.2	7.9	7.9	8.1
	FRZR	8.3	8.9	8.9	8.9
Range of Temperature	REF	+32°F ~ +40°F			
	FRZR	Below 0°F			
Refrigerant	REF	R-134a	R-134a	R-134a	R-134a
	FRZR	R-134a	R-404a	R-404a	R-404a
Net Weight (lbs)	REF	185	264	309	353
	FRZR	194	282	326	370

- Above specifications are subjected to change without prior notice for quality improvement.

* Includes 6 inch casters. 3 inch casters are available.