



AUTOMATIC  
FOOD SERVICE  
EQUIPMENT

AUTOMATIC GAS BROILER  
MODEL N724/750 FT & RF

---

# OWNERS MANUAL

IMPORTANT: RETAIN THIS MANUAL IN A SAFE PLACE  
FOR FUTURE REFERENCE.

**FOR YOUR SAFETY:**

**Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.**

**WARNING: Improper installation, adjustment, alteration, maintenance can cause property damage, injury, or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.**

Broiler area must be kept free of combustible materials, and the flow of combustion and ventilation air must not be obstructed. Operating personnel must not perform any maintenance or repair functions. Contact your Nieco Authorized Dealer.

In a prominent location, post instructions to be followed in the event the user smells gas. This information shall be obtained by consulting your local gas supplier.

# TABLE OF CONTENTS

<b>A. General Information</b> .....	<b>3</b>
A.1 Description .....	3
A.2 Warranty Information .....	3
A.3 Service/Technical Assistance .....	4
A.4 Safety Information .....	4
<b>B. Machine Installation</b> .....	<b>6</b>
B.1 Pre-Installation .....	6
B.2 Mounting .....	6
B.3 Leveling .....	6
B.4 Hood Requirements .....	6
B.5 Clearance .....	6
B.6 Gas Connection .....	7
B.7 Flexible Gas Line Installation .....	7
B.8 Restraining Device .....	8
B.9 Electrical Connection .....	8
B.10 Pre-Operation Check .....	8
<b>C. Troubleshooting Guide</b> .....	<b>9</b>
<b>D. Operation</b> .....	<b>11</b>
D.1 Controls and Indicators .....	11
D.2 Step-by-Step Lighting Procedure .....	12
D.3 Shutdown Procedure .....	13
D.4 Control Operation .....	14
<b>E. Cleaning and Disassembly</b> .....	<b>15</b>
<b>F. Broil Chain Tension &amp; Link Removal</b> .....	<b>27</b>
<b>G. Specifications</b> .....	<b>28</b>
<b>H. Wiring Diagram</b> .....	<b>29</b>

# A. GENERAL INFORMATION

## A.1 Description

The Nieco® Model N724/750 automatic broiler, has up to two belts, high release convection burners, a new, simplified ignition system, easy cleaning and state-of-the-art digital controls to help eliminate broiling problems and provide the operator with even greater control over the broiling environment. The N724/750 can be return-flow or flow-through.



This manual provides the safety, installation and operating procedures for the Nieco Automatic Broiler Model N724/750. We recommend that all information contained in this manual be read prior to installing and operating the broiler.

## A.2 Warranty Information

Please read the full text of the limited Warranty in this manual.

If the unit arrives damaged, contact the carrier immediately and file a damage claim with them. Save all packing materials when filing a claim. Freight damage claims are the responsibility of the purchaser and **ARE NOT** covered under warranty.

The warranty **does not** extend to:

- Damages caused in shipment or damage as a result of improper use.
- Installation of electrical service.
- Normal maintenance as outlined in this manual.
- Malfunction resulting from improper maintenance not in accordance with the steps contained in this manual and any applicable training.
- Damage caused by abuse or careless handling outside of the normal operating procedures contained in this manual.
- Damage from moisture into electrical components.
- Damage from tampering with or removal of any safety device.

### **IMPORTANT!**

**Keep these instructions for future reference. If the unit changes ownership, be sure this manual accompanies the equipment.**

### **IMPORTANT**

**The Nieco Corporation reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.**

### A.3 Service/Technical Assistance

If you experience any problems with the installation or operation of your broiler, contact your local Authorized Nieco Distributor.

Fill in the information bellow and have it handy when calling your authorized service agency for assistance. The serial number is on the broiler rating plate on the side of the unit.

Purchased from: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_



For the name of your local Authorized Nieco Distributor, please call (800) 821-2141.



Use only genuine Nieco replacement parts in your broiler. Use of replacement parts other than those supplied by Authorized Nieco Distributors and Service Agencies will void the warranty and may significantly alter the performance of your broiler. Your local Authorized Nieco Distributor and Service Agent has been factory trained and has a complete supply of parts for your Nieco Automatic Broiler.



You may contact the factory direct at (707) 284-7100 if you have trouble locating your local Nieco Distributor.



### A.4 Important Safety Information

Throughout this manual, you will find the following safety words and symbols that signify important safety issues with regards to operating or maintaining the equipment:

 <b>WARNING</b> 
<b>GENERAL WARNING.</b> Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment and/or severe bodily injury or death.

 <b>WARNING</b> 
<b>ELECTRICAL WARNING.</b> Indicates information relating to possible shock hazard. Failure to observe may result in damage to the equipment and/or severe bodily injury or death.

 <b>CAUTION</b> 
<b>GENERAL CAUTION.</b> Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment.

 <b>WARNING</b> 
<b>HOT SURFACE WARNING.</b> Indicates information important to the handling of equipment and parts. Failure to observe caution could result in personal injury.

## A.4 Important Safety Information (Cont.)

In addition to the warnings and cautions in this manual, use the following guidelines for safe operation of your Nieco Automatic Broiler:

- Read and follow all instructions before using this equipment.
- Install or locate broiler only for its intended use as described in this manual.
- Do not operate this equipment if it has a damaged cord or plug, if it is not working properly or if it has been otherwise damaged.
- This equipment should only be serviced by authorized personnel. Contact your local Nieco Distributor for adjustment or repair.
- Use only genuine Nieco replacement parts for your broiler. Failure to do so will void the warranty and may significantly alter the performance of your broiler.

**The following warnings and cautions appear throughout the manual and should be carefully observed:**

- **Turn the broiler off, close the main gas valve, and disconnect the plug before performing any service, maintenance or cleaning on the broiler.**
- **Always allow the broiler to fully cool before performing any service, maintenance or cleaning. Failure to wait for the broiler to cool fully may result in personal injury.**
- **The procedures in this manual may include reference to the use of chemical products. The Nieco Corporation does not endorse the use of any particular cleaning/degreasing agent. Use only those chemicals that are approved for use in your kitchen.**
- **The broiler should be grounded according to local electrical codes to prevent the possibility of electrical shock. It requires a grounded receptacle with separate electrical lines, protected by fuses or circuit breakers of the proper rating.**
- **All electrical connections must be in accordance with local electrical codes and any other applicable codes.**
- **The use of adequate ventilation (as rated in this manual) with this broiler is mandatory. Failure to adequately ventilate this unit and provide safe operating distances (as specified in this manual) is a fire safety hazard. Follow the instructions for emergency broiler shutdown in the event of an emergency.**
- **No attempt should be made to operate this appliance in the event of a power failure.**

**WARNING ELECTRICAL SHOCK HAZARD. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH:**

- **Electrical ground is required on this appliance.**
- **Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.**
- **Do not use water on or near the control box located on the underside of the broiler for risk of serious injury or death due to electrical shock.**

**WARNING, HIGH TEMPERATURES WITH HOT SURFACES. FAILURE TO FOLLOW THESE PROCEDURES COULD RESULT IN SERIOUS INJURY:**

- **Do not attempt to clean, disassemble or perform maintenance on this broiler until it is fully cooled as per the instructions contained in this manual.**

# B. INSTALLATION

## B.1 Pre-Installation

Uncrate the broiler and inspect for shipping damage. Remove the tape securing the machine parts, and install the parts in their proper location. If there are obvious or concealed damages to any part of the broiler, please contact your freight carrier. The factory warranty does not cover freight damage.

## B.2 Mounting

- B.2.1 Remove all parts from the broiler.
- B.2.2 Lift broiler onto stand. NOTE: The cross bar on the base of the stand should be on the discharge (back side) end of the broiler.
- B.2.3 Use the supplied nuts and bolts to bolt the frame of the broiler to the stand.
- B.2.4 Follow the steps outlined in the manual to reassemble the broiler.

## B.3 Leveling

The grease drain system is based on a gravity-flow design. Therefore, it is extremely important to level the broiler during installation.

## B.4 Hood Requirements

This appliance must be installed under a ventilation hood of adequate size and the following minimum capacity:

Model	SCFM
N724/750	800

Do not obstruct the flow of combustion and ventilation air. An adequate air supply must be available for safe and proper operation.

## B.5 Clearance

For proper installation the minimum required clearance from combustible construction and walls is 12" (305 mm) from all sides of the broilers. The minimum required clearance from non-combustible construction and walls is 0" (0 mm) from all sides of the broiler. Keep appliance area free from combustibles. Check with local authorities (building and fire) for standards and requirements for wall and floor construction to comply with your local codes.

### REQUIRED AND RECOMMENDED CLEARANCES

	<b>REQUIRED</b> for installation near combustible walls and construction	<b>REQUIRED</b> for installation near non-combustible walls and construction	<b>RECOMMENDED</b> by Nieco for proper disassembly and service
Back of broiler	12" (305 mm)	0" (0 mm)	12" (305 mm)
Sides of broiler	12" (305 mm)	0" (0 mm)	12" (305 mm)
Front of broiler (Feed end)	12" (305 mm)	0" (0 mm)	24" (610 mm)

### CAUTION

**SEVERE FIRE HAZARD. Follow local fire and building codes for non-combustible construction. Failure to do so could result in a fire hazard. If unsure of your construction, follow minimum clearances for combustible construction.**



## B.6 Gas Connection- 3/4" N.P.T.

At rated input the gas supply should deliver a minimum pressure of at least 15 mbar (5" water column) at the broiler connection for natural gas. Incoming gas supply pressure must not exceed 50 mbar (14" water column).

**Note:** The installation of this appliance must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1, Natural Gas Installation Code, CAN/CGA-B149.1 including:

1. The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.45 kPa).
2. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.45 kPa).

By public initiative, the State of California has adopted legislation (Proposition 65) which requires manufacturers of many types of products, including gas appliances, to warn consumers of their products that contain chemicals or produce substances listed by the State of California to either cause cancer, birth defects or other reproductive harm.

	<b>WARNING</b>	
<b>If not installed, operated and maintained in accordance with the manufacturers instructions, this product could expose you to substances in fuel or from fuel combustion which can cause cancer, birth defects or other reproductive harm.</b>		

## B.7 Installing Gas Appliance Connectors and Flexible Gas Lines Correctly

For safety in the kitchen area, and to insure maximum service life, it is vitally important to correctly install connectors. The connector shall comply with the Standard for Connectors for Moveable Gas Appliances, ANSI Z21.69 or CAN/CGA-6.16 and a quick disconnect device that complies with the Standard for Quick-Disconnect Devices for use with gas fuel, ANSI Z21.41 or CAN1-6.9

In order to avoid sharp kinks or excessive bends that could have a damaging effect on the connector, it may be necessary to attach pipe elbows in order to bring the connector into its proper plane. For easy movement of the appliance, the connector should be installed with a "lazy" loop for minimum tension.

**Note: Gas appliances should be disconnected prior to maximum movement. (Minimal movement is possible to connect hose.)**

**N724/750  
Manual  
Gas Valve**



**N724/750 Equipment Side Gas  
Connection**




## B.8 Restraining Device Installation and Use

This high strength restrainer is to be used with all moveable (castered) appliances. It fully complies with American Gas Association requirements. References: Z21.69, Z83.11, and Z21.41 with current revisions. Installation is quick and positive. In Canada, device is in accordance with CAN 1-6.9-M70 Quick Disconnect Devices for use with gas fuel, and CAN 1-6.10-88 metal connectors for gas appliances. Correct length for any appliance is simply a matter of loosening two adjuster clips (1) and re-tightening. (3" to 6" shorter than appliance connector is desired length.)

Restrainer is made of heavy duty steel cable, with a strong scissor hood (2) at one end, and an equally strong spring hook (3) at the other. Cotter pin (4) is supplied to secure the installation. For proper attachment to the broiler, use the supplied hardware to attach the device to the holes in the shear plate of the broiler stand.

**NOTE: If disconnection of the restraint is necessary, reconnect the restraint after the appliance has been returned to its originally installed position.**

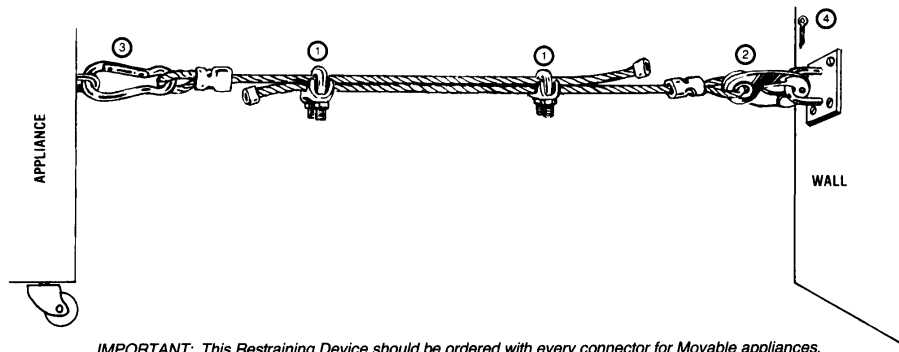

## B.9 Electrical Connection

Power requirements are stated on the unit nameplate and must be connected accordingly. This appliance, when installed must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.2, as applicable. Before starting broiler, tighten all electrical connections in control box. An electrical wiring diagram can be found inside the control box.

**Note:** Disconnect power before servicing.

## B.10 Pre-Operation Check

Be sure that all parts are installed in the proper location:

- Ventilation is turned on
- Broiler is plugged in
- Gas line is connected

## C. TROUBLESHOOTING

Always verify that the broiler is properly assembled, the hood is on, gas valve open and broiler is plugged in.

Problem	Solution
<p><b>Pilots not lighting</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check that broiler is plugged in, gas valve is open and broiler is turned on</li> <li><input type="checkbox"/> Manually light</li> <li><input type="checkbox"/> Check for ignition</li> <li><input type="checkbox"/> Check for clogged pilot</li> </ul>
<p><b>Burners not lighting</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check for gas pressure, if there is pressure, use the manual lighting procedure</li> <li><input type="checkbox"/> If no gas pressure, call for service</li> <li><input type="checkbox"/> Check for proper burner installation</li> <li><input type="checkbox"/> Check for plugged burner orifices</li> <li><input type="checkbox"/> Check for plugged pilot burner</li> </ul>
<p><b>Pilot not staying lit</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Call for service as thermocouple may need replacing</li> </ul>
<p><b>Broil chain jams</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check: <ul style="list-style-type: none"> <li>___ For sag in the chain (Chain may need a link removed)</li> <li>___ For an obstruction</li> </ul> </li> </ul>
<p><b>Product not cooking to proper temperature in cookouts</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Adjust cook time</li> <li><input type="checkbox"/> Check that broiler is calibrated properly</li> <li><input type="checkbox"/> Check that all burners are lit</li> <li><input type="checkbox"/> Check that all parts are installed correctly, and that lower burner holes are facing up</li> <li><input type="checkbox"/> Check that broiler is properly cleaned and assembled</li> <li><input type="checkbox"/> Check ventilation <ul style="list-style-type: none"> <li>___ Make sure there isn't excessive exhaust or an air vent blowing on the broiler</li> </ul> </li> </ul>

Problem	Solution
<b>Meat patties not returning</b>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check that patties have not gotten stuck on the return slide               <ul style="list-style-type: none"> <li>___ Remove awnings to check</li> <li>___ Remove product from return slide if necessary</li> <li>___ Proper cleaning of return slide is needed daily to remove buildup which can cause patties to stick</li> </ul> </li> </ul>
<b>Too much smoke/heat in the kitchen</b>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check that hood and fan are working correctly</li> <li><input type="checkbox"/> Check that broiler is properly positioned under the hood; check all sides of broiler</li> <li><input type="checkbox"/> Check condition of catalyst (after broiler is turned off and cooled at end of night) clean if necessary</li> <li><input type="checkbox"/> Check condition and placement of grease extractors; clean daily and position properly</li> </ul>
<b>Grease on floor from discharge end</b>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check that grease box is installed</li> </ul>

# D. OPERATION

## D.1 Controls and Indicators

Belt Speed Control  
NOTE: N750 Has  
two (2) Belt Speed  
Controls

Temperature Control

On/Off Indicator  
Light (Red)

Main On/Off Switch

Low Temperature  
Light (Amber)



**⚠ CAUTION ⚠**

**LOW TEMPERATURE WARNING:** If this light comes on during operation, stop cooking immediately. This light indicates your broiler has gone below 100°F of the set point and may no longer be properly cooking the product.

Gas Pressure  
Gauge  
(On discharge end  
under broiler)



## D.2 Lighting Procedures

### PRE-LIGHTING PREPARATION

1. Broiler is centered under hood and plugged in
2. Gas valve is open when handle is in line (parallel to) the pipe
3. Turn ventilation system on

#### **⚠ WARNING ⚠**

**THE VENTILATION SYSTEM MUST BE ON AT ALL TIMES DURING BROILER OPERATION. OPERATING BROILER WITHOUT PROPER VENTILATION IS A SEVERE FIRE HAZARD.**

### AUTOMATIC IGNITION

- 1** Turn the **MAIN POWER SWITCH (a)** on. The N1575 is equipped with automatic ignition.




- 2** After ignition; check **GAS PRESSURE GAUGE (a)** reading. Gauge should read 5". If not, follow ignition troubleshooting tips of this manual. Verify that all burners - upper and lower - have lit.



### MANUAL IGNITION

- 1** Position a lighter or match as shown (a) under the first pilot. Turn on MAIN ON/OFF SWITCH. Verify that all burners have lit.

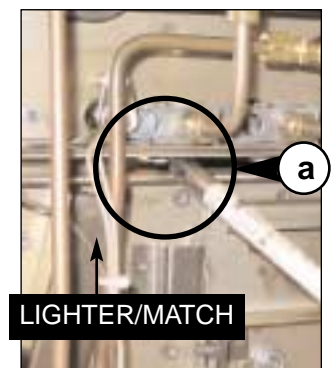


- 2** After ignition; check **GAS PRESSURE GAUGE (a)** reading. Gauge should read 5". If not, follow ignition troubleshooting tips of this manual. Verify that all burners - upper and lower - have lit.



### D.3 Shutdown Procedures

#### PLANNED SHUTDOWN

1. Allow the broiler to run free of any product for 10 minutes. This will burn the chain clean.
2. Turn off the **Main Power Switch (a)**.
3. Wait for 30 minutes for the broiler to cool.

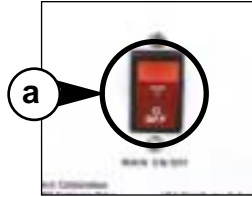


<b>⚠ WARNING ⚠</b>
Always leave the ventilation hood on while the broiler is cooling. Failure to do so is both a fire risk and could result in damage to the broiler.

<b>⚠ CAUTION ⚠</b>
Allow the broiler to fully cool <b>BEFORE</b> beginning disassembly and cleaning. Failure to do so could result in serious injury.

#### EMERGENCY SHUTDOWN

1. Turn off the **MAIN POWER SWITCH (a)**.
2. Close the **MAIN GAS VALVE (b)**. Valve is closed when it is perpendicular to pipe.

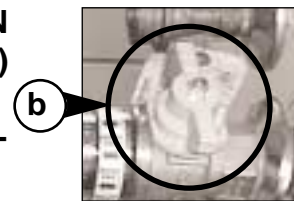

Your Nieco Automatic Broiler is designed to automatically stop gas flow to the broiler in the event of power failure, gas pressure loss or any other related incident. No attempt to operate this appliance should be made in the event of a power failure.

<b>⚠ CAUTION ⚠</b>
In a prominent location, post instructions to be followed in the event the user smells gas. This information shall be obtained by consulting your local gas supplier.

<b>⚠ CAUTION ⚠</b>
<b>FOR YOUR SAFETY:</b> Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

<b>⚠ CAUTION ⚠</b>
<b>FOR YOUR SAFETY:</b> In the event of a prolonged power failure, no attempt should be made to operate this appliance.

## D.4 Control Operation

**IMPORTANT: THIS BROILER IS SHIPPED WITH FACTORY PRESETS THAT MUST BE CHANGED.**

If this is the initial start-up for your broiler, ALL control settings must be made according to your restaurant operating guidelines. Follow the steps outlined for calibration, changing preset times and setting the flex chamber element heat settings to properly set up this broiler.

### WARMING UP

1

Turn Main Power Switch on. Light the broiler following the lighting procedures. Allow the broiler 60 minutes to get to proper cooking temperature.

**DO NOT COOK DURING WARM-UP!**

### SET BELT SPEEDS

2

Turn the UPPER BELT SPEED CONTROL knob to set the LEFT BELT speed to the desired setting. Turn the LOWER SPEED CONTROL knob to set the RIGHT BELT SPEED to the desired setting. NOTE: Model N724 has only one (1) belt speed control.



### CALIBRATION

3

After the 60 minute warm up period, the TEMPERATURE CONTROL will display the actual temperature. Push the knob in and the set point temperature will be displayed. Adjust the set point temperature by pressing the knob and turning until it reads the same as the actual temperature.



## E. CLEANING AND DISASSEMBLY

Turn broiler off and close the main gas valve. Disconnect the power supply to the broiler before cleaning or servicing. If this broiler is connected using a restraint, and disconnection of the restraint is necessary for cleaning or moving the broiler, the restraint must be reconnected after the broiler has been returned to its originally installed position. Allow to cool for 30 minutes prior to cleaning/disassembly. Leave the ventilation system on during cooling. Use only approved cleaning, degreasing and sanitizing solutions.

### ⚠ WARNING ⚠

LEAVE THE VENTILATION HOOD ON DURING COOLING. FAILURE TO DO SO COULD POSE A FIRE SAFETY HAZARD.

### ⚠ CAUTION ⚠

Follow the Disassembly and Reassembly steps to ensure proper operation of the broiler. Failure to do so may result in operational problems.

### ⚠ WARNING ⚠

BROILER PARTS ARE HOT. DO NOT ATTEMPT TO DISASSEMBLE THE BROILER UNTIL IT IS FULLY COOL. FAILURE TO FOLLOW THIS INSTRUCTION MAY RESULT IN SEVERE INJURY.

**ALL PARTS ARE CLEANED ON A DAILY BASIS UNLESS OTHERWISE NOTED**

Follow the steps for proper disassembly. Reverse the order for reassembly.

## How to Use the Cleaning Section

	The name of the part to be cleaned.	The location of the part.	When to clean the part.
	<b>Grease Pans</b>		<b>Clean: Daily</b>
The tools needed to clean the part	<b>Tools</b> 	<b>Feed End</b> 	 Picture of the part to be removed and cleaned.
How to remove and clean the parts.	<b>Instructions</b> 1. Slide grease pans out. ⚠ Make sure grease pans are cool before putting in water or it may warp the pans. 2. Take to sink area and spray with degreaser. 3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.		
	Cleaning Aid		6

# Cleaning the Broiler



## Tools Needed



## Instructions

1. Allow the broiler to run free of product for 10 minutes before turning it off. This allows any residue to burn off the chains.
2. Shut the broiler off and let it cool for 30 minutes before disassembly and cleaning.
3. Close the main gas valve and unplug the broiler before cleaning.
4. Always leave the ventilation hood on during the 30 minute cool down period.
5. Use only approved cleaning solutions.
6. Allow parts to air dry after cleaning.



## Important Symbols



This "Stop" sign shows a step in the procedure that must be followed exactly or personal safety could be affected.



This warning symbol shows a step in the procedure that must be followed exactly or broiler performance could be affected.




This "puzzle" symbol shows a step in the reassembly procedure that must be followed.

# Meat Guides (If Equipped)

Clean: 3:00 p.m.; 7:00 p.m.; 11:00 p.m.; 2:00 a.m.



## Tools

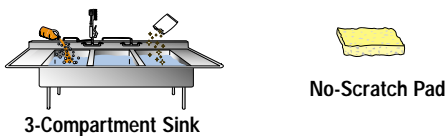

## Instructions

1. Pull each meat guide out slightly from the bottom, then lift off.
2. Wash, rinse, and sanitize in the 3-compartment sink.

### Feed End




## Feeder Cover

Clean: 3:00 p.m.; 7:00 p.m.; 11:00 p.m.; 2:00 a.m.



### Tools

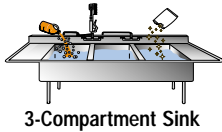

3-Compartment Sink



No-Scratch Pad



### Instructions

1. Slide the feeder cover towards you until it comes off.
2. Wash, rinse, and sanitize in the 3-compartment sink.

### Feed End




## Feeder Base

Clean: 3:00 p.m.; 7:00 p.m.; 11:00 p.m.; 2:00 a.m.



### Tools

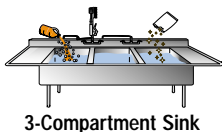

3-Compartment Sink



No-Scratch Pad



### Instructions

1. Pull the release pin.
2. Lift feeder base up and off.
3. Wash, rinse, and sanitize in the 3-compartment sink.

**!** DO NOT lift the feeder base by the feeder bar or the chains. This will damage the feeder base.

**+** REASSEMBLY: Pull the release pin and place feeder base in position.

### Feed End

 


# Feeder Housing

Clean: Daily



## Tools



3-Compartment Sink



No-Scratch Pad



## Instructions

1. Lift and remove.
2. Wash, rinse, and sanitize in the 3-compartment sink.

**REASSEMBLY:** Hang feeder housing on brackets.

## Feed End



# Grease Pan

Clean: Daily



## Tools



 
Heat Resistant Gloves



Scrub Pad



Degreaser



3-Compartment Sink



## Instructions

1. Slide grease pan out.
- !** Make sure grease pan is cool before putting in water or it may warp the pans.
2. Take to sink area and spray with degreaser.
  3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

## Feed End



## Warming Heater Shield (If Equipped)

Clean: Daily



### Tools



Soapy Towel



Sanitized Towel



### Instructions

1. Clean warming heater shield while still warm.
2. Wring out a soapy towel and wash warming heater shield.
3. Wring out a sanitized towel and wipe warming heater shield.

### Feed End



## Product Holding Area (RF Only)

Clean: Daily



### Tools



Soapy Towel



Sanitized Towel



### Instructions

1. Clean product holding area while still warm.
2. Wring out a soapy towel and wash product holding area.
3. Wring out a sanitized towel and wipe product holding area.

### Feed End

 


# Grease Box

Clean: Daily



## Tools



3-Compartment Sink



Scrub Pad



## Instructions

1. Slide grease box out.
2. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

### Feed End

 


# Awning

Clean: Daily



## Tools



3-Compartment Sink



No-Scratch Pad



Heat Resistant  
Gloves



## Instructions

1. Tilt and lift pins off hooks; pull out.
2. Wash, rinse, and sanitize in the 3-compartment sink.

### Discharge End



## Return Slide with Dividers (RF Only)

Clean: Daily



 
### Tools



Heat Resistant Gloves



Scrub Pad



3-Compartment Sink



### Instructions

1. Lift return slide up and off.
2. Lift dividers off.
3. Wash, rinse, and sanitize in the 3-compartment sink.

**REASSEMBLY:** Be sure to replace all 3 dividers back on the return slide.

### Discharge End



## Discharge Pan (FT Only)

Clean: Daily



### Tools



 
Heat Resistant Gloves



Scrub Pad



Degreaser



3-Compartment Sink



### Instructions

1. Lift discharge pan up and out.
2. Take to sink area and spray with degreaser.
3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

**REASSEMBLY:** Slide into place so pan is level.

### Discharge End



# Stripper Blade

Clean: Daily



## Tools



 
Heat Resistant Gloves



Scrub Pad



Degreaser



3-Compartment Sink



## Instructions

1. Tilt stripper blade away from chain; lift off brackets.
2. Take to sink area and spray with degreaser.
3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

**REASSEMBLY:** Hang stripper blade on brackets.

## Discharge End



# Side Panels and Chain Shafts

Clean: Daily



## Tools



No-Scratch Pad



Towel



Degreaser



Shaft Cleaning Tool



## Instructions

1. Lift Side Panels up and off.
2. Take to sink area and spray with degreaser. Wipe clean with a no-scratch pad.
3. Scrape each shaft of both belts on the discharge end with the wide end of the shaft cleaning tool. The tool is located on the clip on the discharge end of the broiler.
4. Wipe shaft cleaning tool with a towel.

## Sides & Discharge End

1



2



## Frame

Clean: Weekly



### Tools



No-Scratch Pad



Towel



Degreaser



### Instructions

1. Use a no-scratch pad and degreaser to wipe the frame clean.

### Inside



## Lower Burners (2)

Clean: Monthly



### Tools



Heat Resistant Gloves



Soft Bristle Brush



Small Orifice Brush



### Instructions

1. Open the side access door.
2. Slide burner out.
3. Brush with a dry brush.
4. If necessary, use the small orifice brush to clean any clogged burner holes.
5. Repeat steps for all burners.

**!** DO NOT use water or get the burners wet.

**+** REASSEMBLY: Be sure the holes on the burner are facing up.

### Side

1



2



3



No water

## Lower Burner Shields (2)

 
Clean: Monthly



### Tools



Heat Resistant Gloves



3-Compartment Sink



Scrub Pad




### Instructions

1. Lift up and pull towards you.
2. Let shield drop down to clear brackets.
3. Slide shield out through opening.
4. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

**REASSEMBLY:** Make sure shields are seated properly on brackets.

### Side

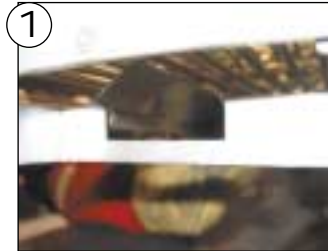

## Flame Sensor

Clean: Weekly



### Tools



Towel




### Instructions

1. Wipe the flame sensor with a dry towel.

**⚠ Do NOT use water on the flame sensor.**

### Feed End

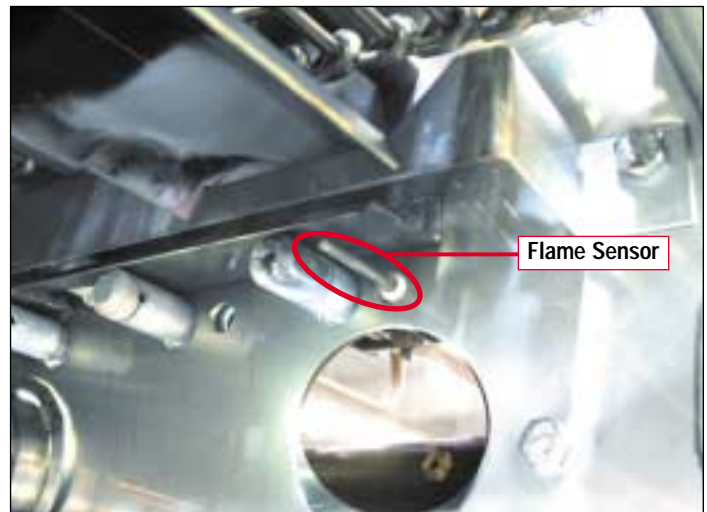

No spray



No water

## Perforated Cap - If no catalyst

Clean: Monthly



### Tools



 
Heat Resistant Gloves



Scrub Pad



Degreaser



3-Compartment Sink



### Instructions




**EXTREMELY HOT!** Be careful not to burn yourself.

1. Lift cap from shroud collar.
2. Take to sink area and spray with degreaser.
3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

### Top



CAUTION:  
Extremely Hot 

## Catalyst - If no perforated cap

Clean: Monthly



### Tools



Heat Resistant Gloves



### Instructions




**EXTREMELY HOT!** Be careful not to burn yourself.

1. Grasp handle and lift Catalyst off to remove from Shroud.
2. RINSE WITH WATER ONLY. NEVER USE ANY CHEMICALS ON THE CATALYST.
3. Lay flat to drain water and let air dry overnight.
4. Make sure catalyst is dry before putting back on broiler.

### Top



CAUTION:  
Extremely Hot 

# Shroud

Clean: Monthly



## Tools



 
Heat Resistant Gloves



No-Scratch Pad



Degreaser



3-Compartment Sink



## Instructions

1. Lift shroud from top of broiler.
2. Take to sink area and spray with degreaser.
3. Wash, rinse, and sanitize in the 3-compartment sink.

### Top



# Upper Burner Reflector

Clean: Monthly



## Tools



 
Heat Resistant Gloves



Scrub Pad



Degreaser



3-Compartment Sink




## Instructions

1. Lift upper burner reflector up and out of broiler.
2. Take to sink area and spray with degreaser.
3. Wash with a scrub pad, rinse, and sanitize in the 3-compartment sink.

### Top



CAUTION: Extremely Hot 

## Upper Burners (4)

Clean: Monthly



### Tools



Heat Resistant Gloves



Soft Bristle Brush



### Instructions

1. Lift each burner up and out of broiler.
2. Use a soft bristle brush to brush burner.

 **DO NOT use water on burners.**



**No water**

### Top



## Orifices

Clean: Monthly



### Tools



Small Orifice Brush




### Instructions

1. Clean orifices using the small orifice brush.

**NOTE:** There are 2 upper burner orifices and 2 lower burner orifices on the left side of the broiler.

### Inside

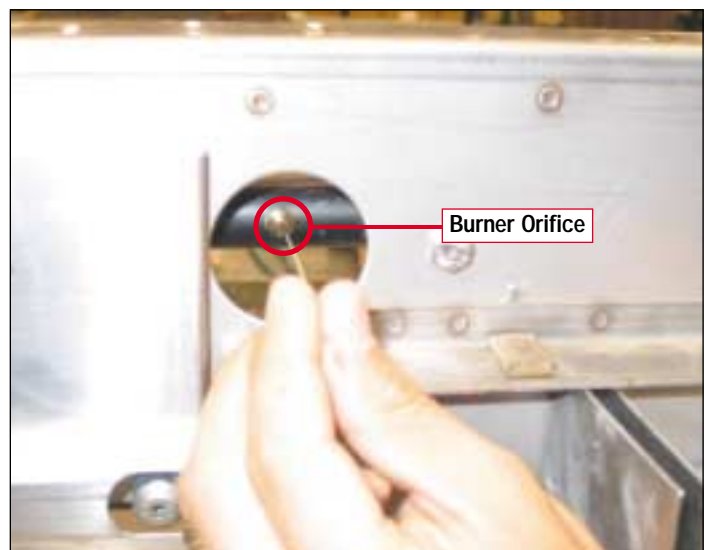



## Tools



Large Orifice Brush



Lizard Safety Utility Knife



## Instructions

1. Clean the slots on the pilot burners with a lizard knife.



**Be careful not to cut yourself!**

2. Clean the pilot orifices using the large orifice brush.


## Inside



## F. BROIL CHAIN REMOVAL

Maintain proper tension on the conveyor chains to prevent jamming. Major tension adjustments are made by removing a link or links from the chain. Broil belt tension should be checked monthly. To do this, allow the machine to cool, then grip the idler shaft at each end and pull on it. If the shaft and bearings move 1/2" or more, remove a link from the conveyor belt. Before beginning, notice the way the broil chain runs through the broiler. Also, notice the direction the chain knuckles face. Be sure to reassemble the same way.

- 1 Run chain until the master link is near the front idler shaft.

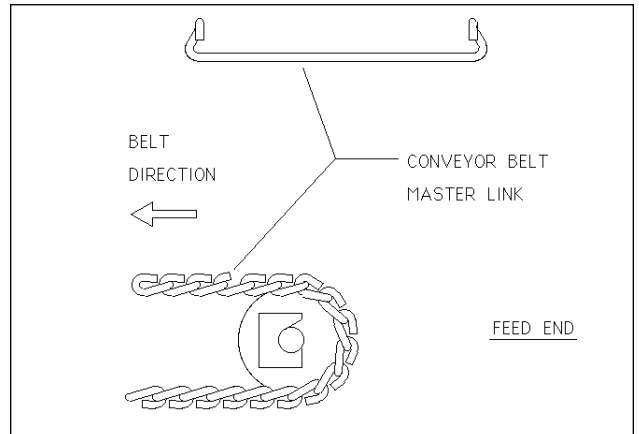

- 2 Remove the loader bracket and lift shaft and teflon bearings up, and slide the bearings out.



- 3 Unhook the master link.



### ⚠ CAUTION ⚠

To ensure proper broiler operation be sure to reassemble the chain with the knuckle opening facing away from the direction of travel.

# G. SPECIFICATIONS



## AUTOMATIC BROILER Model N724/750 G

DIMENSIONS	INCH	MM
Length	38.52	978
Height	63.36*	1609
Width	37.38	950

\* Shown on optional stand.

### ENERGY - GAS MODELS

Gas connection 3/4" N.P.T.




Electrical connection (specify exact voltage)

Domestic 115V IØ 50/60Hz 7A

	3" W.C.	5" W.C.
Natural Gas		
BTU/hr	90,500	117,600

WEIGHT	LB	KG
Shipping	440	200

EXHAUST	CFM	CMH
Typical	800	1020

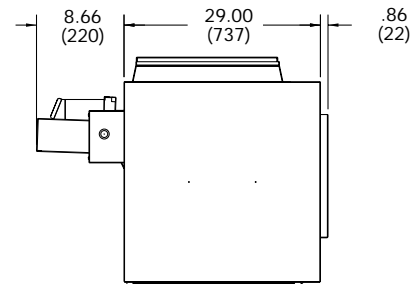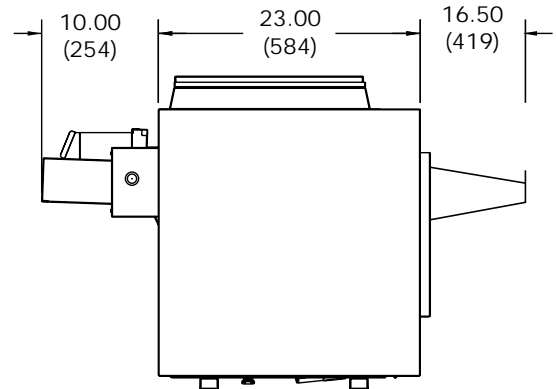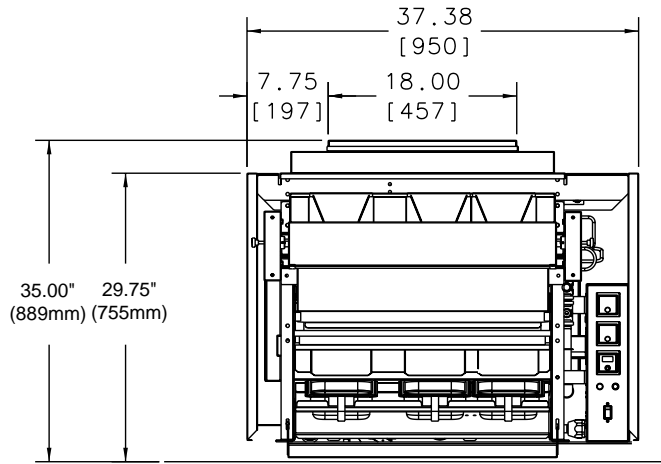

Return-Flow

**⚠ CAUTION ⚠**

All electrical connections must be in accordance with local electrical codes and any other applicable codes.


**⚠ CAUTION ⚠**

Do not operate the broiler at gas pressures other than those stated here. Doing so will affect the operation of your broiler.



# H. WIRING DIAGRAM

Revision notes:  
 A - 5 Mar. 03 Initial Release  
 B - 17 Mar. 03 Added 500mA fuses for motors  
 C - 22 Apr. 03 Added in line fuse holders, corrected PIN errors.

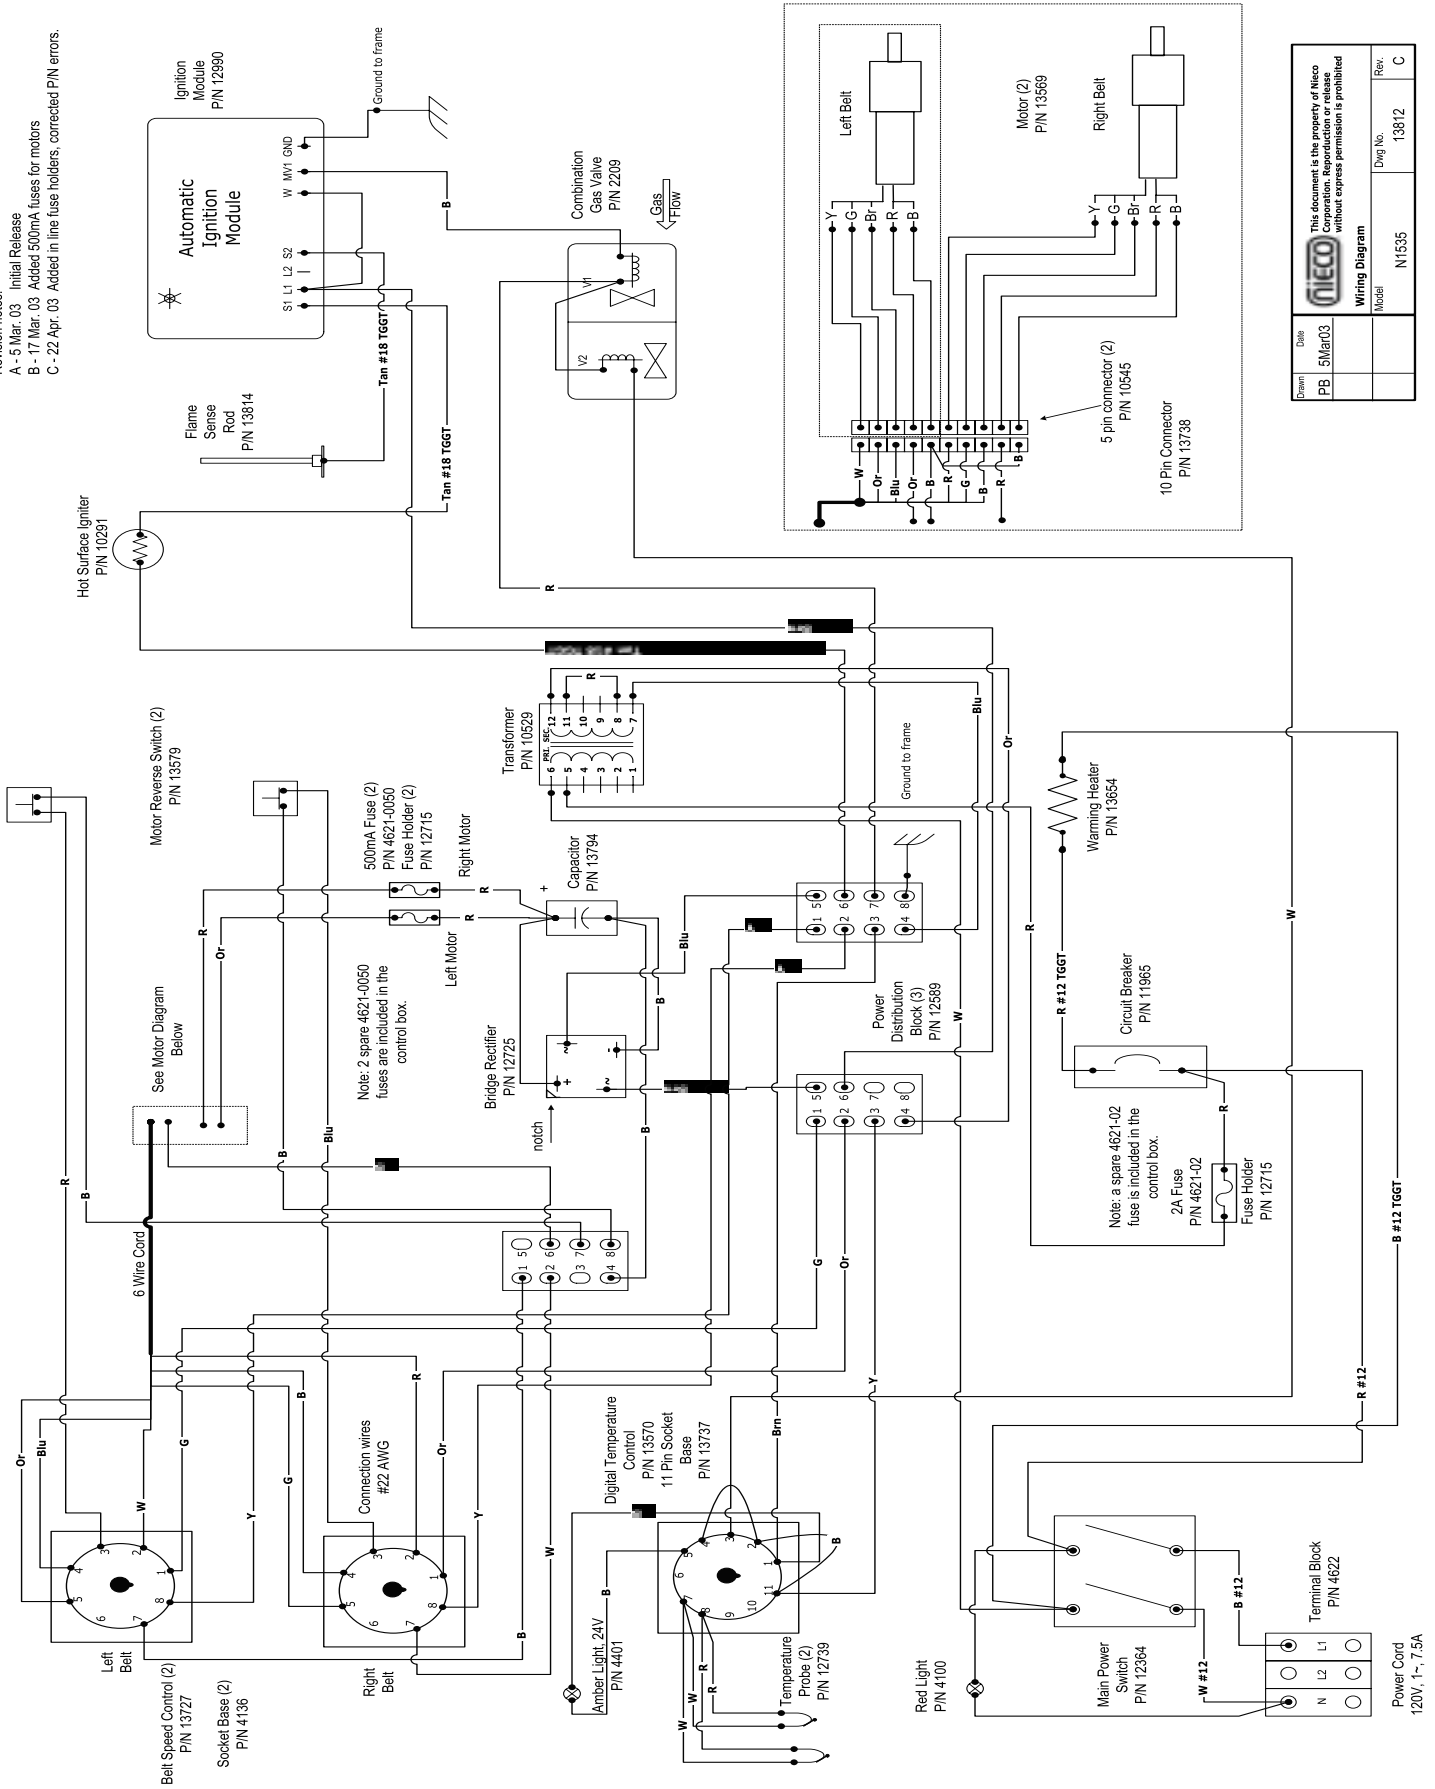

Drawn	Date	<p>This document is the property of NiCO Corporation. Reproduction or release without express permission is prohibited.</p>	Rev.
PB	5Mar03		C
Wiring Diagram		Model	Dwg No.
		N1535	13812



Nieco Corporation • 7950 Cameron Drive • Windsor, CA 95492 • (707) 284-7100 Office • (707) 284-7430 Fax  
12/03 www.nieco.com • e-mail:service@nieco.com Printed in the USA © 2002 Nieco Corporation All Rights Reserved  
Reorder P/N 9999-99181