



ITEM NO.	DESCRIPTION	60,000 BTUH INPUT	80,000 BTUH INPUT
1	Door Assembly - Louvered (-AW & -BW Models)	903977	903977
1A	Door Assembly - No Louvered (BWT Models) (Not Shown)	904049	904049
2	Filter Inside Door (-AW & -BW Models)	669363	669363
2A	Filter - Top Return Unit (Not Shown)	668931	668931
3	Blower Assembly	904109	904109
4	Control Board	903106	903106
5	Pressure Switch	632389	632390
6	Flame Rollout Switch	626498	626498
7	"J" Trap Hard Tube	663908	663908
8	Combustion Air Intake	663890	663890
9	Exhaust Vent Assay	663859	663859
10	Low Voltage Transformer	621486	621486
11	In Line Drain Assembly	663891	663891
12	Front Header Box	669113	669113
13	Vent Safety Switch	626499	626499
14	Ignitor Kit	903758	903758
15	Burner View Port	632216	632216
16	Main Limit Switch	626469	626482
17	Coil Cabinet Assembly (Optional, See Accessories)	911969A	911969A
18	Manifold	270754	270755
19	Flame Sensor	632316	632316
20	Gas Valve	624610	624610
21	Switch, Blower Door	632337	632337
22	Blower, Inducer (With Gasket)	903979	903979
23	Burner Box Assembly	903980	903981
24	Orifice Inducer (Not Shown)	155314R	155315R
25	Inshot Burner (Not Shown)	660921 (4)	660921 (5)
26	Orifice (Not Shown) Nat.	661050 (4)	661049 (5)
27	Orifice (Not Shown), LP	661057 (4)	661078 (5)
28	Heat Exchanger Assembly (Not Shown)	903982	903983
29	Capacitor, 10 MFD, 370V (Not Shown)	621435	621435
30	Blower Wheel (Not Shown)	667258	667258
31	Motor - 1/2 HP, 4 Speed (Not Shown)	902128	902128
32	Aux. Limit (115° F), 60T11	626497	626497

Please specify the correct Model No., Serial No. and part number(s) when ordering parts from the nearest authorized dealer or service center.

