

REPLACEMENT PARTS LIST

PGC2 Series

Two-Stage Condensing and Non-Condensing
Furnaces with Fixed Speed and Variable Speed Blowers

NON-CONDENSING GAS
FURNACES (80%+ AFUE)



PGC2TA & PGC2TA-1
Upflow / Horizontal Furnace



PGC2TK & PGC2TK-1
Downflow Furnace

CONDENSING GAS FURNACES
(95.1% & 96% AFUE)



PGC2TC & PGC2TC -1 Upflow / Horizontal Furnace
and PGC2TE-1 Upflow Only Furnace



PGC2TL, PGC2TL-1 & PGC2TN-1
Downflow Furnace

80+ AFUE

PGC2TA Upflow / Horizontal, Fixed Speed - Replacement Parts List	2
PGC2TA Upflow / Horizontal, Variable Speed - Replacement Parts List	3
PGC2TK Downflow, Fixed Speed - Replacement Parts List	4
PGC2TK Downflow, Variable Speed - Replacement Parts List	5
PGC2TA-1 Upflow / Horizontal, Fixed Speed - Replacement Parts List	6
PGC2TA-1 Upflow / Horizontal, Variable Speed - Replacement Parts List	7
PGC2TK-1 Downflow, Fixed Speed - Replacement Parts List	8
PGC2TK-1 Downflow, Variable Speed - Replacement Parts List	9
PGC2TA & PGC2TA-1 Upflow / Horizontal - Component Location	10
PGC2TK & PGC2TK-1 Downflow - Component Location	11

95.1% AFUE

PGC2TC Upflow / Horizontal, Fixed Speed - Replacement Parts List	12
PGC2TC Upflow / Horizontal, Variable Speed - Replacement Parts List	13
PGC2TL Downflow, Fixed Speed - Replacement Parts List	14
PGC2TL Downflow, Variable Speed - Replacement Parts List	15
PGC2TC Upflow / Horizontal - Component Location	16
PGC2TL Downflow - Component Location	17

96% AFUE

PGC2TE-1 Upflow Only, Fixed Speed - Replacement Parts List	18
PGC2TE-1 Upflow Only, Variable Speed - Replacement Parts List	19
PGC2TN-1 Downflow, Fixed Speed - Replacement Parts List	20
PGC2TN-1 Downflow, Variable Speed - Replacement Parts List	21
PGC2TE-1 Upflow Only - Component Location	22
PGCTN-1 Downflow - Component Location	23

DESCRIPTION	060-23A	080-24B	100-24B	100-35C	120-35C	140-45D
Blower Assembly	904872	904873	904955	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904812	—	—	904815	—	—
Door Set (Not Shown)	—	904772	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691	921691
Heat Exchanger (Not Shown)	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R	299261R	299261R
Inducer Motor	904797	904797	904797	904797	904797	904797
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632614R	632566R	632566R	632516R
Roll-Out Limit Switch	626609R	626610R	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 10.

DESCRIPTION	060-VA	080-VB	100-VC	120-VC	140-VD
Blower Assembly	904876	904877	904878	904878	904879
Blower Control Board	920994	920994	920994	920994	920994
Blower Housing	297200R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904812	—	904815	—	—
Door Set (Not Shown)	—	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691
Heat Exchanger (Not Shown)	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797	904797
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632566R	632566R	632516R
Roll-Out Limit Switch	626609R	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 10.

DESCRIPTION	060-23A	080-24B	100-24B	100-35C	120-35C	140-45D
Blower Assembly	904872	904873	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297204R	297204R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	—	904905	904983	—	—
Combustion Tube	299291R	299291R	299291R	299291R	299291R	299291R
Door Set (Not Shown)	—	904772	904772	904773	904773	—
Door Switch (Not Shown)	632693R	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691	921691
Heat Exchanger (Not Shown)	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797	904797	904797
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R	299261R	299261R
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626567R	626567R	626565R	626616R	626567R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632566R	632614R	632515R	632566R	632595R	632516R
Roll-Out Limit Switch	626609R	626610R	626609R	626609R	626610R	626610R
Set of Wires (Not Shown)	M0036036R	M0036012R	M0036012R	M0036014R	M0036014R	M0036014R
Top Panel	295911R	295912R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 11.

DESCRIPTION	060-VA	080-VB	100-VC	120-VC
Blower Assembly	904876	904877	904878	904878
Blower Control Board	920994	920994	920994	920994
Blower Housing	297200R	297207R	297204R	297204R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684
Blower Motor Choke	Not Used	Not Used	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R
Burner Assembly	904834	904835	904836	—
Burner Tube Manifold	664228R	664229R	664230R	664231R
Collector Pan (w Gasket)	904903	—	904983	—
Combustion Tube	299291R	299291R	299291R	299291R
Door Set (Not Shown)	—	904772	904773	904773
Door Switch (Not Shown)	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger (Not Shown)	904779	904780	904783	904868
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inshot Burner	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626567R	626565R	626616R
Motor Mount Kit	904867	904907	904907	904907
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632566R	632566R
Roll-Out Limit Switch	626559R	626560R	626559R	626560R
Set of Wires (Not Shown)	M0036037R	M0036019R	M0036020R	M0036020R
Top Panel	295911R	295912R	295913R	295913R
Transformer	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 11.

DESCRIPTION	060-23A1	080-24B1	100-24B1	100-35C1	120-35C1	140-45D1
Blower Assembly	904872	904873	904955	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904905	904905	904815	904816	—
Door Set	—	904772	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691	921691
Heat Exchanger	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904978	904979
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632614R	632566R	632566R	632516R
Roll-Out Limit Switch	626609R	626610R	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 10.

DESCRIPTION	060-VA1	080-VB1	100-VC1	120-VC1	140-VD1
Blower Assembly	904876	904877	904878	904878	904879
Blower Control Board	920994	920994	920994	920994	920994
Blower Housing	297200R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904905	904905	904816	—
Door Set	—	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691
Heat Exchanger	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904979
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632566R	632566R	632516R
Roll-Out Limit Switch	626609R	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 10.

DESCRIPTION	060-23A1	080-24B1	100-35C1	120-35C1	140-45D1
Blower Assembly	904872	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297204R	297204R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	—	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	—	904904	904816	—
Combustion Tube	299291R	299291R	299291R	299291R	299291R
Door Set	—	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691	921691
Heat Exchanger	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904979
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626562R	626565R	626616R	626565R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632566R	632614R	632566R	632595R	632516R
Roll-Out Limit Switch	626609R	626610R	626609R	626610R	626610R
Set of Wires (Not Shown)	M0036036R	M0036012R	M0036014R	M0036014R	M0036014R
Top Panel	295911R	295912R	295913R	295913R	—
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

 
FOR COMPONENT LOCATIONS, SEE PAGE 11.

DESCRIPTION	060-VA1	080-VB1	100-VC1	120-VC1
Blower Assembly	904876	904877	904878	904878
Blower Control Board	920994	920994	920994	920994
Blower Housing	297200R	297207R	297204R	297204R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	622684	622684
Blower Motor Choke	Not Used	Not Used	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R
Burner Assembly	904834	904835	904836	—
Burner Tube Manifold	664228R	664229R	664230R	664231R
Collector Pan (w Gasket)	904903	—	904904	904816
Combustion Tube	299291R	299291R	299291R	299291R
Door Set	—	904772	904773	904773
Door Switch	632693R	632693R	632693R	632693R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904779	904780	904783	904868
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R
Ignitor Bracket	299261R	299261R	299261R	299261R
Inshot Burner	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626562R	626565R	626616R
Motor Mount Kit	904867	904907	904907	904907
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Pressure Switches	632566R	632614R	632566R	632595R
Roll-Out Limit Switch	626609R	626610R	626609R	626610R
Set of Wires (Not Shown)	M0036037R	M0036019R	M0036020R	M0036020R
Top Panel	295911R	295912R	295913R	295913R
Transformer	622341R	622341R	622341R	622341R


Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 11.

PGC2TA & PGC2TA-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

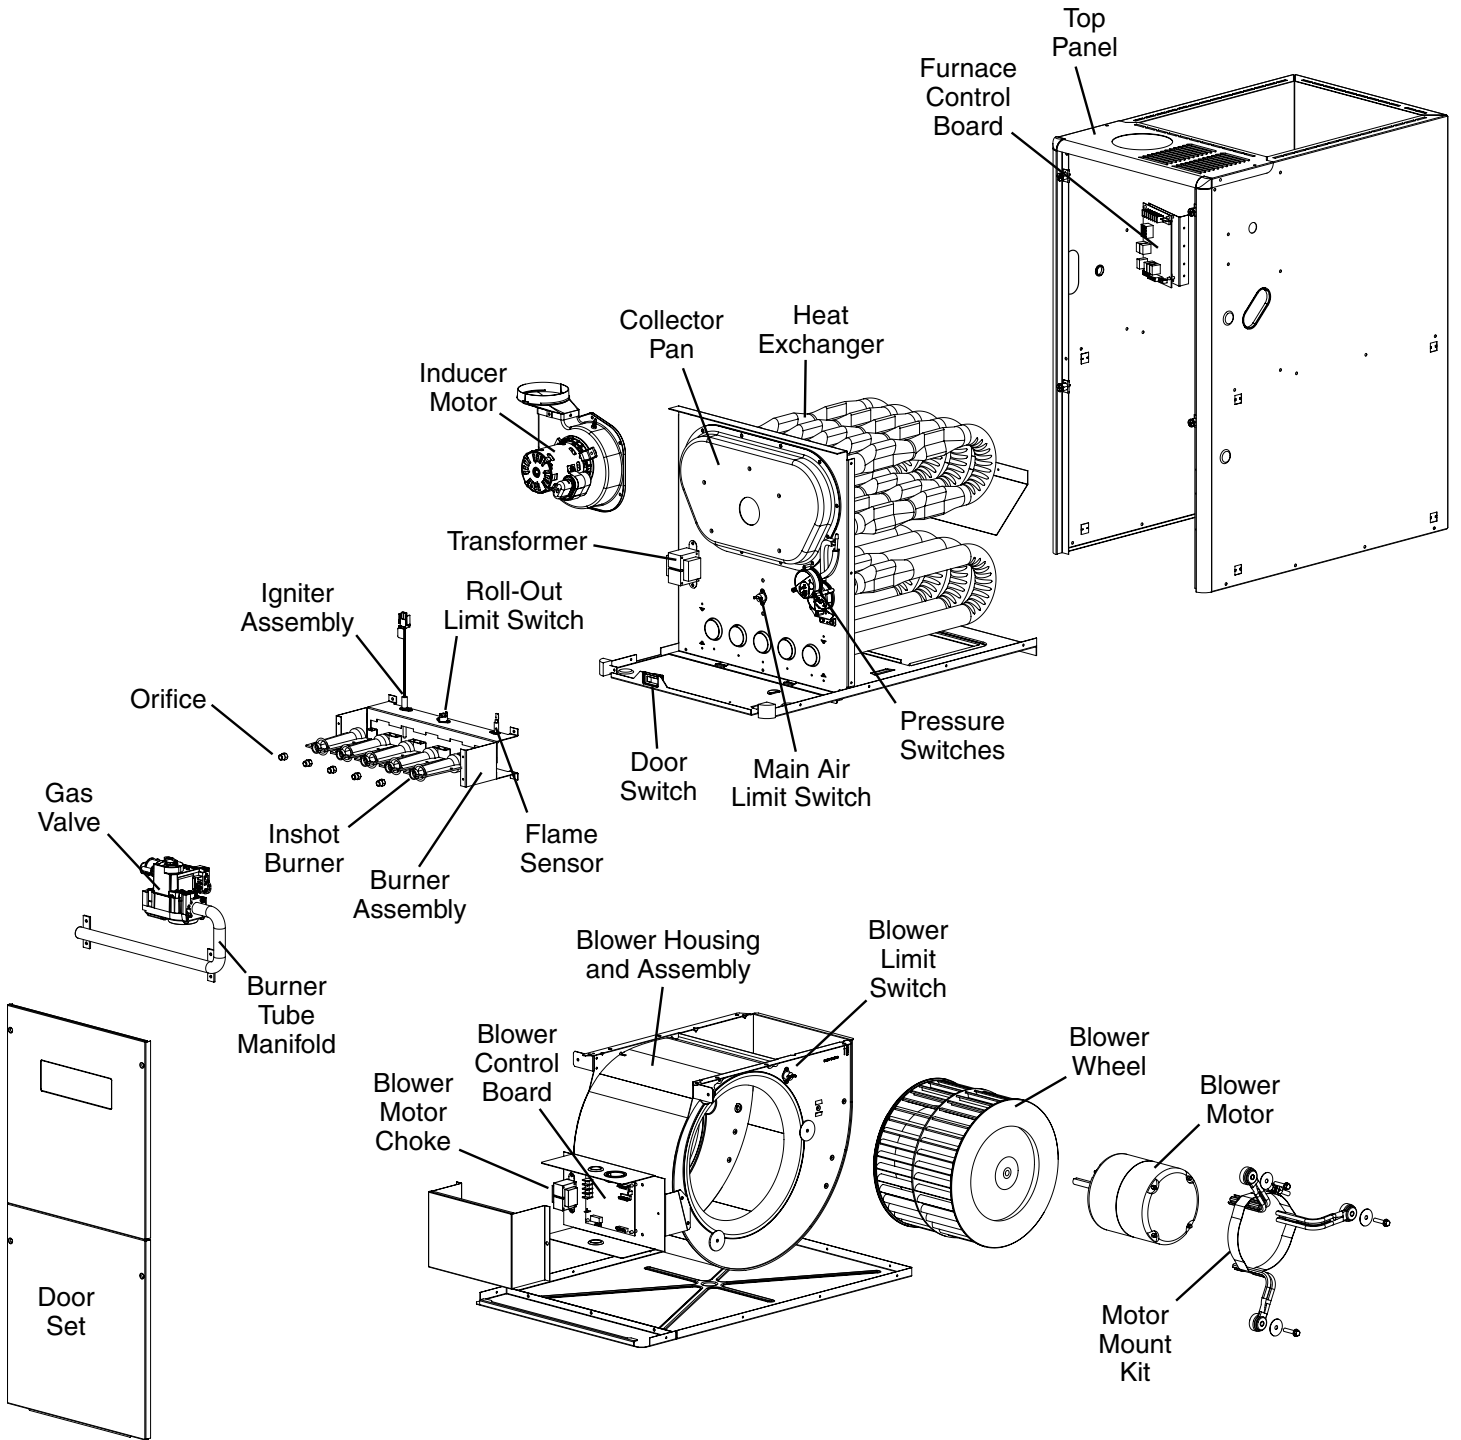

 PGC2TK & PGC2TK-1 DOWNFLOW - COMPONENT LOCATION

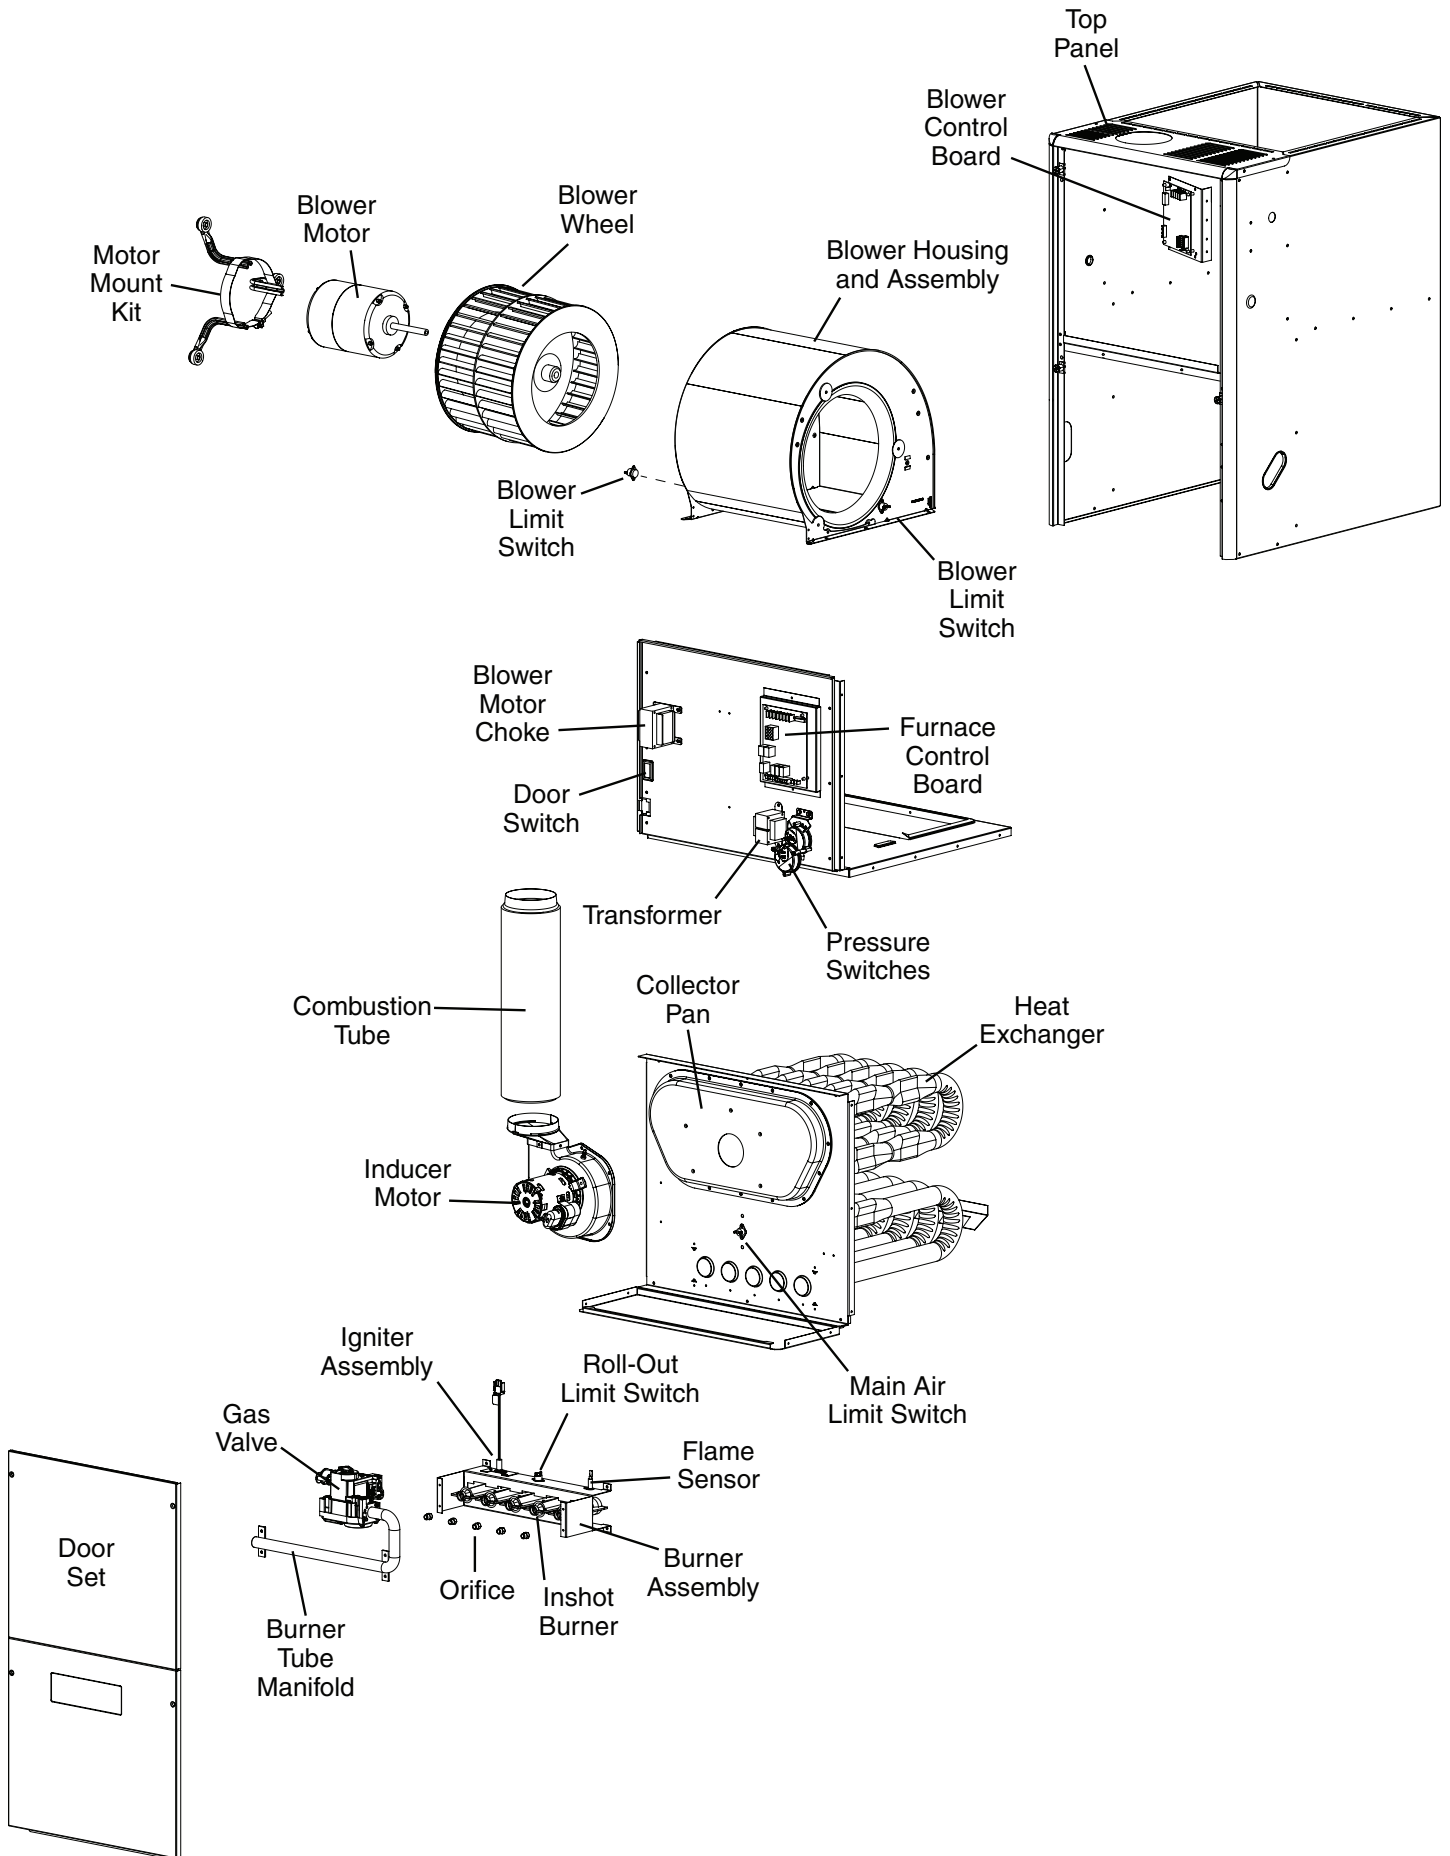

95.1% AFUE**PGC2TC UPFLOW / HORIZONTAL, FIXED SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-24B	080-35C	100-35C	120-45D
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	Not Used
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036015R	M0036017R	M0036017R	M0036017R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 16.

95.1% AFUE**PGC2TC UPFLOW / HORIZONTAL, VARIABLE SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-VB	080-VC	100-VC	120-VD
Blower Assembly	904877	904878	904878	904879
Blower Control Board	920994	920994	920994	920994
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	Not Used
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632514R	632546R	632555R	632614R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036015R	M0036017R	M0036017R	M0036017R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 16.

95.1% AFUE**PGC2TL DOWNFLOW, FIXED SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-24B	080-35C	100-35C	120-45D
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669718R	669720R	—	669747R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set of Wires (Not Shown)	M0036016R	M0036018R	M0036018R	M0036018R
Top Panel	2B3562R	2B3563R	2B3563R	—
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 17.


95.1% AFUE**PGC2TL DOWNFLOW, VARIABLE SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-VB	080-VC	100-VC	120-VD
Blower Assembly	904877	904878	904878	904879
Blower Control Board	920994	920994	920994	920994
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921691	921691	921691	921691
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669718R	669720R	—	669747R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set of Wires (Not Shown)	M0036021R	M0036022R	M0036022R	M0036022R
Top Panel	2B3562R	2B3563R	2B3563R	—
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R


Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 17.

 PGC2TC UPFLOW / HORIZONTAL - COMPONENT LOCATION

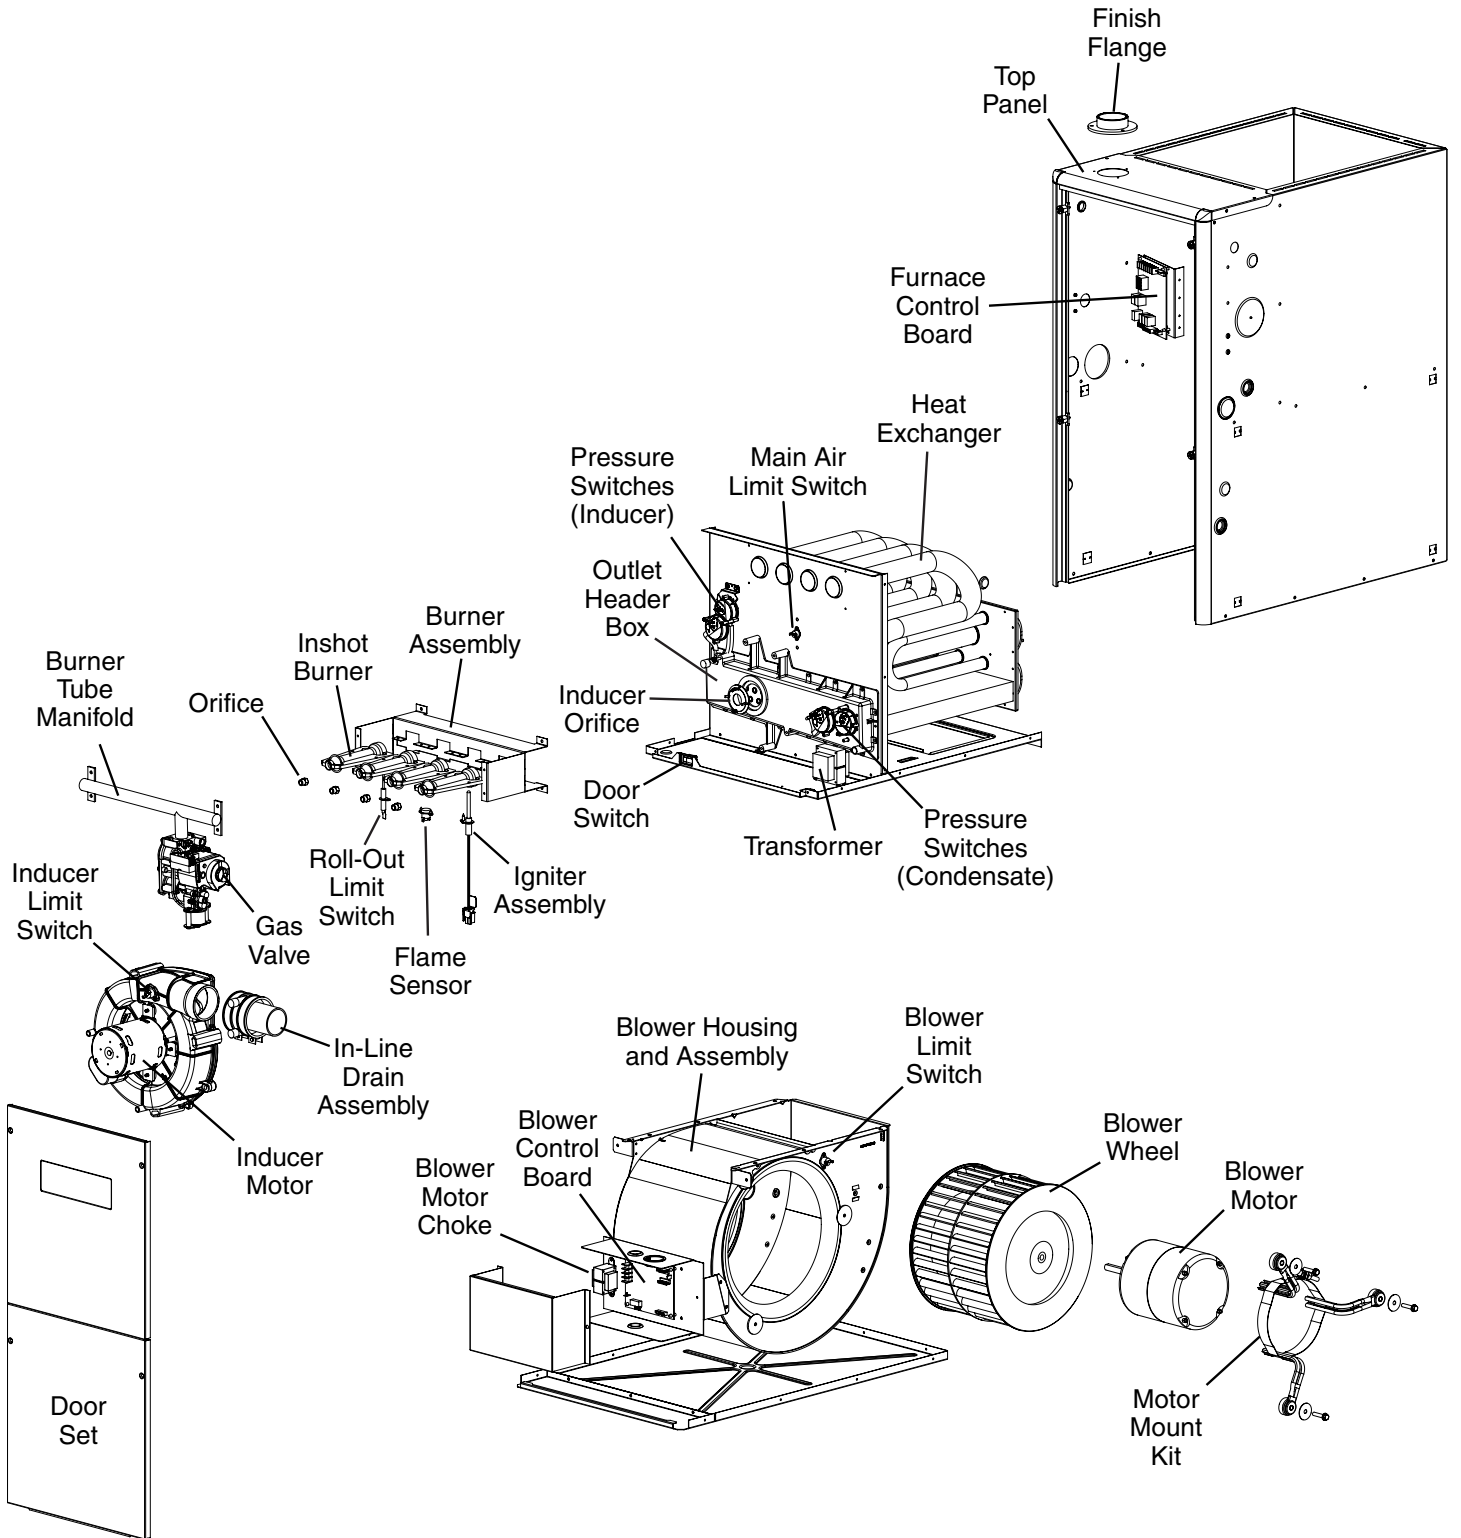

PGC2TL DOWNFLOW - COMPONENT LOCATION

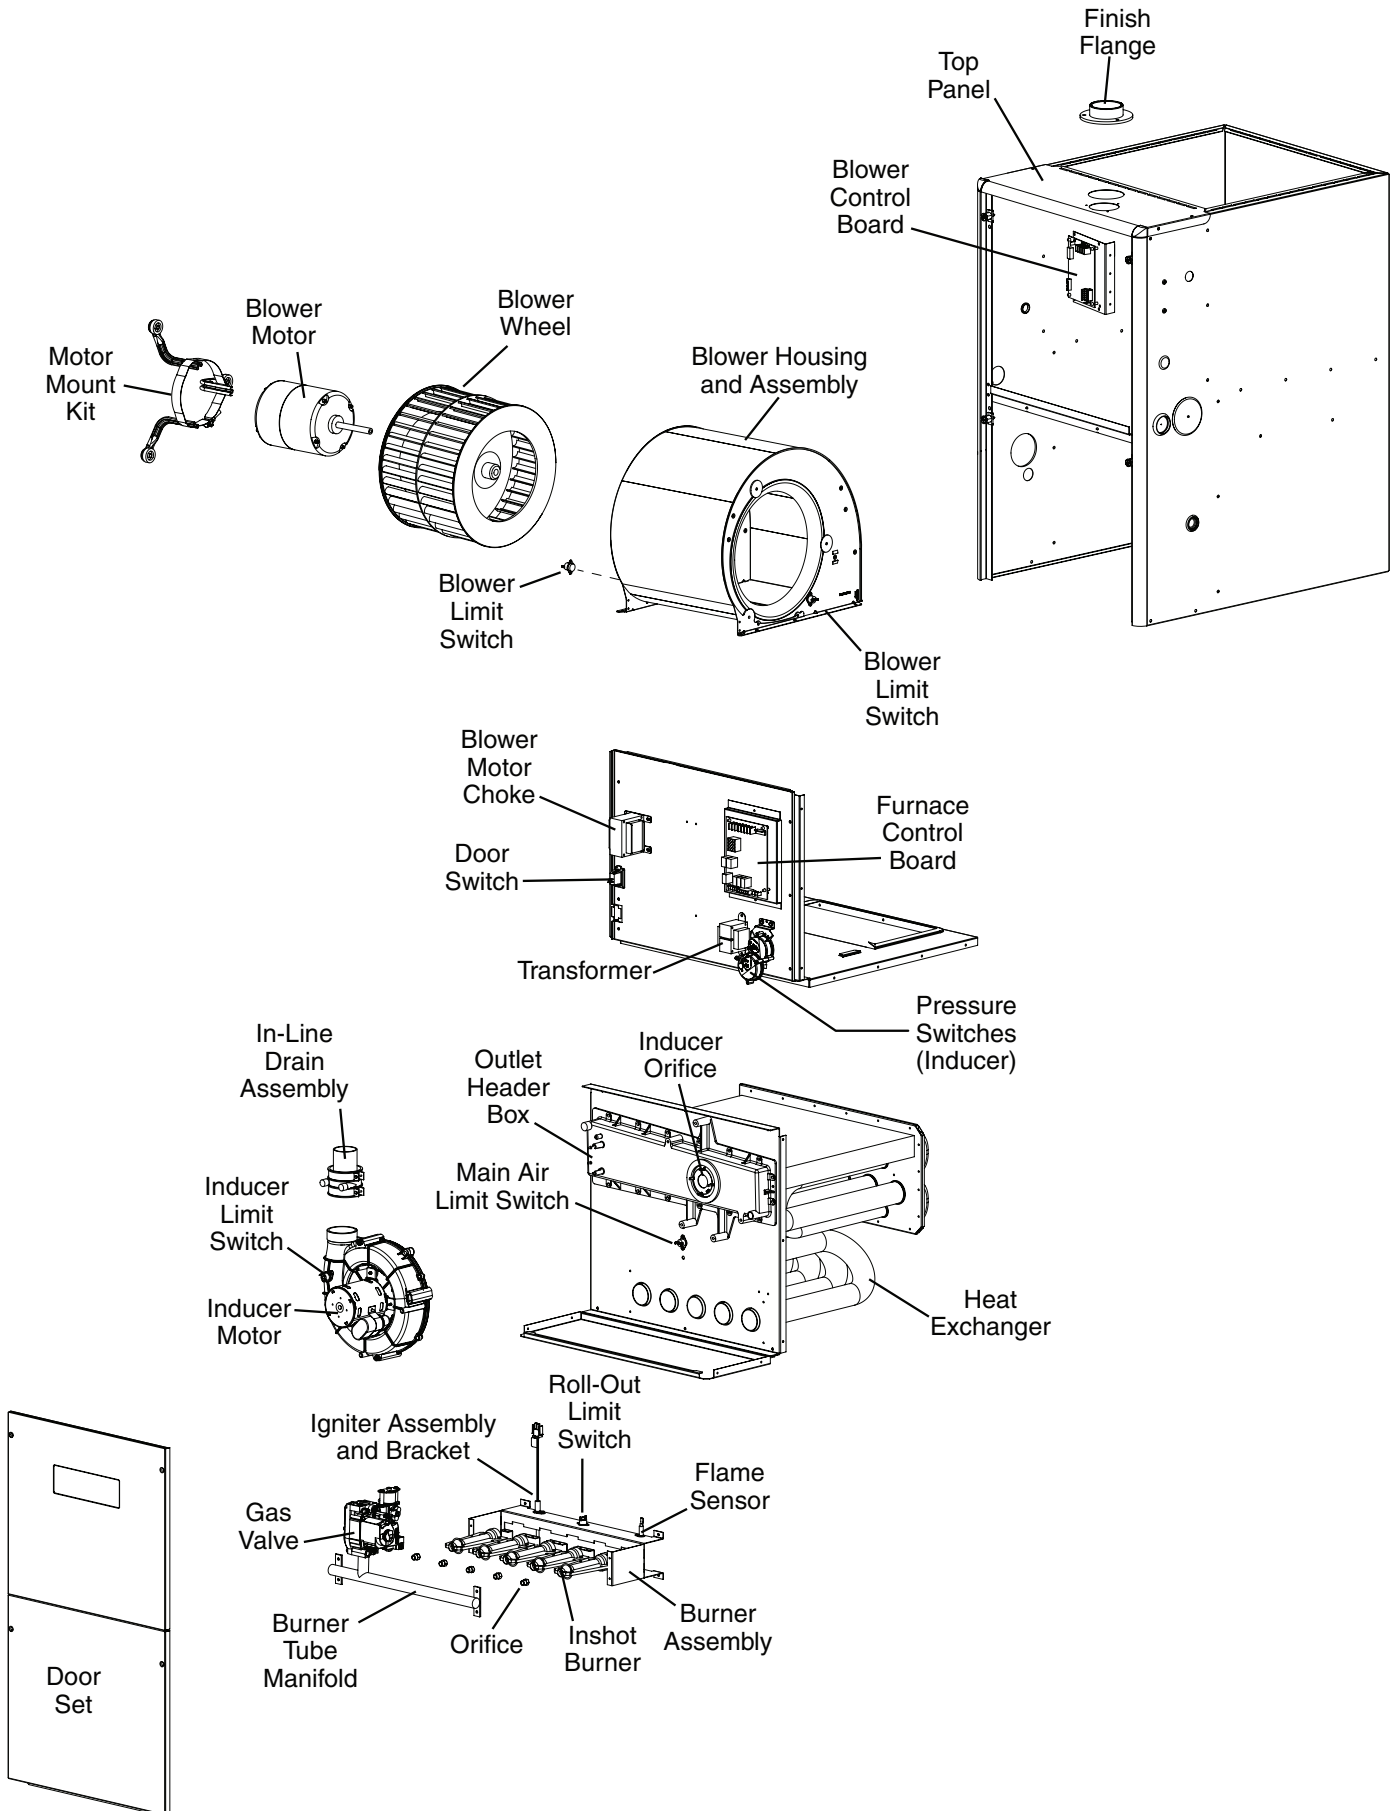 

DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J" 30") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921816	921816	921816	921816
Harness Inducer-Resistor (Not Shown)	1014826R	1014827R	1014827R	1016418R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	1014812R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626598R	626615R	626612R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	1017676R	1017676R	632554R
Pressure Switches (Inducer)	1016291R	1016292R	1016293R	1016294R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036041R	M0036042R	M0036042R	M0036053R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 22.

DESCRIPTION	060-VB-1	080-VC-1	100-VC-1	115-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J" 30") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921816	921816	921816	921816
Harness Inducer-Resistor (Not Shown)	1014826R	1014827R	1014827R	1016418R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	1014812R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626598R	626615R	626612R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	1017676R	1017676R	632554R
Pressure Switches (Inducer)	1016291R	1016292R	1016293R	1016294R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set of Wires (Not Shown)	M0036046R	M0036047R	M0036047R	M0036054R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 22.

96% AFUE**PGC2TN-1 DOWNFLOW, FIXED SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	622684	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J" 30") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921816	921816	921816	921816
Harness Inducer-Resistor (Not Shown)	1014828R	1014829R	1014830R	1014831R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669926R	669720R	669716R	669717R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626601R	626601R	626613R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	1016295R	1016296R	1016297R	1016298R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set of Wires (Not Shown)	M0036043R	M0036044R	M0036045R	M0036050R
Top Panel	2B3562R	2B3563R	2B3563R	—
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 23.


96% AFUE**PGC2TN-1 DOWNFLOW, VARIABLE SPEED - REPLACEMENT PARTS LIST**

DESCRIPTION	060-VB-1	080-VC-1	100-VC-1	115-VD-1
Blower Assembly	904877	904878	—	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	1027002R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	622684	921652	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245
Door Set	904772	904773	904773	—
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J" 30") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown))	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	921816	921816	921816	921816
Harness Inducer-Resistor (Not Shown)	1014832R	1014829R	1014830R	1014831R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669926R	669720R	669716R	669717R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit Switch	626601R	626601R	626613R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	1016295R	1016296R	1016297R	1016298R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set of Wires (Not Shown)	M0036048R	M0036049R	M0036052R	M0036051R
Top Panel	2B3562R	2B3563R	2B3563R	—
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 23.

 PGC2TE-1 UPFLOW ONLY - COMPONENT LOCATION

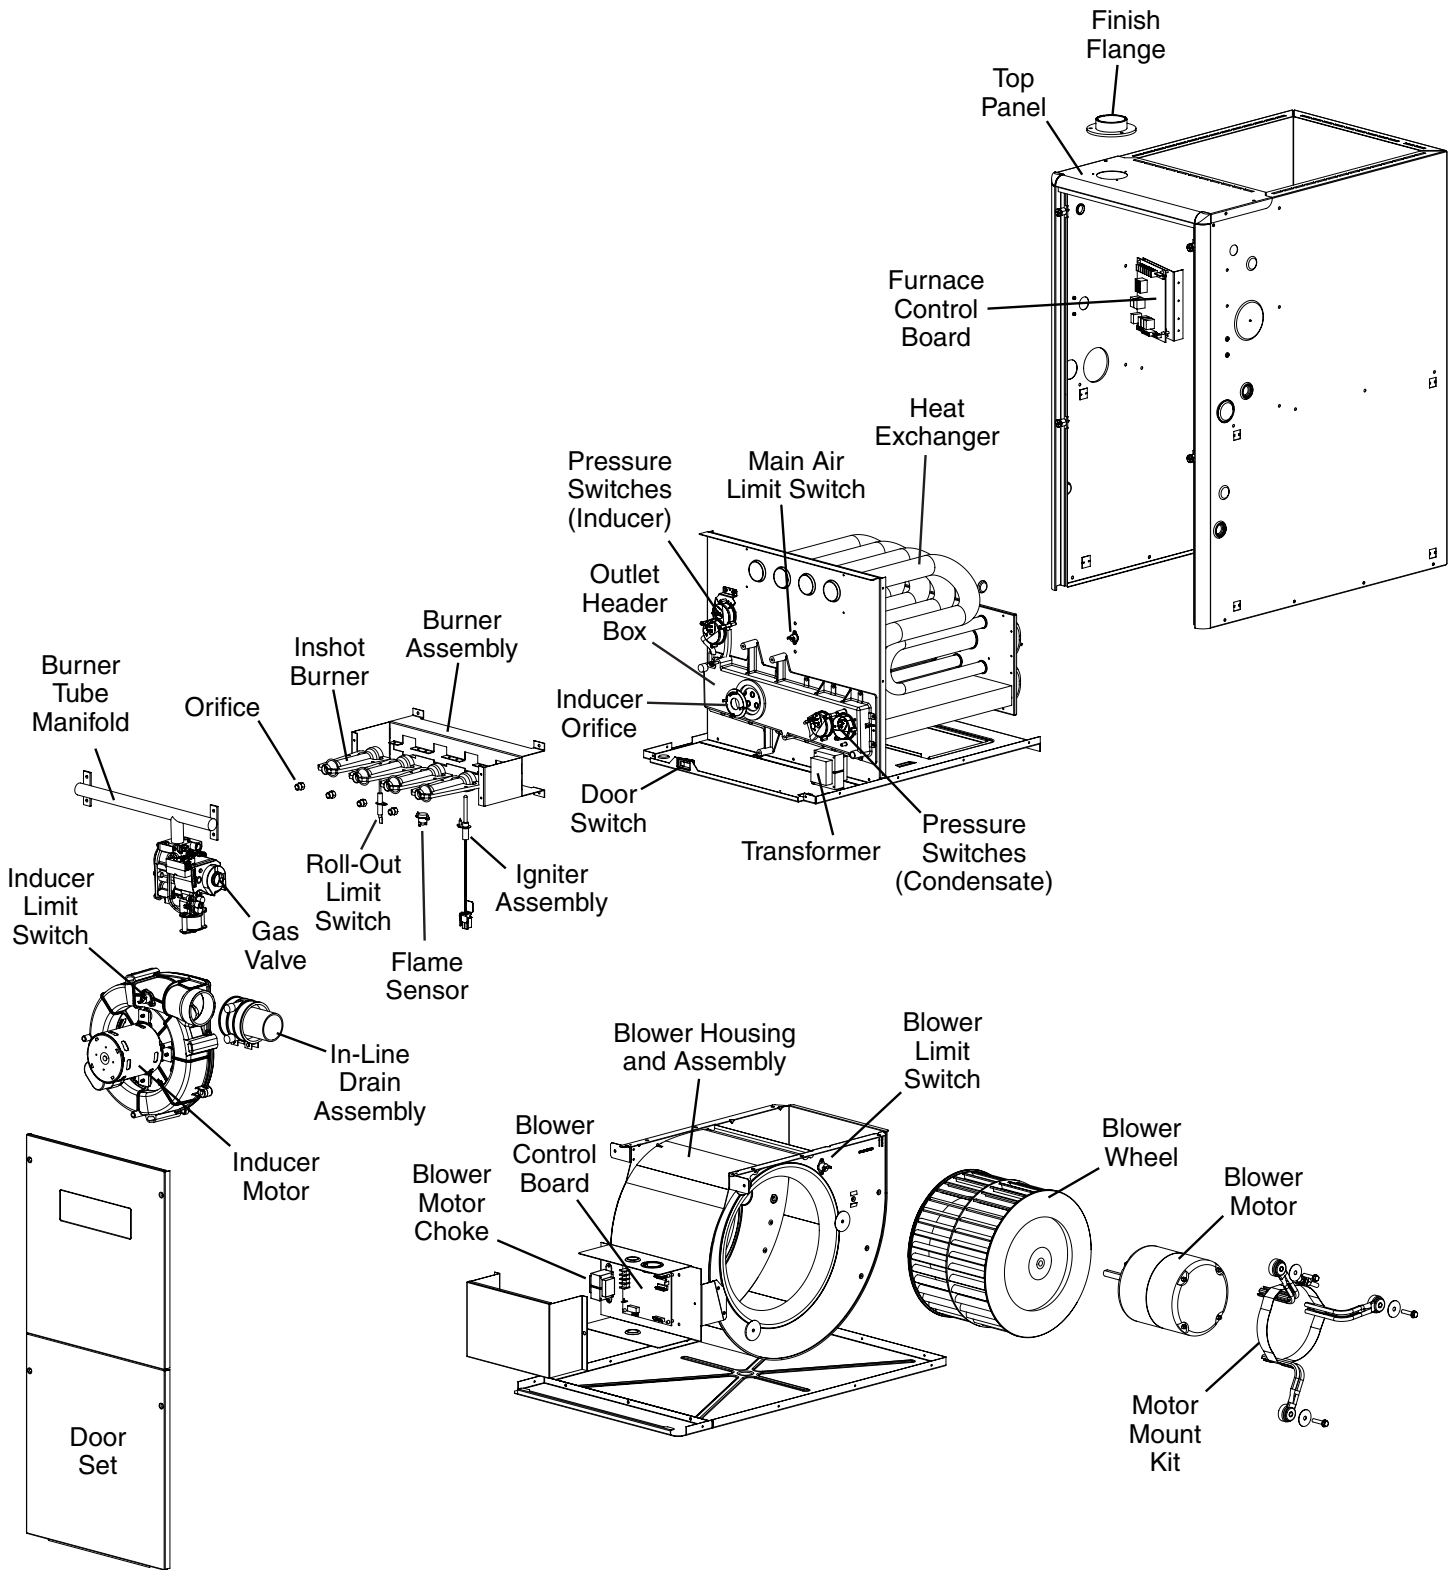

PGCTN-1 DOWNFLOW - COMPONENT LOCATION

