


# Parts Breakdown

Model BS-CN-2020 46786

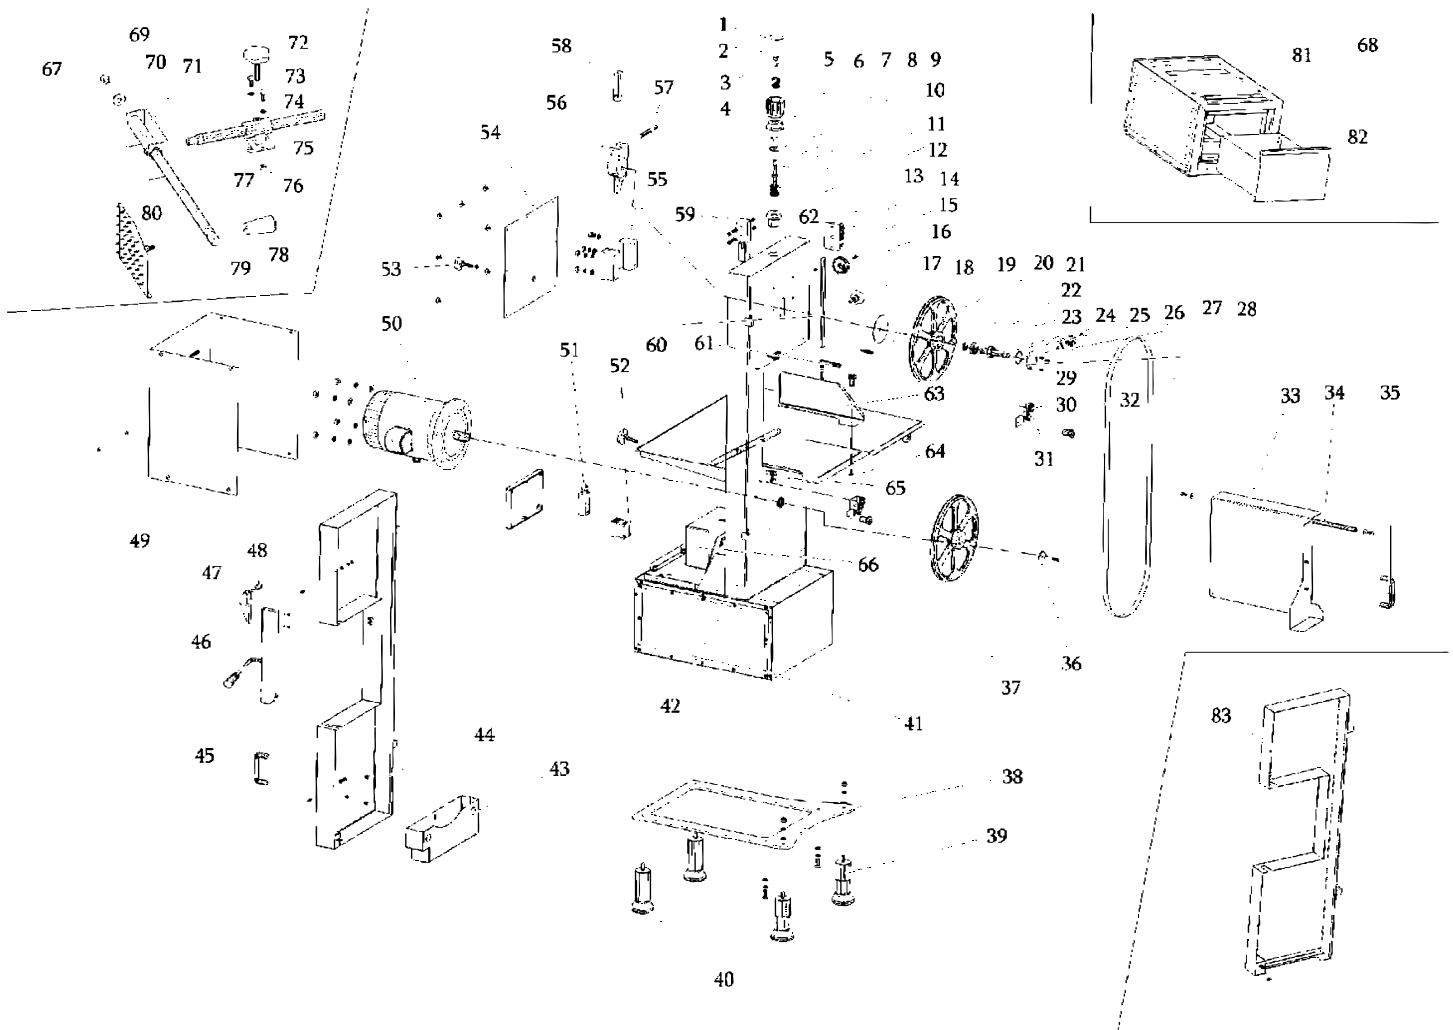

# Parts Breakdown

## Model BS-CN-2020 46786

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AF384	Cover for 46786	1	AF412	Stand for 46786	29	AF440	Shaft for 46786	57
AF385	Nut for 46786	2	AF413	Cleaner 1 for 46786	30	AF441	Sliding Plate of Groove for 46786	58
AF386	Gasket for 46786	3	AF414	Cleaner 2 for 46786	31	AF442	Protection of Moving for 46786	59
AF387	Spring for 46786	4	AF415	Handle for 46786	32	AF443	Moving Guide Shaft for 46786	60
AF388	Adjusting Handle for 46786	5	AF416	Sliding Working Table for 46786	33	AF444	Guide Part for 46786	61
AF389	Sheath for 46786	6	AF417	Cover for 46786	34	AF445	Rubber Gasket for Switch for 46786	62
AF390	Round Ball for 46786	7	AF418	Bakelite Handle for 46786	35	AF446	Length Board for 46786	63
AF391	Lid Cover for 46786	8	AF419	Collar for Top Shaft for 46786	36	AF447	Tightening Screw for 46786	64
AF392	Tightening Shaft for 46786	9	AF420	Pulley 2 for 46786	37	AF448	Bending Board for 46786	65
AF393	Pin for 46786	10	AF421	Bottom for 46786	38	AF449	Support Frame of Motor for 46786	66
AF394	Spring for 46786	11	AF422	Adjusting Feet for 46786	39	AF450	Waste Setting (Selected) for 46786	67
AF395	Bushing for 46786	12	AF423	Non-Adjusting Feet for 46786	40	AF451	Hexagon Screw for 46786	69
AF396	Box of Switch for 46786	13	AF424	Seat for 46786	41	AF452	Big Gasket for 46786	70
AF397	Stop Button for 46786	14	AF425	Body for 46786	42	AF453	Seat of Transform for 46786	71
AF398	Start Button for 46786	15	AF426	Drawer for Waste for 46786	43	AF454	Star Handle for 46786	72
AF399	Locker for 46786	16	AF427	Door for 46786	44	AF455	Hexagon Screw for 46786	73
AF400	Handle of Locker for 46786	17	AF428	Protection for Saw for 46786	45	AF456	Fixing Stand for 46786	74
AF401	Retaining Plate for 46786	18	AF429	Shaft for 46786	46	AF457	Shaft for 46786	75
AF402	Pulley 1 for 46786	19	AF430	Protection for Saw for 46786	47	AF458	Nut for 46786	76
AF403	Shaft of Pulley for 46786	20	AF431	Shaft for 46786	48	AF459	Gasket for 46786	77
AF404	Sealing Ring for 46786	21	AF432	Back Cover for 46786	49	AF460	Handle for 46786	78
AF405	Bearing for 46786	22	AF433	Motor for 46786	50	AF461	Moving Shaft for 46786	79
AF406	Spacer for 46786	23	AF434	Microswitch for 46786	51	AF462	Clamping Plate 1 for 46786	80
AF407	Shaft for 46786	24	AF435	Contacting and Capacitor for 46786	52	AF463	Seat with Drawer for 46786	81
AF408	Collar for Shaft for 46786	25	AF436	Handle for 46786	53	AF464	Drawer for 46786	82
AF409	O Ring for 46786	26	AF437	Cover of Back for 46786	54	AF465	Cover for Door for 46786	83
AF410	Gland for 46786	27	AF438	Guiding Part for 46786	55			
AF411	Saw for 46786	28	AF439	Sliding Part for 46786	56			