



Parts Breakdown

Model JE-ES-0015-F 39519

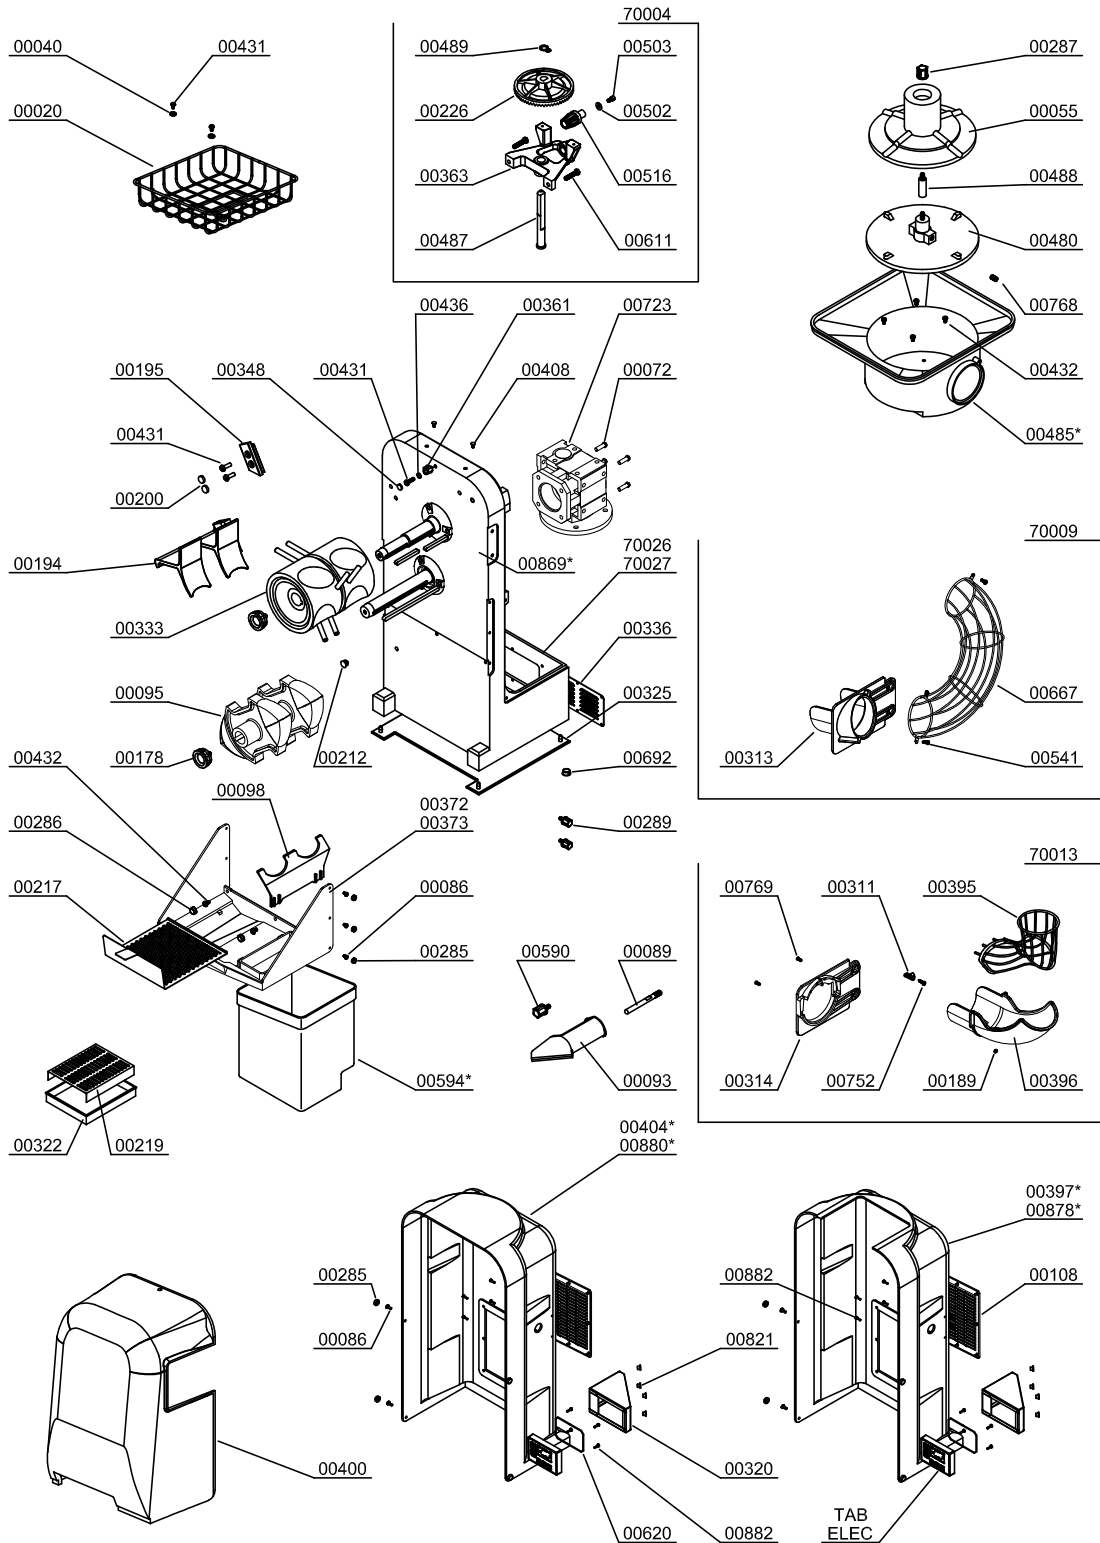

Parts Breakdown


Model JE-ES-0015-F 39519

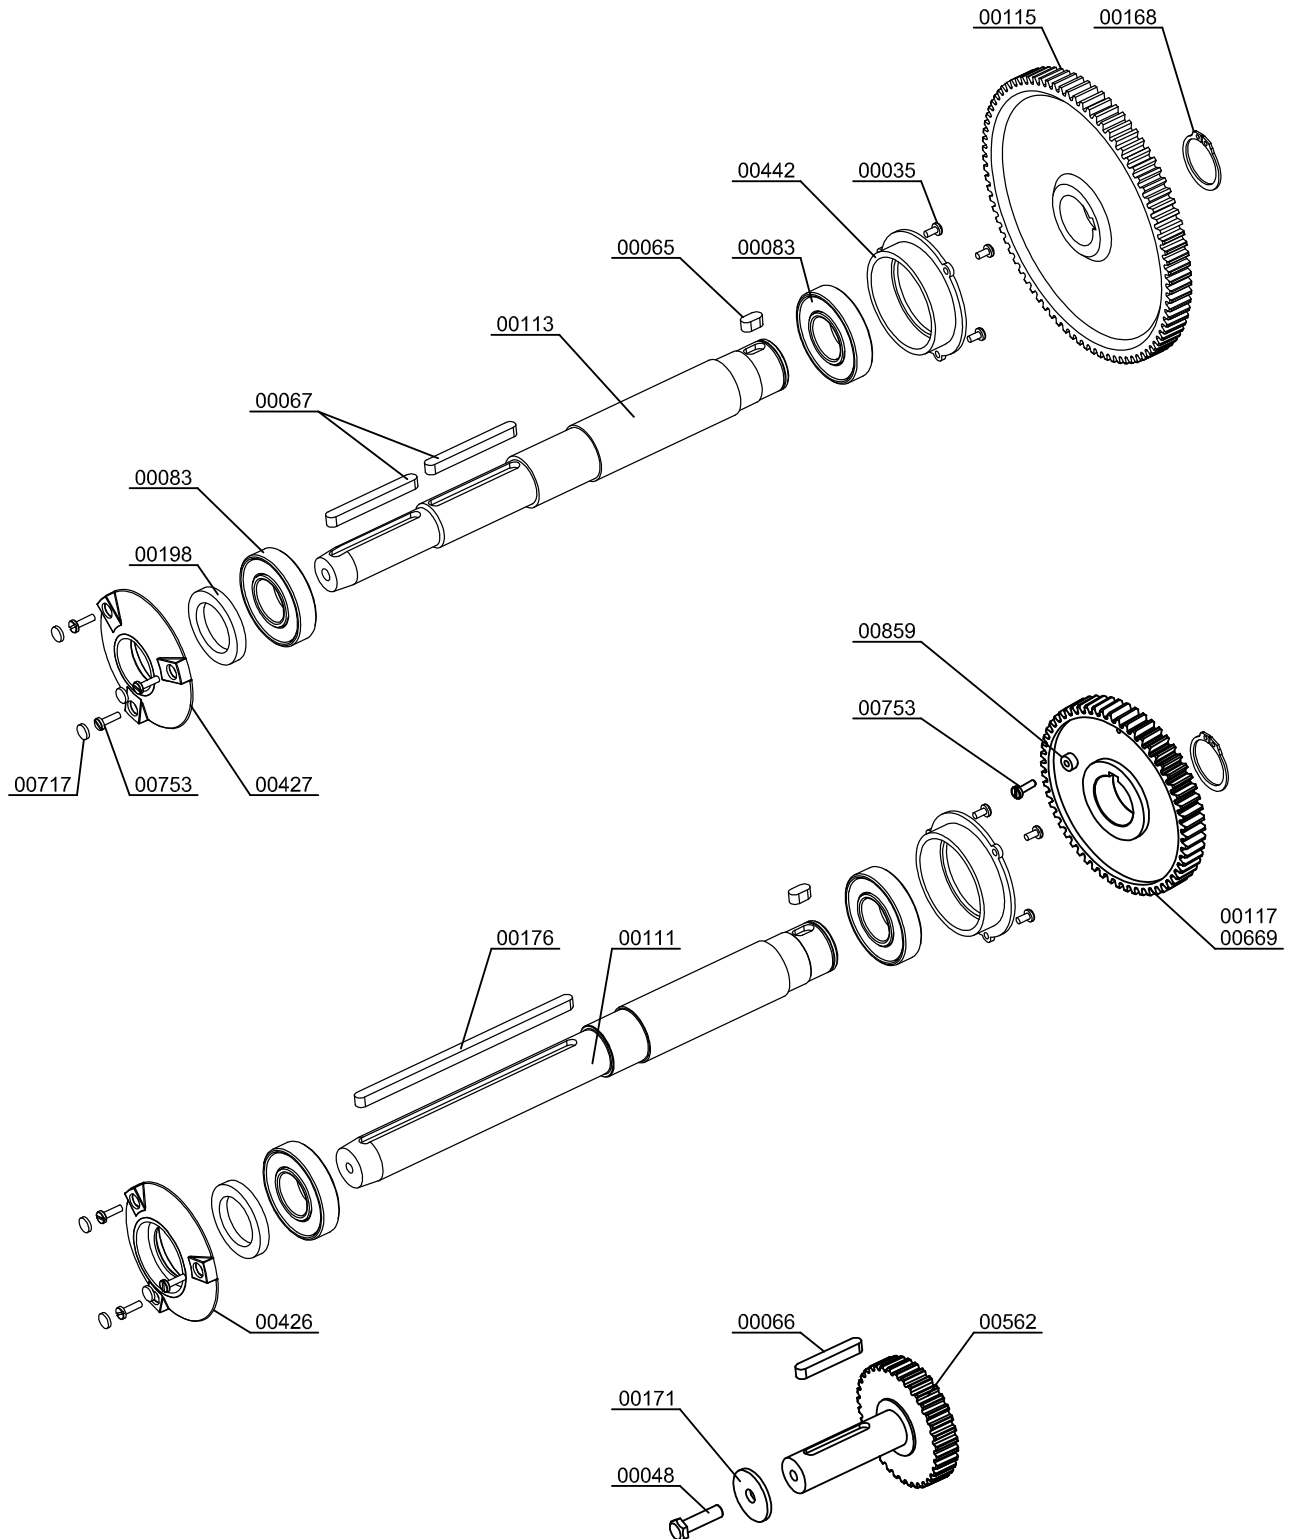


Parts Breakdown

Model JE-ES-0015-F 39519

STAINLESS STEEL SELF TAP OPTION

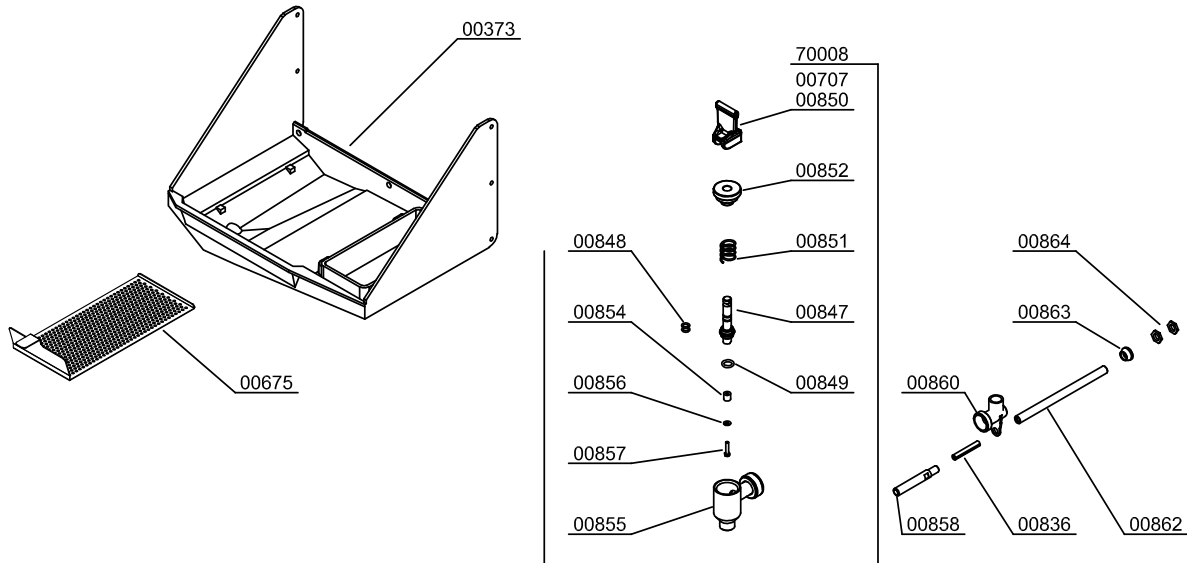

AUTOMATIC SHOWER OPTION

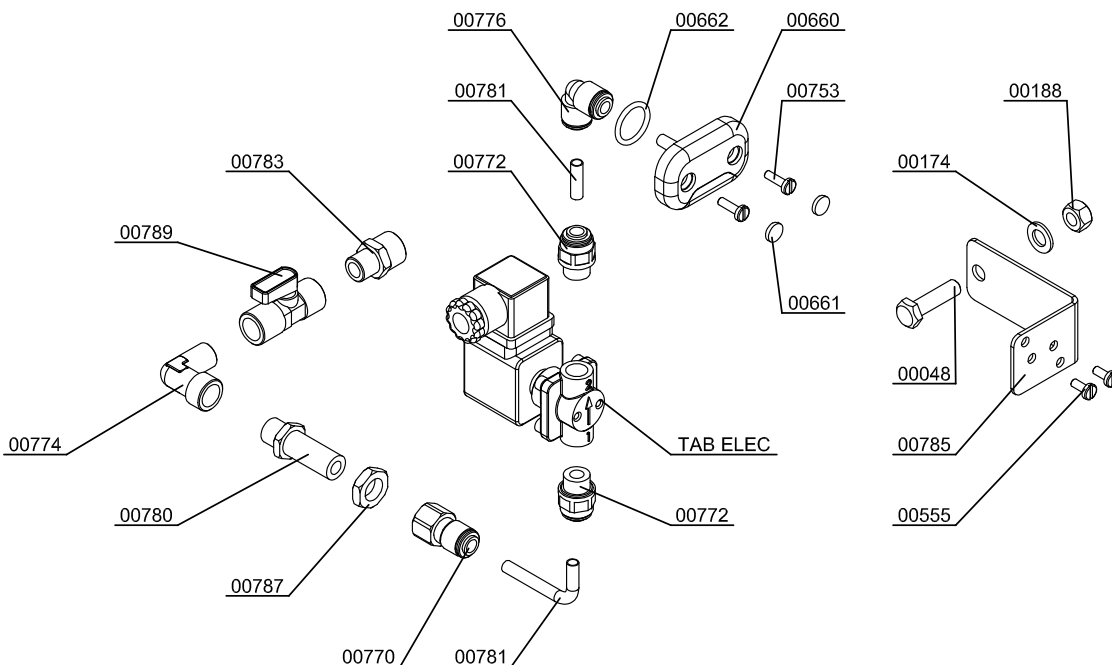

Parts Breakdown

Model JE-ES-0015-F 39519

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
72499	Stainless Steel Basket for 39519	00020	72535	Plastic Lid M6 for 39519	00286	72580	Rustless Screw M2.9x10 Inox for 39519	00541
72500	Screw H M4x10 Zinc for 39519	00035	40592	Female Thumbscrew M8 for 39519	00287	72582	Rustless Screw M5x10 Inox for 39519	00555
72501	Rustless Washer DIN-9021 D06 for 39519	00040	72537	Male Thumbscrew M6 for 39519	00289	72583	Reducer Shaft for 39519	00562
72502	Screw H M8x30 Zinc for 39519	00048	72538	Feeder Tube Support Clamp for 39519	00311	40589	Male Thumbscrew M8 for 39519	00590
72503	Turning Feeder Plate for 39519	00055	72539	Feeder Tube Support MM for 39519	00313	72585	Peel Bucket for 39519	00594
72504	Cotter H 8x7x15 for 39519	00065	72540	Feeder Tube Support MX for 39519	00314	72586	Screw H M10x35 Zinc for 39519	00611
72505	Cotter H 8x7x50 for 39519	00066	AK891	E-Tron Basic Support for 39519	00320	AK892	E-Tron Joint for 39519	00620
72506	Rustless Cotter Inox 8x7x70 for 39519	00067	72541	Tray 150x120 for 39519	00322	64837	DC Shower Diffuser for 39519	00660
72507	Screw H M8x25 Zinc for 39519	00072	72542	Sump Base for 39519	00325	64838	DC Shower Diffuser Cap for 39519	00661
72508	Bearing 6007 for 39519	00083	72543	Squeezer Double Drum for 39519	00333	64839	DC O-Ring for 39519	00662
72509	Rustless Screw M4x10 Inox for 39519	00086	72545	Sump Grid for 39519	00336	72612	Feeder Tube Protection for 39519	00667
72510	Blade Rod-Positioner for 39519	00089	72547	Cover Screen Support Cap for 39519	00348	64840	Lower Gear for 39519	00669
40585	Knife Piece for 39519	00093	72548	Cover Screen Support for 39519	00361	40587	Rustless Juice Filter for 39519	00675
71506	Squeezer Male for 39519	00095	72549	Feeder Support for 39519	00363	64841	Plugging Cap Ø19mm for 39519	00692
40593	Ejector for 39519	00098	72550	Juice Tray for 39519	00372	AK893	Tap Handle for 39519	00707
72514	Ventilation Grid for 39519	00108	72551	Juice Tray (Self) for 39519	00373	72597	Lower Seal Protection for 39519	00717
72515	Lower Rustless Shaft for 39519	00111	72552	Feeder Tube Protection for 39519	00395	64842	Reducer for 39519	00723
72516	Upper Rustless Shaft for 39519	00113	72553	Feeder Tube for 39519	00396	64843	Rustless Screw M2.9x16 Inox for 39519	00752
72518	Upper Gear for 39519	00115	72554	Back Cover MM for 39519	00397	44090	Rustless Screw DIN-85 M4x14 Inox for 39519	00753
72519	Lower Gear for 39519	00117	39696	Cover Screen for 39519	00400	72589	Screw H M6x16 for 39519	00768
72520	C Clip Din 471 E-34 for 39519	00168	72556	Back Cover MX for 39519	00404	64845	Rustless Screw M4x16 Inox for 39519	00769
72521	Washer H D35-D09x3 Zinc for 39519	00171	72557	Plugging Cap Ø5x12mm for 39519	00408	64846	DC Adapter Female 6-1/4" for 39519	00770
72522	Rustless Washer Din-125 D08 Inox for 39519	00174	72560	Lower Seal Protection for 39519	00426	64847	DC Adapter Male 6-1/4" for 39519	00772
72523	Stainless Cotter 8x8x170 Inox for 39519	00176	72561	Upper Seal Protection for 39519	00427	64849	DC Elbow 6mm for 39519	00776
40590	Male Thumbscrew M8 for 39519	00178	72563	Rustless Screw M6x20 Inox for 39519	00431	64851	DC Hose 6mm for 39519	00781
64906	Nut H Zinc M8 for 39519	00188	72564	Rustless Screw M6x12 Inox for 39519	00432	64853	DC E-Valve Shower Support for 39519	00785
72526	Rustless Wingnut M4 Inox for 39519	00189	72565	Rustless Washer Din-6798 D06 Inox for 39519	00436	64855	DC Valve 1/4" for 39519	00789
40586	Positioner Orange Color for 39519	00194	64835	Sump Bearing Lid for 39519	00442	AK894	Plugging Cap for 39519	00821
72528	Positioner Guide for 39519	00195	72692	Traction Disc Feeder for 39519	00480	64856	Pin Detect D8 for 39519	00836
72529	Rubber Seal 35x50x07 for 39519	00198	72568	Head Feeder for 39519	00485	64857	Tap Plunger for 39519	00847
72530	Positioner Lid for 39519	00200	72569	Rustless Feeder Shaft for 39519	00487	64858	Plunger O-Ring Ø2 for 39519	00848
64834	Plugging Cap Ø16mm Black for 39519	00212	72570	Feeder Traction Disc Supply for 39519	00488	64859	Plunger O-Ring Ø4 for 39519	00849
40594	Rustless Juice Filter for 39519	00217	72693	C Clip DIN-471 E16 for 39519	00489	64860	Tap Handle for 39519	00850
72532	Luggage-Rack 150x120 for 39519	00219	72572	Washer H D28-D06x2 Zinc for 39519	00502	64861	Tap Spring for 39519	00851
72533	Gear Feeder 3 Horiz for 39519	00226	72573	Rustless Screw M6x10 Inox for 39519	00503	64862	Tap Cap for 39519	00852
72534	Plastic Lid M4 for 39519	00285	72574	Gear Feeder for 39519	00516	64863	Magnet 10-10 for 39519	00854

Parts Breakdown

Model JE-ES-0015-F 39519

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
64864	Tap Body for 39519	00855	64871	Tube DET Nut for 39519	00863	64876	Self Service Inox Tap Kit for 39519	70008
64865	Rustless Washer Din-125 D05 Inox for 39519	00856	64872	Nut H CRO M12x100 for 39519	00864	72615	Feeder Tube Kit MM for 39519	70009
64866	Rustless Screw for 39519	00857	AK895	Frontal Sheet for 39519	00869	72616	Feeder Tube Kit MX for 39519	70013
64867	Tap Capsule for 39519	00858	64873	Back Cover for 39519	00878	72617	Sump Kit for 39519	70026
64868	Magnet 10-05 for 39519	00859	64874	Back Cover for 39519	00880	64877	Shower Sump Kit for 39519	70027
64869	Tap Support for 39519	00860	64875	Rustless Screw M2.9x13 Inox for 39519	00882			
64950	Tube DET-180 Stainless Steel for 39519	00862	72614	Feeder Support Kit for 39519	70004			