

FR—overload protection switch

SB—stop switch

SB2—vacuum start switch


SB1—motor start switch

KM, KM1—relay contactor

m—vacuum pump

KT, KT1—relay contactor

M—motor

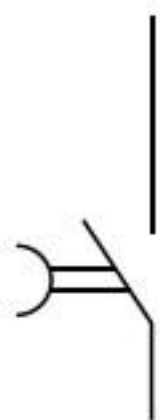

Instant Close

Instant Open

Delayed Close

Delayed Open