



Refrigerated Showcases

Models RS-CN-0120, 0160
Items 27156, 27157
Instruction Manual



Revised - 02/25/2019



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com

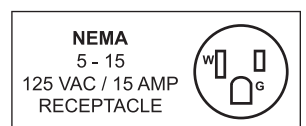


Table of Contents

Model RS-CN-0120 / Model RS-CN-0160

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 6
Technical Specifications -----	6
Operation -----	7 - 8
Maintenance -----	8 - 9
Troubleshooting -----	9
Parts Breakdown -----	10 - 13
Electrical Schematics -----	14
Warranty Registration -----	15



General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueilli par un tiers transporteur.

General Information

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

Handle with care	Dry place
Unplug the wall socket first. Never tilt it over 45 degrees when handling.	Always place the refrigerator in a dry location.

Safety and Warranty

Sufficient space The distance from both sides and back of refrigerator to wall or other substance must be no less than 10 cm (4"). The refrigeration capability may decrease if its surrounding space is too small to circulate air.	Well ventilated Always place the refrigerator in an area with proper ventilation. When using for the first time, wait at least 24 hours after handling to start.
Far from heat source Never place the refrigerator in direct sunlight. Never place refrigerator near heat source as it reduces refrigeration capabilities.	Heavy load Never put any heavy objects on top of the refrigerator.
Do not make holes Never make any holes on the refrigerator. Do not attach any objects onto the refrigerator.	Stable Location Unpack and place the refrigerator on level and stable ground.
Exclusive power socket Normally, the power supply should be 100 – 110V, 60 Hz single phase AC with exclusive single phase receptacle.	Do not share the socket Never let the refrigerator share a socket with another appliance. The cable may become hot and this may cause a fire. DO NOT USE EXTENSION CORDS.
Protect cables Never break or damage the cables as this may cause current leakage resulting in a fire.	No water flushing Never spray down refrigerator with pressurized water supply.
Avoid flammable and explosive objects Never put any flammable or explosive items inside the refrigerator such as gasoline or alcohol. Never put any dangerous products in close proximity to the refrigerator.	No spray Do not spray the unit with a flammable substance such as paint. This may result in a fire.
After power break After a power break or unplugging the refrigerator, always wait at least 5 minutes before starting the refrigerator again.	Medical Storage No medicine is allowed to be kept inside the refrigerator.

NOTE

- The electric circuit diagram and parameters on the product name plate are subject to change without the manufacturer having to change the manual.
- The design might be improved without notice.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a qualified electrician in order to avoid injury.

WARNING: The unit uses R134a or R600a refrigerant. Make sure that all precautions against fire have been taken.

Safety and Warranty

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Models	RS-CN-0120	RS-CN-0160
Coolant and Injection Quantity	R134a (100g) R600a (50g)	R134a (140g) R600a (65g)
General Rated Input Power	230/160 W	
Type of Climate	4	
Refrigeration Temperature	0-12°C / 32-53.6°F	
Electrical Shock Protection Class	1	
Rated Current	3/2.8A	
Lamp Power	2 W (LED)	2.5 W (LED)
Total Effective Volume	120 L / 4.2 cu. ft.	160 L / 5.7 cu. ft.
Net Weight	125.7 lbs. / 57 kgs.	145.5 lbs. / 66 kgs.
Rated Voltage	~110 V	
Rated Frequency	60 Hz	
Overall Dimensions	27.6" x 22.4" x 27" 702 x 568 x 686mm	34.6" x 22.4" x 27" 880 x 568 x 686mm
Item Number	27156	27157

BEFORE USE

Ensure the unit is upright and positioned in its location for 12 hours prior to use.

Plug the refrigerator in a 110V~ socket exclusively for the unit. After the refrigerator is running, test the air suction to confirm it is sufficiently cold. Then you may put food inside the unit. Make sure the food product is already cooled before placing it in the display case. The unit should not be used to cool food products.

DIGITAL TEMPERATURE CONTROLLER

The digital temperature controller is easy to operate and controls the compressor.

- The main functions are: Temperature display, manual control, automatic defrost, light control, value storing, self-testing and parameter locking.

Digital Controller Operation:

1. Press ▼ and display **ON**, parameter unlock.
2. Press **SET** button and hold until display **0**, and then press ▲ or ▼ to set lower limit of the temperature. Usually set **0** =2.
3. Press **SET** button and hold until display **1**, and then press ▲ or ▼ to set upper limit of the temperature. Usually set **1** =6 or 8.
4. Press **SET** button and hold until display **2**, and then press ▲ or ▼ to set temperature difference. Usually set **2** =4.
5. Press **SET** button and hold until display **3**, and then press ▲ or ▼ to set the delay time for compressor starting work. The scale would be 0-5 minutes. Usually set **3** =3.
6. Press **SET** button and hold until display **4**, and then press ▲ or ▼ to adjust the temperature of cold-room probe. The scale would be from -5°C to 5°C.
7. Press **SET** button and hold until display **5**, and then press ▲ or ▼ to adjust the temperature of defrost probe. The scale would be from -5°C to 5°C.
8. Press **SET** button and hold until display **6**, and then press ▲ or ▼ to set defrost time. The scale would be 10-30 minutes. Usually set **6** =25.
9. Press **SET** button and hold until display **7**, and then press ▲ or ▼ to set the interval of defrost. The scale would be 4-8 hours. Usually set **7** =6.
10. Press **SET** button and hold until display **8**, and then press ▲ or ▼ to set the temperature of start working. The scale would be 0-20°C. Usually set **8** =20°C.
11. Press **SET** button and hold until display **9**, If set **9** as **01**, the room temperature is locked during defrost, and the last value before defrost is displayed. When defrost ends, normal display will be resumed after 20 minutes delay of room temperature display. The defrost display will flash during the delay.
12. Press **SET** button and hold until display **A**, it is temperature unit. Set **00** as Celsius scale, set **1** as Fahrenheit.
13. Press the light switch, light is on, press again, light is off.
14. Refrigeration indicator light: The light is on when refrigeration, the light is off when the cold room temperature is constant, the light will flash when there is a delay start.
15. Defrost indicator light: The light is on when defrosting, the light will flash when there is a delay display defrost.
16. Irregular working mode: **HH1** is displayed if the control probe short circuits or a high temperature (>80°F) is

Operation

reached, LL1 is displayed if the control probe short circuits or a low temperature ($<-60^{\circ}\text{F}$) is reached, and the compressor start working 45 minutes and then stop working 15 minutes. The control probe happened with short circuit, open circuit or over limit, the refrigerator will top defrost, and will be under control of defrost time.

CAUTION

- Reducing the frequency of opening the refrigerator door will keep more cold air inside the refrigerator.
- Do not block air suction or outlet. Air must continue circulating to increase refrigeration capability.
- Do not over fill or over stock the refrigerator, as it will influence the cooling effect. Adjust the rack height for proper food storage.
- Cool hot food down to room temperature before storing it in the refrigerator.
- Try to reduce open times and keep refrigerator cold and closed, if power is ever off. Only allow a skilled service individual with proper tools to repair damaged power cables. Never touch compressor, as it can result in injury.
- If supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices of other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



CAUTION: Risk of fire. The height of the triangle in the symbol should be at least 15mm.

Maintenance

Keep the refrigerator clean and periodical maintenance is necessary. Always unplug the socket before maintenance. Never use damaged plug or loose socket to prevent from electric shock or short circuit. Never flush the refrigerator. Never use alkali detergent, soap, gasoline, acetone or brush.

1. Clean outside:

Dip soft cloth in neutral detergent (tableware detergent) to clean the outside of the refrigerator and then wipe it with dry soft cloth.

Maintenance

2. Clean inside:
Take rack out for cleaning with water. Use soft cloth to wipe the box.
3. Shut down refrigerator for a long time:
Take all food out and unplug the wall socket. Clean both inside and outside of the refrigerator thoroughly and open the door for sufficient dry. The glass breaks easily. Keep the glass far from children.
4. Replacement of lamp in the light box:
If the LED lamp is damaged, it must be replaced by the manufacturer, or its service agent.

Troubleshooting

Trouble	Cause and Remedy
No refrigeration	Is the plug in the socket well?
	Is the fuse broken?
	Is there no power?
Unsatisfactory refrigeration	Is it under the sunlight? Is there any heat source nearby?
	Does the door close well? Has the door been open for a long time?
	Is the door seal strip deformed or damaged?
	Is food congested or too much?
	Does food block the air suction outlet?
	Regulate the temperature controller.
Too much noise	The refrigerator is not level.
	The refrigerator touches the wall or other objects.
	There is a loose part in the refrigerator.
Contact Omcan at 1-800-465-0234 for help if simple troubleshooting does not solve the problems.	

The following situations are not problems:


1. The murmur of water is heard when the refrigerator is working. This is normal as the coolant is circulating in the system.
2. During wet season, condensation may be found on the outside of the refrigerator. This is not a problem, this is caused by high humidity. Simply use a cloth to wipe it.

REFERENCE

Item Number	Model Number	Description	Manufacturer Model Number
27156	RS-CN-0120	Refrigerated Showcase Countertop 120 L / 4.2 cu. ft. CE 110V/60/1 cQPSus	RTW120L
27157	RS-CN-0160	Refrigerated Showcase Countertop 160 L / 5.7 cu. ft. CE cQPSus	RTW160L

Parts Breakdown

Model RS-CN-0120-E 27156

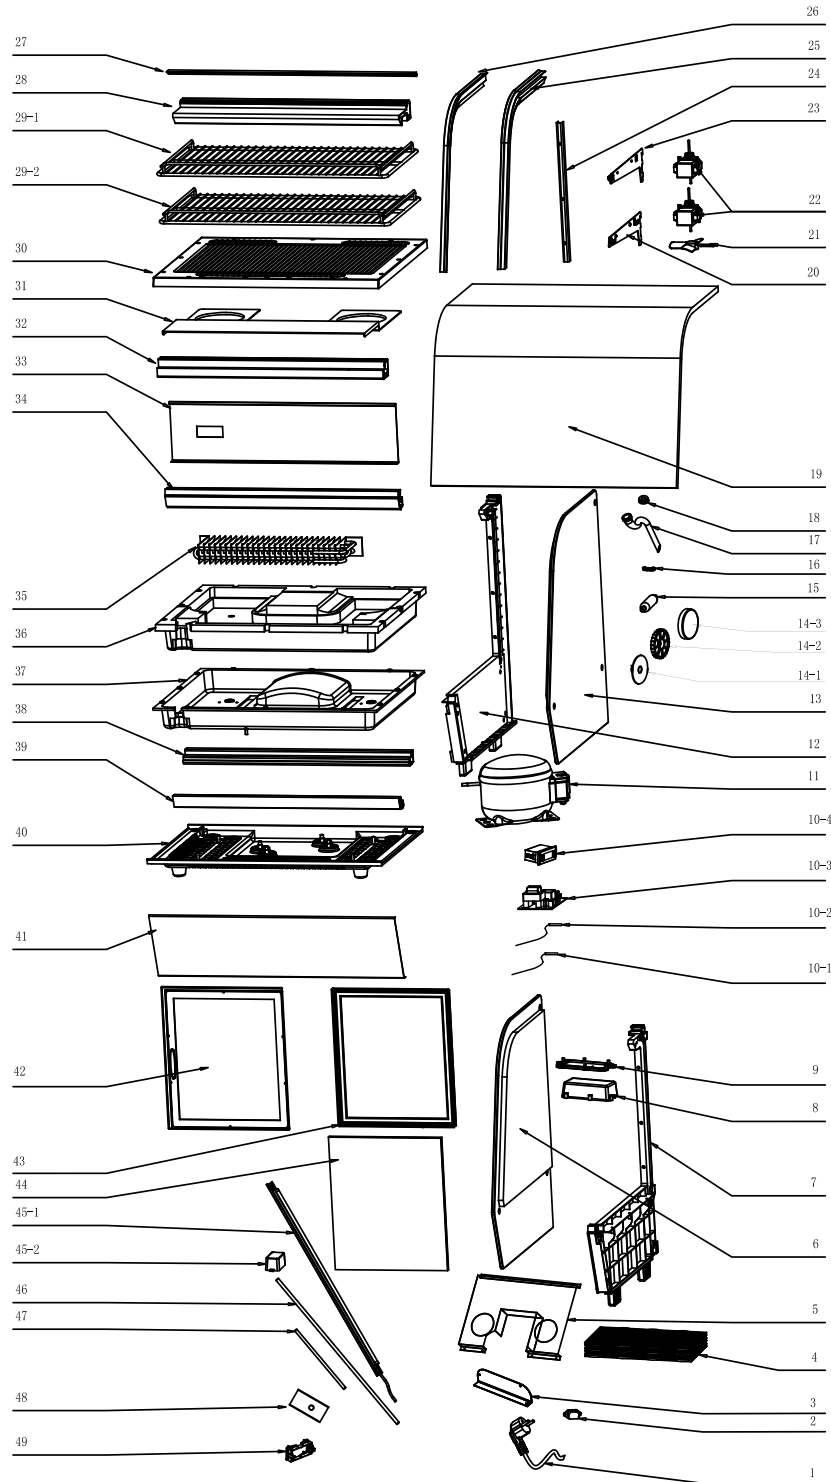


Parts Breakdown

Model RS-CN-0120-E 27156

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
68511	Power Cord for RTW120L	1	68306	Leakage for RTW120L	17	68487	Front Middle Pillar for RTW120L	34
70860	Socket for RTW120L	2	30613	Motor Fixed Ring for RTW120L	18	68486	Evaporator for RTW120L	35
68510	Fixed Board of PCB Box for RTW120L	3	68501	Curved Front Glass for RTW120L	19	68485	Foam Base of Evaporator for RTW120L	36
68509	Condenser for RTW120L	4	71654	Left Shelf Bracket for RTW120L	20	68484	Plastic Base for Foam for RTW120L	37
68508	Condenser Cushion for RTW120L	5	68500	Fan Blade for RTW120L	21	68483	Rear Bottom Pillar for RTW120L	38
68507	Left Glass for RTW120L	6	68499	Motor Fan for RTW120L	22	68482	Front Bottom Pillar for RTW120L	39
68506	Left Panel for RTW120L	7	71655	Right Shelf Bracket for RTW120L	23	68481	Bottom Base of Compressor for RTW120L	40
60137	Controller Box for RTW120L	8	68498	Pillar for Bracket for RTW120L	24	68480	Front Frame for RTW120L	41
60136	Controller Panel for RTW120L	9	68497	Left Seal for RTW120L	25	68479	Inner Door Frame for RTW120L	42
68505	Temperature Display with Probes for RTW120L	10	68496	Right Seal for RTW120L	26	68478	Outer Door Frame for RTW120L	43
68504	Compressor for RTW120L	11	68495	Decorative Board for RTW120L	27	68477	Door Glass for RTW120L	44
68503	Right Panel for RTW120L	12	68494	Top Panel for RTW120L	28	68476	LED Light for RTW120L	45-1
68502	Right Glass for RTW120L	13	68493	Shelf 1 for RTW120L	29-1	67373	LED Power for RTW120L	45-2
79314	Decoration Nut Gasket for RTW120L	14-1	68492	Shelf 2 for RTW120L	29-2	68475	Connected Tube for RTW120L	46
79313	Nut Gasket for RTW120L	14-2	68491	Vent Tray for RTW120L	30	68860	Accumulator for RTW120L	47
79312	Nut Decoration for RTW120L	14-3	68490	Evaporator Protect Board for RTW120L	31	79662	Metal Base of Fan Motor for RTW120L	48
30624	Dry Filter for RTW120L	15	68489	Rear Middle Pillar for RTW120L	32	60125	Digital Controller Holder for RTW120L	49
30617	Wire Board for RTW120L	16	68488	Rear Base Panel for RTW120L	33			

Parts Breakdown

Model RS-CN-0160-E 27157

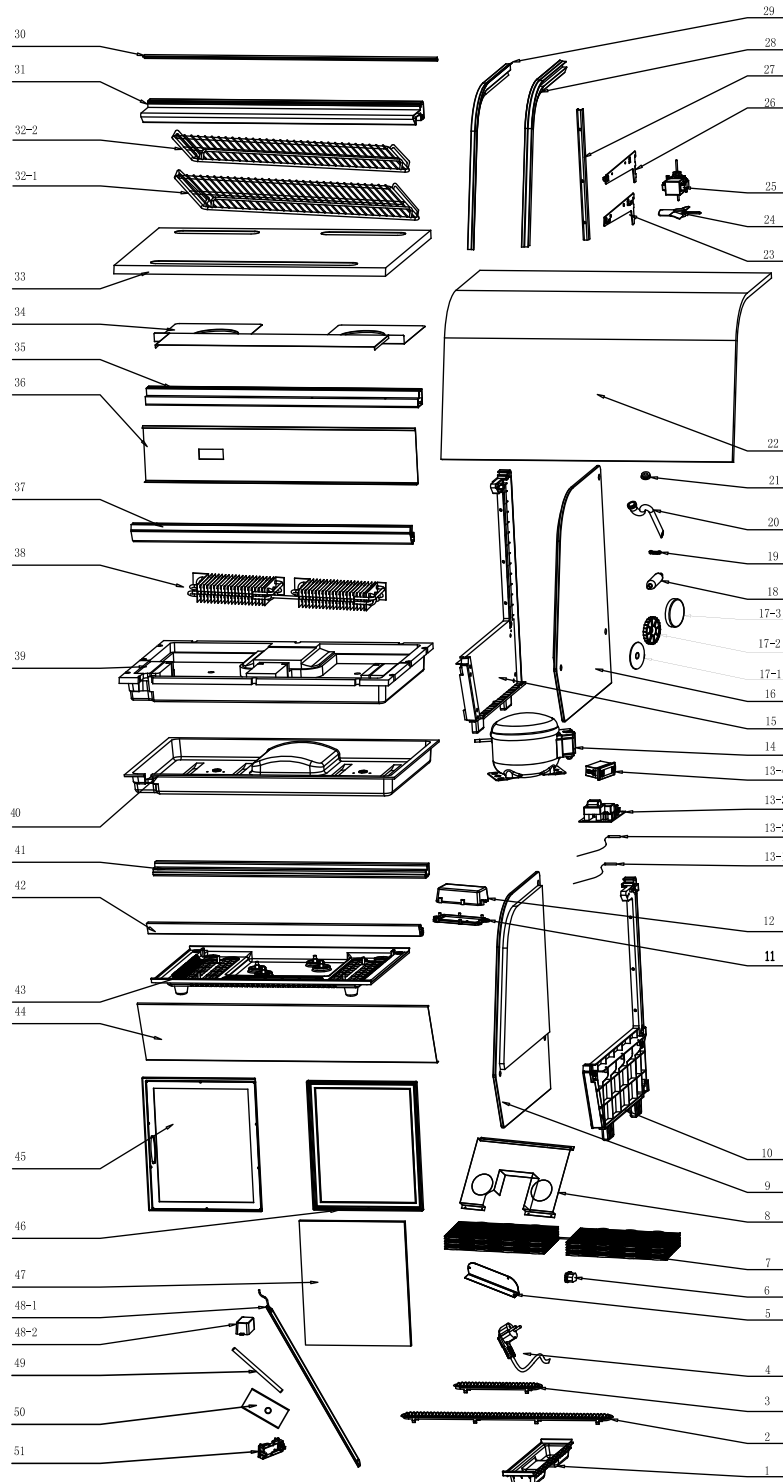

Parts Breakdown


Model RS-CN-0160-E 27157

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
68534	Water Tray for RTW160L	1	30624	Dry Filter for RTW160L	18	68522	Rear Base Panel for RTW160L	36
68533	Cover for Air Outlet for RTW160L	2	30617	Wire Board for RTW160L	19	68521	Front Middle Pillar for RTW160L	37
68532	Cover for Air Suction for RTW160L	3	68306	Leakage for RTW160L	20	68520	Evaporator for RTW160L	38
68511	Power Cord for RTW160L	4	30613	Motor Fixed Ring for RTW160L	21	68519	Foam Base of Evaporator for RTW160L	39
68510	Fixed Board of PCB Box for RTW160L	5	68529	Curved Front Glass for RTW160L	22	68518	Plastic Base for Pillar for RTW160L	40
70860	Socket for RTW160L	6	71654	Left Shelf Bracket for RTW160L	23	68517	Rear Bottom Pillar for RTW160L	41
68531	Condenser for RTW160L	7	68528	Fan Blade for RTW160L	24	68516	Front Bottom Pillar for RTW160L	42
68530	Condenser Cushion for RTW160L	8	68499	Motor Fan for RTW160L	25	68481	Bottom Base of Compressor for RTW160L	43
68507	Left Glass for RTW160L	9	71655	Right Shelf Bracket for RTW160L	26	68515	Front Frame for RTW160L	44
68506	Left Panel for RTW160L	10	68498	Pillar for Bracket for RTW160L	27	68514	Inner Door Frame for RTW160L	45
60137	Controller Box for RTW160L	11	68497	Left Seal for RTW160L	28	68513	Outer Door Frame for RTW160L	46
60136	Controller Panel for RTW160L	12	68496	Right Seal for RTW160L	29	68512	Door Glass for RTW160L	47
68505	Temperature Display with Probes for RTW160L	13	68527	Decorative Board for RTW160L	30	67372	LED Lights for RTW160L	48-1
68504	Compressor for RTW160L	14	68526	Top Panel for RTW160L	31	67373	LED Power for RTW160L	48-2
68503	Right Panel for RTW160L	15	71684	Chrome Shelf 2 for RTW160L	32-1	68860	Accumulator for RTW160L	49
68502	Right Glass for RTW160L	16	71683	Chrome Shelf 1 for RTW160L	32-2	79662	Metal Base of Fan Motor for RTW160L	50
79314	Decoration Nut Gasket for RTW160L	17-1	68525	Vent Tray for RTW160L	33	60125	Digital Controller Holder for RTW160L	51
79313	Nut Gasket for RTW160L	17-2	68524	Evaporator Protect Board for RTW160L	34			
79312	Nut Decoration for RTW160L	17-3	68523	Rear Middle Pillar for RTW160L	35			

Electrical Schematics

Model RS-CN-0120-E 27156

Model RS-CN-0160-E 27157

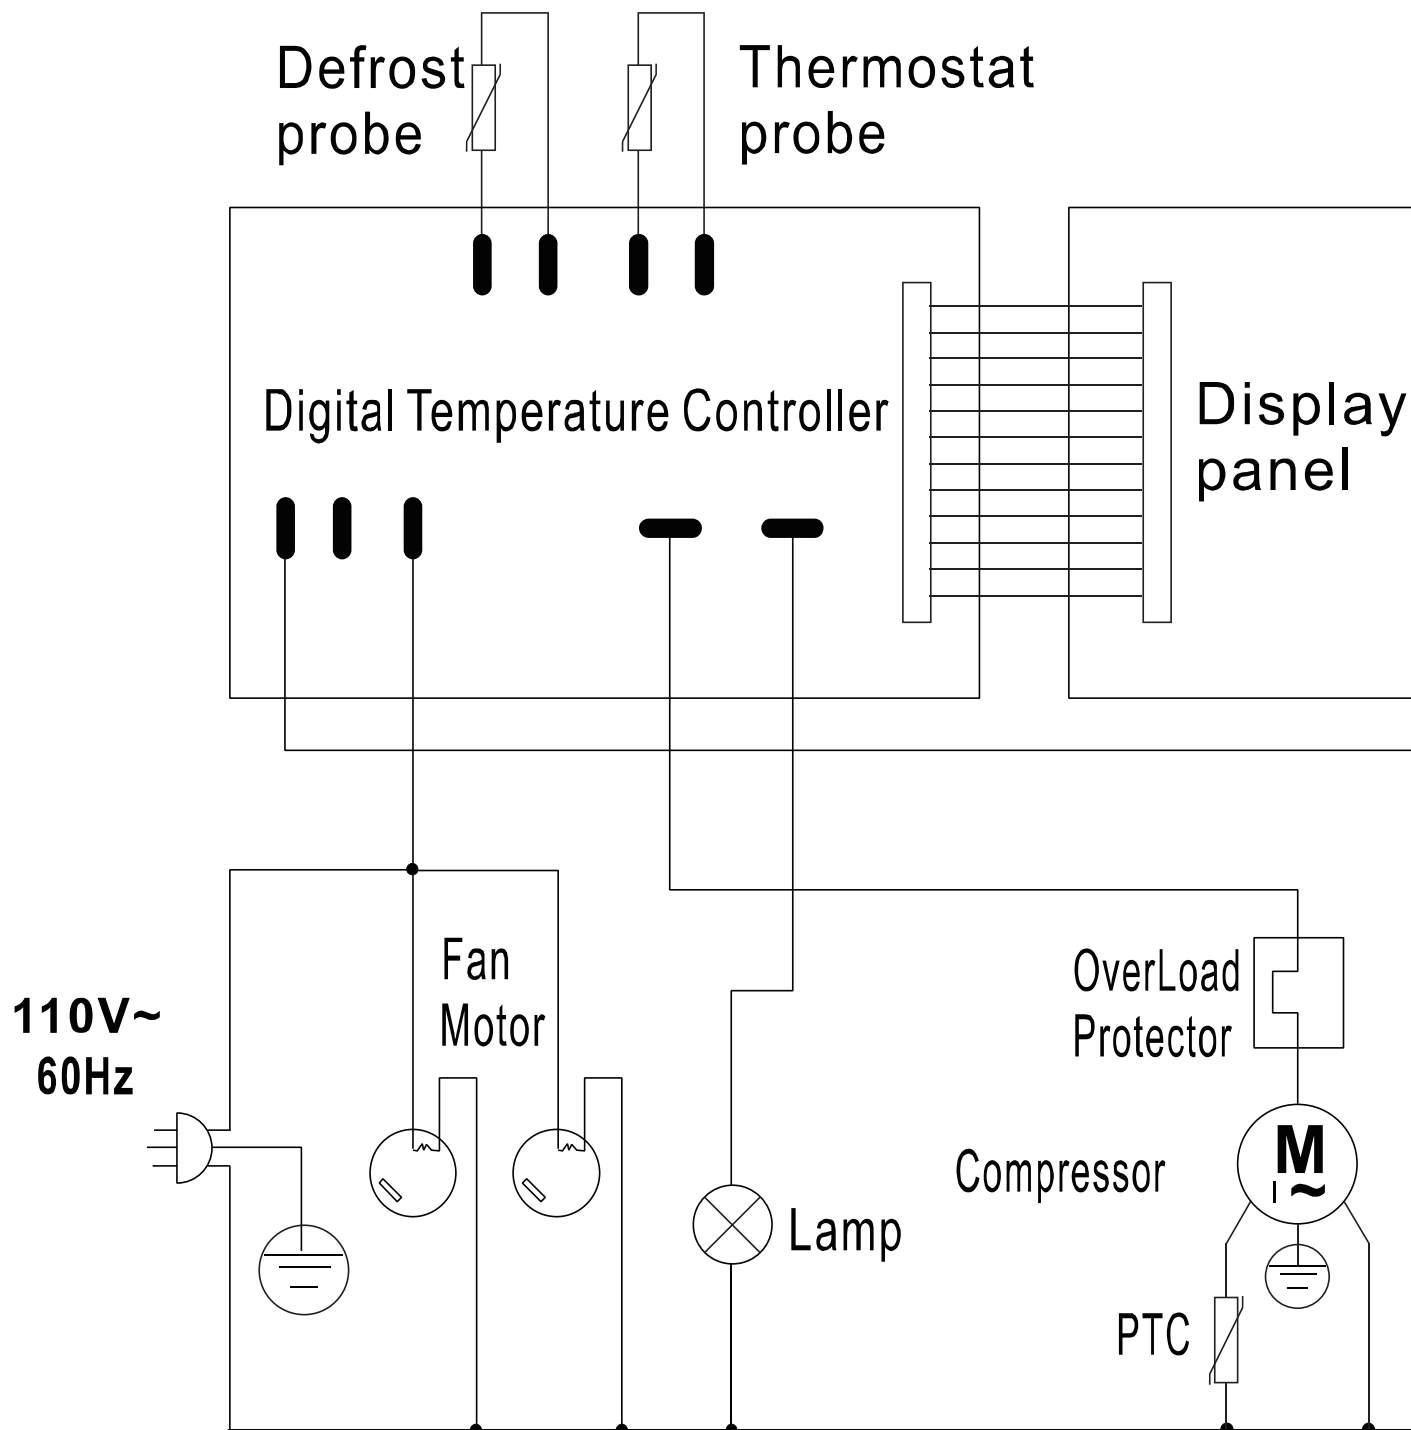



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,

Mississauga, Ontario

Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,

Niagara Falls, New York

USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (specify): _____

☐ Other (specify): _____

Model Name: _____ Model Number: _____ Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____ Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 5,000 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 5000 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 5,000 productos con origen a nivel mundial.

