

DAV-HDX265/HDX266/HDX267W/ HDX465/HDX466/HDX665

SERVICE MANUAL

Ver. 1.0 2007.02

- DAV-HDX265/HDX266/HDX267W/HDX465/HDX466/HDX665 are composed of the following models. As service manuals are issued for each component model, please refer to them.

US Model
DAV-HDX265/HDX266/HDX267W/HDX465

Canadian Model
DAV-HDX466/HDX665

E Model

Australian Model
DAV-HDX265

COMPONENT MODEL NAME

	DAV-HDX265	DAV-HDX266	DAV-HDX267W	DAV-HDX465	DAV-HDX466	DAV-HDX665
DVD receiver	HCD-HDX265	HCD-HDX266	HCD-HDX267W	HCD-HDX465	HCD-HDX466	HCD-HDX665
Front speaker	SS-TS72	SS-TS72	SS-TS72	SS-TS73	SS-TS73	SS-TS73
Center speaker	SS-CT71	SS-CT71	SS-CT71	SS-CT71	SS-CT71	SS-CT71
Surround speaker	SS-TS71	SS-TS71	SS-TS71	SS-TS71	SS-TS71	SS-TS73
Subwoofer	SS-WS74	SS-WS72	SS-WS74	SS-WS74	SS-WS74	SS-WS74
Surround amplifier	—	—	TA-SB500WR2	—	—	—

SPECIFICATIONS

Power requirements

North American models: 120 V AC, 60 Hz
Other models: 220 - 240 V AC, 50/60 Hz
Power output (DIGITAL MEDIA PORT)
DC OUT: 5 V, 700 mA

Power consumption

DAV-HDX265/HDX267W/HDX465/HDX466/HDX665:

On: 175 W
Standby: 0.3 W (at the Power Saving mode)

DAV-HDX266:

On: 150 W
Standby: 0.3 W (at the Power Saving mode)

Dimensions (approx.)

DAV-HDX265/HDX266/HDX465/HDX466/HDX665:

430 × 86 × 415 mm (17 × 3 1/2 × 16 3/8 inches) (w/h/d)
incl. projecting parts

DAV-HDX267W:

430 × 86 × 435 mm (17 × 3 1/2 × 17 1/4 inches) (w/h/d)
incl. projecting parts

Mass (approx.)

DAV-HDX265/HDX266/HDX465/HDX466/HDX665:

5.2 kg (11 lb 8 oz)

DAV-HDX267W:

5.4 kg (11 lb 15 oz)

Design and specifications are subject to change without notice.

Unpacking

- Front speakers (2)
- Center speaker (1)

- Surround speakers (2)
- Subwoofer (1)
- AM loop antenna (aerial) (1)
- FM wire antenna (aerial) (1)
- Speaker cords (6, red/white/green/gray/blue/purple)
- Video Cord (1)
- Remote Commander (remote) (1)
- R6 (size AA) batteries (2)
- Calibration mic (1)
- Foot pads (1 set)
- WAHT-SD1 (1) (DAV-HDX267W only)
- Operating Instructions
- HDMI CONTROL Guide
- Speaker and TV connections (card)
- Posts (2 for DAV-HDX465/DAV-HDX466, 4 for DAV-HDX665)
- Bases (2 for DAV-HDX465/DAV-HDX466, 4 for DAV-HDX665)
- Mounting plates (2 for DAV-HDX465/DAV-HDX466, 4 for DAV-HDX665)
- Post covers (2 for DAV-HDX465/DAV-HDX466, 4 for DAV-HDX665)
- Screws (large, with washer) (8 for DAV-HDX465/DAV-HDX466, 16 for DAV-HDX665)
- Screws (small, silver) (4 for DAV-HDX465/DAV-HDX466, 8 for DAV-HDX665)
- Screws (small, black) (2 for DAV-HDX465/DAV-HDX466, 4 for DAV-HDX665)

– Refer to the following page for a parts list –

DVD HOME THEATRE SYSTEM

9-887-549-01
2007B05-1
© 2007.02

Sony Corporation
Home Audio Division
Published by Sony Techno Create Corporation

SONY®

ACCESSORIES

<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
1-480-004-11	COMMANDER, STANDARD (RM-ADU005) (including battery cover)	
1-501-374-11	ANTENNA, LOOP (AM loop antenna)	
1-542-670-11	MEASUREMENT MIC (MONO) (Calibration mic: ECM-AC2)	
1-833-700-11	CORD (WITH CONNECTOR) (SPEAKER) (Speaker cords: 6, red/white/green/gray/blue/purple) (HDX266)	
1-833-700-21	CORD (WITH CONNECTOR) (SPEAKER) (Speaker cords: 6, red/white/green/gray/blue/purple) (HDX265/HDX267W/HDX465/HDX466/HDX665)	
1-793-184-23	CONNECTOR (F TYPE ADAPTOR) (FM lead antenna)	
1-833-579-11	CORD, CONNECTION (Video Cord)	
2-149-272-11	HOLD, WIRE (A) (Speaker cord holder) (for TA-SB500WR2) (HDX267W)	
2-149-273-21	COVER, WIRE (Speaker cord cover) (for TA-SB500WR2) (HDX267W)	
2-630-050-01	+BVTT 3X6 (SUMITITE) (to install post and base) (small, silver) (HDX465/HDX466/HDX665)	
2-639-385-01	FOOT (4 pieces) (Foot pads for Subwoofer)	
2-895-959-11	MANUAL, INSTRUCTION (ENGLISH) (HDX265/HDX266/HDX267W)	
2-895-959-21	MANUAL, INSTRUCTION (SPANISH) (HDX265: US/HDX266/HDX267W)	
2-895-959-31	MANUAL, INSTRUCTION (FRENCH) (HDX265: E)	
2-895-959-41	MANUAL, INSTRUCTION (ARABIC) (HDX265: E)	
2-895-961-11	MANUAL, INSTRUCTION (ENGLISH) (HDX465/HDX466/HDX665)	
2-895-961-21	MANUAL, INSTRUCTION (FRENCH) (HDX466/HDX665)	
2-895-961-31	MANUAL, INSTRUCTION (SPANISH) (HDX465)	
2-896-202-21	PIPE (M) (Post) (for speaker stand) (HDX465/HDX466/HDX665)	
2-896-203-01	BRACKET (PIPE) (Mounting plate) (for speaker stand) (HDX465/HDX466/HDX665)	
2-896-204-01	STAND CAP (Post cover) (for speaker stand) (HDX465/HDX466/HDX665)	
2-899-442-31	MANUAL, INSTRUCTION (Wireless Surround Kit) (ENGLISH, SPANISH) (HDX267W)	
3-081-834-21	BATTERY COVER (SMK7G) (for RM-ADU005)	
3-099-783-31	MANUAL (CEC), INSTRUCTION (HDMI CONTROL Guide) (ENGLISH, SPANISH) (HDX265: US/HDX266/HDX267W/HDX465)	
3-099-783-41	MANUAL (CEC), INSTRUCTION (HDMI CONTROL Guide) (ENGLISH, FRENCH) (HDX466/HDX665)	
3-099-783-51	MANUAL (CEC), INSTRUCTION (HDMI CONTROL Guide) (ENGLISH) (HDX265: Australian)	
3-099-783-71	MANUAL (CEC), INSTRUCTION (HDMI CONTROL Guide) (ENGLISH, FRENCH, ARABIC) (HDX265: E)	
4-254-834-11	STAND (R) (IR receiver stand) (for DIR-R1) (HDX267W)	
7-682-548-09	SCREW +B 3X8 (to install speaker cord holder and TA-SB500WR2) (HDX267W)	
7-682-973-19	SCREW +PSW 5X10 (to install speaker and mounting plate) (large, with washer) (HDX465/HDX466/HDX665)	
7-685-871-09	SCREW +BVTT 3X6 (S) (to install post cover and post) (small, black) (HDX465/HDX466/HDX665)	
A-1221-157-A	DIR-R1 (IR receiver) (HDX267W)	
A-1221-177-A	DIR-TC1 (IR transmitter + Transmitter box) (HDX267W)	
X-2176-001-1	STAND BASE (M) ASSY (Base) (for speaker stand) (HDX465/HDX466/HDX665)	

MEMO

