

DSC-P72

SERVICE MANUAL

LEVEL 2

Ver 1.1 2003.03

Revision History



*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Hong Kong Model
Korea Model
Chinese Model
Tourist Model
Japanese Model*

Link

SPECIFICATIONS	BLOCK DIAGRAMS	PRINTED WIRING BOARDS
SERVICE NOTE	FRAME SCHEMATIC DIAGRAMS	REPAIR PARTS LIST
DISASSEMBLY	SCHEMATIC DIAGRAMS	

- For INSTRUCTION MANUAL, refer to SERVICE MANUAL, LEVEL 1 (987622941.pdf).
- **Reference No. search on printed wiring boards is available.**

On the SY-85 board

This service manual provides the information that is premised the circuit board replacement service and not intended repair inside the SY-85 board.

Therefore, schematic diagram, printed wiring board, waveforms, mounted parts location and electrical parts list of the SY-85 board are not shown.

The following pages are not shown.

Schematic diagram	Pages 4-7 to 4-26	Mounted parts location	Page 4-48
Printed wiring board	Pages 4-39 to 4-42	Electrical parts list	Pages 5-6 to 5-11
Waveforms	Pages 4-45 to 4-46		

DIGITAL STILL CAMERA

SONY®



Cyber-shot
Digital Still Camera



SPECIFICATIONS

■ Camera

[System]

Image device 6.67 mm (1/2.7 type) color
CCD
Primary color filter

Total pixels number of camera
Approx. 3 340 000 pixels

Effective pixels number of camera
Approx. 3 210 000 pixels

Lens 3× zoom lens
f=6.0 to 18.0 mm
(35 mm camera conversion: 39 to
117mm (1 ⁹/₁₆ to 4 ⁵/₈ inches))
F2.8-5.6

Exposure control
Automatic, Program, Twilight,
Twilight portrait, Landscape, Snow,
Beach

White balance Automatic, Daylight, Cloudy,
Fluorescent, Incandescent

File format (DCF compliant)
Still images: Exif Ver. 2.2, JPEG
compliant, GIF (for Clip Motion),
DPOF compatible
Audio with still image: MPEG1
compliant (Monaural)
Movies: MPEG1 compliant
(Monaural)

Recording media
"Memory Stick"

Flash Recommended distance
0.5 to 3.8 m (19 ³/₄ inches to
12 feet 5 ¹⁹/₃₂ inches) (W)/
0.5 to 2.5 m (19 ³/₄ inches to
8 feet 2 ⁷/₁₆ inches)

[Output connectors]

A/V OUT (MONO) jack (Monaural)
Minijack
Video: 1 Vp-p, 75 Ω, unbalanced,
sync negative
Audio: 327 mV (at a 47 kΩ load)
Output impedance 2.2 kΩ

USB jack mini-B

[LCD screen]

LCD panel used
3.8 cm (1.5 type) TFT drive
Total number of dots
123 200 (560×220) dots

[Power, general]

Power AA nickel hydride batteries (2)
2.4 V
AC-LS5 AC Adaptor
(not supplied), 4.2 V
Power consumption (when recording)
1.7W
Operating temperature range
0° to +40°C (32° to +104°F)
Storage temperature range
-20° to +60°C (-4° to +140°F)
Dimensions 119.5 × 57.7 × 32.6 mm
(4 ³/₄ × 2 ³/₈ × 1 ⁵/₁₆ inches)
(W/H/D, protruding portions not
included)
Mass Approx. 259 g (9.1 oz) (two
batteries, "Memory Stick" and wrist
strap included)
Microphone Electret condenser microphone
Speaker Dynamic speaker

■ BC-CS2A/CS2B Ni-MH battery charger

Power requirements
AC 100 to 240V 50/60Hz
3 W
Output voltage
AA : DC 1.4 V 400 mA × 2
AAA : DC 1.4 V 160 mA × 2
Operating temperature range
0° to +40°C (32° to +104°F)
Dimensions 71 × 30 × 91 mm
(2 ⁷/₈ × 1 ³/₁₆ × 3 ⁵/₈ inches) (W/H/
D)
Mass Approx. 90 g (3 oz)

■ AC-LS5 AC Adaptor (not supplied)

Power requirements
AC 100 to 240 V, 50/60 Hz
11 W 0.16 to 0.09 A
Rated output voltage
DC 4.2 V, 1.5 A
Operating temperature range
0° to +40°C (32° to +104°F)
Storage temperature range
-20° to +60°C (-4° to +140°F)
Dimensions 48 × 29 × 81 mm (1 ¹⁵/₁₆ × 1 ³/₁₆
3 ¹/₄ inches) (W/H/D, protruding
parts not included)
Mass Approx. 180 g (6 oz)
(adaptor only)

Accessories

HR6 (size AA) Ni-MH batteries (2)
Battery case
BC-CS2A/CS2B Ni-MH Battery charger (1)
Power cord (mains lead) (1)
USB cable (1)
A/V connecting cable (1)
Wrist strap (1)
"Memory Stick" (16MB) (1)
CD-ROM (USB driver: SPVD-010) (1)
Operating Instructions (1)

Design and specifications are subject to change
without notice.

CAUTION :

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH
MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS
LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE
COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS
APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS
PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES
DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT
CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE
REMPLENER CES COMPOSANTS QUE PAR DES PIÈCES SONY
DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU
DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
 - Keep the temperature of the soldering iron around 270°C during repairing.
 - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
 - Be careful not to apply force on the conductor when soldering or unsoldering.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)



: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.

Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350°C.

Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity

Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder

It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

1. SERVICE NOTE 1-1

2. DISASSEMBLY

2-1. CABINET (R) BLOCK ASSEMBLY 2-2

2-2. BLOCK LIGHT GUIDE PLATE, LCD MODULE,
CONTROL SWITCH BLOCK (SW-391) 2-3

2-3. MAIN BLOCK ASSEMBLY 2-4

2-4. PARTS UNIT (UA-002) 2-4

2-5. VIDEO LENS, CCD BLOCK ASSEMBLY 2-5

2-6. MEMORY STICK CONNECTOR,
JK BLOCK (JK-252) 2-6

2-7. CONTROL SWITCH BLOCK (RL-059),
ST-82 BOARD 2-6

2-8. SY-85 BOARD 2-7

2-9. CIRCUIT BOARDS LOCATION 2-9

2-10. FLEXIBLE BOARDS LOCATION 2-10

3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM 3-1

3-2. CAMERA BLOCK DIAGRAM 3-3

3-3. FRONT/LCD BLOCK DIAGRAM 3-5

3-4. POWER BLOCK DIAGRAM 3-7

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/2) 4-1

FRAME SCHEMATIC DIAGRAM (2/2) 4-3

4-2. SCHEMATIC DIAGRAMS

Schematic diagram of the SY-85 board are not shown.
Pages from 4-7 to 4-25 are not shown.

- ST-82 (FLASH DRIVE)/FP-643 FLEXIBLE
SCHEMATIC DIAGRAM 4-27
- JK BLOCK (JK-252) (JACK)
SCHEMATIC DIAGRAM 4-29
- CONTROL SWITCH BLOCK (SW-391)
(LCD CONTROL)
SCHEMATIC DIAGRAM 4-31
- RL-059 (POWER, SHUTTER)
SCHEMATIC DIAGRAM 4-33
- UA-002 (MIC, AF LED)
SCHEMATIC DIAGRAM 4-33

4-3. PRINTED WIRING BOARDS

- ST-82 (FLASH DRIVE)
PRINTED WIRING BOARD 4-37

Printed wiring board of the SY-85 board are not shown.
Pages from 4-39 to 4-42 are not shown.

- JK BLOCK (JK-252) (JACK)
FLEXIBLE BOARD 4-43

4-4. WAVEFORMS 4-45

Waveforms of the SY-85 board are not shown.
Pages 4-45 to 4-46 are not shown.

4-5. MOUNTED PARTS LOCATION 4-47

Mounted parts location of the SY-85 board is not shown.
Page 4-48 is not shown.

5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS 5-1

5-1-1. CABINET (FRONT) SECTION 5-3

5-1-2. MAIN BLOCK SECTION 5-4

5-1-3. CABINET (REAR) BLOCK SECTION 5-5

5-2. ELECTRICAL PARTS LIST 5-12

Parts list of the SY-85 board are not shown.
Pages from 5-6 to 5-11 are not shown.




SECTION 1 SERVICE NOTE



• NOTE FOR REPAIR

Make sure that the flat cable and flexible board are not cracked or bent at the terminal.
Do not insert the cable insufficiently nor crookedly.


When remove a connector, don't pull at wire of connector.
Be in danger of the snapping of a wire.

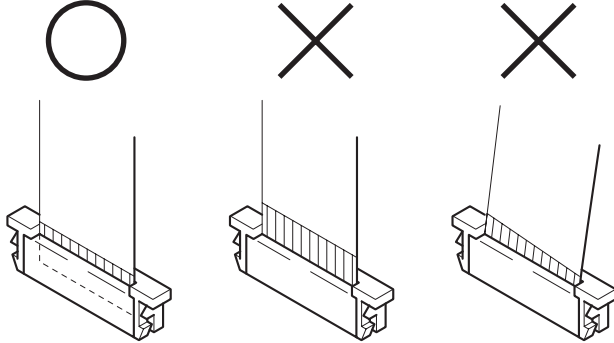

Cut and remove the part of gilt which comes off at the point.
(Take care that there are some pieces of gilt left inside)

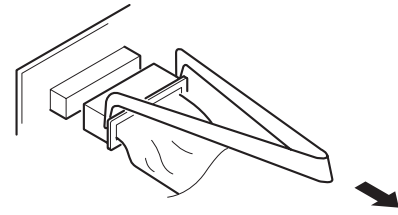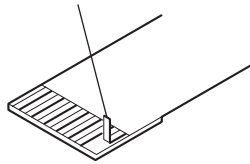

When installing a connector, don't press down at wire of connector.
Be in danger of the snapping of a wire.

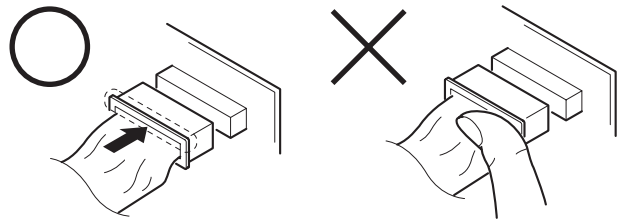

[Discharging of the FLASH unit's charging capacitor]


The charging capacitor of the FLASH unit is charged up to the maximum 300 V potential.

There is a danger of electric shock by this high voltage when the capacitor is handled by hand. The electric shock is caused by the charged voltage which is kept without discharging when the main power of the DSC-P72 is simply turned off. Therefore, the remaining voltage must be discharged as described below.

Preparing the Short Jig


To preparing the short jig, a small clip is attached to each end of a resistor of 1 k Ω / 1 W (1-215-869-11)

Wrap insulating tape fully around the leads of the resistor to prevent electrical shock.

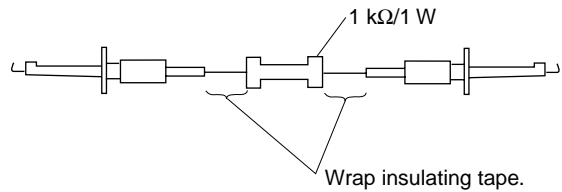

Discharging the Capacitor


Short circuits between the positive and the negative terminals of charged capacitor with the short jig about 10 seconds.

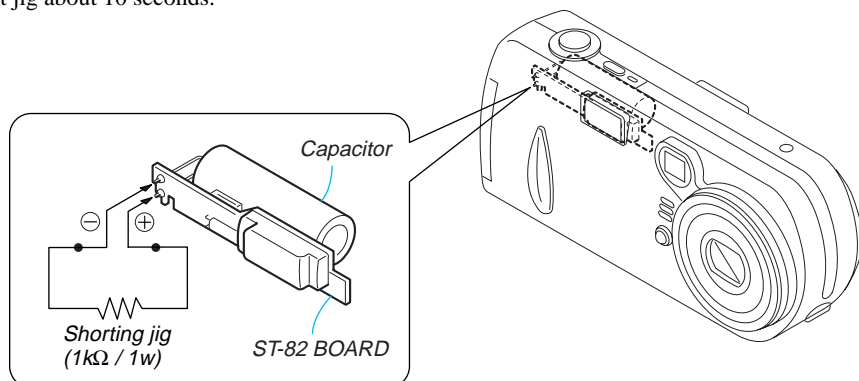

[Description on Self-diagnosis Display]

Self-diagnosis display

The camera has a self-diagnosis display. This function displays the camera condition with five-digits (a combination of a letter and figures) on the LCD screen. If this occurs check the following code chart. The five-digits display informs you of the camera's current condition. The last two digits (indicated by □□) will differ depending on the state of the camera.

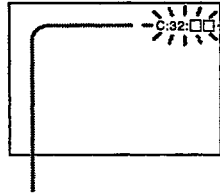

Self-diagnosis display

- C: □□: □□
The contents which can be handled by customer, are displayed.
- E: □□: □□
The contents which can be handled by engineer, are displayed.

Display Code	Countermeasure	Cause	Caution Display During Error
C:32:01	Turn off the main power then back on.	Trouble with hardware.	SYSTEM ERROR
C:13:01	Replace the memory stick. Format the memory stick with the DSC-P72.	<ul style="list-style-type: none"> • The type of memory stick that cannot be used by this machine, is inserted. • Data is damaged. • Unformatted memory stick is inserted. 	MS ERROR
E:91:01	Checking of flash unit or replacement of flash unit.	Abnormality when flash is being charged.	Flash LED Flash display Flashing at 3.2 Hz
E:61:00 *1	Checking of lens drive circuit	When failed in the focus initialization.	—
E61:10 *1			

Note : The error code is cleared if the battery is removed, except defective flash unit.


*1: The error display is given in two ways.



SECTION 2 DISASSEMBLY



The following flow chart shows the disassembly procedure.

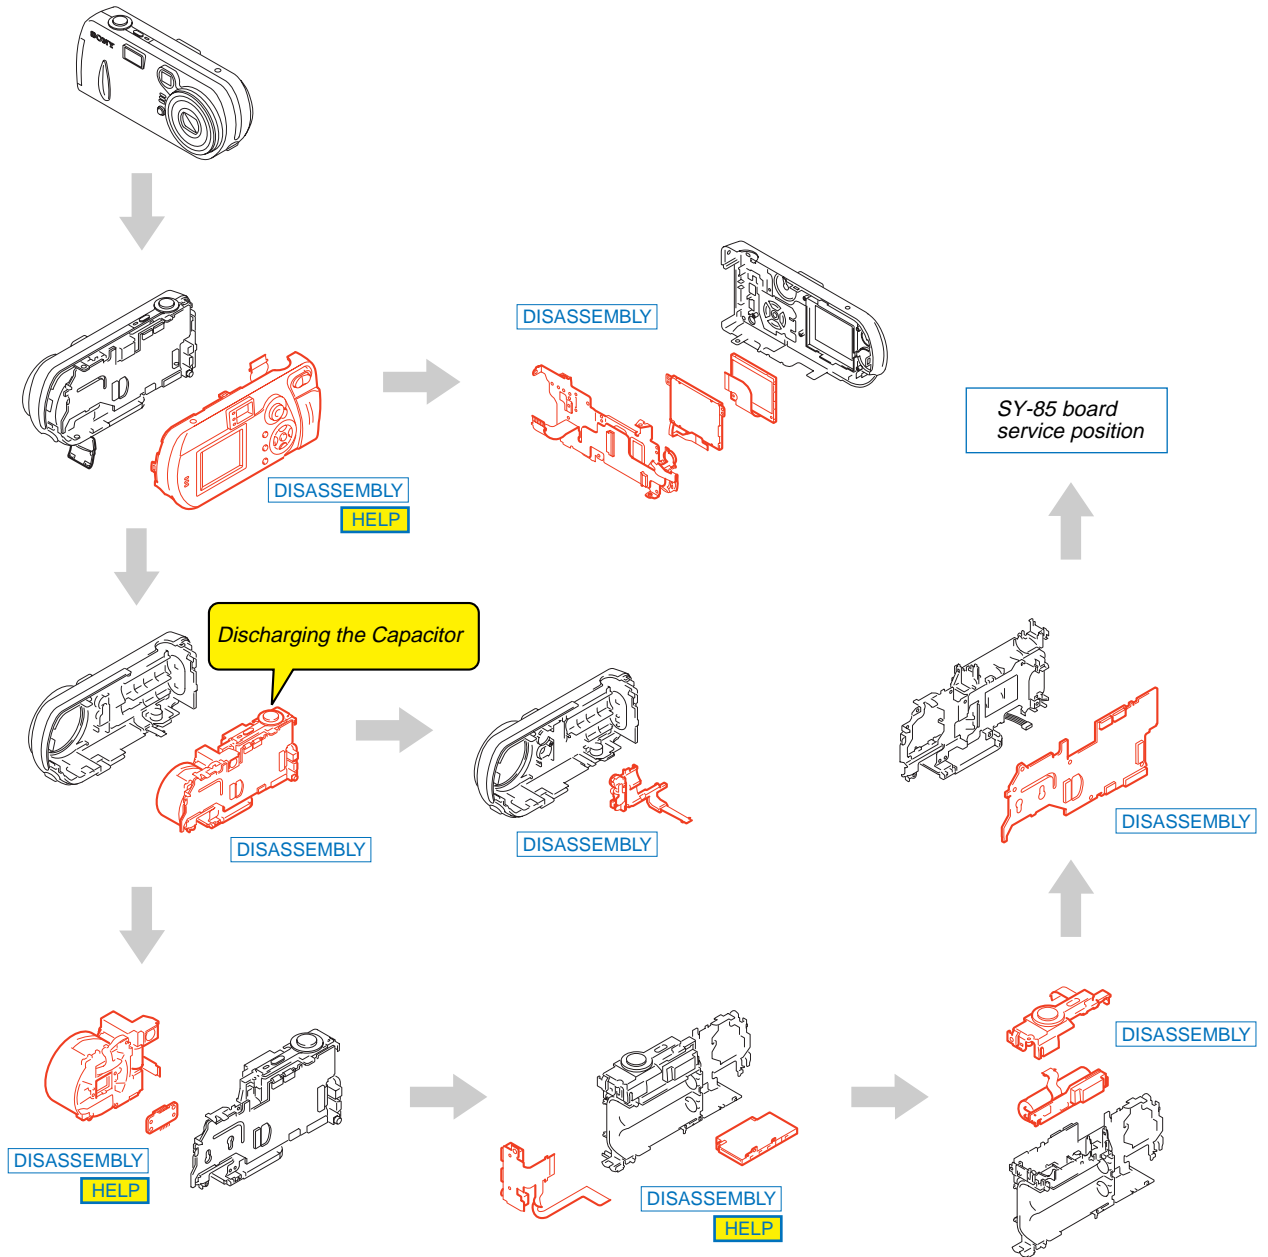


PROCEDURE OF REMOVING SY-85 BOARD (SERVICE POSITION)


- ① 2-1. CABINET (R) BLOCK ASSEMBLY (page 2-2)
- ② 2-2. BLOCK LIGHT GUIDE PLATE, LCD MODULE,
CONTROL SWITCH BLOCK (SW-391), LITHIUM BATTERY (page 2-3)
- ③ 2-3. MAIN BLOCK ASSEMBLY (page 2-4)
- ④ 2-4. UNIT PARTS (UA-002) (page 2-4)
- ⑤ 2-5. VIDEO LENS (ED02D), CCD BLOCK ASSEMBLY (page 2-5)
- ⑥ 2-6. MEMORY STICK CONNECTOR, JK BLOCK (JK-252) (page 2-6)
- ⑦ 2-7. CONTROL SWITCH BLOCK (RL-059), ST-82 BOARD (page 2-6)
- ⑧ 2-8. SY-85 BOARD (page 2-7)

NOTE: Follow the disassembly procedure in the numerical order given.


2-1. CABINET (R) BLOCK ASSEMBLY

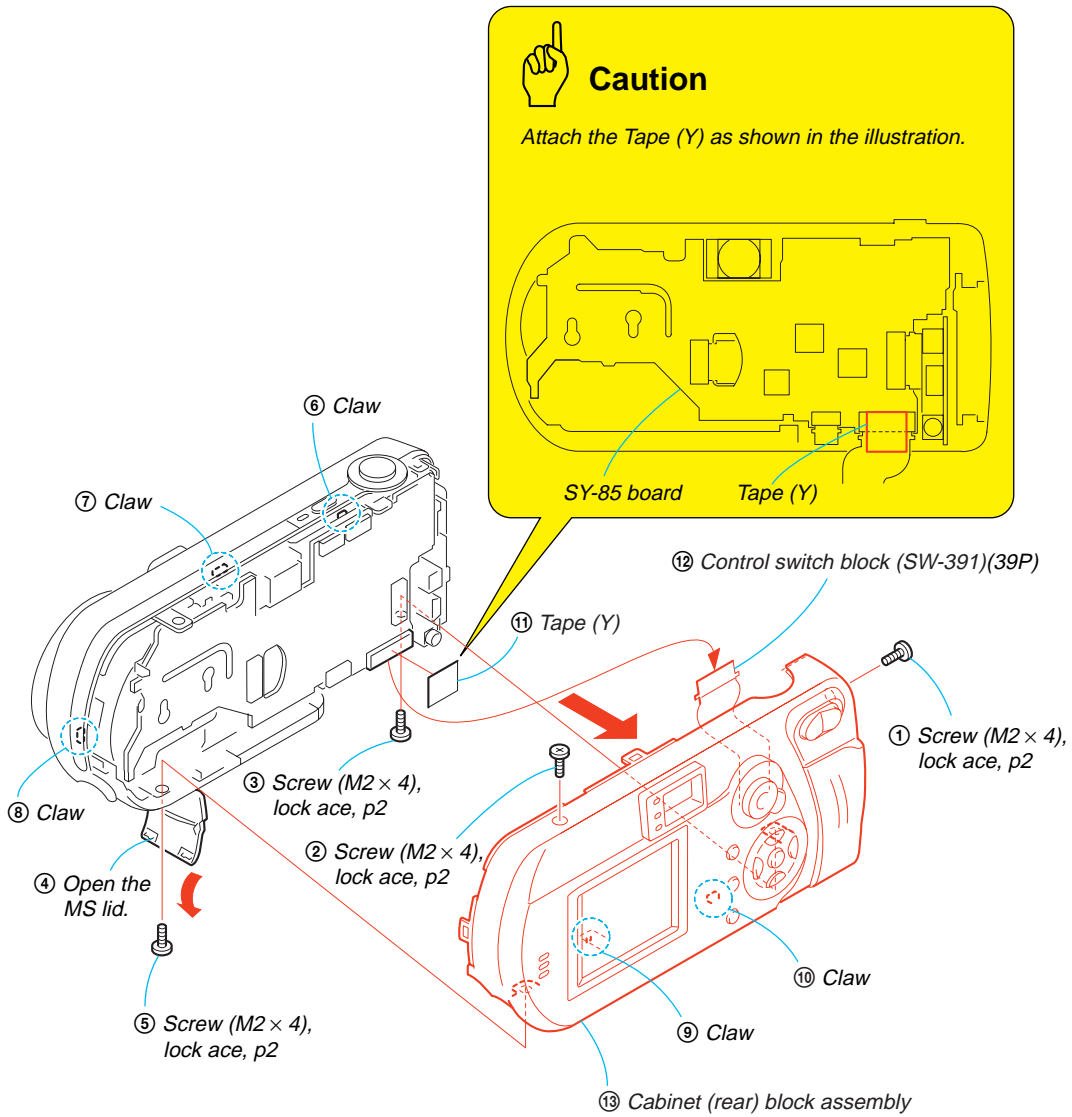


2-2. BLOCK LIGHT GUIDE PLATE, LCD MODULE, CONTROL SWITCH BLOCK (SW-391), LITHIUM BATTERY

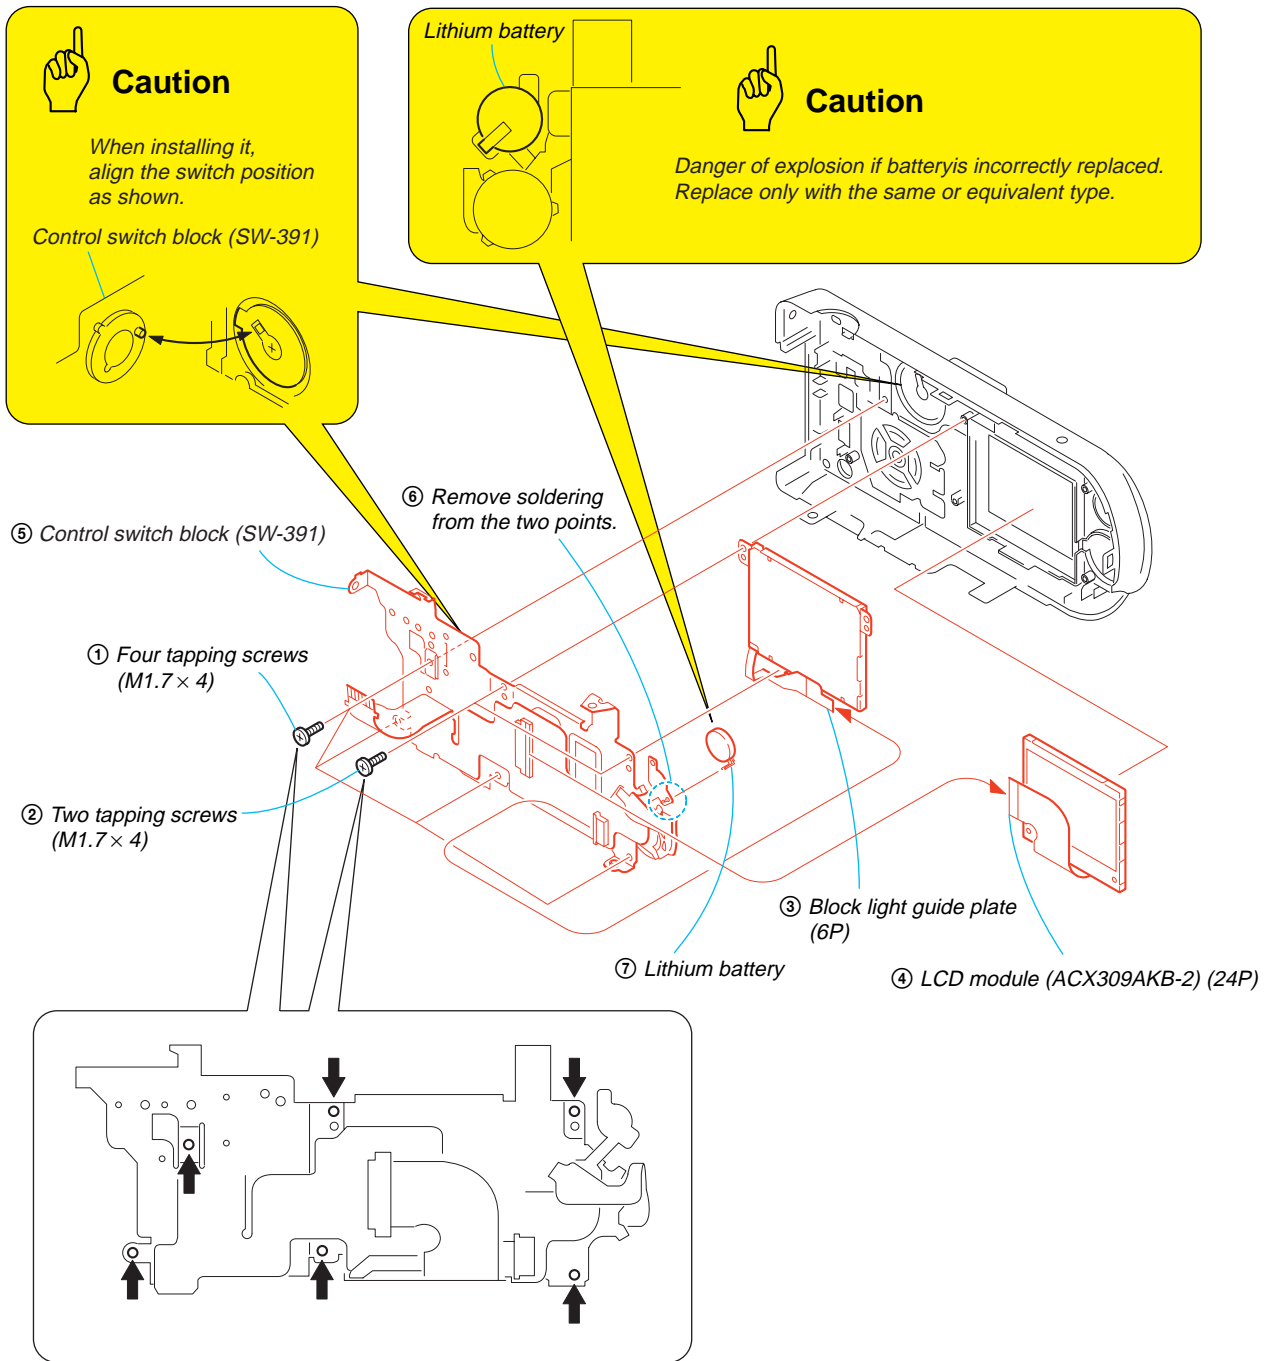


2-3. MAIN BLOCK ASSEMBLY

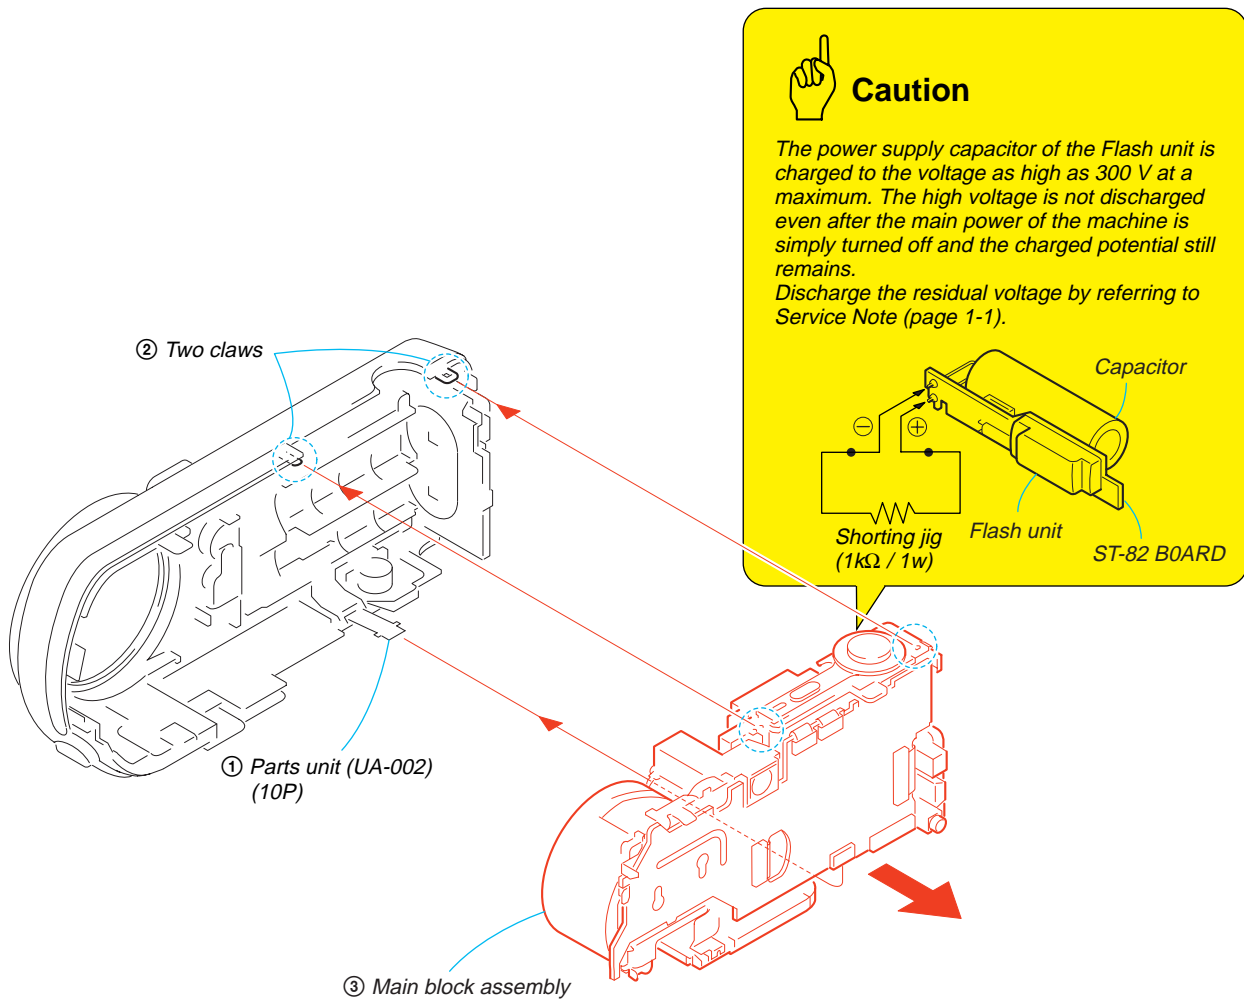


2-4. UNIT PARTS (UA-002)

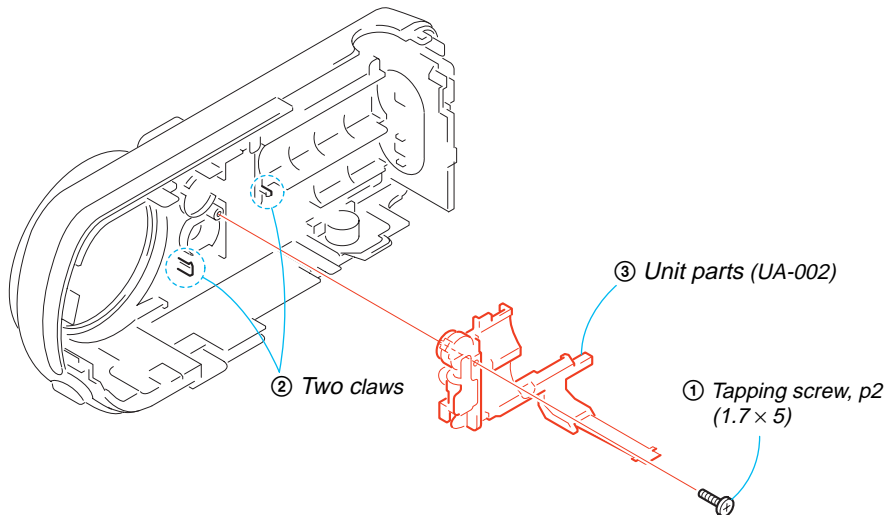


2-5. VIDEO LENS (ED02D), CCD BLOCK ASSEMBLY

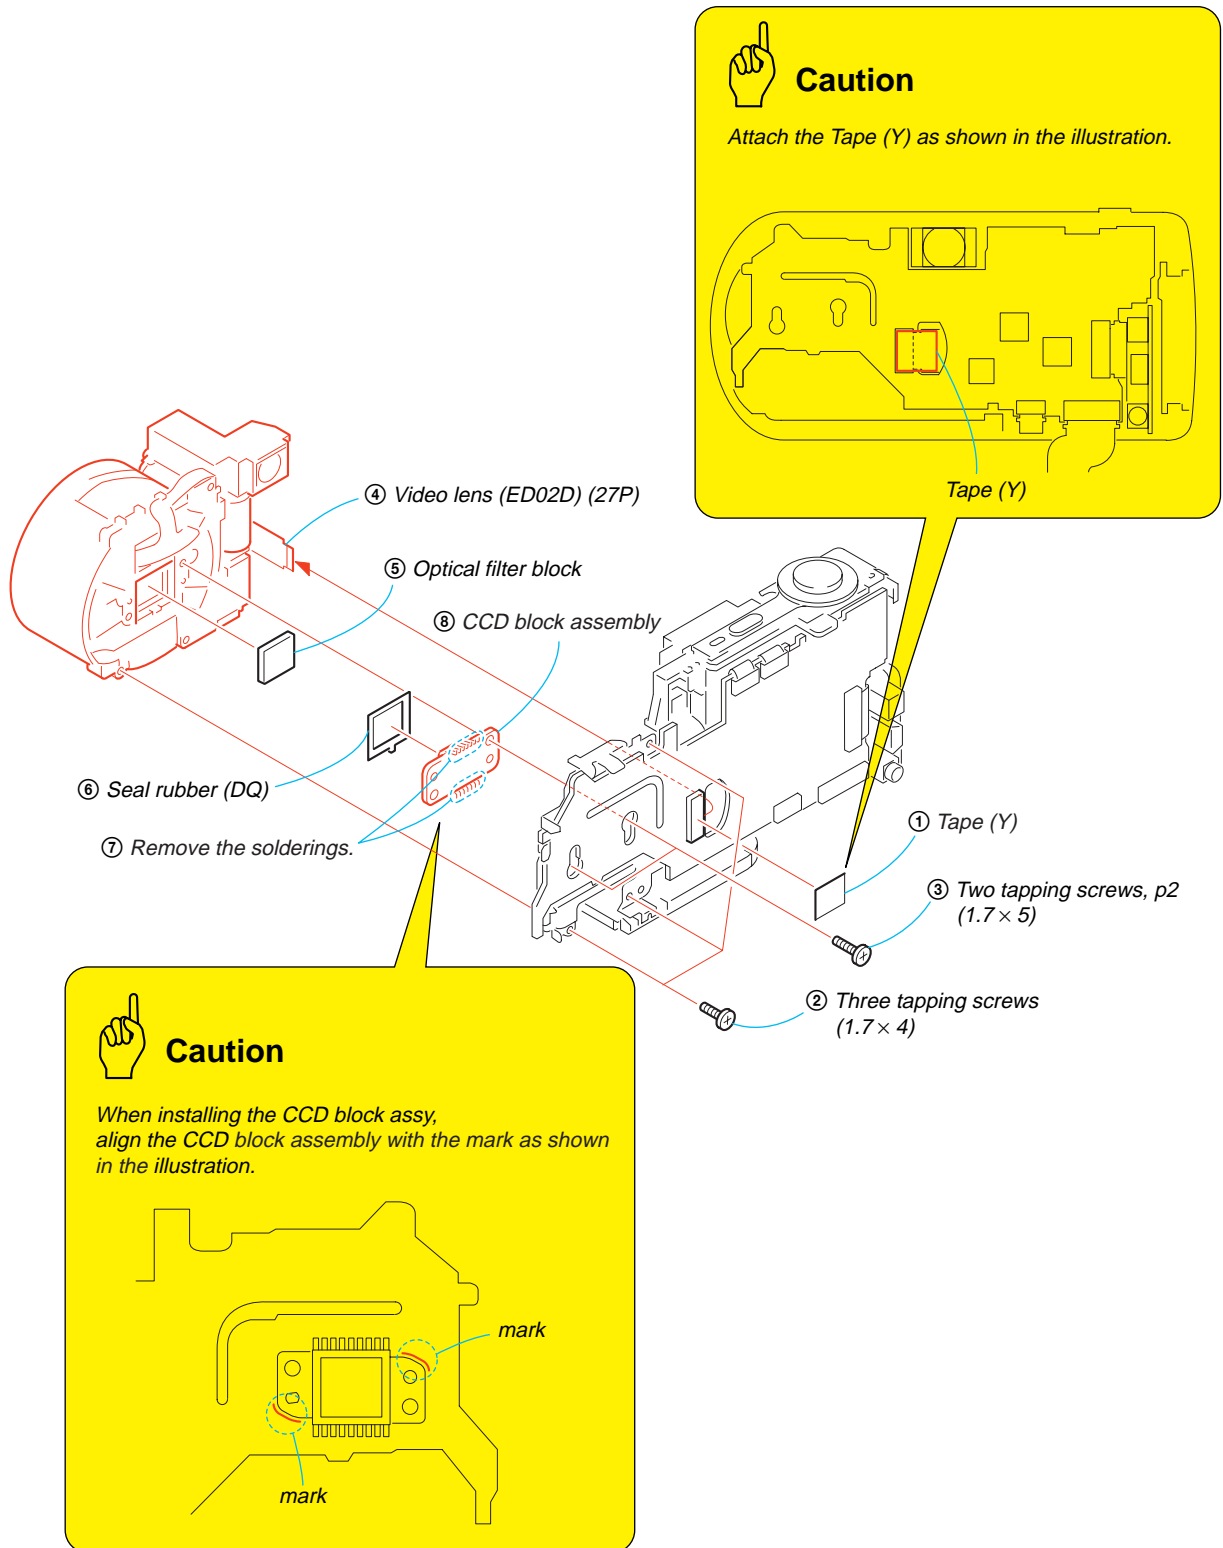


2-6. MEMORY STICK CONNECTOR, JK BLOCK (JK-252)

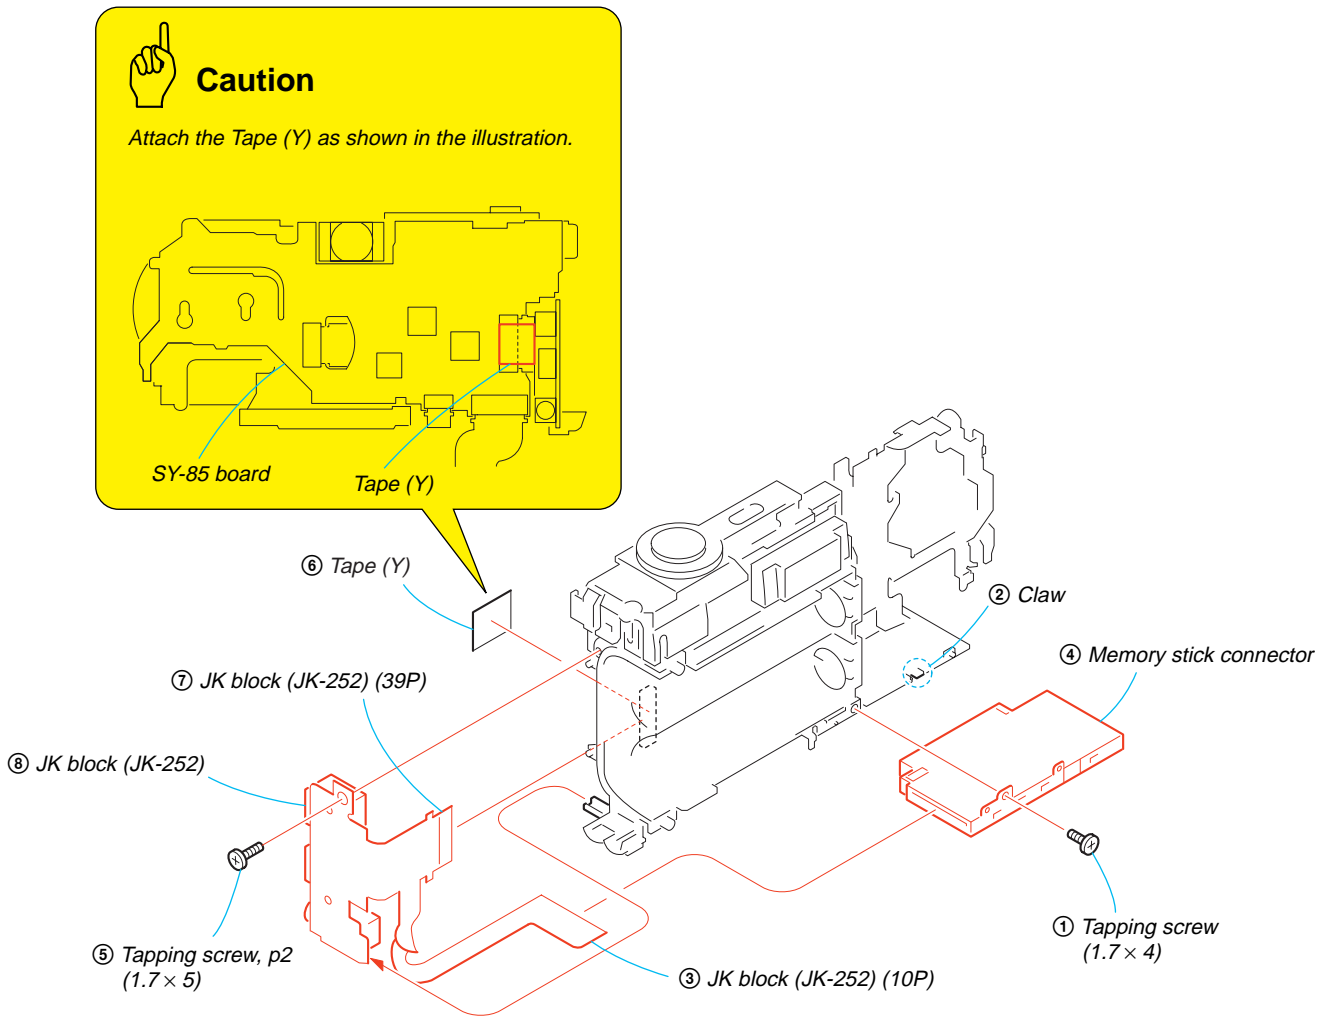


2-7. CONTROL SWITCH BLOCK (RL-059), ST-82 BOARD

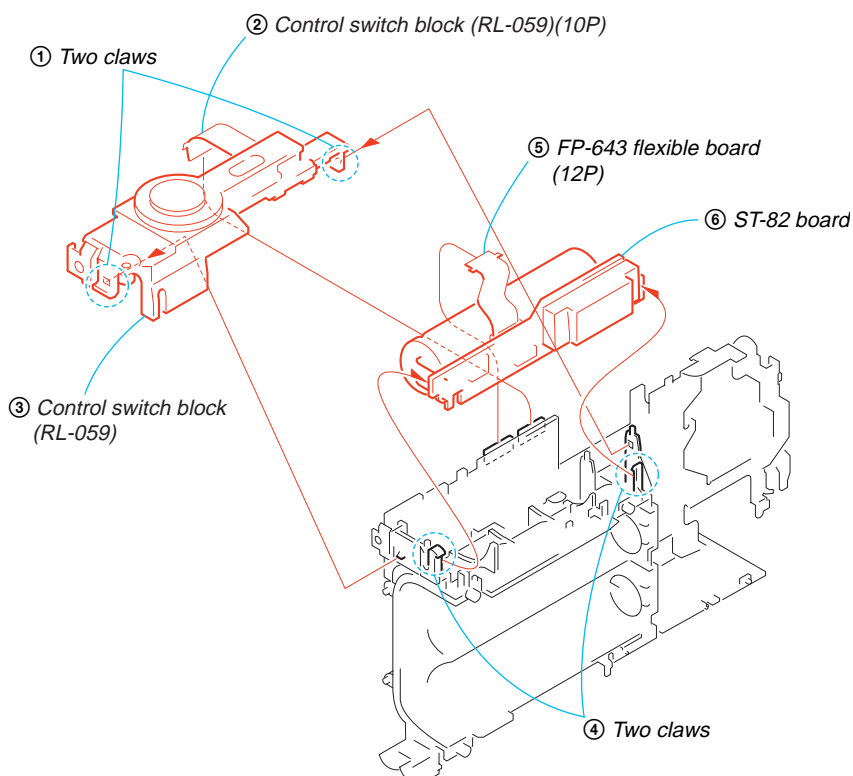

2-8. SY-85 BOARD

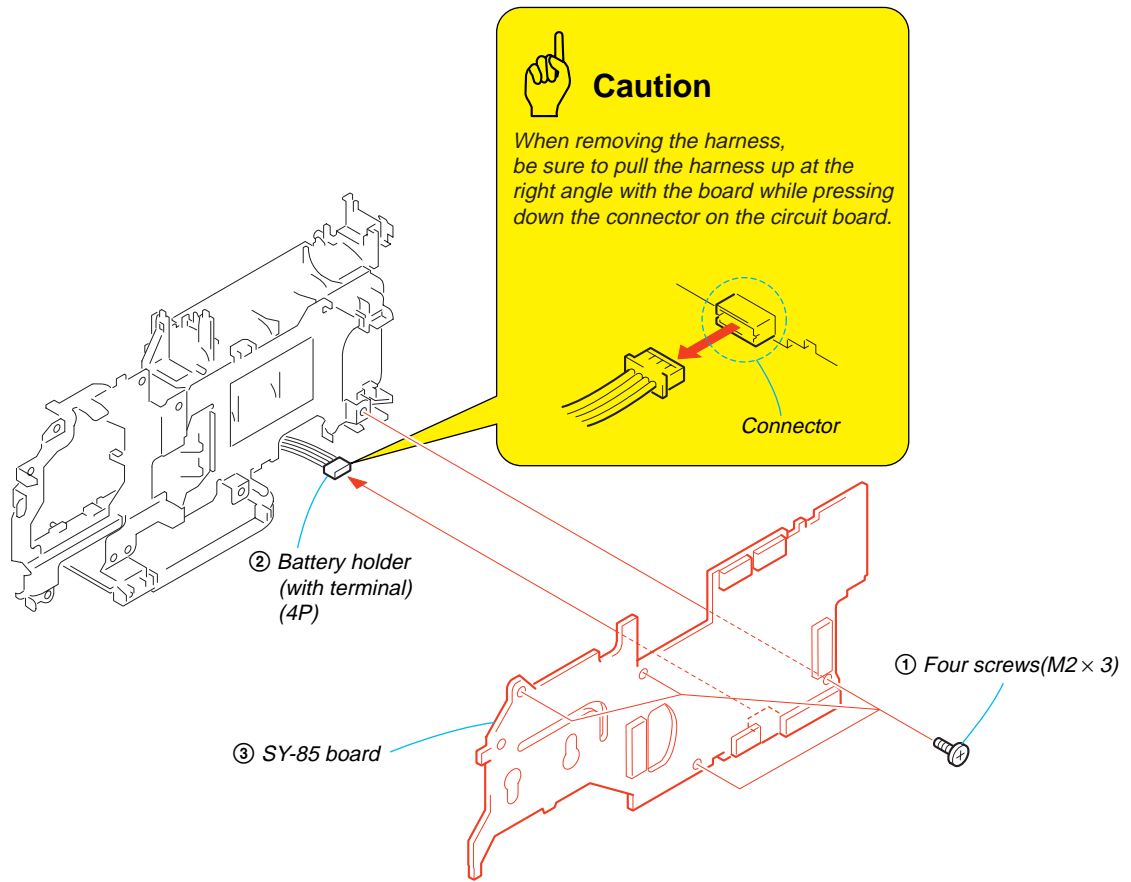


[SERVICE POSITION (SY-85 BOARD)]

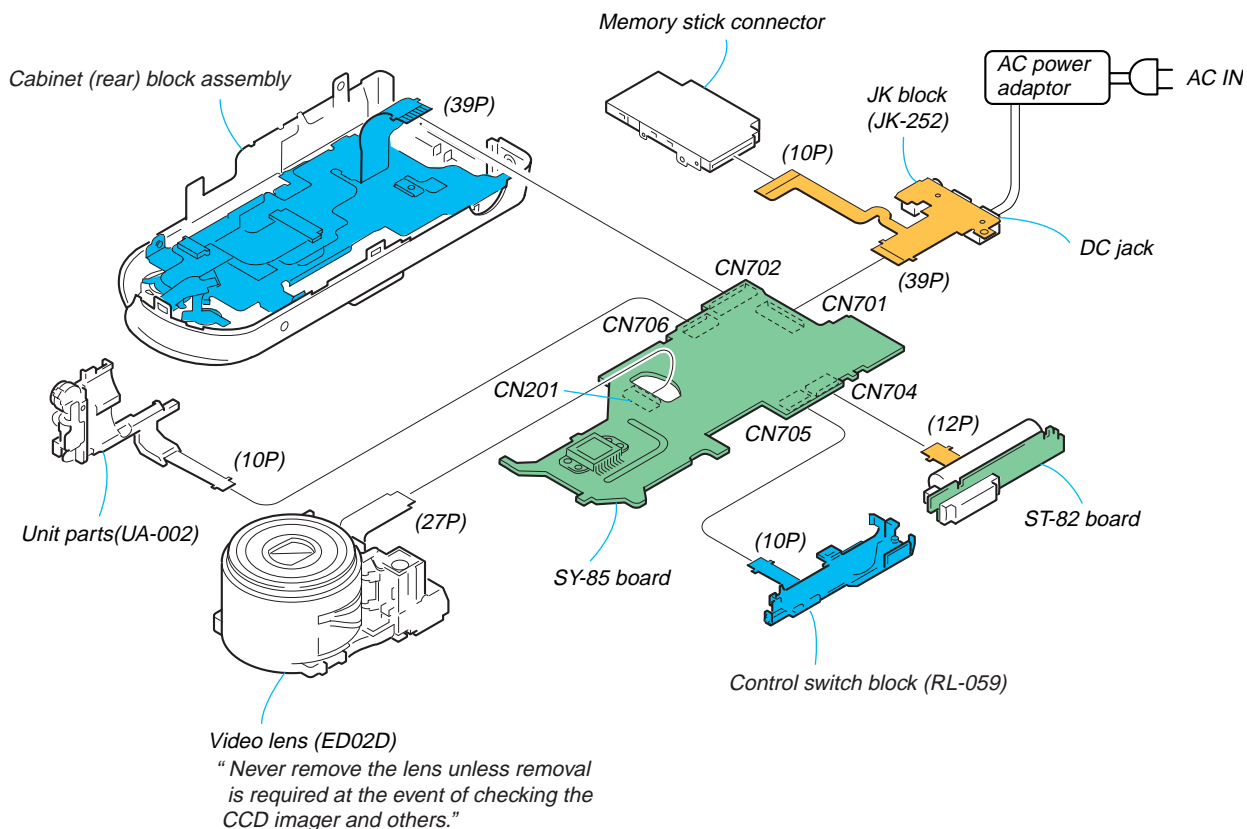

PROCEDURE OF REMOVING SY-85 BOARD (SERVICE POSITION)


- ① 2-1. CABINET (R) BLOCK ASSEMBLY (page 2-2)
- ② 2-2. BLOCK LIGHT GUIDE PLATE, LCD MODULE, CONTROL SWITCH BLOCK (SW-391), LITHIUM BATTERY (page 2-3)
- ③ 2-3. MAIN BLOCK ASSEMBLY (page 2-4)
- ④ 2-4. UNIT PARTS (UA-002) (page 2-4)
- ⑤ 2-5. VIDEO LENS (ED02D), CCD BLOCK ASSEMBLY (page 2-5)
- ⑥ 2-6. MEMORY STICK CONNECTOR, JK BLOCK (JK-252) (page 2-6)
- ⑦ 2-7. CONTROL SWITCH BLOCK (RL-059), ST-82 BOARD (page 2-6)
- ⑧ 2-8. SY-85 BOARD (page 2-7)

2-9. FLASH UNIT

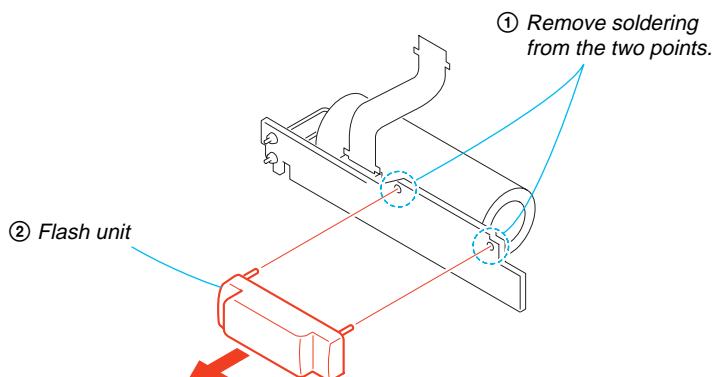



2-10. CIRCUIT BOARDS LOCATION



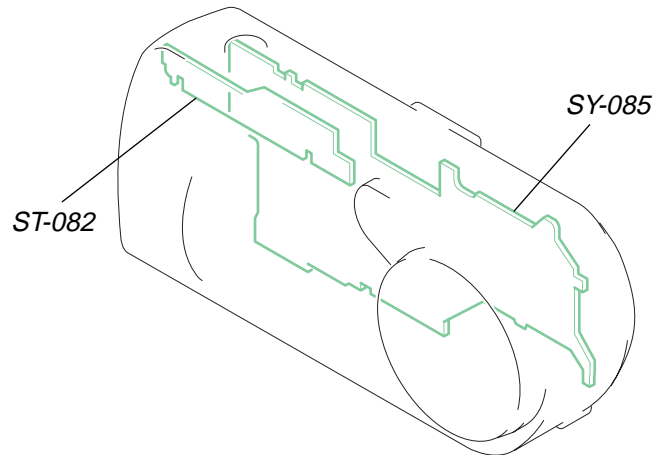


Board Name	Function
<i>SY-085</i>	<i>CCD IMAGER, CAMERA A/D CONVERTER, LENS DRIVE, CAMERA DSP, VIDEO AMP, SH DSP, CLK GEN., FRONT CONTROL, AUDIO I/O, LCD DRIVE, TIMING GEN., DC IN, DC-DC CONVERTER., CONNECTOR</i>
<i>ST-082</i>	<i>FLASH DRIVE</i>



2-11. FLEXIBLE BOARDS LOCATION

The flexible boards contained in the video lens are not shown.


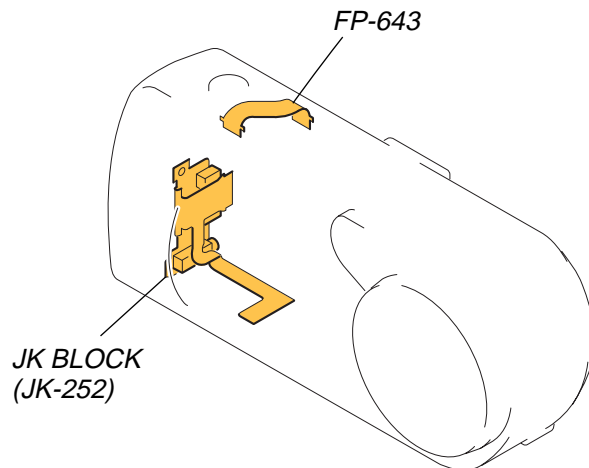
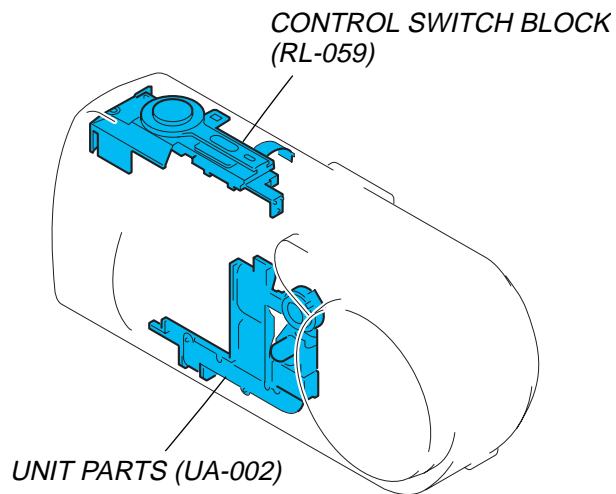
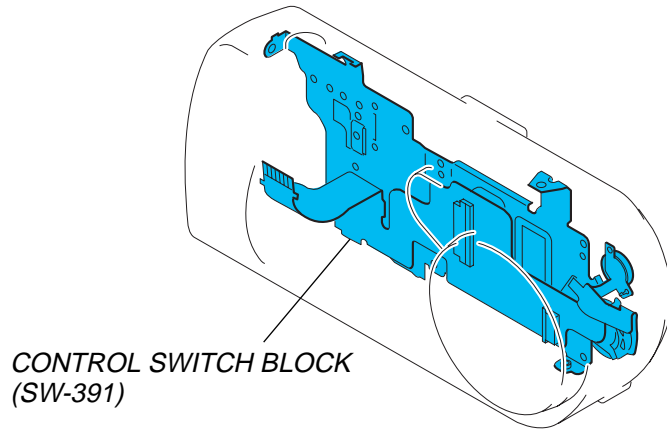




HELP

Sheet attachment positions and procedures of processing the flexible boards/harnesses are shown.

MAIN BLOCK SECTION

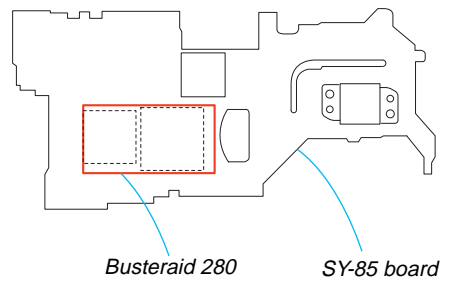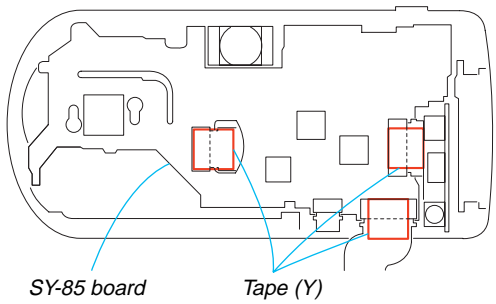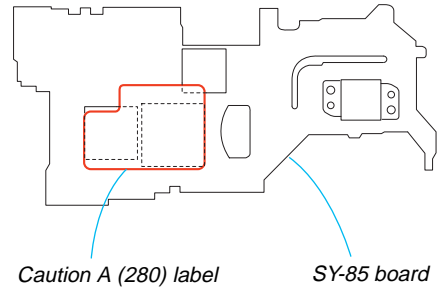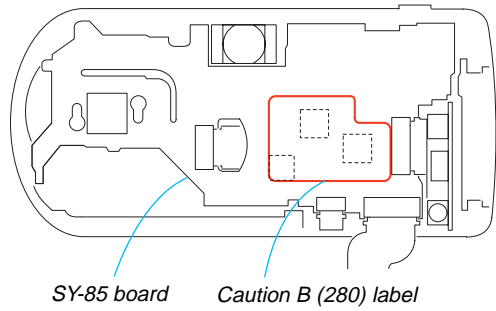



3. BLOCK DIAGRAMS

Link

• [OVERALL BLOCK DIAGRAM](#)

• [FRONT/LCD BLOCK DIAGRAM](#)

• [CAMERA BLOCK DIAGRAM](#)


• [POWER BLOCK DIAGRAM](#)



SECTION 3
BLOCK DIAGRAMS

3. BLOCK DIAGRAMS


3-1. OVERALL BLOCK DIAGRAM () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

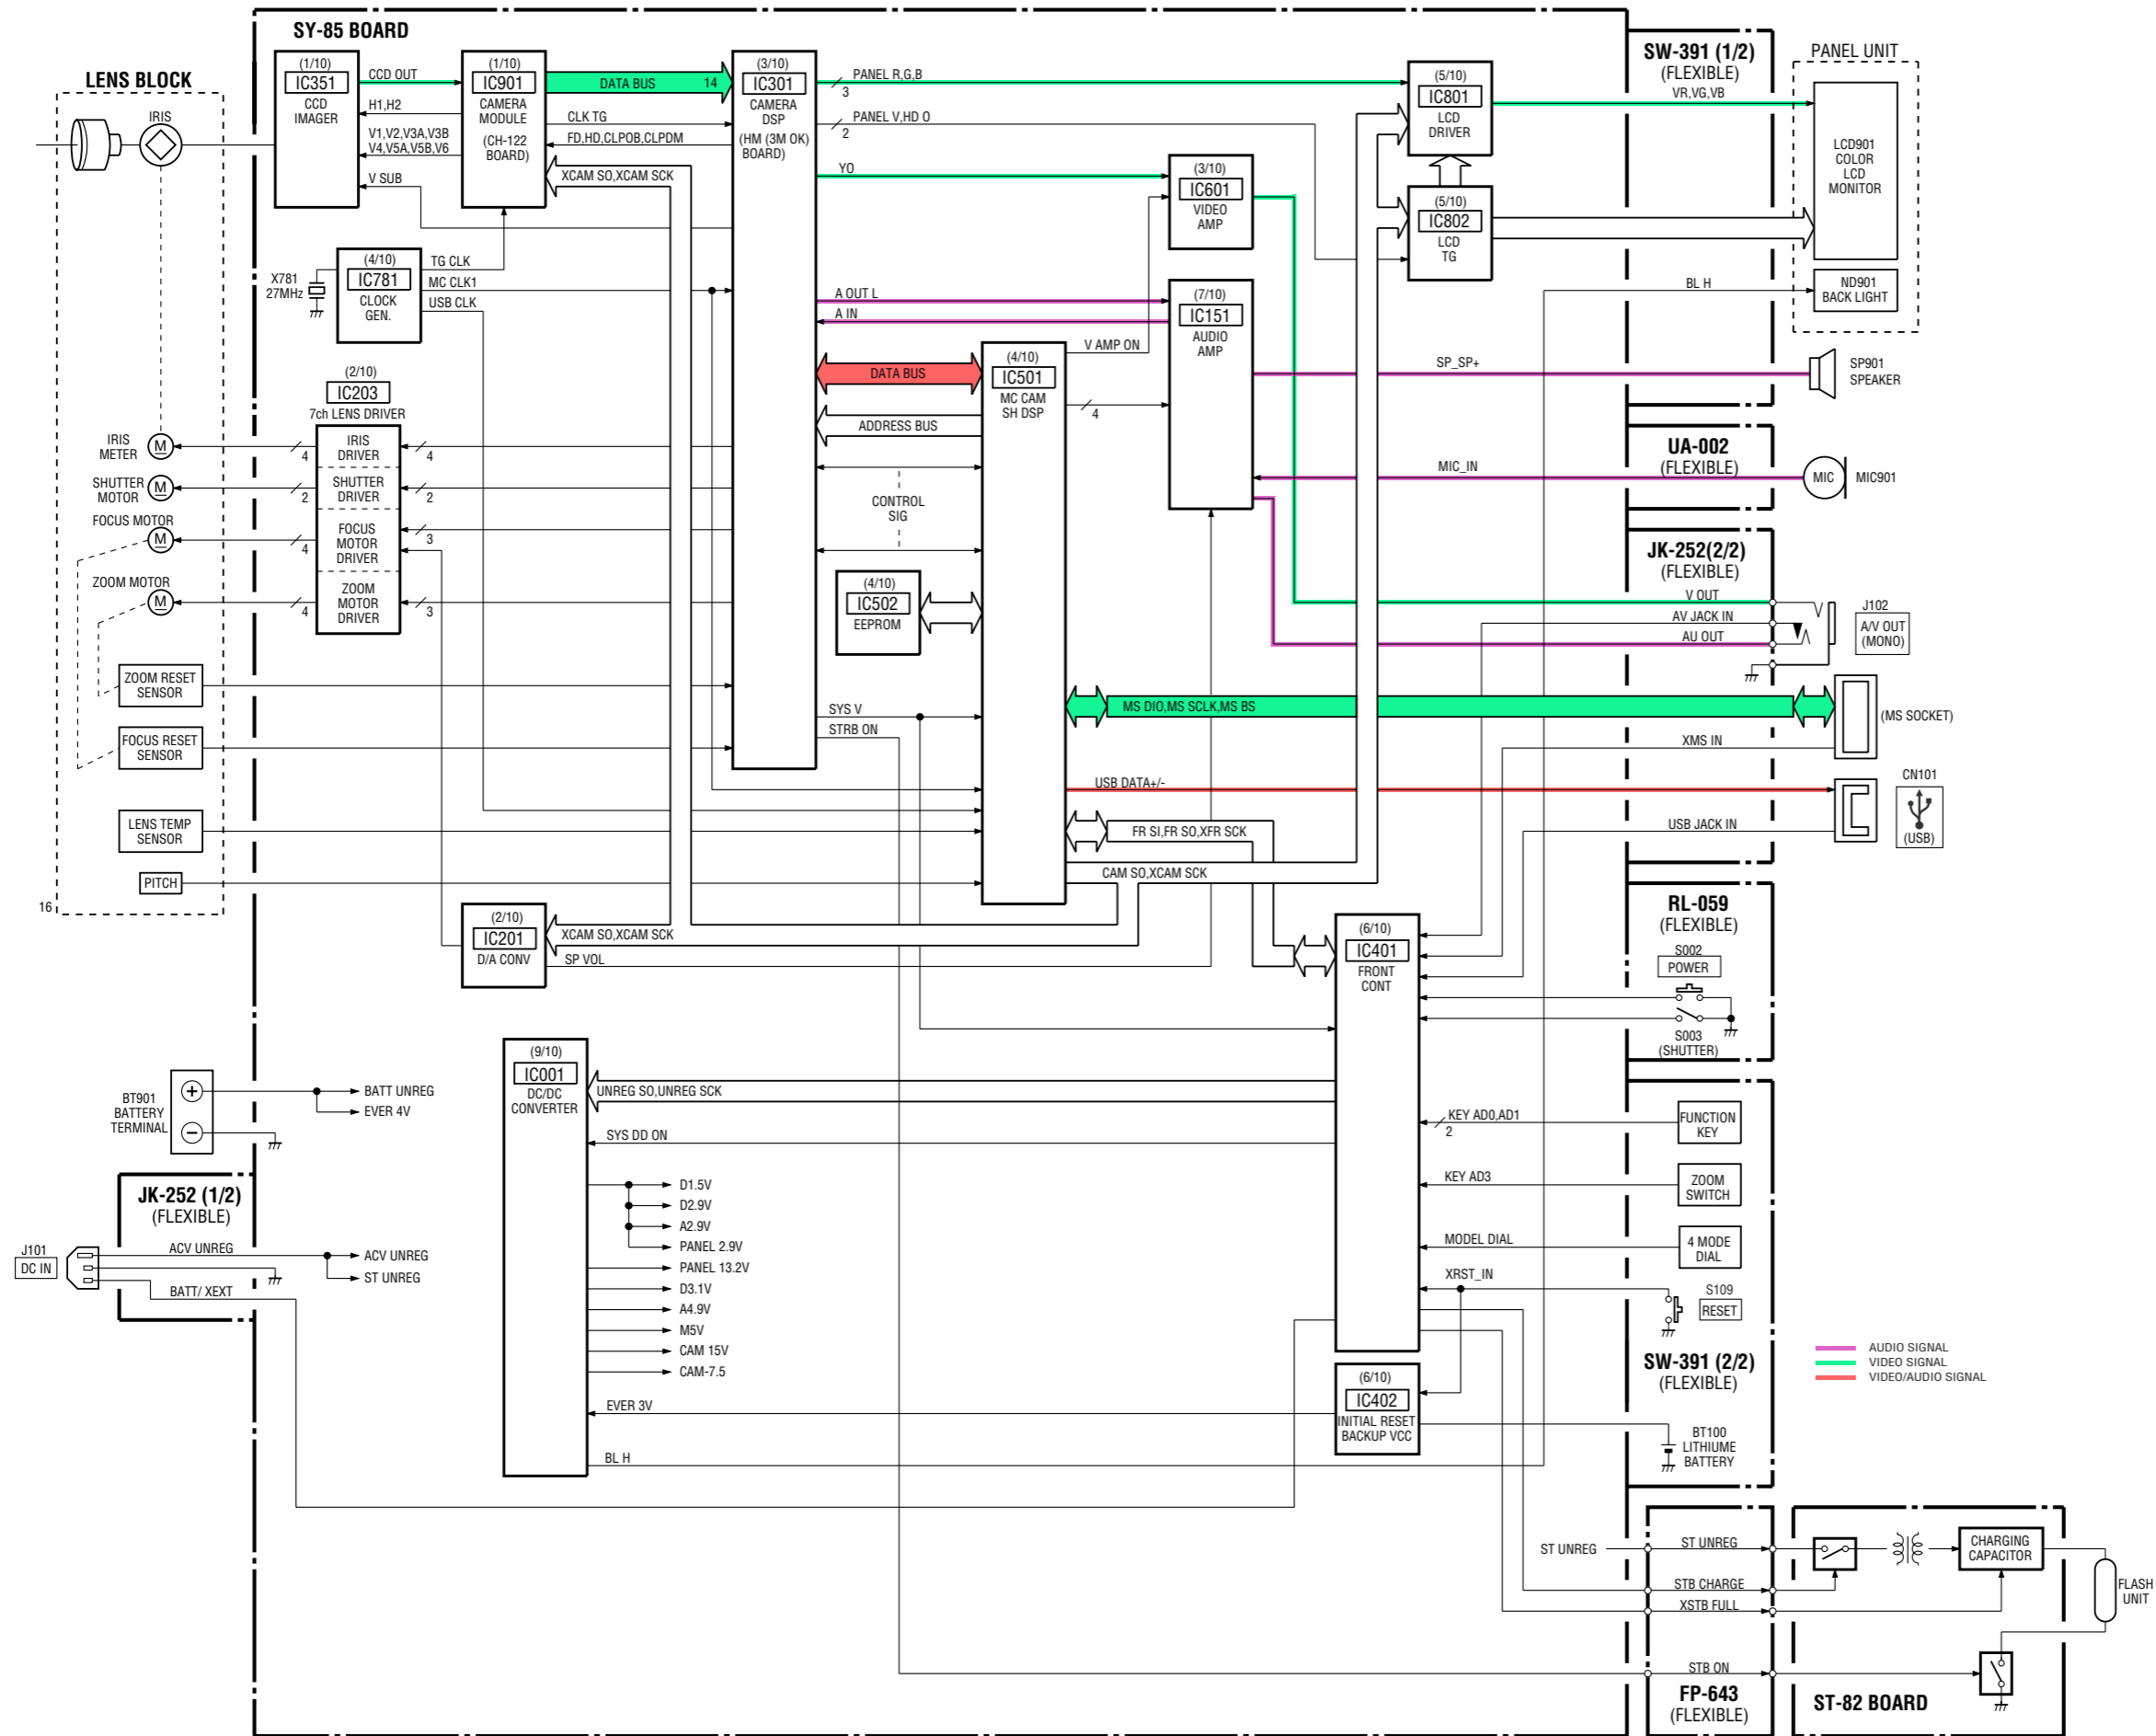



3. BLOCK DIAGRAMS


3-2. CAMERA BLOCK DIAGRAM () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

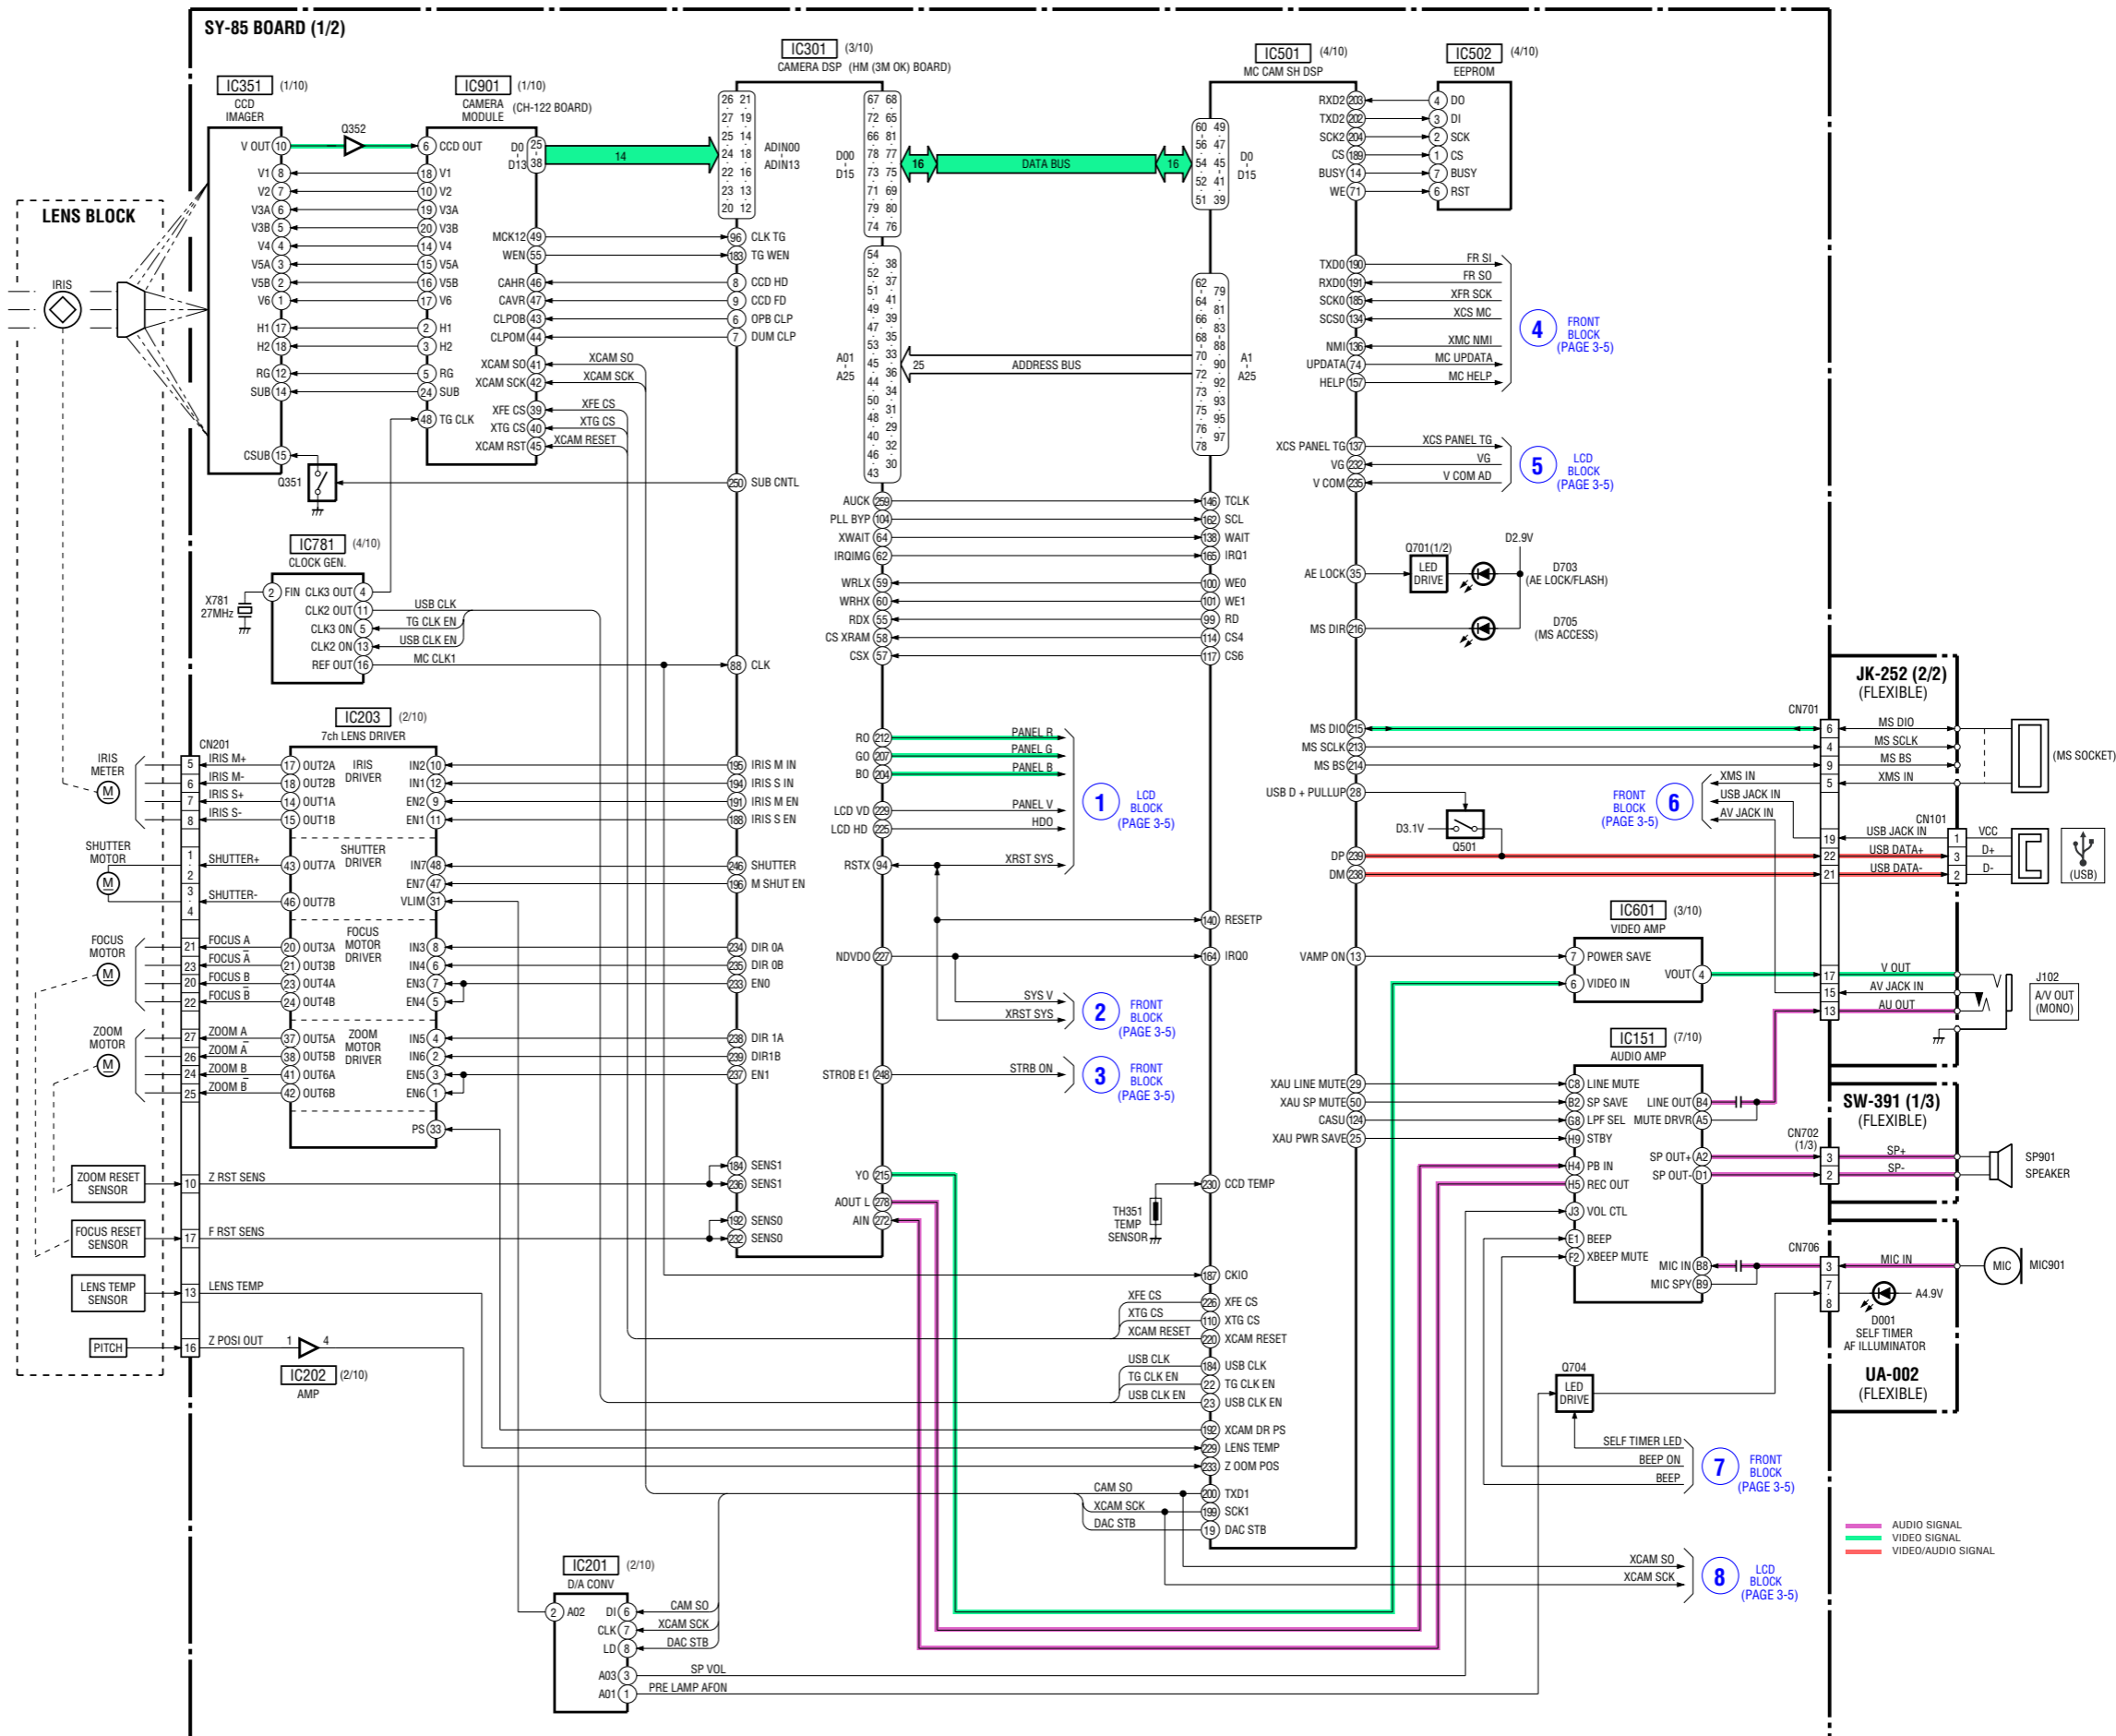



3. BLOCK DIAGRAMS


3-3. FRONT/LCD BLOCK DIAGRAM () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

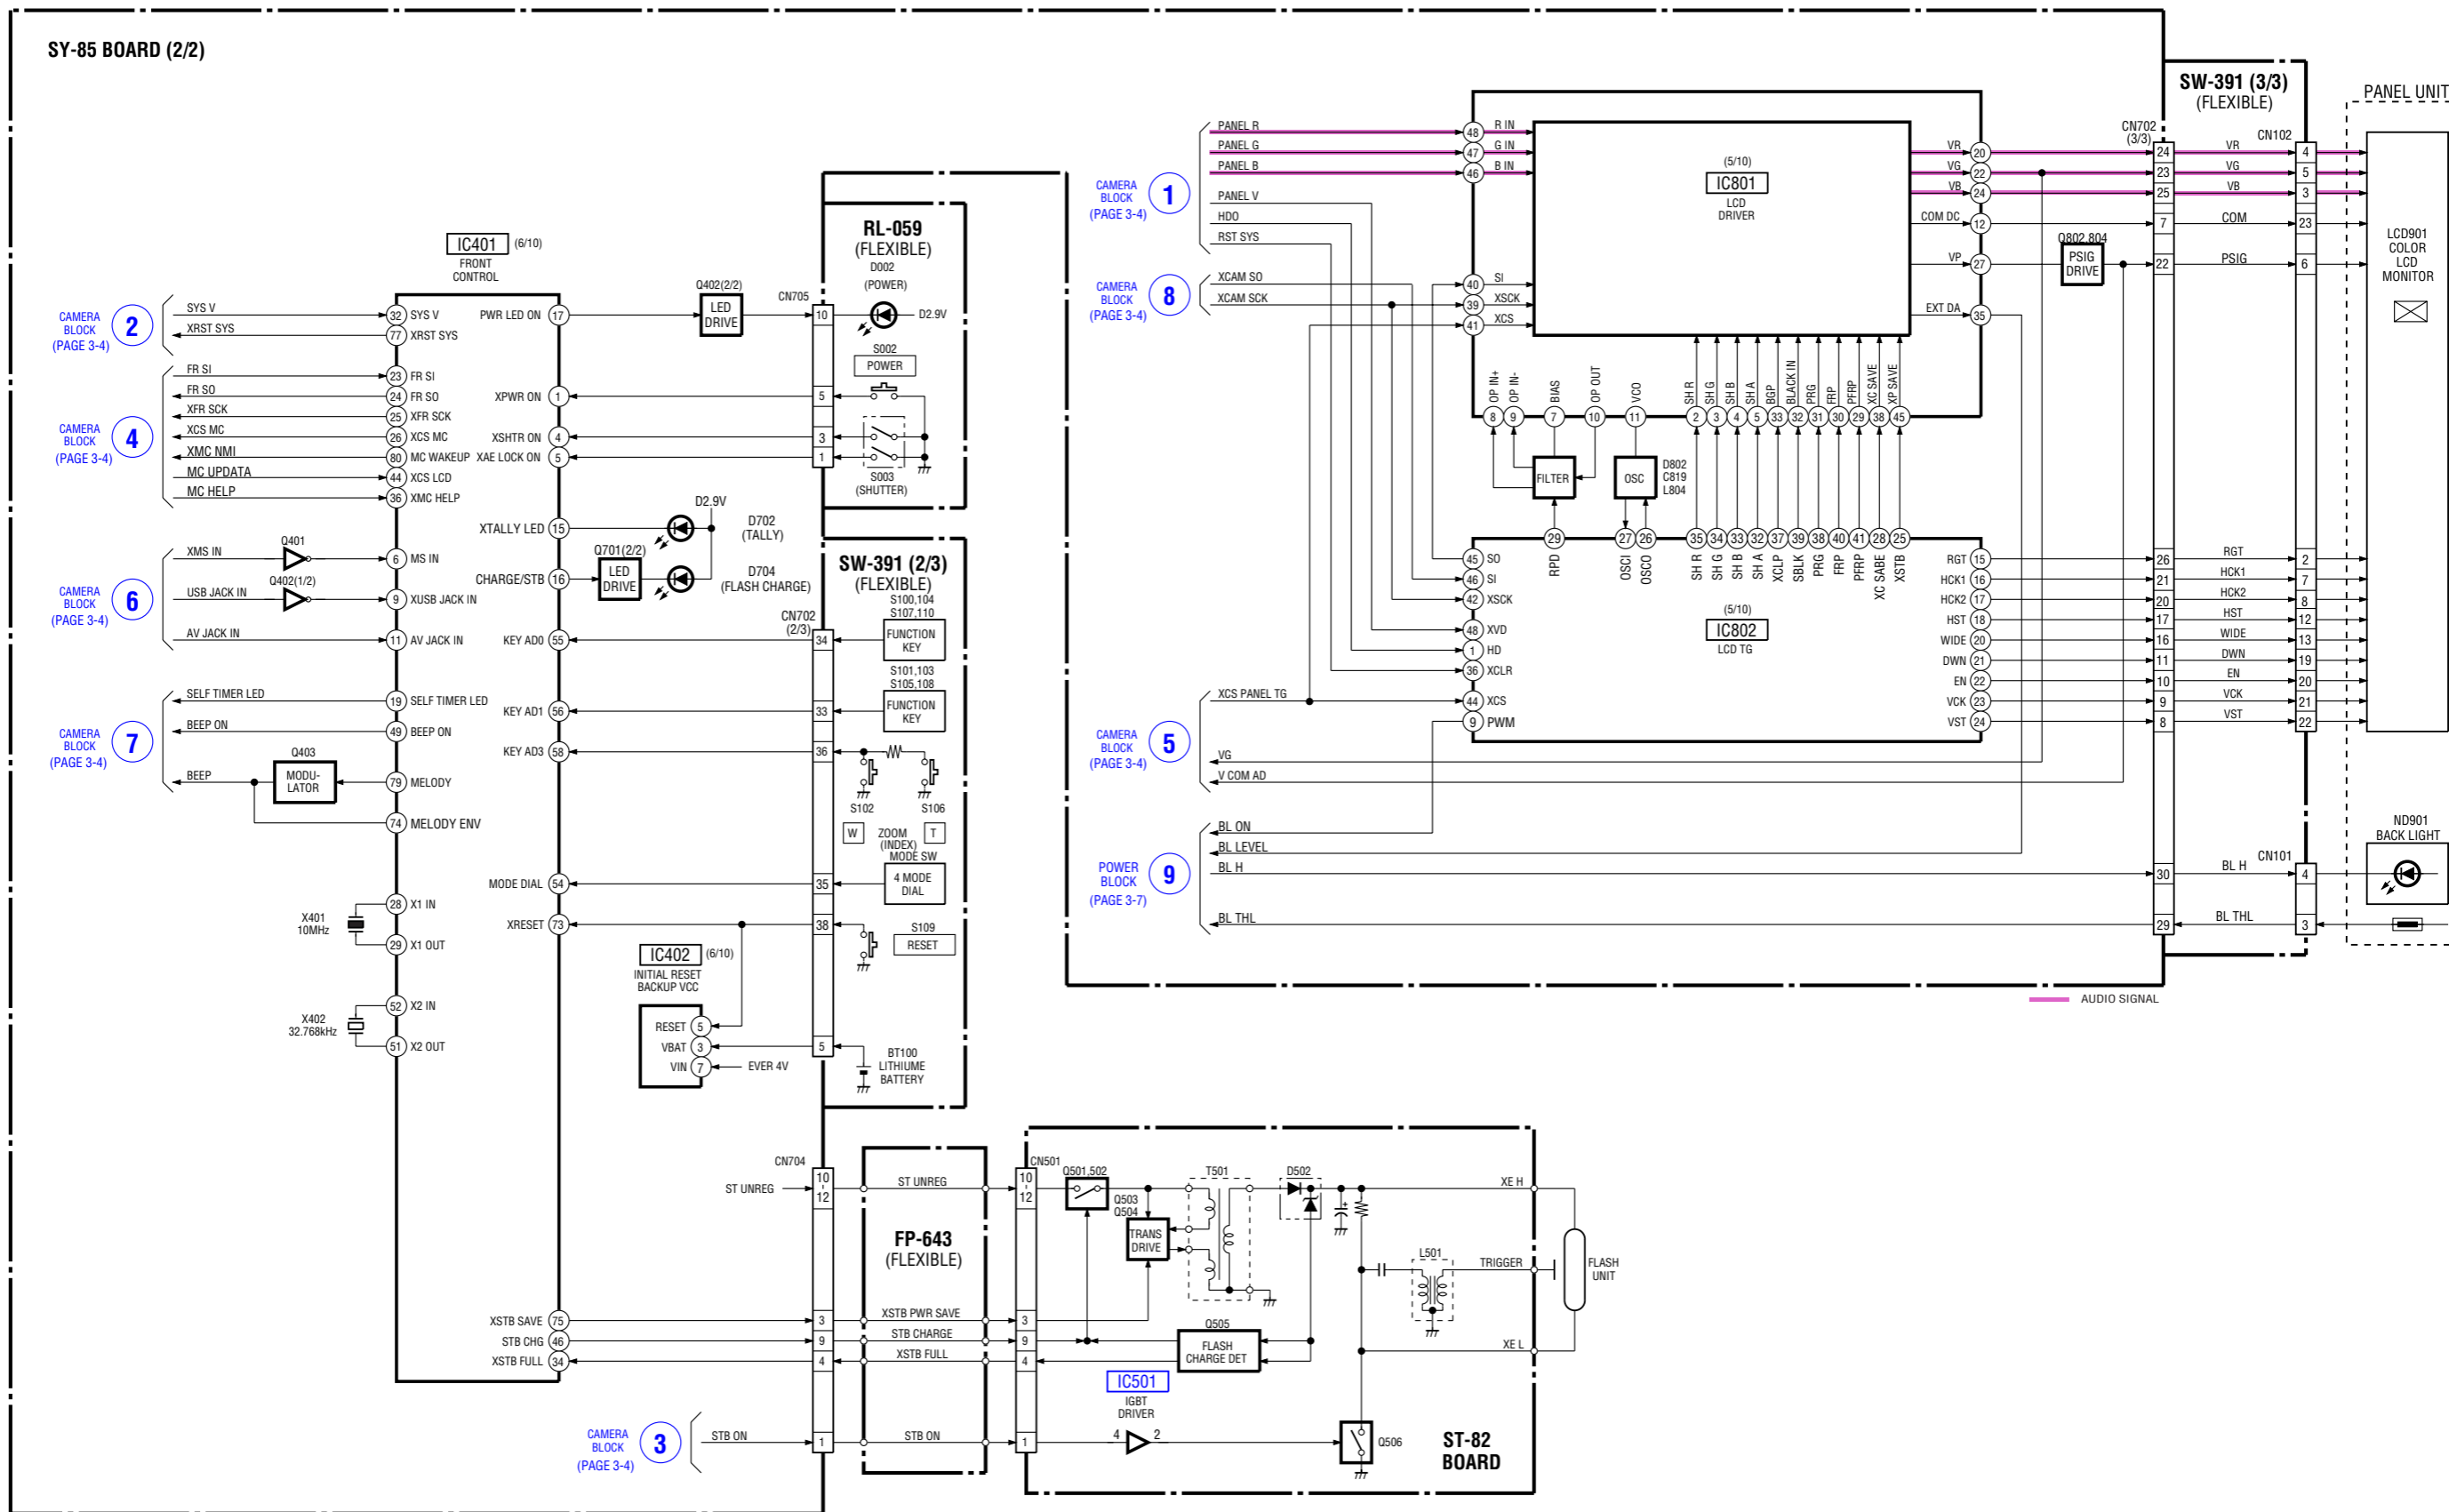



3. BLOCK DIAGRAMS

3-4. POWER BLOCK DIAGRAM () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

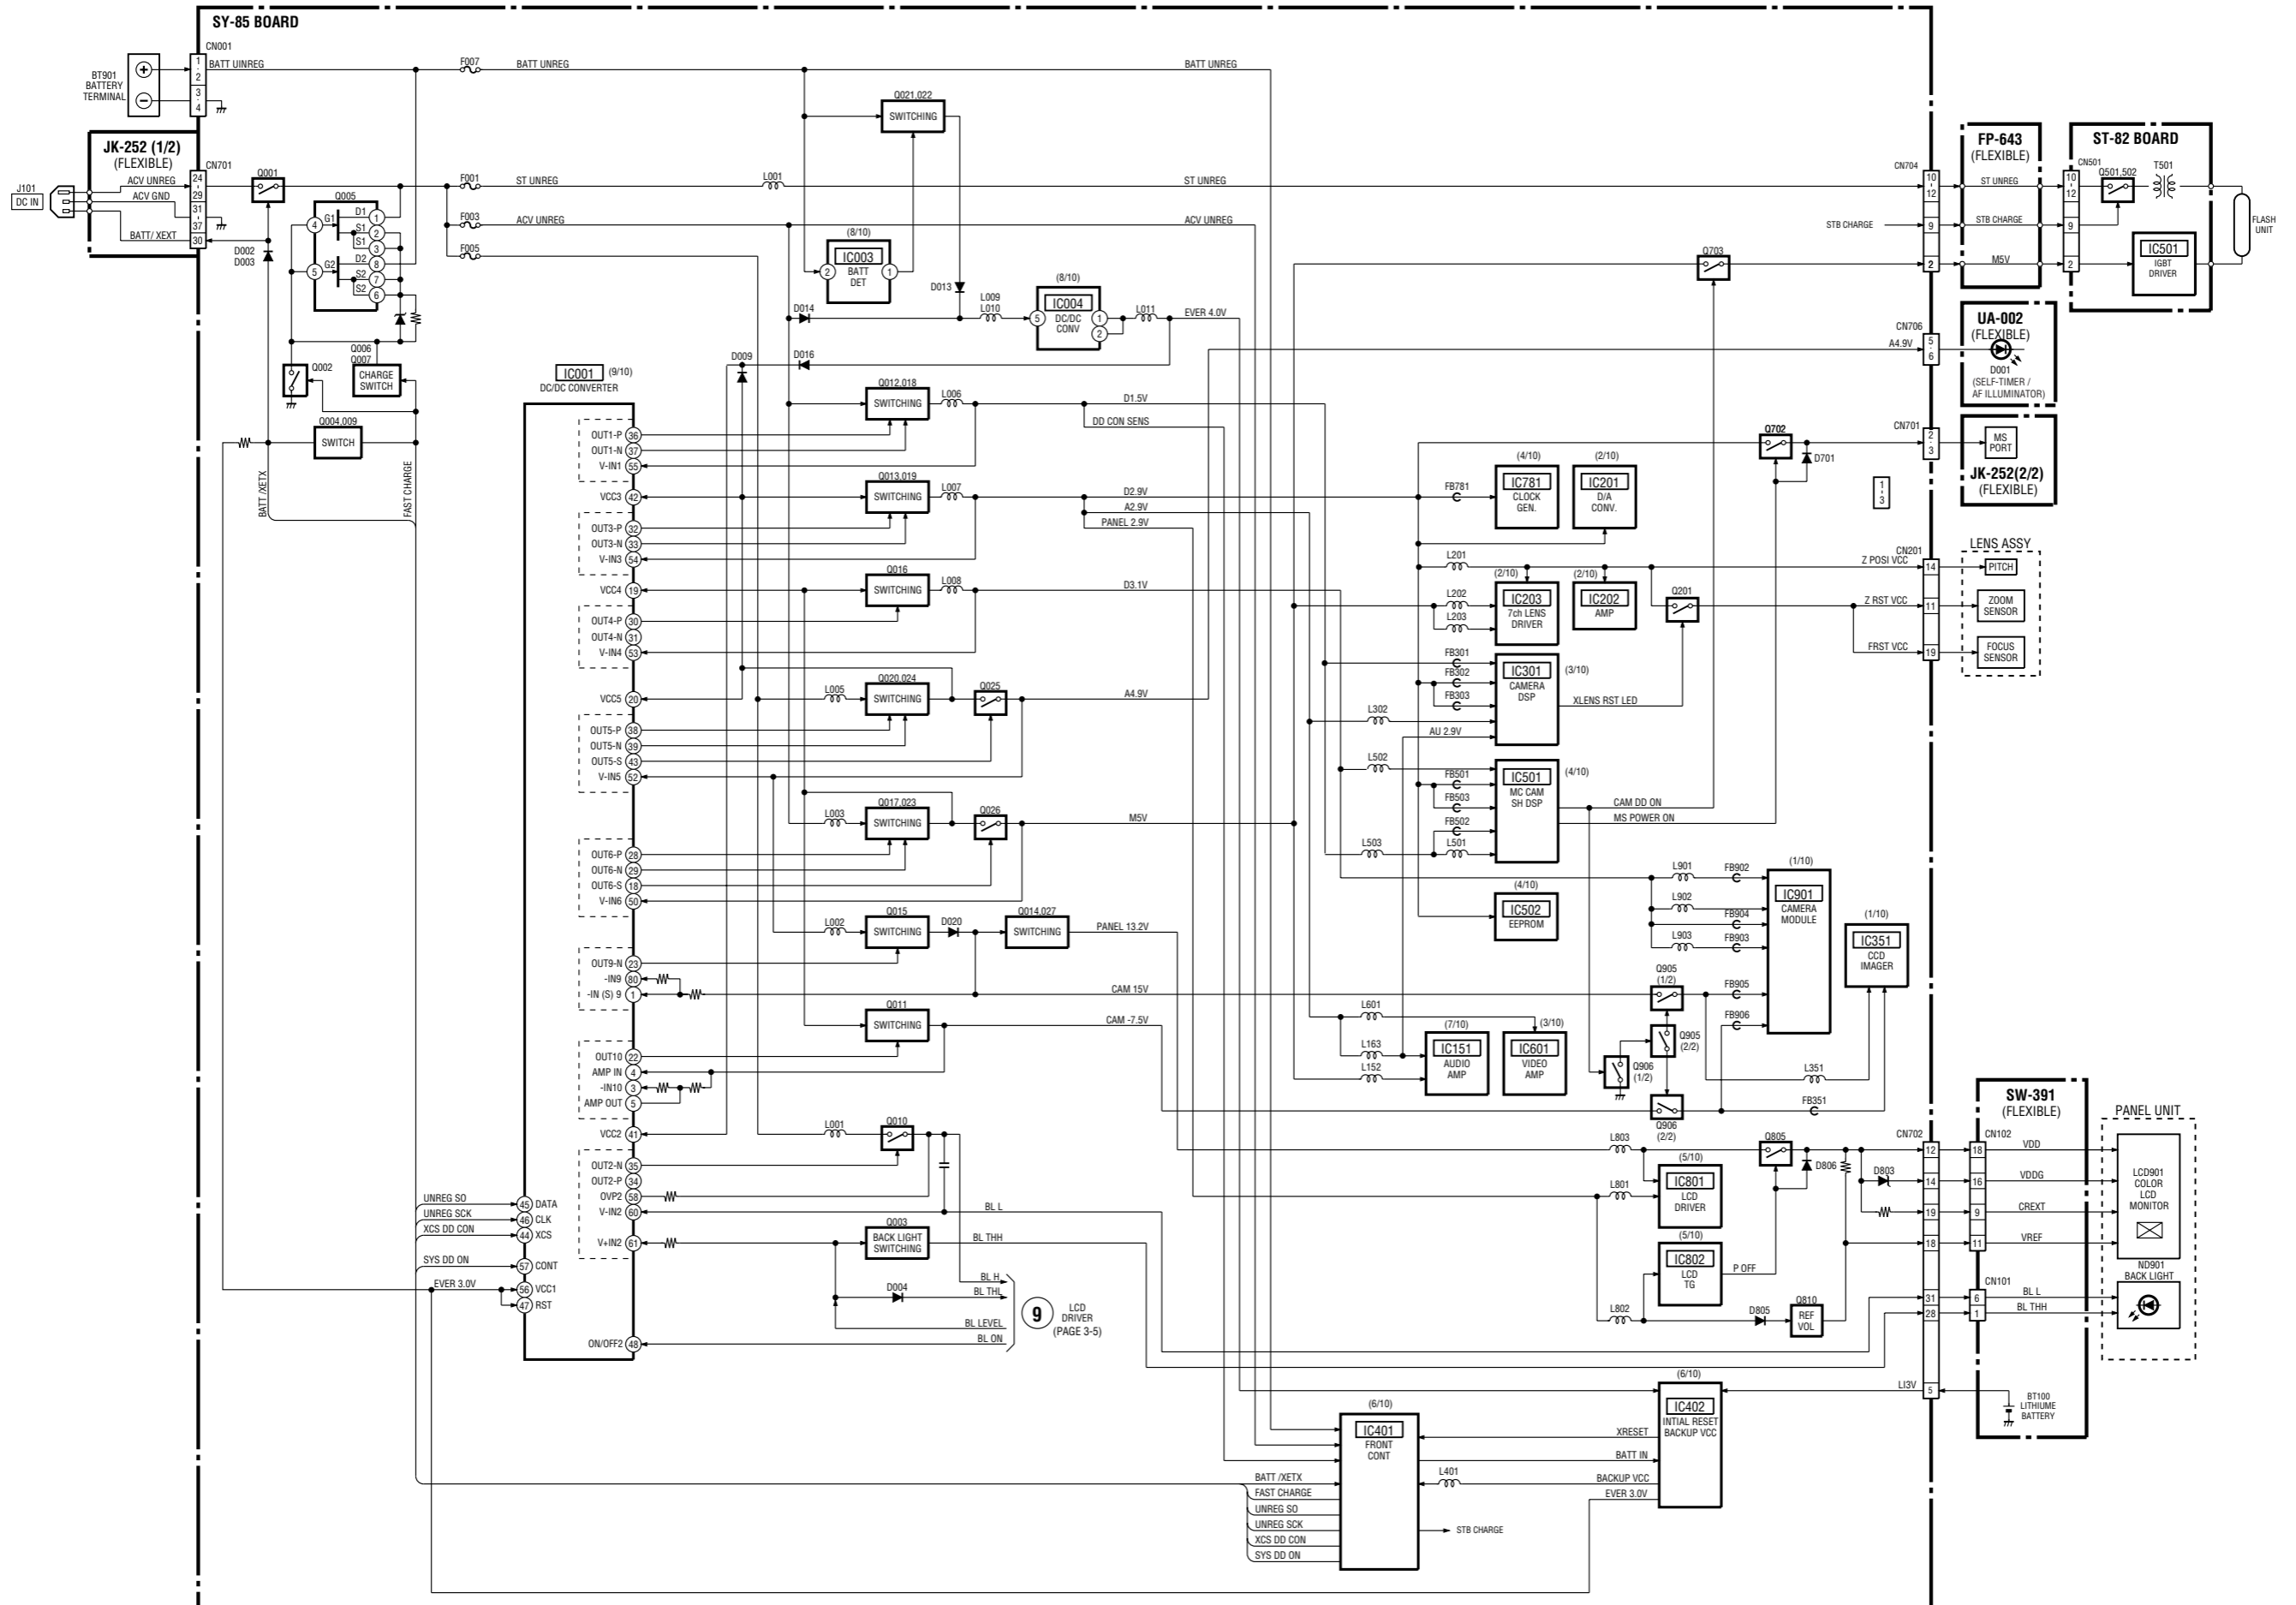




SECTION 4


PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/2)

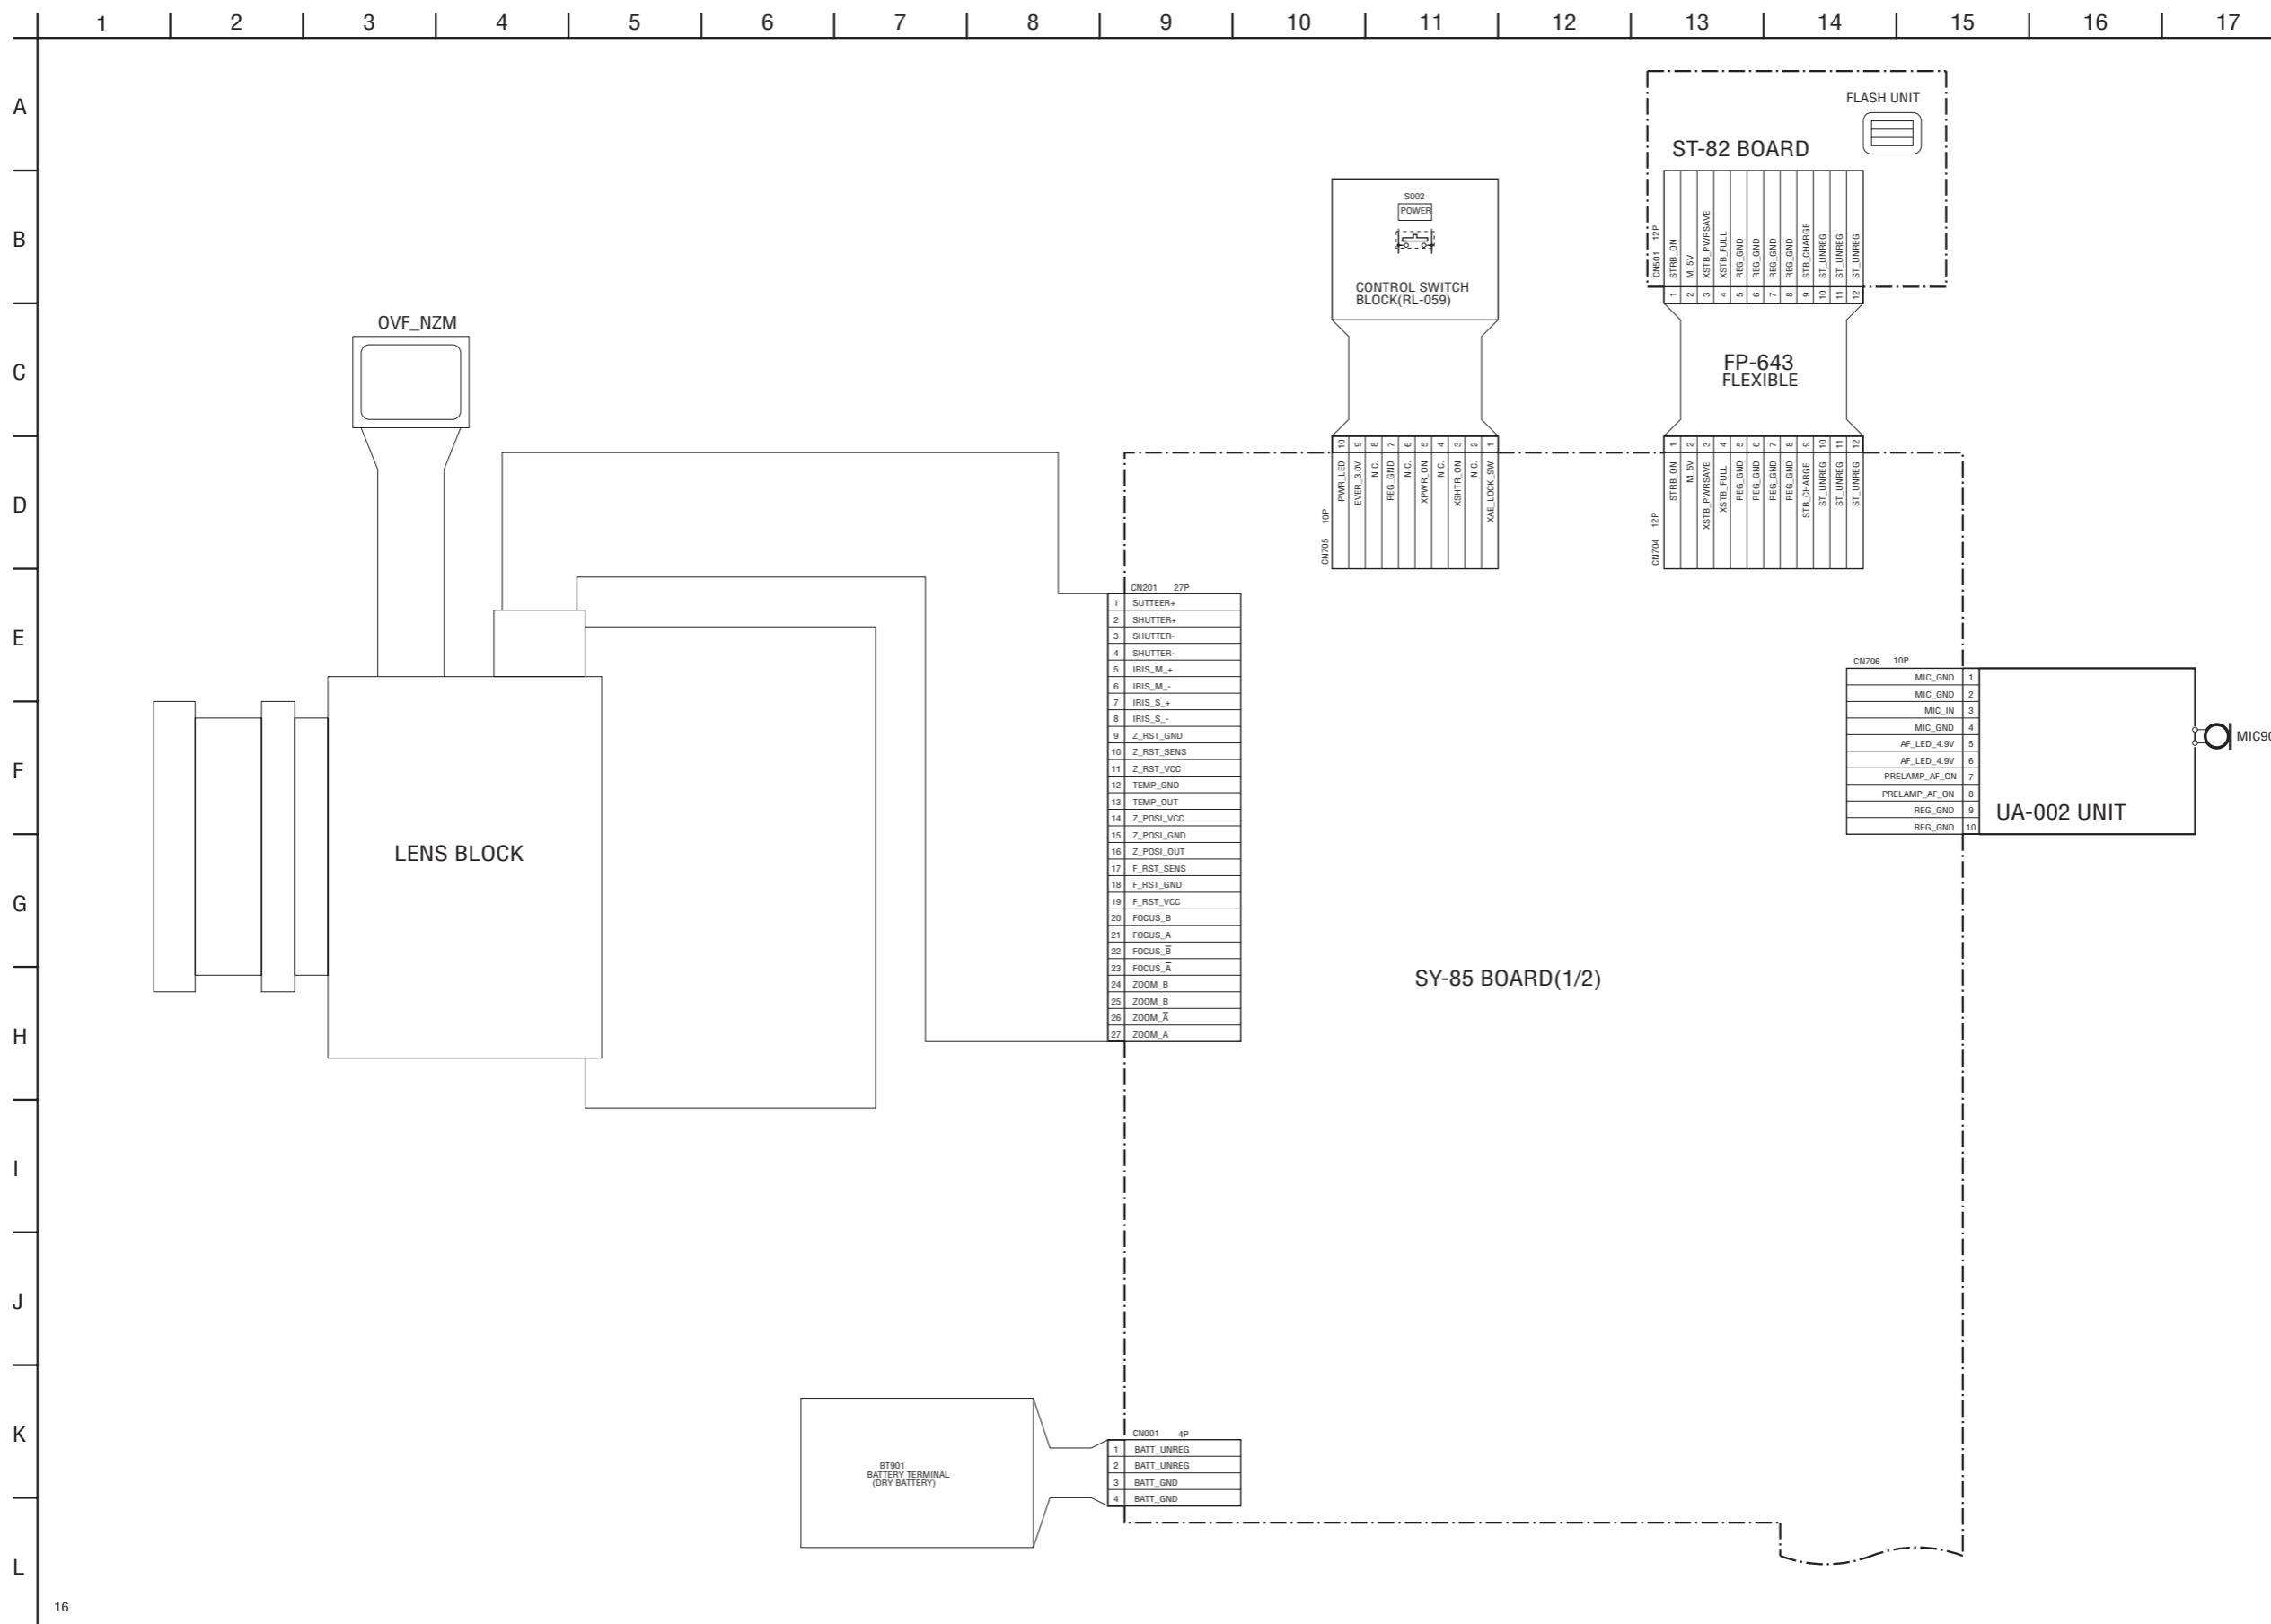



FRAME SCHEMATIC DIAGRAM (2/2)

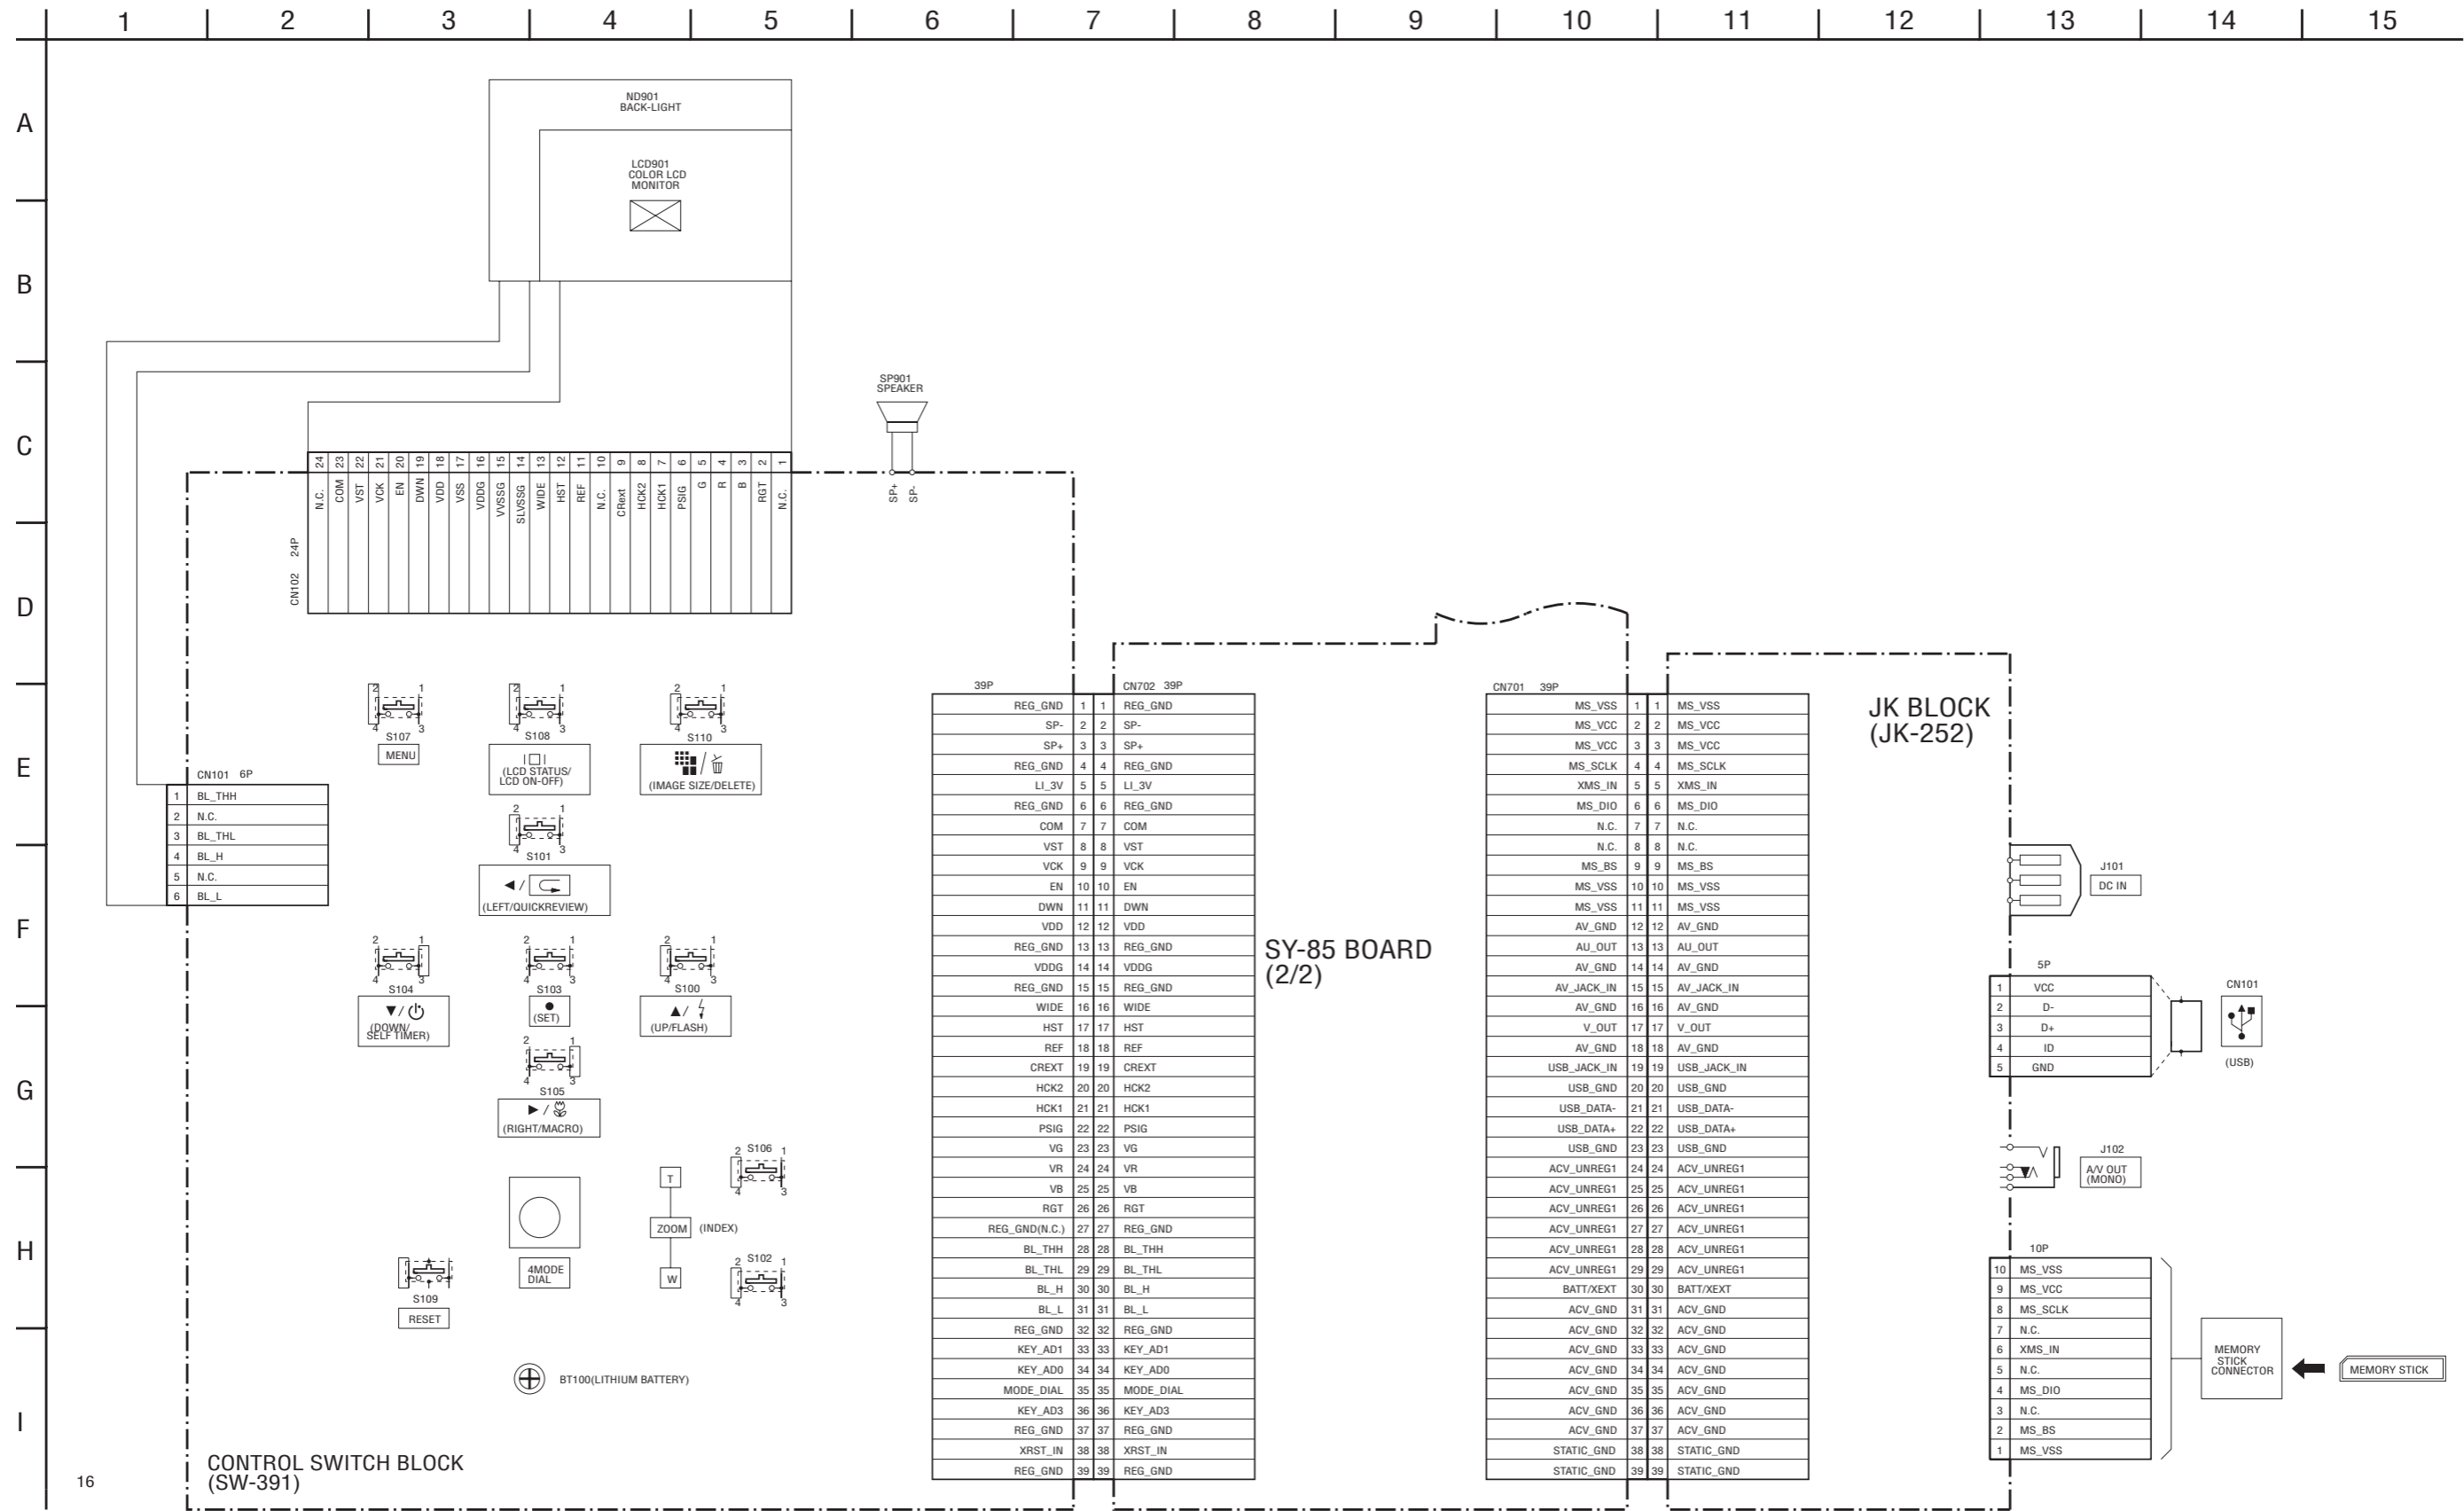



4-2. SCHEMATIC DIAGRAMS

Link

• [ST-82 BOARD \(FLASH DRIVE\)](#)

• [CONTROL SWITCH BLOCK \(SW-391\)](#)

• [FP-643 FLEXIBLE BOARD](#)

• [CONTROL SWITCH BLOCK \(RL-059\)](#)

• [JK BLOCK \(JK-252\) \(JACK\)](#)

• [UA-002 \(MIC, AF LED\)](#)

• [COMMON NOTE FOR SCHEMATIC DIAGRAMS](#)




4-2. SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR SCHEMATIC DIAGRAMS
 (In addition to this, the necessary note is printed in each block)

(For schematic diagrams)

- All capacitors are in μF unless otherwise noted. $\text{pF} : \mu\text{F} : 50\text{V}$ or less are not indicated except for electrolytics and tantalums.
- Chip resistors are $1/10\text{W}$ unless otherwise noted. $\text{k}\Omega=1000\ \Omega$, $\text{M}\Omega=1000\ \text{k}\Omega$.
- Caution when replacing chip parts. New parts must be attached after removal of chip. Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

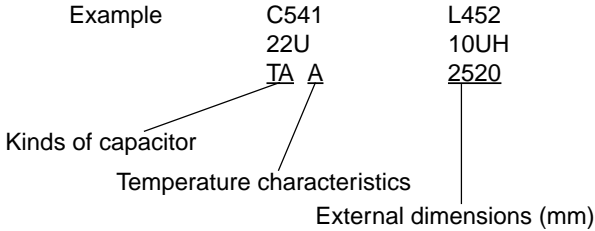


- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used. In such cases, the unused circuits may be indicated.
- Parts with * differ according to the model/destination. Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
 $\text{XEDIT} \rightarrow \text{EDIT}$ $\text{PB/XREC} \rightarrow \text{PB/REC}$
- : non flammable resistor
- : fusible resistor
- : panel designation
- : B+ Line
- : B- Line
- : IN/OUT direction of (+,-) B LINE.
- : adjustment for repair.
- : VIDEO SIGNAL (ANALOG)
- : AUDIO SIGNAL (ANALOG)
- : VIDEO/AUDIO SIGNAL
- : VIDEO/AUDIO/SERVO SIGNAL
- : SERVO SIGNAL
- Circled numbers refer to waveforms.

(Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. (VOM of DC $10\ \text{M}\Omega$ input impedance is used)
- Voltage values change depending upon input impedance of VOM used.)

1. Connection

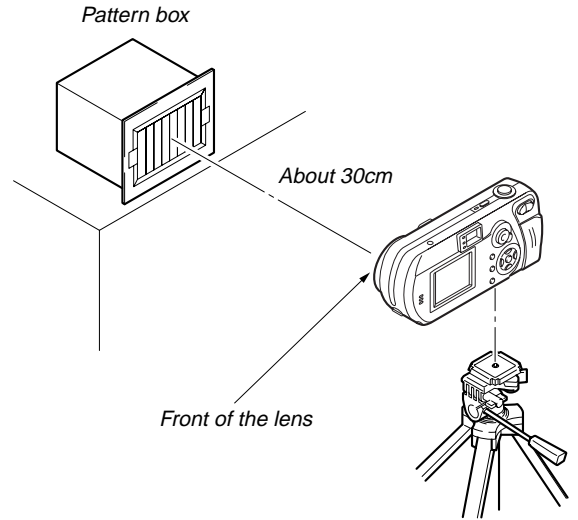

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

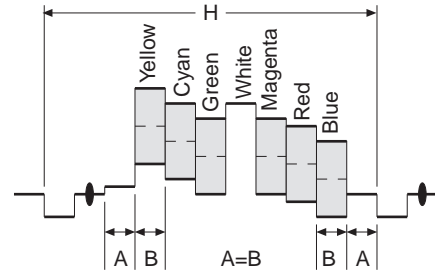


Fig. a (Video output terminal output waveform)

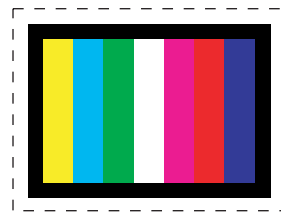


Fig.b (Picture on monitor TV)

When indicating parts by reference number, please include the board name.

Note :
 The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Note :
 Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.




4-2. SCHEMATIC DIAGRAMS

ST-82 PRINTED WIRING BOARD

4-2. SCHEMATIC DIAGRAMS

For Schematic Diagram
 • Refer to page 4-37 for printed wiring board of ST-82 board.

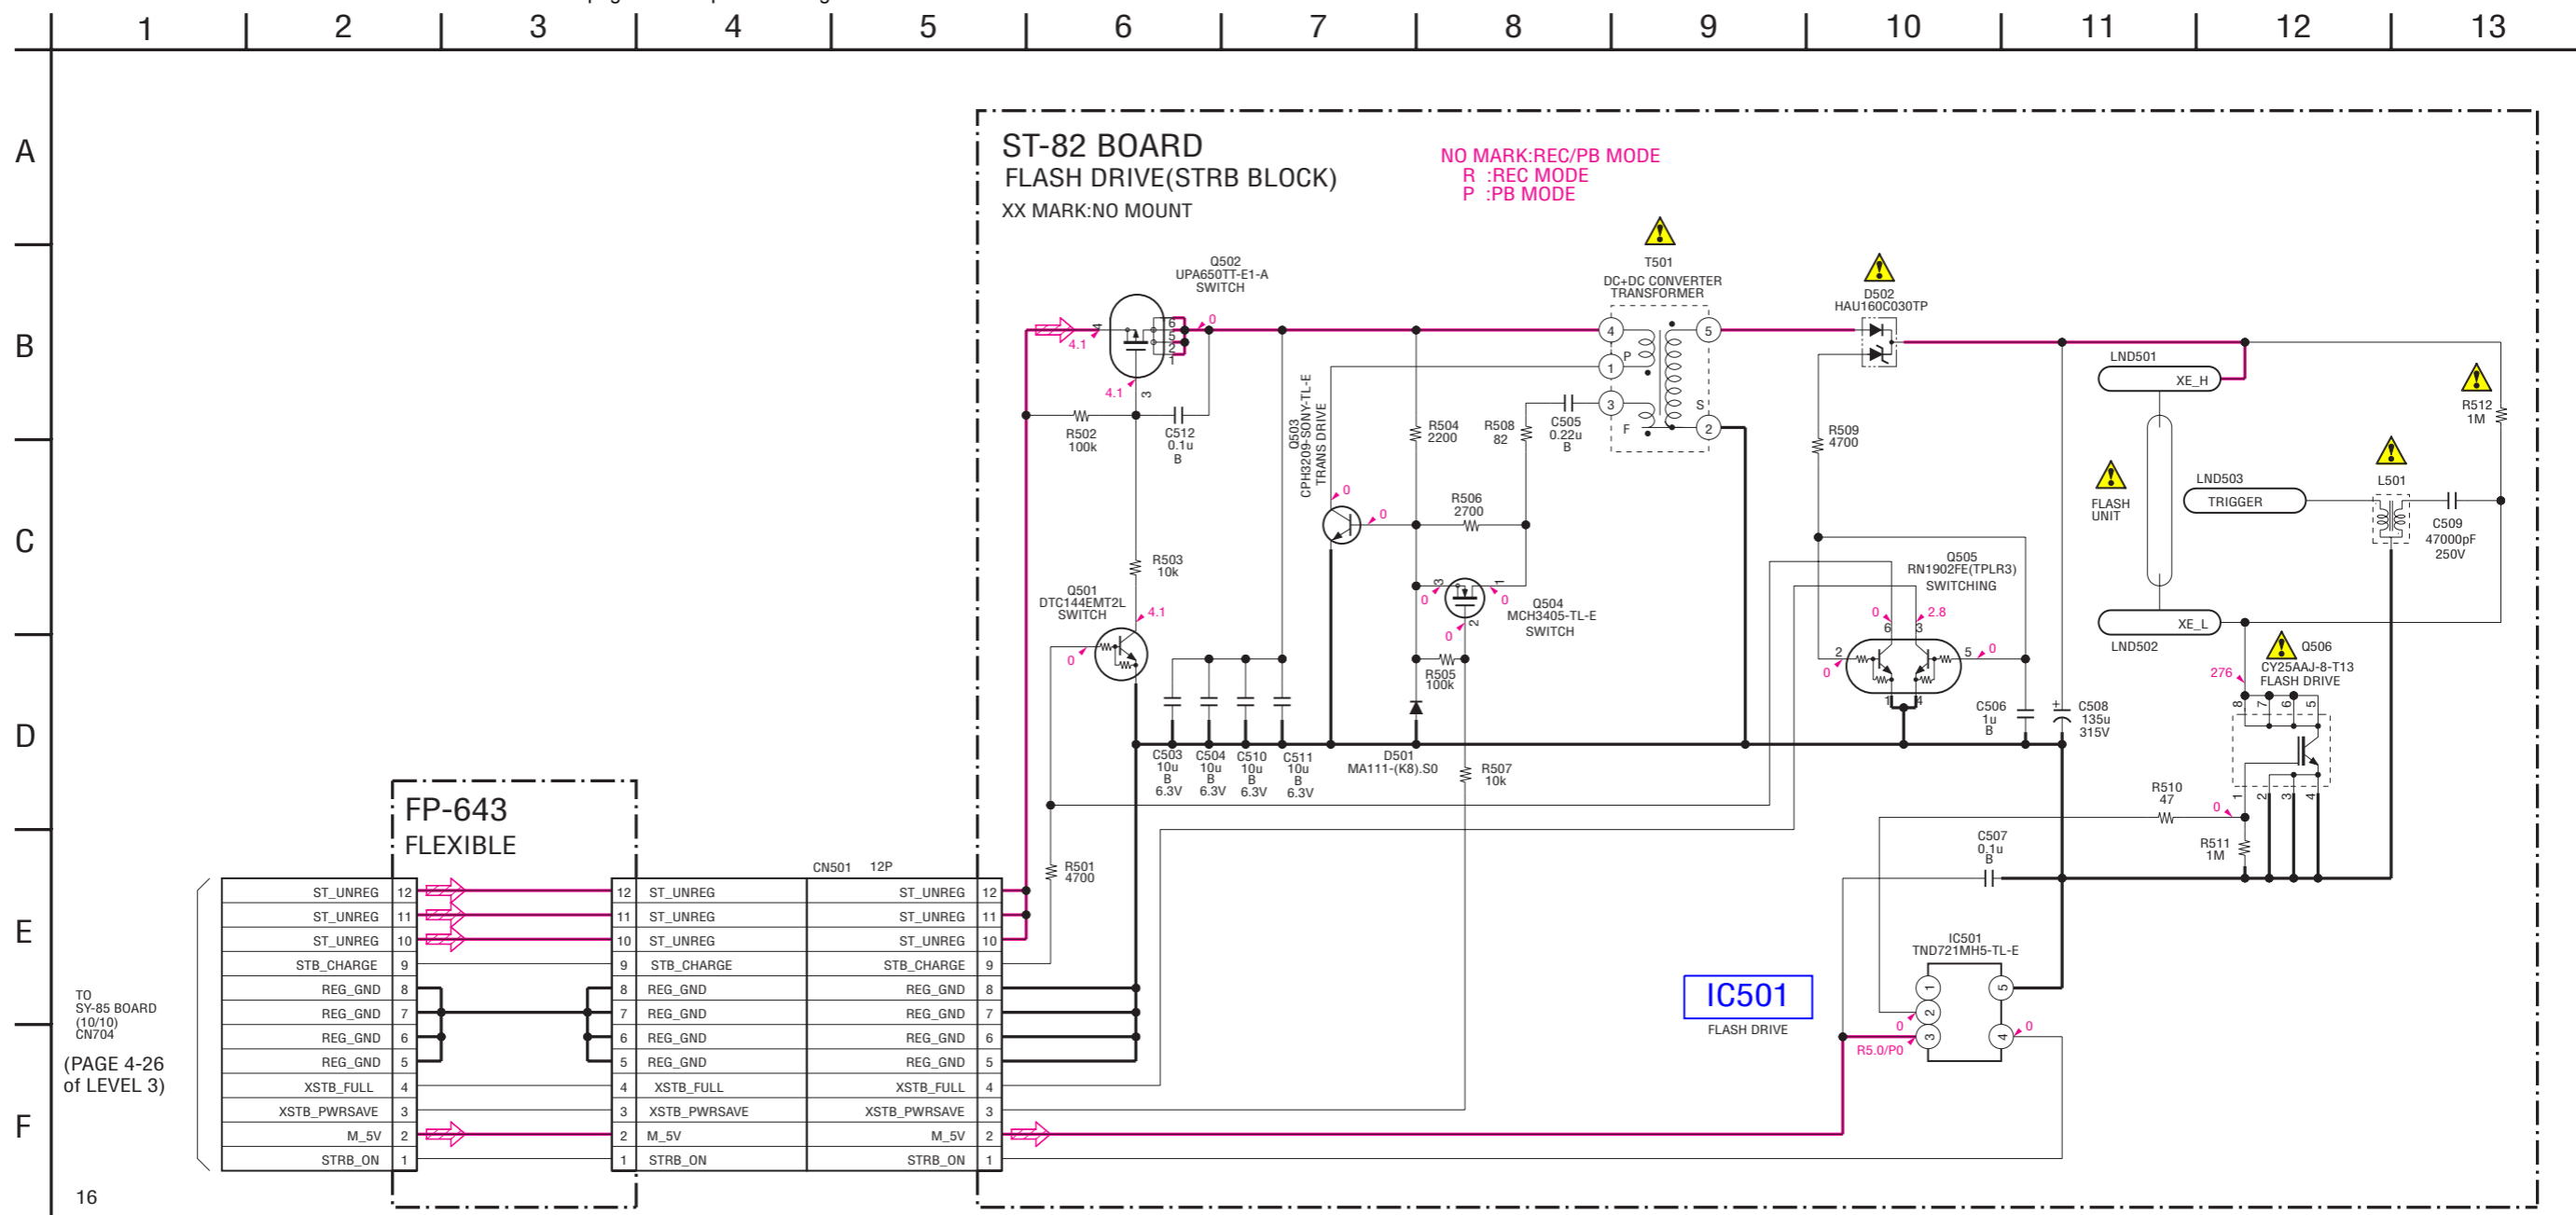


Note :
 The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note :
 Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Schematic diagram of the SY-85 board are not shown. Pages from 4-7 to 4-26 are not shown.



For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

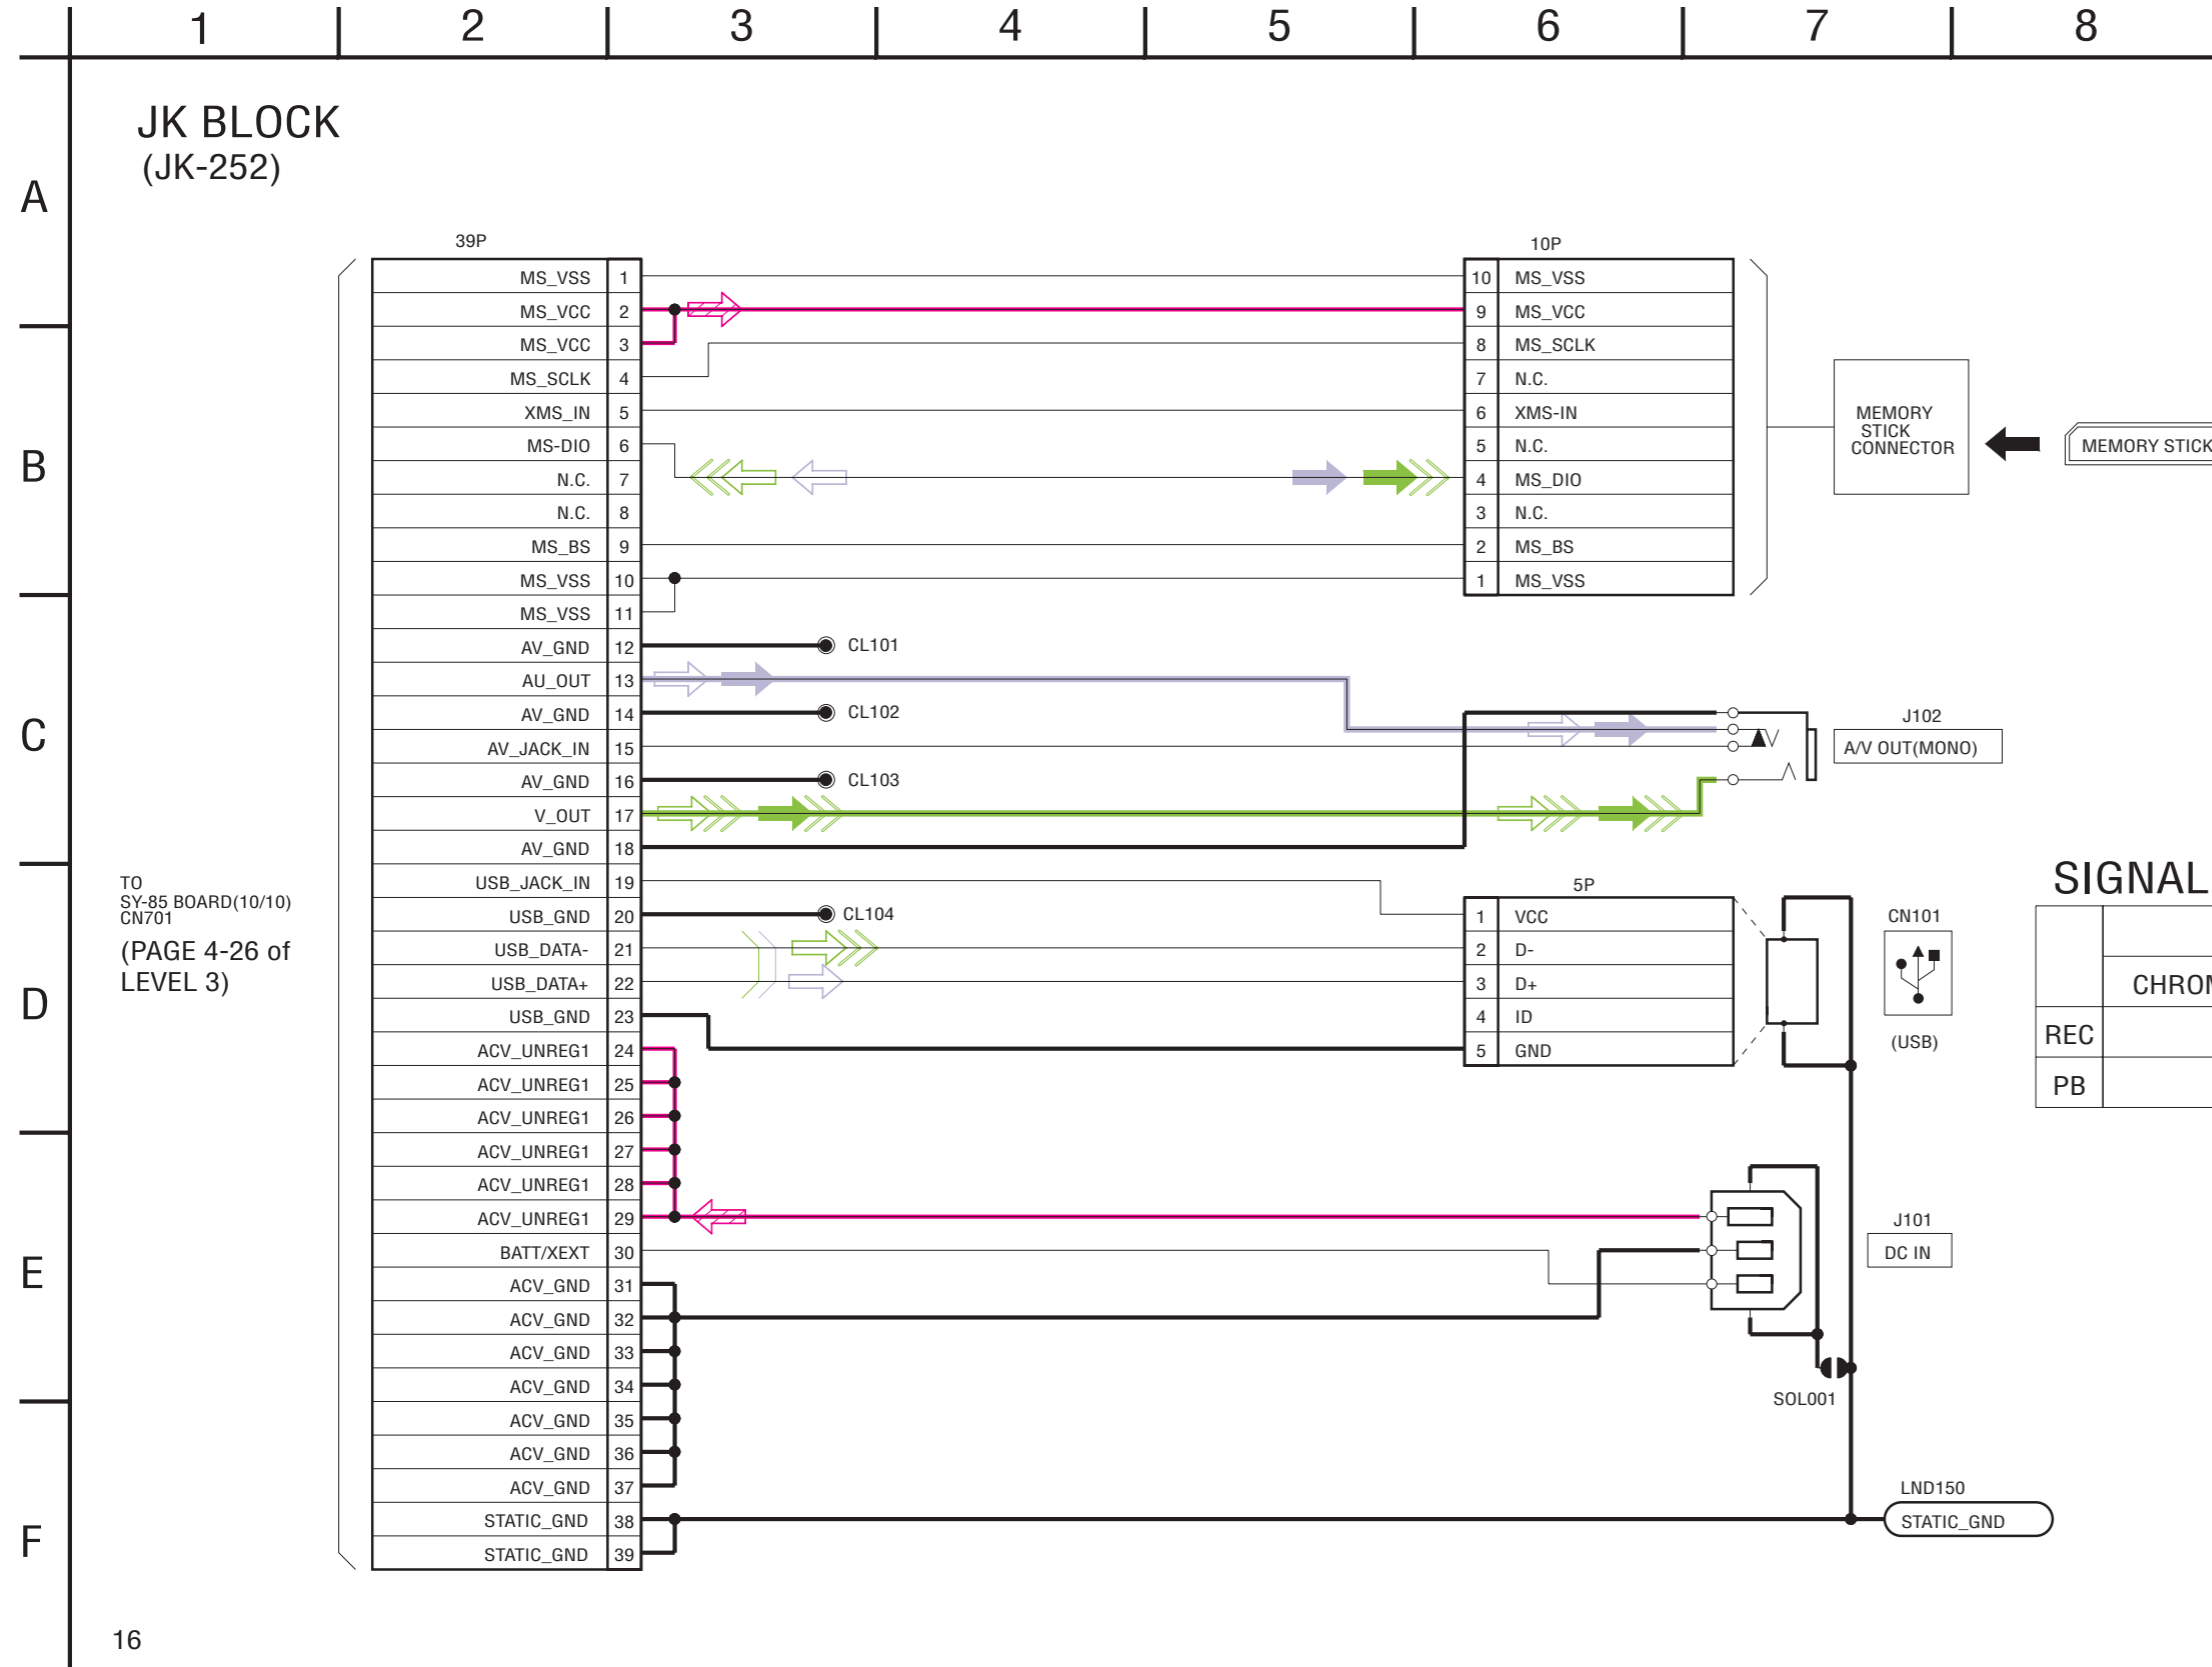

TO
 SY-85 BOARD(10/10)
 CN701
 (PAGE 4-26 of
 LEVEL 3)

SIGNAL PATH


	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB				



4-2. SCHEMATIC DIAGRAMS


4-3. PRINTED WIRING BOARDS

• CONTROL SWITCH BLOCK (SW-391) is replaced as a block. So that this PRINTED WIRING BOARD is omitted.

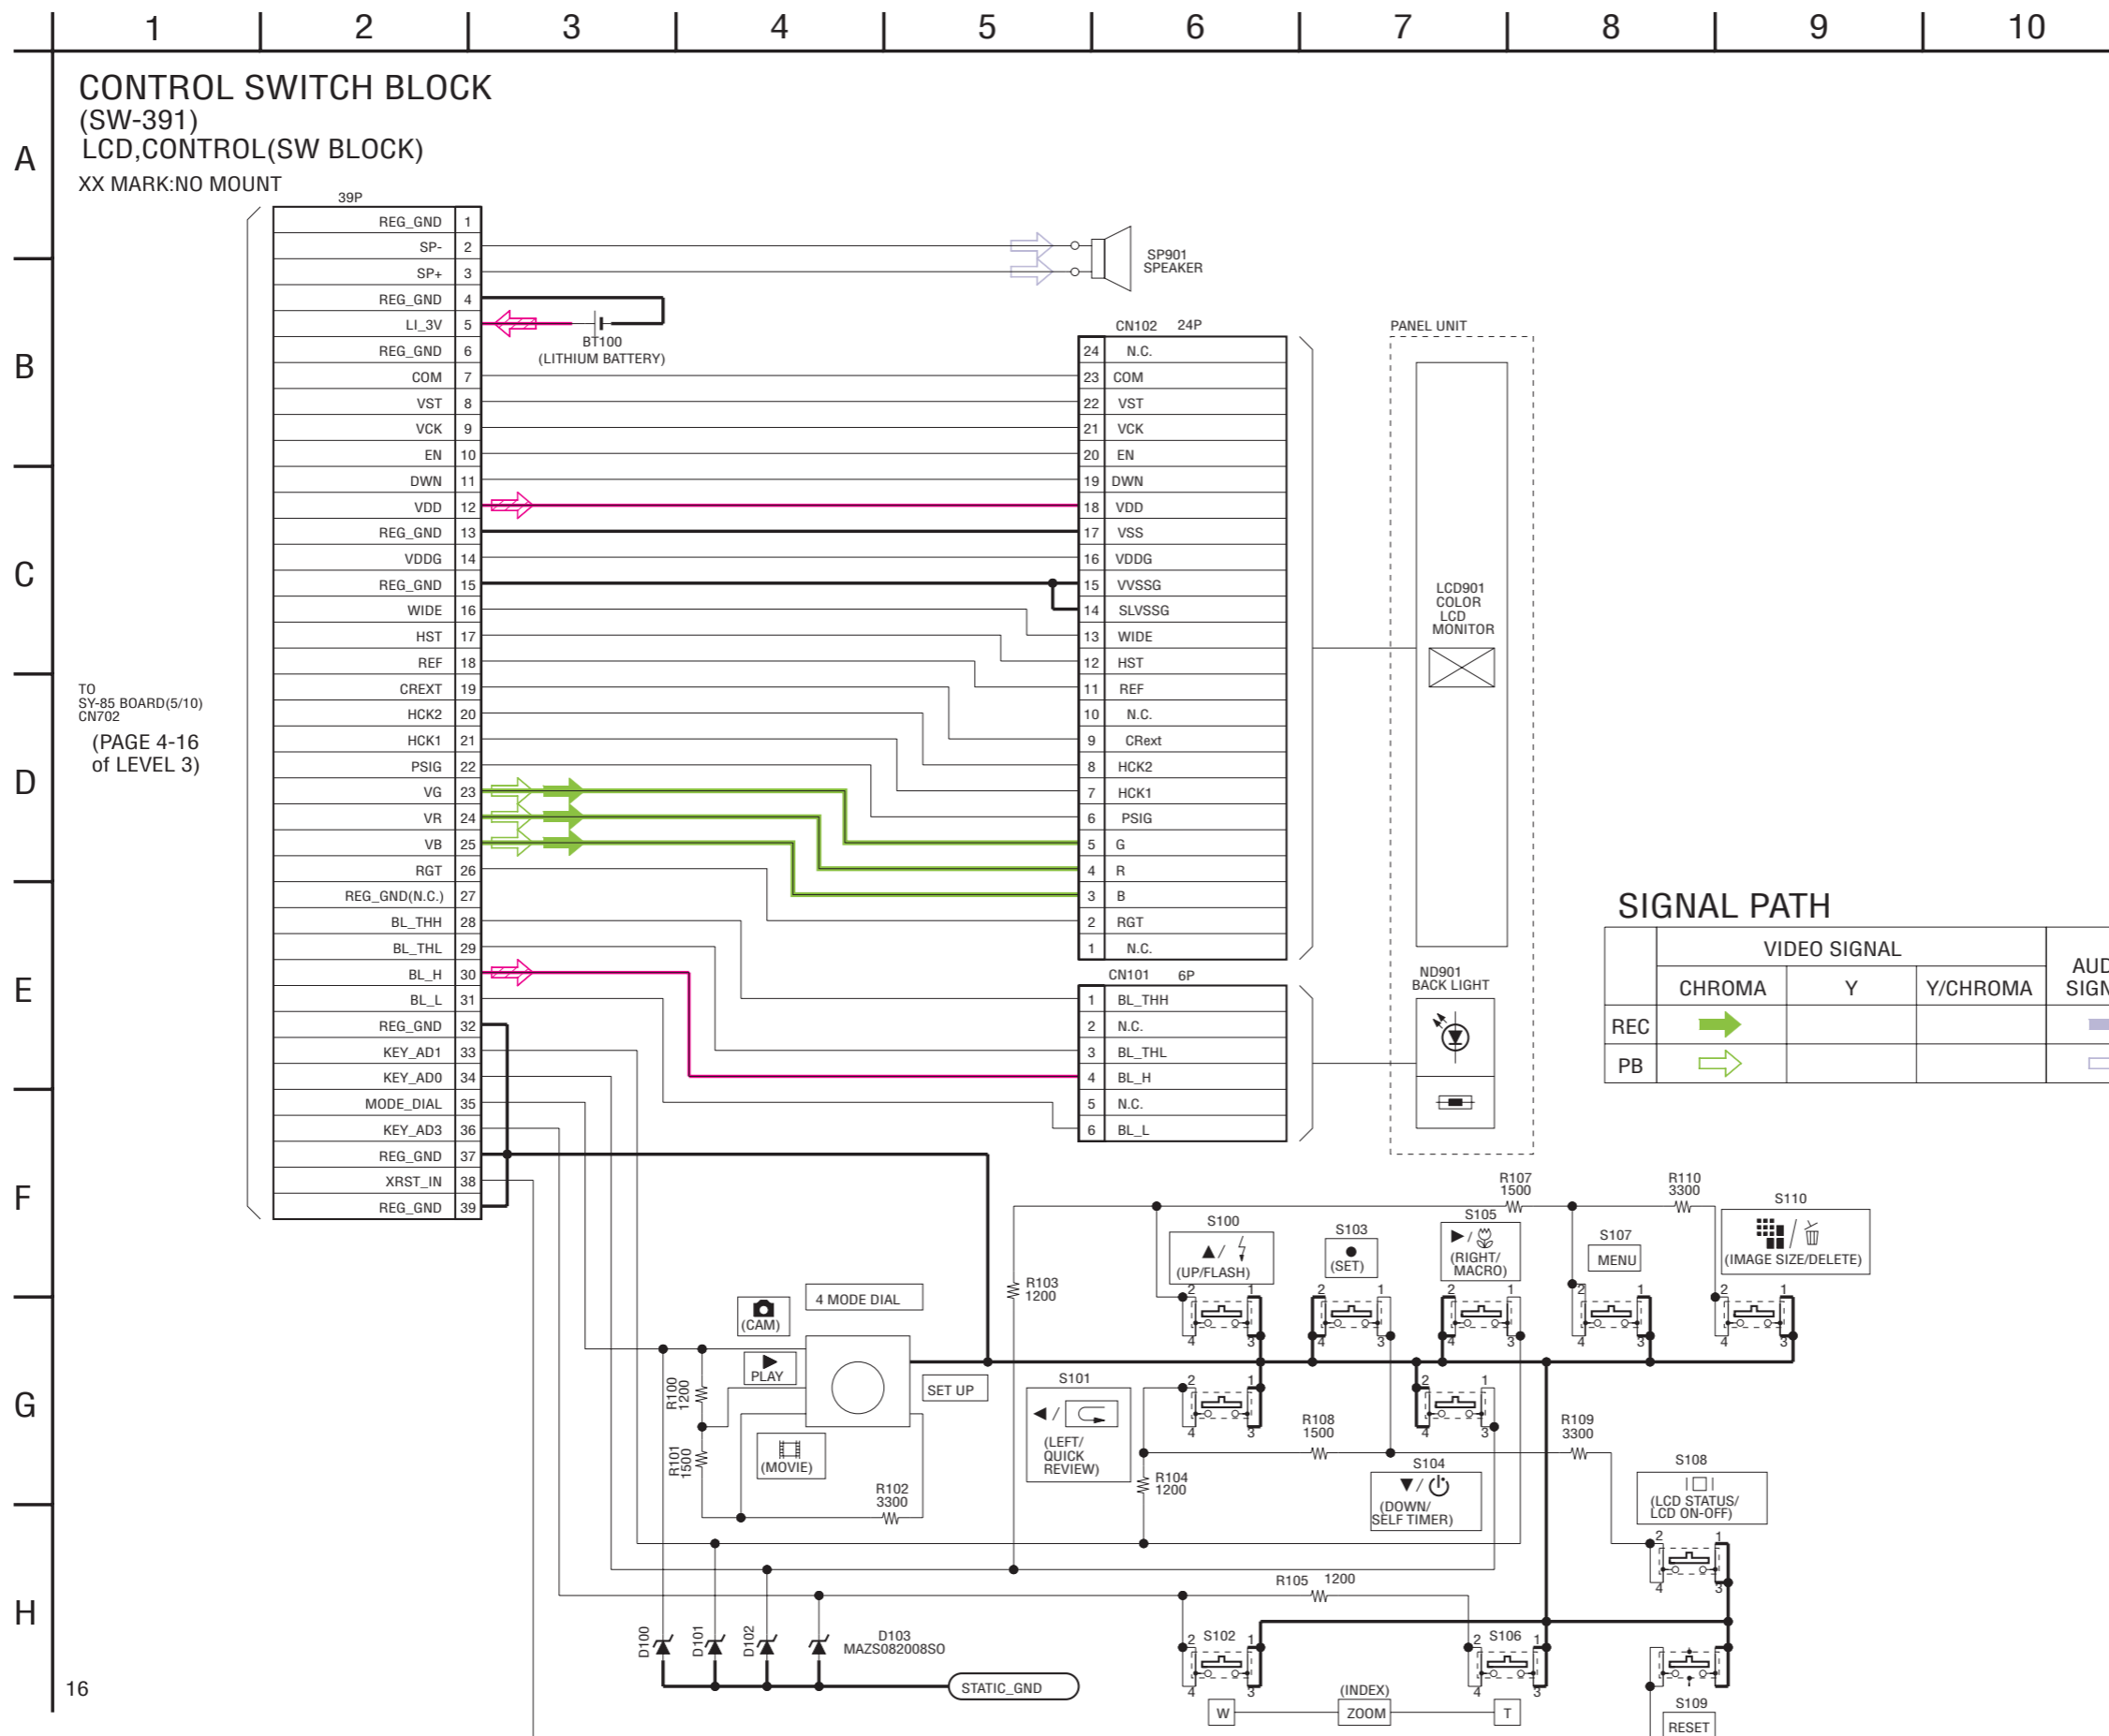




• CONTROL SWITCH BLOCK (RL-059) is replaced as a block. So that this PRINTED WIRING BOARD is omitted.

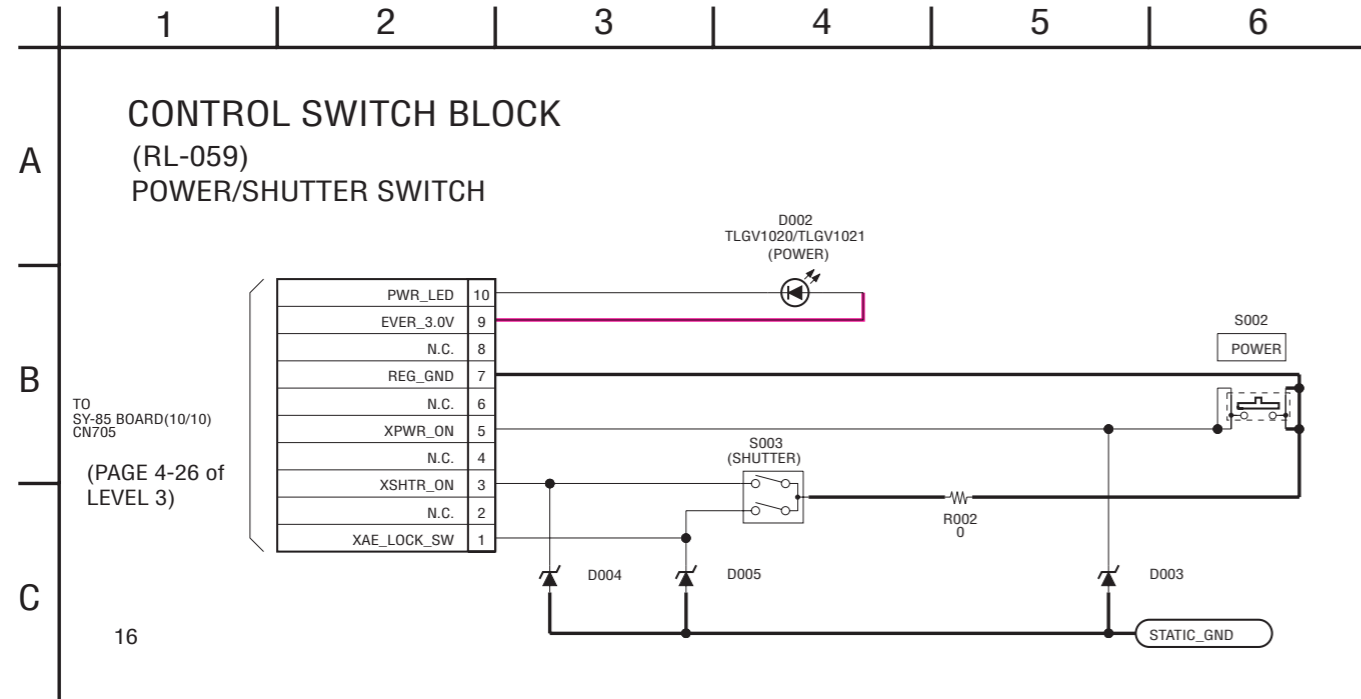

• UA-002 BOARD is replaced as a block. So that this PRINTED WIRING BOARD is omitted.

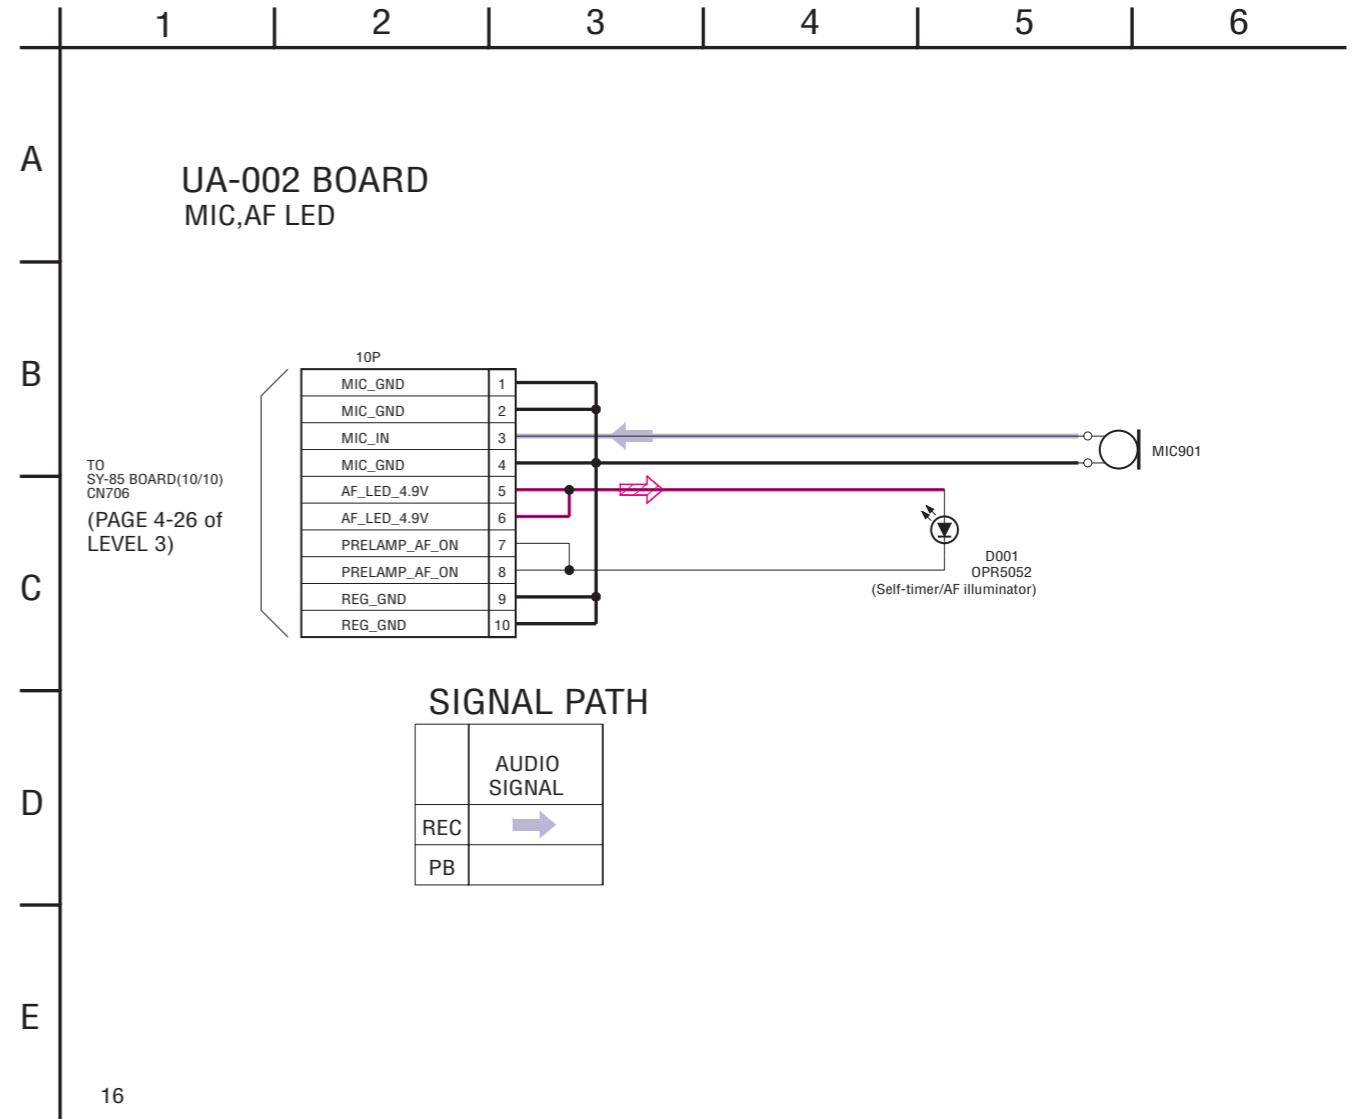



4-3. PRINTED WIRING BOARDS

Link

• [ST-82 BOARD](#)

• [JK BLOCK \(JK-252\)](#)

• [COMMON NOTE FOR PRINTED WIRING BOARDS](#)

• [MOUNTED PARTS LOCATION](#)

• [CIRCUIT BOARDS LOCATION](#)

• [FLEXIBLE BOARDS LOCATION](#)





4-3. PRINTED WIRING BOARDS

THIS NOTE IS COMMON FOR WIRING BOARDS
 (In addition to this, the necessary note is printed in each block)

(For printed wiring boards)

- : Uses unleaded solder.
- : Pattern from the side which enables seeing.
 (The other layers' patterns are not indicated)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are a few cases that the part printed on diagram isn't mounted in this model.
- : panel designation

• Chip parts.

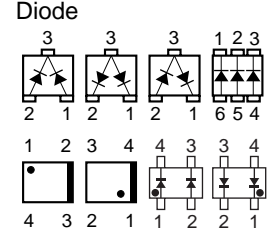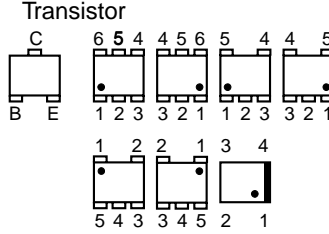

BOARD INFORMATION

board name	parts location (shown on page)	waveform (shown on page)	pattern		CSP IC
			number of layers	layers not shown	
ST-82	4-47	—	4	2 to 3	—
JK BLOCK	—	—	1	—	—
SY-85	4-48	4-45	8	2 to 7	IC151, 401, 501, 001, 301, 901




4-3. PRINTED WIRING BOARDS

ST-82 (FLASH DRIVE) PRINTED WIRING BOARD


• Refer to page 4-35 for common note for printed wiring board.

• : Uses unleaded solder.

ST-82 BOARD(SIDE A)

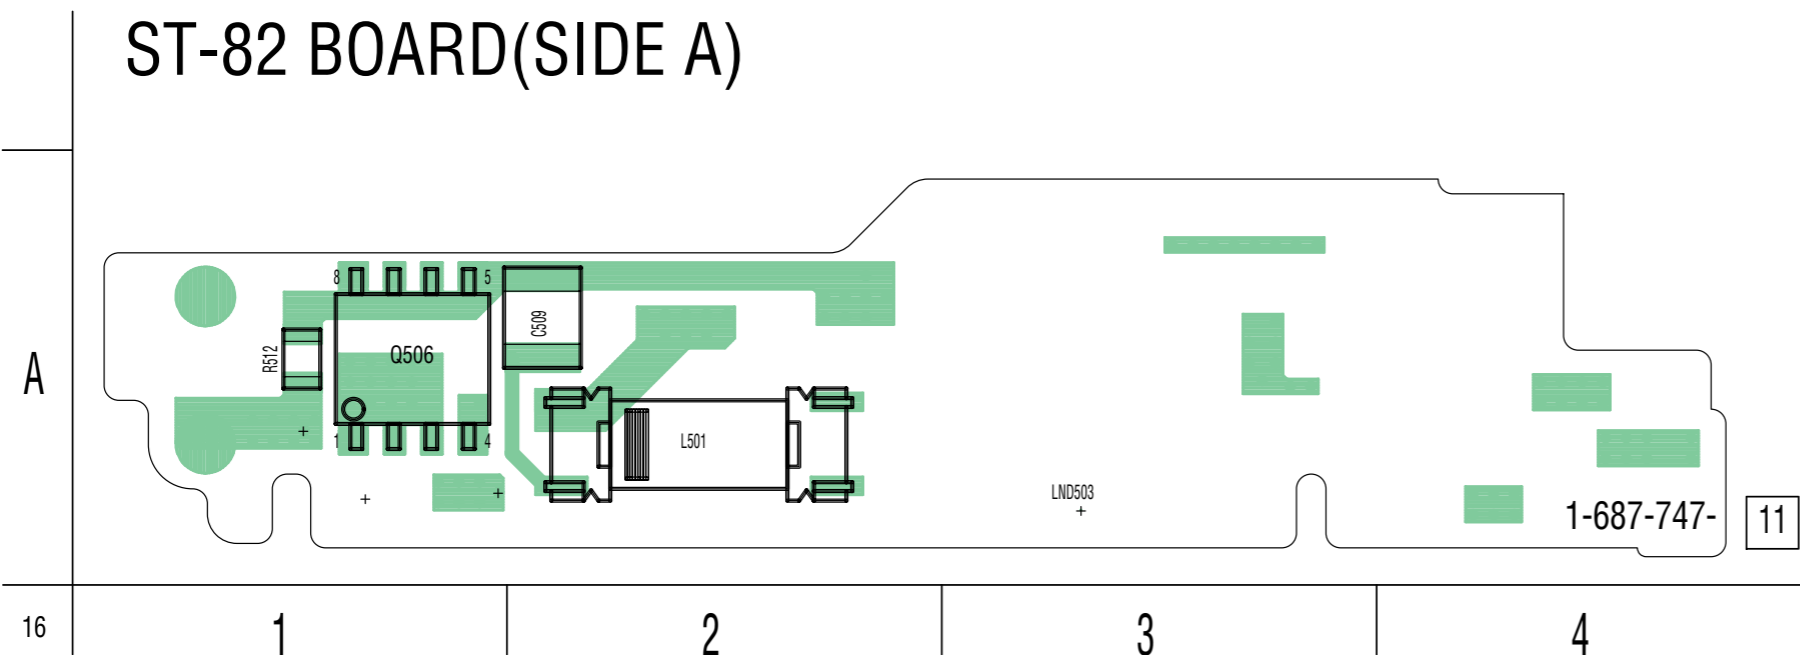


ST-82 BOARD(SIDE B)

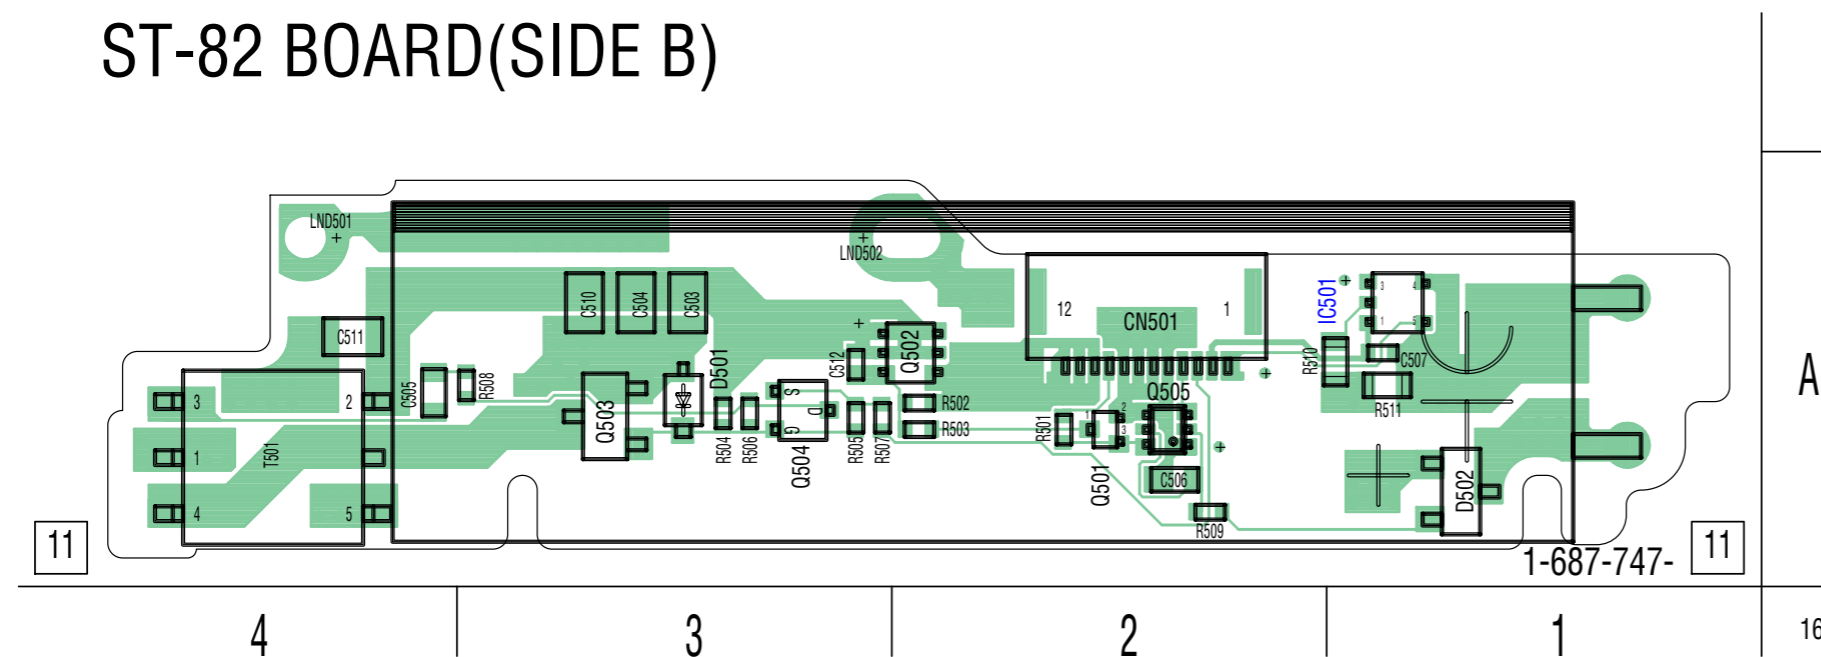

Printed wiring board of the SY-85 board are not shown. Pages from 4-39 to 4-42 are not shown.



JK BLOCK (JK-252) (JACK) FLEXIBLE BOARD

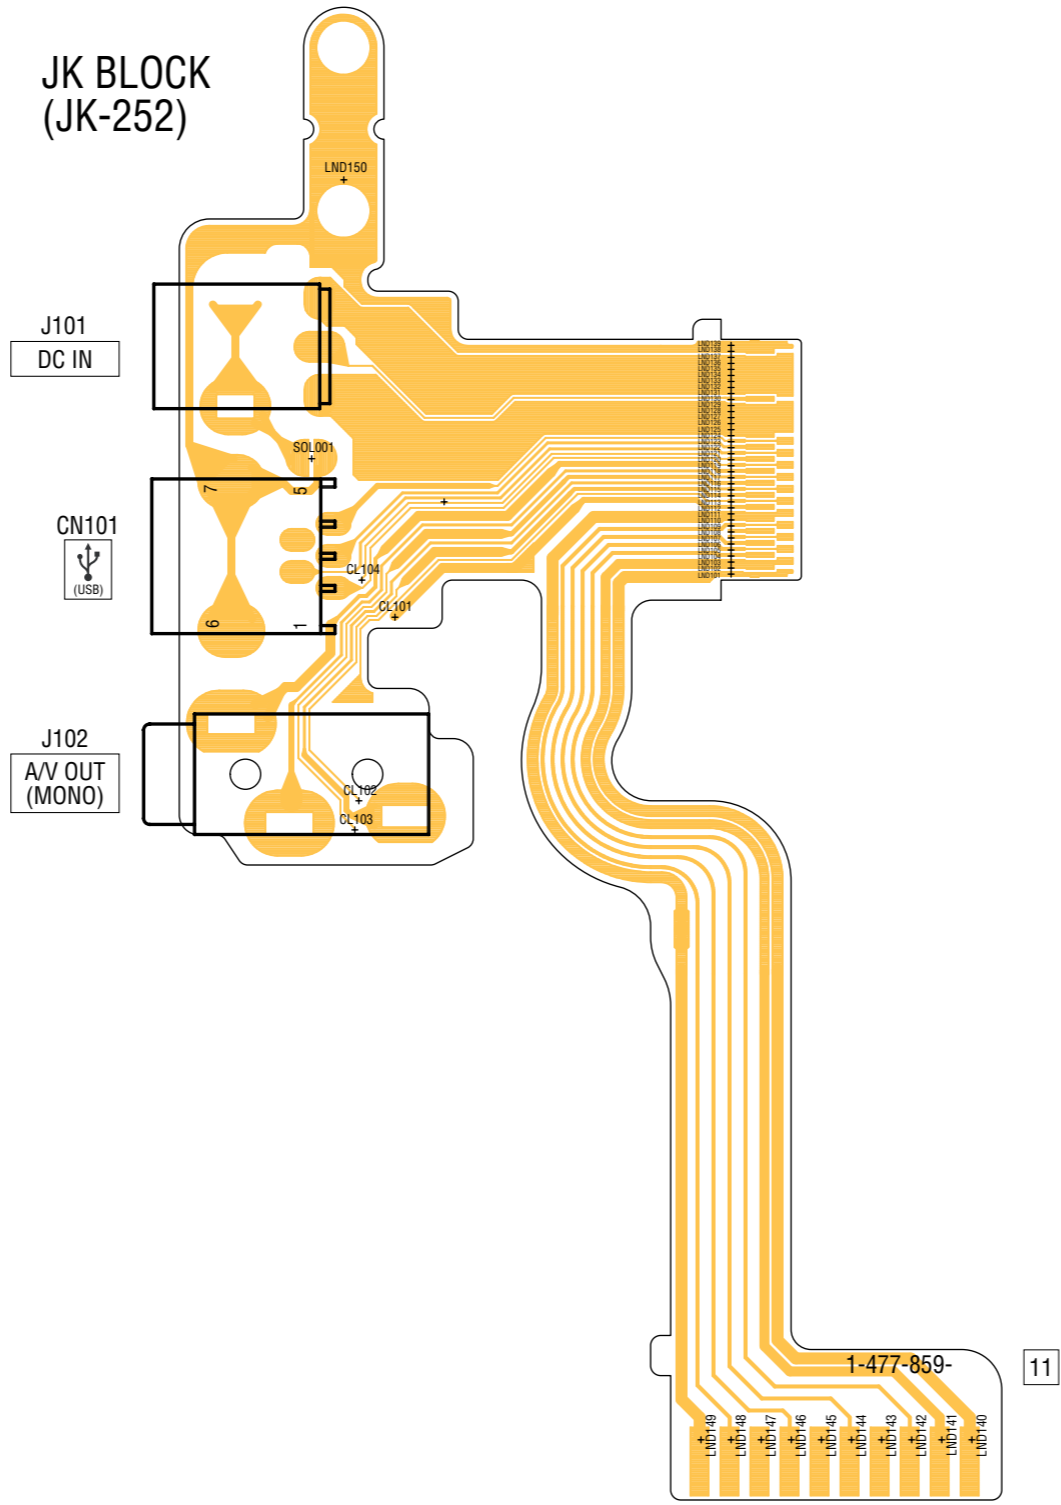



4-3. PRINTED WIRING BOARDS

4-5. MOUNTED PARTS LOCATION

no mark : side A

* mark : side B

ST-82 BOARD

* C503 A-3
 * C504 A-3
 * C505 A-4
 * C506 A-2
 * C507 A-1
 C509 A-1
 * C510 A-3
 * C511 A-4
 * C512 A-3

 * CN501 A-2

 * D502 A-1

 * IC501 A-1

 L501 A-1

 * Q502 A-3
 * Q503 A-3
 * Q504 A-3
 * Q505 A-2
 Q506 A-1

 * R501 A-2
 * R502 A-3
 * R503 A-3
 * R504 A-3
 * R505 A-3
 * R506 A-3
 * R508 A-4
 * R509 A-2
 * R510 A-1
 * R511 A-1
 R512 A-1

 * T501 A-4

Mounted parts location of the SY-85 board
 is not shown.
 Page 4-48 is not shown.






5. REPAIR PARTS LIST

NOTE: Characters **A** to **Z** of the electrical parts list indicate location of exploded views in which the desired part is shown.

Link

EXPLODED VIEWS

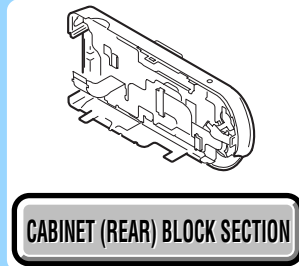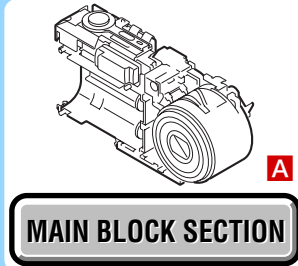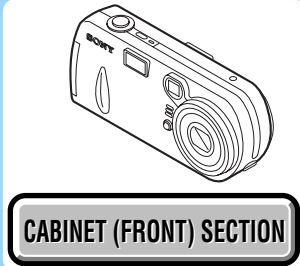

Link

ELECTRICAL PARTS LIST

ACCESSORIES

• SY-85 BOARD

A

• ST-82 BOARD

A



5. REPAIR PARTS LIST

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- CAPACITORS:
uF: μ F
- COILS
uH: μ H
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A... , uPA... , μ PA... ,
uPB... , μ PB... , uPC... , μ PC... ,
uPD... , μ PD...
- Abbreviation
CND : Canadian model
AUS : Australian model
JE : Tourist model
CH : Chinese model
KR : Korea model
HK : Hong Kong model
J : Japanese model

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.




5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. CABINET (FRONT) SECTION

ns : not supplied

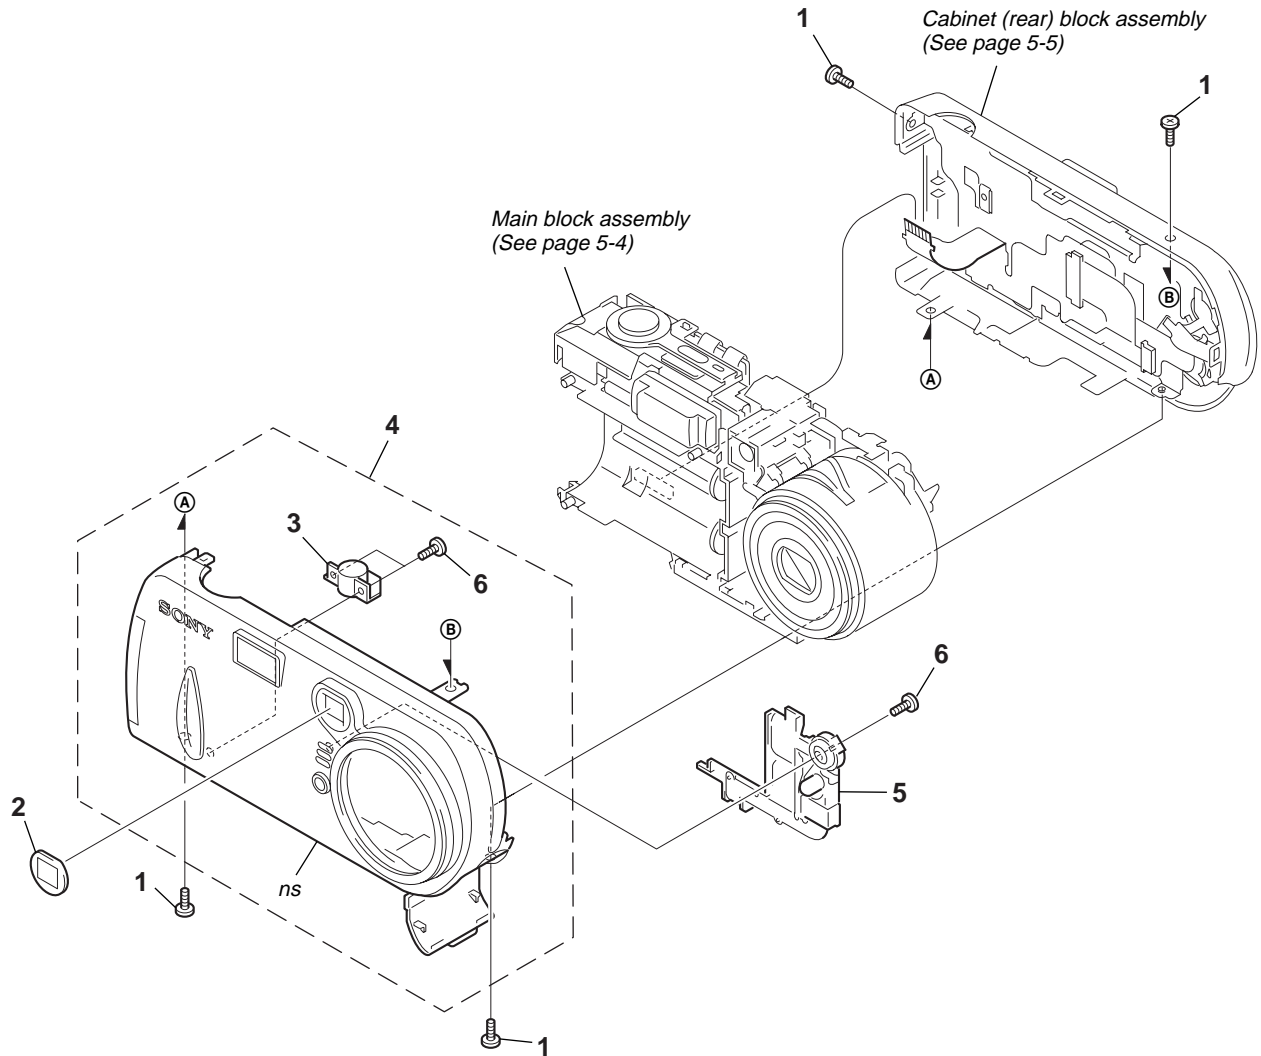

Ref. No.	Part No.	Description
1	3-968-729-71	SCREW (M2), LOCK ACE, P2
2	3-082-168-01	WINDOW, OVF
3	3-080-977-01	TRIPOD


Ref. No.	Part No.	Description
4	X-3953-159-1	CABINET (FRONT) ASSY
5	1-477-810-11	UNIT PARTS (UA-002)
6	3-080-204-21	SCREW, TAPPING, P2



5. REPAIR PARTS LIST

5-1-2. MAIN BLOCK SECTION

ns : not supplied

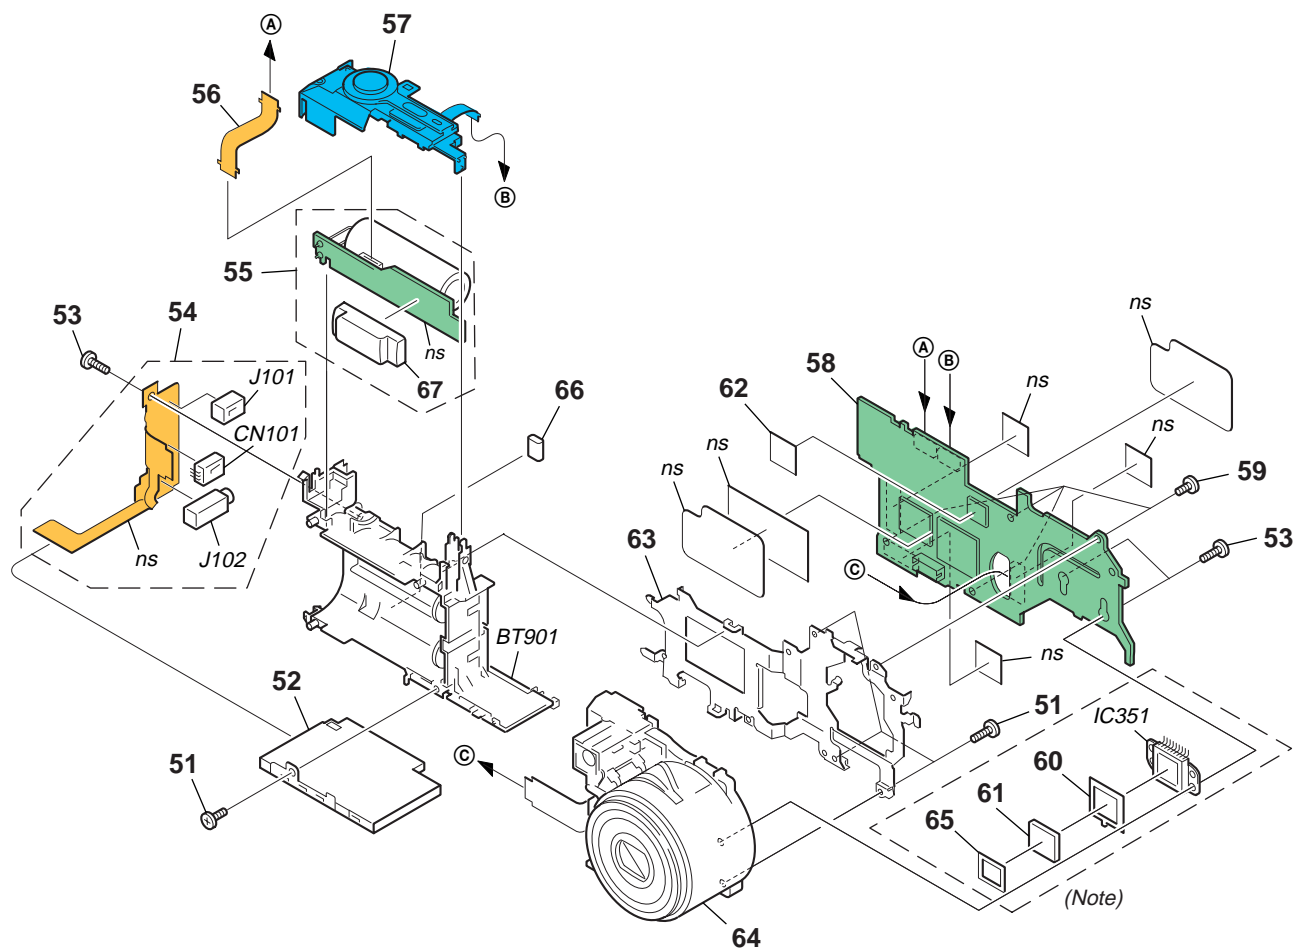

Be sure to read "Precautions upon replacing CCD imager" on page 4-7 when changing the CCD imager.

(Note) See page 2-5 of when installing the CCD block assy.

Ref. No.	Part No.	Description
51	3-078-890-11	SCREW, TAPPING
52	1-815-853-21	MEMORY STICK CONNECTOR
53	3-080-204-21	SCREW, TAPPING, P2
54	1-477-859-11	JK BLOCK (JK-252)
55	A-7078-600-A	ST-82 (S) BOARD, COMPLETE
56	1-687-751-11	FP-643 FLEXIBLE BOARD
57	1-477-806-11	CONTROL SWITCH BLOCK (RL-059)
58	A-7078-684-A	SY-85 BOARD, COMPLETE (SERVICE)
59	3-078-889-11	SCREW (M1.7)
60	3-075-085-01	RUBBER (DQ), SEAL
61	1-758-916-11	FILTER BLOCK, OPTICAL

Ref. No.	Part No.	Description
62	3-082-136-01	SHEET, SHIELD
63	3-081-034-01	FRAME, LENS
64	1-758-925-11	LENS, VIDEO (ED02D)
65	3-076-569-01	PLATE, LIGHT INTERCEPTION
66	3-083-057-01	CUSHION (ISB), ELECTROSTATIC
△ 67	1-477-803-11	FLASH UNIT
BT901	1-756-347-11	HOLDER, BATTERY(WITH TERMINAL)
CN101	1-794-962-11	CONNECTOR, SQUARE TYPE(USB 5P)
IC351	A-7013-723-A	CCD BLOCK ASSY (CCD IMAGER)
J101	1-817-331-11	DC JACK 5P (DC IN)
J102	1-569-950-31	JACK (SMALL TYPE)(A/V OUT(MONO))

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



5. REPAIR PARTS LIST

5-1-3. CABINET (REAR) BLOCK SECTION

ns : not supplied

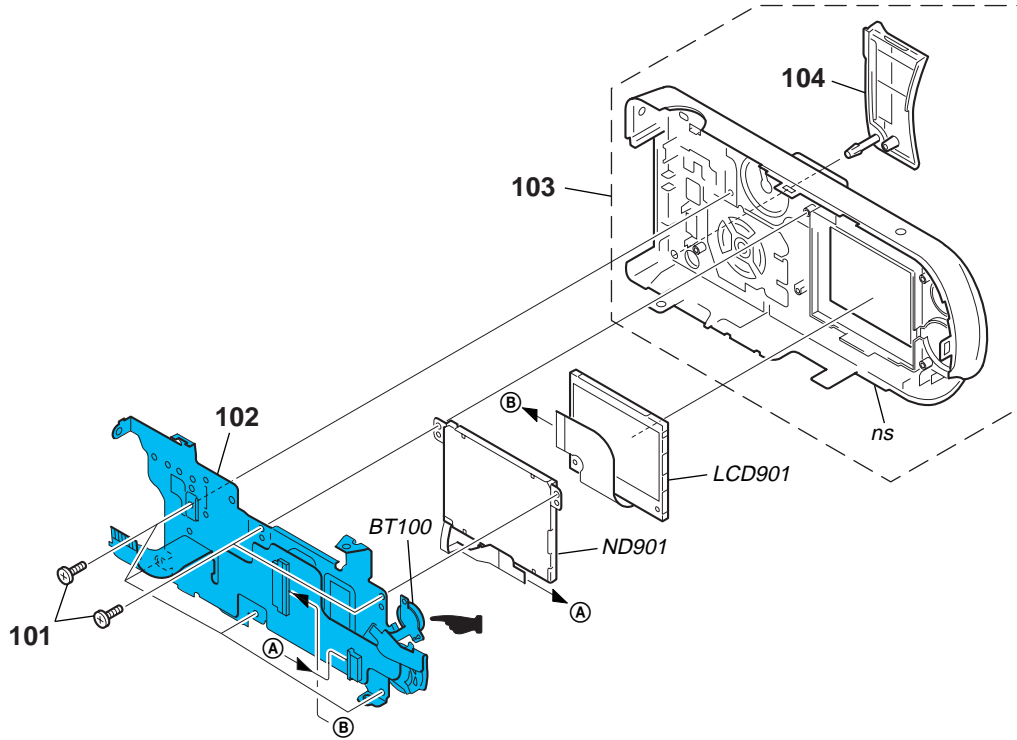

: For the installation position of BT100 (Lithium battery), refer to page 2-3

CAUTION :
 Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.

Ref. No.	Part No.	Description
101	3-078-890-11	SCREW, TAPPING
102	1-477-809-11	CONTROL SWITCH BLOCK (SW-391)
103	X-3953-17901	CABINET (REAR) ASSY

Ref. No.	Part No.	Description
104	3-080-985-01	COVER, JACK
△ND901	1-477-762-11	BLOCK LIGHT GUIDE PLATE (1.5)
LCD901	8-753-052-23	ACX309AKB-J

<p>Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Note : Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

SY-85

ST-82

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-7078-684-A	SY-85 BOARD, COMPLETE (SERVICE) *****

**Electrical parts list of the SY-085 board are not shown.
Pages from 5-6 to 5-11 are not shown.**

A-7078-600-A	ST-82 (S) BOARD, COMPLETE *****
--------------	------------------------------------

△	1-477-803-11	FLASH UNIT			
		< CAPACITOR >			
C503	1-137-710-11	CERAMIC CHIP	10uF	20%	6.3V
C504	1-137-710-11	CERAMIC CHIP	10uF	20%	6.3V
C505	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C506	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C507	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C508	1-100-542-11	CAP, ELECT	135uF		
C509	1-137-723-21	CERAMIC CHIP	0.047uF	10%	250V
C510	1-137-710-11	CERAMIC CHIP	10uF	20%	6.3V
C511	1-137-710-11	CERAMIC CHIP	10uF	20%	6.3V
C512	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
		< CONNECTOR >			
CN501	1-816-644-11	FFC/FPC CONNECTOR (LIF) 12P			
		< DIODE >			
D501	8-719-073-01	DIODE MA111-(K8),S0			
△D502	6-500-237-01	DIODE HAU160C030TP			
		< IC >			
IC501	6-703-635-01	IC TND721MH5-S-TL-E			
		< COIL >			
△L501	1-456-193-11	COIL, TRIGGER			
		< TRANSISTOR >			
Q501	6-550-119-01	TRANSISTOR	DTC144EMT2L		
Q502	6-550-528-01	TRANSISTOR	UPA650TT-E1-A		
Q503	6-550-183-01	TRANSISTOR	CPH3209-SONY-TL-E		
Q504	8-729-056-01	TRANSISTOR	MCH3405-TL-E		
Q505	8-729-053-57	TRANSISTOR	RN1902FE(TPLR3)		
△Q506	8-729-053-74	TRANSISTOR	CY25AAJ-8-T13		
		< RESISTOR >			
R501	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R502	1-218-977-11	RES-CHIP	100K	5%	1/16W
R503	1-218-965-11	RES-CHIP	10K	5%	1/16W
R504	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R505	1-218-977-11	RES-CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description				
R506	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	
R507	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R508	1-218-940-11	RES-CHIP	82	5%	1/16W	
R509	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
R510	1-216-805-11	METAL CHIP	47	5%	1/16W	
R511	1-216-857-11	METAL CHIP	1M	5%	1/16W	
△R512	1-216-121-11	RES-CHIP	1M	5%	1/10W	


< TRANSFORMER >

△T501	1-437-737-11	TRANSFORMER, DC-DC CONVERTER
-------	--------------	------------------------------


<p>Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Note : Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

Checking supplied accessories.

 Make sure that the following accessories are supplied with your camcorder.




Power cord (1)(AUS model)
 ▲ 1-696-819-11
 Power cord (1)(AEP,E model)
 ▲ 1-769-608-11
 Power cord (1)(CH model)
 ▲ 1-782-476-11
 Power cord (1)(UK,HK model)
 ▲ 1-783-374-11
 Power cord (1)(US,CND model)
 ▲ 1-790-107-22
 Power cord (1)(JE,J model)
 ▲ 1-790-732-11
 Power cord (1)(KR model)
 ▲ 1-776-985-11

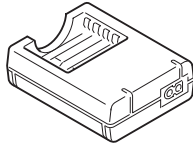


Battery charger (BC-CS2)(1)
 (US,CND,JE,J model)
 ▲ 1-477-814-11
 Battery charger (BC-CS2)(1)
 (AEP,UK,E,HK,AUS model)
 ▲ 1-477-814-21
 Battery charger (BC-CS2)(1)
 (CH, KR model)
 ▲ 1-477-814-31



Connection cord
 (AV Cable 1.5m)(1)
 1-824-111-11

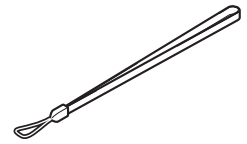


Hand strap (1)
 3-070-841-01

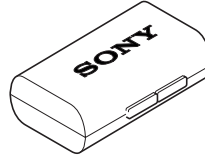


Battery carrying case (1)
 3-074-757-01



 Cord with connector (1)
 (USB 5P)
 1-827-038-11




 CD-ROM (USB DRIVER) (1)
 (SPVD-010)
 (AEP,UK,E,HK,AUS,
 CH,JE,KR model)
 3-078-942-03
 CD-ROM (USB DRIVER) (1)
 (SPVD-010 (I)) (US,CND,J model)
 3-078-943-03




Memory stick (1)
 (MSA-16A)
 (not supplied)

 HR6 (size AA) Ni-MH
 batteries
 (not supplied)



 2P conversion adaptor (1)
 (JE model)
 1-569-007-12



2P conversion adaptor (1)
 (E model)
 1-569-008-12

Other accessories

- 3-080-877-01 MANUAL, INSTRUCTION (JAPANESE)(J)
- 3-080-877-11 MANUAL, INSTRUCTION (ENGLISH)
- 3-080-877-21 MANUAL, INSTRUCTION (FRENCH/GERMAN) (CND,AEP)
- 3-080-877-31 MANUAL, INSTRUCTION (SPANISH/PORTUGUESE)
 (AEP,E,JE,KR)
- 3-080-877-41 MANUAL, INSTRUCTION (ITALIAN/DUTCH) (AEP)
- 3-080-877-51 MANUAL, INSTRUCTION (CHINESE) (E,HK,CH,JE,KR)
- 3-080-877-61 MANUAL, INSTRUCTION (RUSSIAN/SWEDISH) (AEP)
- 3-080-877-71 MANUAL, INSTRUCTION (ARABIC) (E)
- 3-080-877-81 MANUAL, INSTRUCTION (KOREAN) (KR)

• Abbreviation

- CND : Canadian model
- HK : Hong Kong model
- AUS : Australian model
- CH : Chinese model
- JE : Tourist model
- KR : Korea model
- J : Japanese model

Note :
 The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Note :
 Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DSC-P72

SONY®

LEVEL 2

SERVICE MANUAL

Ver 1.1 2003.03

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Hong Kong Model
Brazilian Model
Korea Model
Chinese Model
Tourist Model
Japanese Model


SUPPLEMENT-1

File this supplement with the Service Manual.
(PV02-017)

Subject:
Addition of the Brazilian Model.

SECTION 2 DISASSEMBLY

2-2. BLOCK LIGHT GUIDE PLATE, LCD MODULE, CONTROL SWITCH BLOCK (SW-391), LITHIUM BATTERY

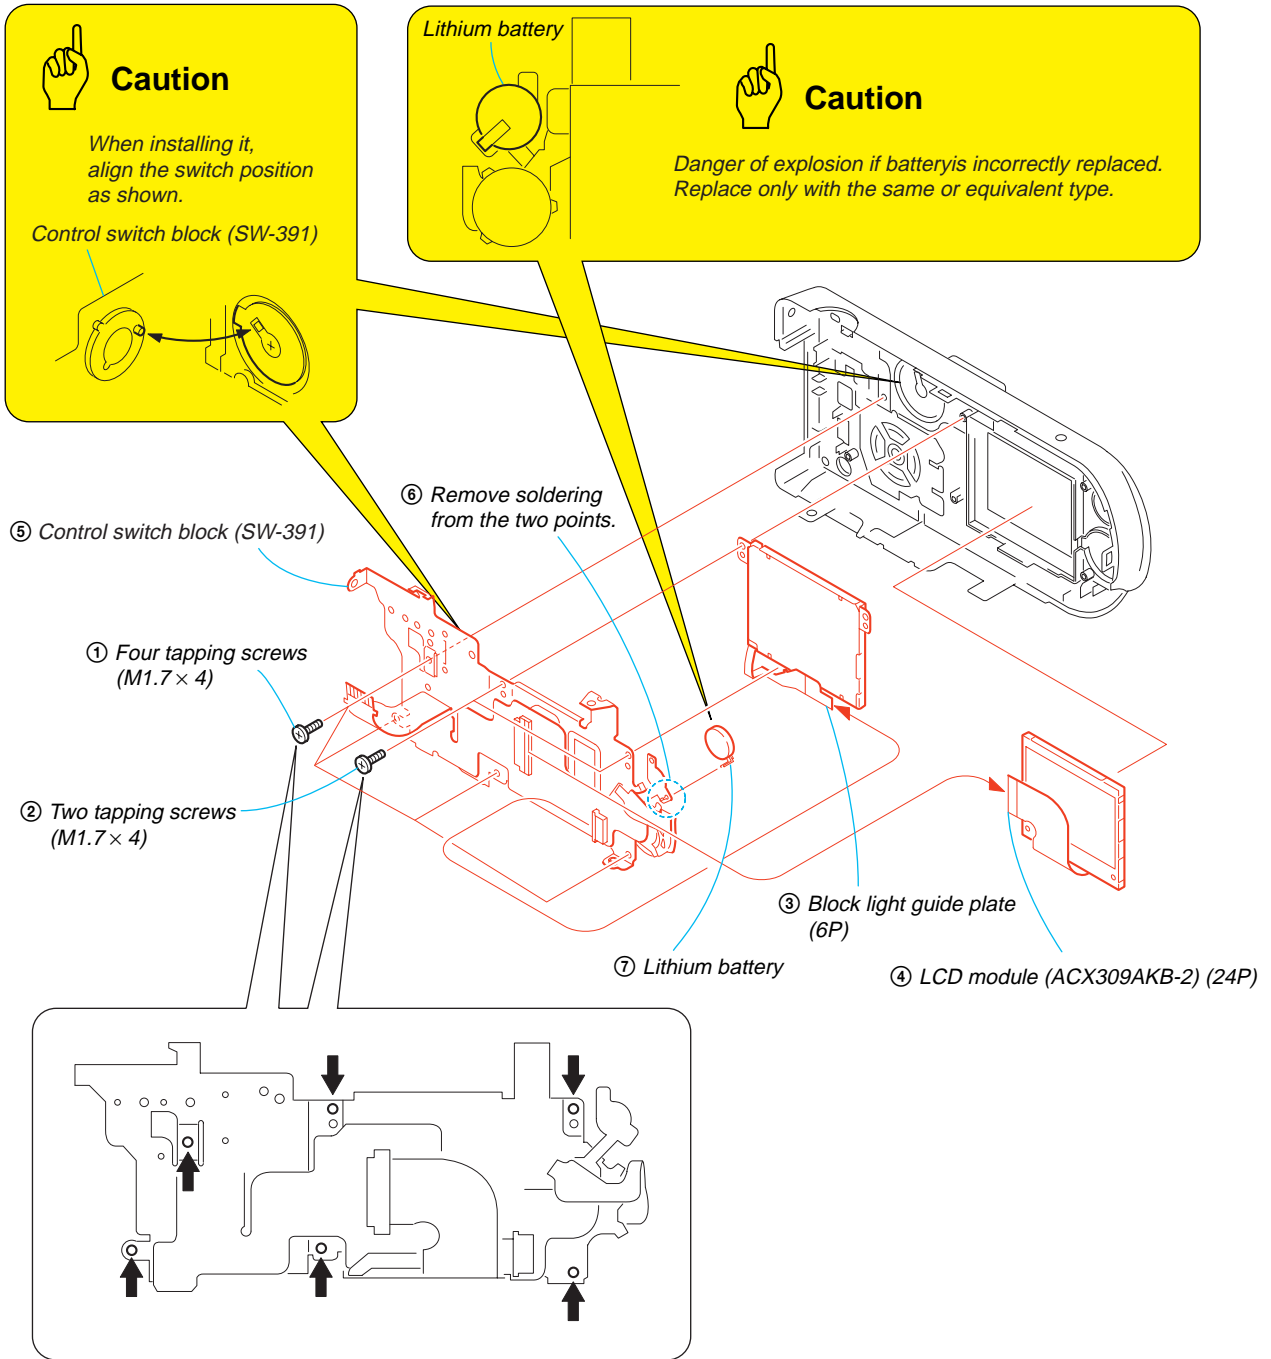


(Page 5-5)

SECTION 5 REPAIR PARTS LIST
5-1. EXPLODED VIEWS

5-1-3. CABINET (REAR) BLOCK SECTION

ns : not supplied

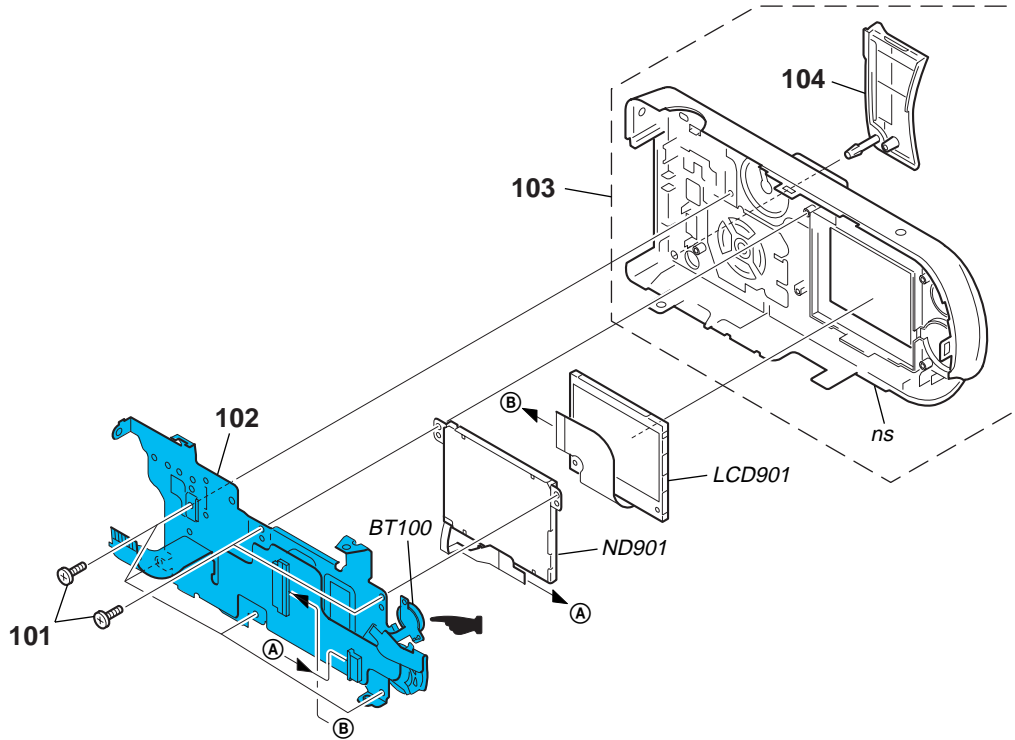

 : For the installation position of BT100 (Lithium battery), refer to page 2-3

CAUTION :
 Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.

Ref. No.	Part No.	Description
101	3-078-890-11	SCREW, TAPPING
102	1-477-809-11	CONTROL SWITCH BLOCK (SW-391)
103	X-3953-17901	CABINET (REAR) ASSY

Ref. No.	Part No.	Description
104	3-080-985-01	COVER, JACK
△ND901	1-477-762-11	BLOCK LIGHT GUIDE PLATE (1.5)
LCD901	8-753-052-23	ACX309AKB-J

Note :
 The components identified by mark △ or dotted line with mark △ are critical for safety.
 Replace only with part number specified.

Note :
 Les composants identifiés par une marque △ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 5 REPAIR PARTS LIST


5-2. ELECTRICAL PARTS LIST

(Page 5-13E)


Checking supplied accessories.

 : Added portion.

 
Make sure that the following accessories are supplied with your camcorder.




Power cord (1)(AUS model)
 ▲ 1-696-819-11
 Power cord (1)(AEP,E model)
 ▲ 1-769-608-11
 Power cord (1)(CH model)
 ▲ 1-782-476-11
 Power cord (1)(UK,HK model)
 ▲ 1-783-374-11
 Power cord (1)(US,CND model)
 ▲ 1-790-107-22
 Power cord (1)(JE,J model)
 ▲ 1-790-732-11
 Power cord (1)(KR model)
 ▲ 1-776-985-11

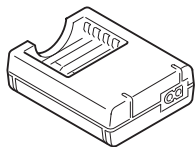

 
Battery charger (BC-CS2)(1)
 (US,CND,JE,J model)
 ▲ 1-477-814-11
 Battery charger (BC-CS2)(1)
 (AEP,UK,E,HK,AUS, BR model)
 ▲ 1-477-814-21
 Battery charger (BC-CS2)(1)
 (CH, KR model)
 ▲ 1-477-814-31



Connection cord
 (AV Cable 1.5m)(1)
 1-824-111-11

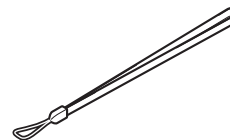


Hand strap (1)
 3-070-841-01

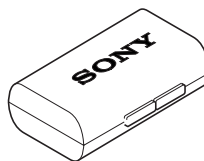


Battery carrying case (1)
 3-074-757-01



 
Cord with connector (1)
 (USB 5P)
 1-827-038-11



 
CD-ROM (USB DRIVER) (1)
 (SPVD-010)
 (AEP,UK,E,HK,AUS, BR,
 CH,JE,KR model)
 3-078-942-03
 CD-ROM (USB DRIVER) (1)
 (SPVD-010 (I)) (US,CND,J model)
 3-078-943-03



 Memory stick (1)
 (MSA-16A)
 (not supplied)



 2P conversion adaptor (1)
 (JE model)
 1-569-007-12



2P conversion adaptor (1)
 (E model)
 1-569-008-12

• Abbreviation

CND : Canadian model	JE : Tourist model
HK : Hong Kong model	KR : Korea model
AUS : Australian model	BR : Brazilian model
CH : Chinese model	J : Japanese model

Other accessories

- 3-080-877-01 MANUAL, INSTRUCTION (JAPANESE)(J)
- 3-080-877-11 MANUAL, INSTRUCTION (ENGLISH)
- 3-080-877-21 MANUAL, INSTRUCTION (FRENCH/GERMAN) (CND,AEP)
- 3-080-877-31 MANUAL, INSTRUCTION (SPANISH/PORTUGUESE)
 (AEP,E,JE,KR)
- 3-080-877-41 MANUAL, INSTRUCTION (ITALIAN/DUTCH) (AEP)
- 3-080-877-51 MANUAL, INSTRUCTION (CHINESE) (E,HK,CH,JE,KR)
- 3-080-877-61 MANUAL, INSTRUCTION (RUSSIAN/SWEDISH) (AEP)
- 3-080-877-71 MANUAL, INSTRUCTION (ARABIC) (E)
- 3-080-877-81 MANUAL, INSTRUCTION (KOREAN) (KR)

Note :

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

