

HT-1800DP

SERVICE MANUAL

US Model

Ver 1.0 2003.04

- HT-1800DP is composed of following models.
As for the service manual, it is issued for each component model, then, please refer to them.

COMPONENT MODEL NAME

COMPONENT MODEL NAME	HT-1800DP
DVD PLAYER	DVP-NS725P
FM STEREO FM-AM RECEIVER	STR-K751P
CENTER SPEAKER	SS-CNP75
SURROUND SPEAKER	SS-MSP75
PACKAGE SPEAKER	SS-CRP75
SUB WOOFER	SA-WMSP85

PARTS LIST

Part No.	Description	Remarks
1-477-793-11	COMMANDER, STANDARD (RM-PP412)	
1-501-374-12	ANTENNA, LOOP (AM)	
1-751-347-13	CORD, CONNECTION (10m) (FOR SPEAKER)	
1-751-598-53	CORD, CONNECTION (PIN-PIN) (MONAURAL CORD)	
1-769-433-62	CORD, SPEAKER (3.5m) (FOR SPEAKER)	
1-793-184-22	CONNECTOR (F TYPE ADAPTOR) (FM)	
1-823-135-13	CORD (CONNECTION) (COAXIAL DIGITAL CORD)	
3-071-119-01	BATTERY, COVER (FOR RM-PP412)	
4-235-237-01	FOOT (FOR SUB WOOFER SPEAKER)	
4-244-184-11	INSTRUCTION MANUAL (ENGLISH)	
4-244-915-01	FOOT (FOR CENTER/SURROUND SPEAKER)	

HOME THEATER SYSTEM

SONY®

9-877-326-01
2003D1600-1
© 2003.04

Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

