

HT-4850DP

SERVICE MANUAL

US Model

Ver 1.0 2004.07

- HT-4850DP is composed of the following models.
As service manuals are issued for each component model,
please refer to them.

COMPONENT MODEL NAME

	HT-4850DP
FM/AM RECEIVER	STR-K5800P
FRONT/SURROUND SPEAKER	SS-MSP68
CENTER SPEAKER	SS-CNP68
SUB WOOFER	SA-WMSP76
CD/DVD PLAYER	DVP-NC675P

PARTS LIST

<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
	ACCESSORIES *****	
1-478-618-11	COMMANDER, STANDARD (RM-PP760) (including BATTERY COVER)	
1-501-374-12	ANTENNA, LOOP (AM)	
1-751-347-13	CORD, CONNECTION (10m)(for SPEAKER)	
1-769-329-21	CORD, CONNECTION (PIN-PIN)(MONAURAL CORD)	
1-769-433-62	CORD, SPEAKER (3.5m)(for SPEAKER)	
1-793-184-23	CONNECTOR (F TYPE ADAPTOR)(FM)	
1-823-135-13	CORD (CONNECTION)(COAXIAL DIGITAL CORD)	
4-235-237-01	FOOT (for SA-WMSP76)	
4-244-915-01	FOOT (for SS-CNP68/MSP68)	
4-252-085-41	MANUAL, INSTRUCTION (ENGLISH)	

HOME THEATER SYSTEM

SONY®

