



SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

TABLE-TOP STAND ASSEMBLY REMOVAL

- Ⓐ Remove 3 screws from Table-Top Stand Assembly

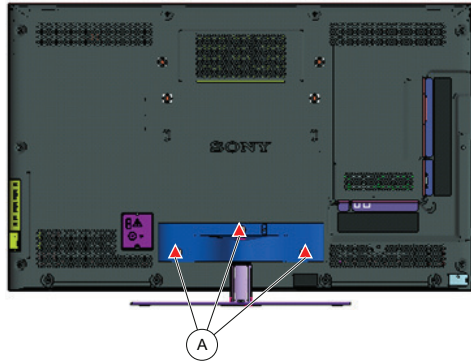

- Ⓑ Lift up TV set to detach from Table-Top Stand Assembly
 Ⓒ Gently place the LCD TV set face down onto a soft cloth

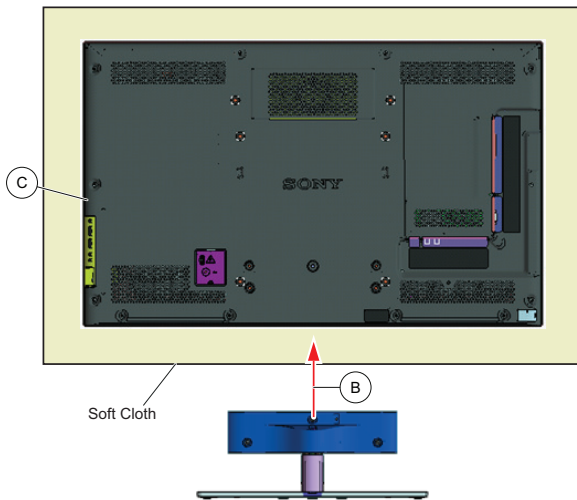

Components not identified by a part number or description are not stocked because they are seldom required for routine service.

The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram.


* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

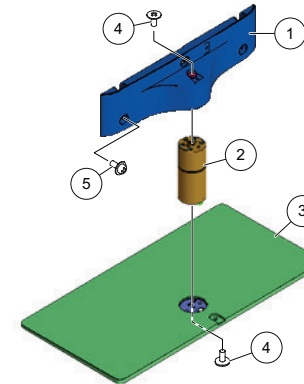

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
1	4-267-497-01	STAND, HEAD(ML9) (ALL MODELS EXCEPT KDL-60NX720)		4	4-259-541-01	USER SCREW ST (SCREWS TO ATTACH HEAD STAND AND BASE STAND TO NECK)	
1	4-267-504-01	STAND, HEAD(3L9) (KDL-60NX720 ONLY)		5	2-580-608-01	SCREW, +PSW M5X16 (SCREWS TO ATTACH TABLE-TOP STAND TO LCD TV)	
2	4-259-180-02	NECK (ML9) (KDL-40NX720 ONLY)				For product protection and safety reasons, Sony strongly recommends that you use the screws provided with the TV CAUTION: These screws cannot be used to secure the TV to the Wall Mount Brackets	
2	4-259-183-02	NECK (L9) (KDL-46NX720 ONLY)		\triangle	2-580-608-01	SCREW, +PSW M5X16 (SCREWS TO ATTACH TABLE-TOP STAND TO LCD TV)	
2	4-259-186-02	NECK (LL9) (KDL-55NX720 ONLY)				For product protection and safety reasons, Sony strongly recommends that you use the screws provided with the TV CAUTION: These screws cannot be used to secure the TV to the Wall Mount Brackets	
2	4-259-187-01	NECK (3L9) (KDL-60NX720 ONLY)					
3	4-267-544-01	STAND, BASE (ML1) (KDL-40NX720 ONLY)					
3	4-267-547-01	STAND, BASE(L1) (KDL-46NX720 ONLY)					
3	4-267-550-01	STAND, BASE(LL1) (KDL-55NX720 ONLY)					
3	4-267-551-01	STAND, BASE(3L1) (KDL-60NX720 ONLY)					

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

REAR COVER AND AC COVER REMOVAL


CAUTIONS:

Do not damage the Power Board Connector and Power Supply Cord when removing the Rear Cover. Refer to "Appendix A - Removing the Rear Cover" on page A-1 for complete instructions.

The Rear Covers on the models listed have sharp edges. Use caution when handling the Rear Cover to avoid injury. Refer to "Appendix B - Rear Cover Caution" on page B-1 for complete instructions.

NOTE: The Label (BAT-L Metal Side), Label (BAT-L Metal Bottom) and Sheet, Ant(C EL) are not included with the Rear Cover and must be replaced when replacing the Rear Cover.

- (A) Remove screws from Rear Cover
8 from KDL-40NX720/46NX720 Only
11 from KDL-55NX720 Only
12 from KDL-60NX720 Only
- (B) Remove 2 screws from Rear Cover (KDL-60NX720 Only)
- (C) Remove 6 screws from Rear Cover
- (D) Remove 1 screw from Side Jack position
- (E) Remove screws from Terminal Area position
1 from KDL-40NX720 Only
2 from KDL-46NX720/55NX720/60NX720 Only
- (F) Remove 2 screws from Rear Cover
- (G) Remove 1 screw and release clips from AC Cover to detach from Rear Cover
(Refer to "Appendix A - Removing the Rear Cover" on page A-1)
- (H) Remove screws from Rear Cover
4 from all models except KDL-60NX720
5 from KDL-60NX720 Only
- (I) Gently peel-off Antenna Sheet to detach from Rear Cover
- (J) Release 1 clip and lift up Antenna Cover to detach from Rear Cover
- (K) Gently lift up Rear Cover form bottom side to detach from Center Cabinet

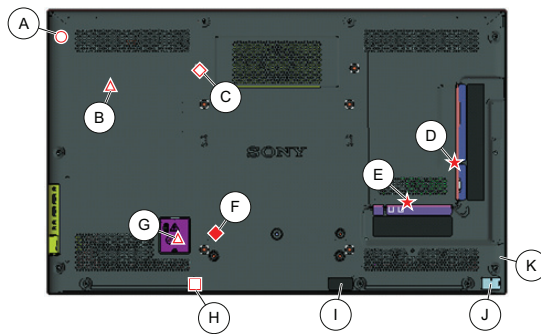


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

NOTE: The components identified by a red outline and a \square mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

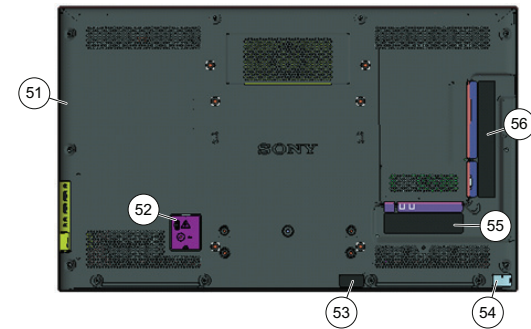

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
51	4-268-422-02	REAR COVER (40 EL) A (KDL-40NX720 ONLY)		54	4-263-659-01	COVER, ANT(L EL)	
51	4-268-424-01	REAR COVER (46 EL) A (KDL-46NX720 ONLY)		55	4-256-434-01	LABEL (BAT-L METAL BOTTOM)	
51	4-268-427-01	REAR COVER (55EL) A (KDL-55NX720 ONLY)		56	4-256-433-02	LABEL (BAT-L METAL SIDE)	
51	4-268-428-03	REAR COVER (60EL) A (KDL-60NX720 ONLY)		\triangle	4-256-393-01	SCREW, +PSW M3X6 W12	
52	4-266-269-01	COVER, AC(M)		\square	2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3	
53	4-268-431-11	SHEET, ANT(C EL)		\diamond	4-257-907-01	JOINT, STAND	
		ORDER THIS PART WHEN REPLACING THE REAR COVER		\diamond	4-268-126-02	SCREW, ORNAMENTAL M6X12	
				\circ	4-258-272-01	SCREW, +PWH M3X8	
				\star	7-685-646-79	SCREW, +BVTP 3X8 TYPE2 IT-3	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

SWITCH UNIT, HEM2 BOARD, CAMERA MODULE, AND WIRELESS LAN CARD REMOVAL



NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \square mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

- Ⓐ Remove 1 screw from Switch Unit
- Ⓑ Lift up Switch Unit and disconnect 2 connectors to detach from Center Cabinet
- Ⓒ Release 2 clips to detach Power Switch from Switch Unit
- Ⓓ Lift up AC Power Cord and disconnect 1 connector to detach from LCD Panel
- Ⓔ Slide-out right side Speaker to detach from Center Cabinet
- Ⓕ Slide-out left side Speaker to detach from Center Cabinet
- Ⓖ Release clips and disconnect 1 connector to detach HEM2 Board from Center Cabinet
- Ⓗ Remove 1 screw from Camera Module, then release clips and disconnect 1 connector to detach from Center Cabinet
- Ⓘ Carefully lift-up Camera Sealing Cap to detach from Center Cabinet
- Ⓙ Remove 1 screw from Wireless LAN Card to detach from LCD Panel
- Ⓚ Remove 1 screw from Antenna to detach from Center Cabinet
- Ⓛ Remove 1 screw from Antenna to detach from Center Cabinet

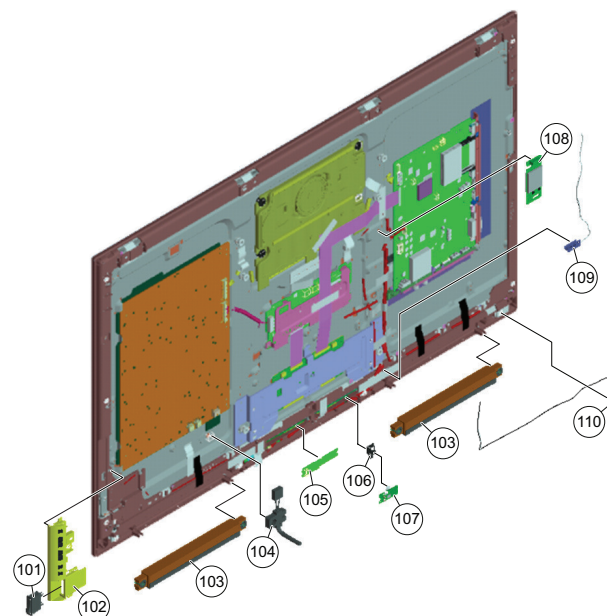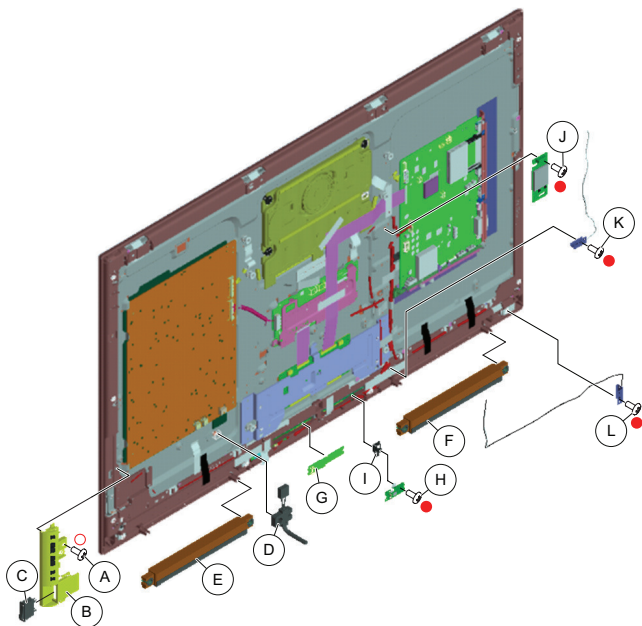

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
\triangle 101	1-798-348-11	POWER SWITCH		106	4-256-663-01	CAP, SEALING (CAMERA)	
102	1-489-555-11	SWITCH UNIT		107	1-489-507-11	CAMERA MODULE	
103	1-858-586-11	SPEAKER BOX ASSEMBLY (2X9CM)		108	1-458-355-11	WIRELESS LAN CARD	
\triangle 104	1-838-797-11	POWER-SUPPLY CORD (WITH CONN.)		109	1-754-746-11	ANTENNA	
105	A-1792-512-A	HEM2 BOARD, MOUNTED		110	1-754-750-11	ANTENNA	
				●	2-990-421-41	SCREW, (+PSW) (M3X6)	
				○	4-258-272-01	SCREW, +PMW M3X8	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

G4/G5/G6/G7 (POWER SUPPLY) BOARD AND LD BOARD REMOVAL


NOTES:

The Insulation Sheet (G4) and Insulation Sheet (G7) are not included with the LCD Panel and must be replaced when replacing the LCD Panel.

The LD Board for KDL-40NX720 ONLY is NOT included with the replacement LCD Panel. Remove the LD Board from the original LCD Panel to use on the replacement LCD Panel.

KDL-40NX720/46NX720/55NX720 ONLY

- Ⓐ Remove 2 screws and lift-up LD Shield to detach from LCD Panel (KDL-40NX720 Only)
- Ⓑ Disconnect 4 connectors and lift-up LD Board to detach from LCD Panel (KDL-40NX720 Only)
- Ⓒ Remove screws from Power Supply Board
 - 3 from G4/G5 Board (KDL-40NX720/46NX720 Only)
 - 4 from G6 Board (KDL-55EX720 Only)
- Ⓓ Disconnect connectors from Power Supply Board and lift-up to detach from LCD Panel
 - 5 from G4/G5 Board (KDL-40NX720/46NX720 Only)
 - 7 from G6 Board (KDL-55EX720 Only)
- Ⓔ Remove 2 screws and disconnect 4 connectors from G7 Board to detach from LCD Panel (KDL-55EX720 Only)
- Ⓕ Remove 3 screws and disconnect 1 connector from Woofer Box to detach from LCD Panel

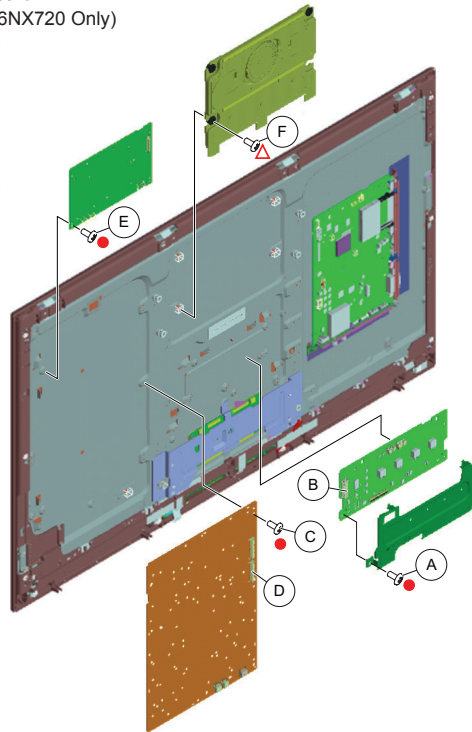


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

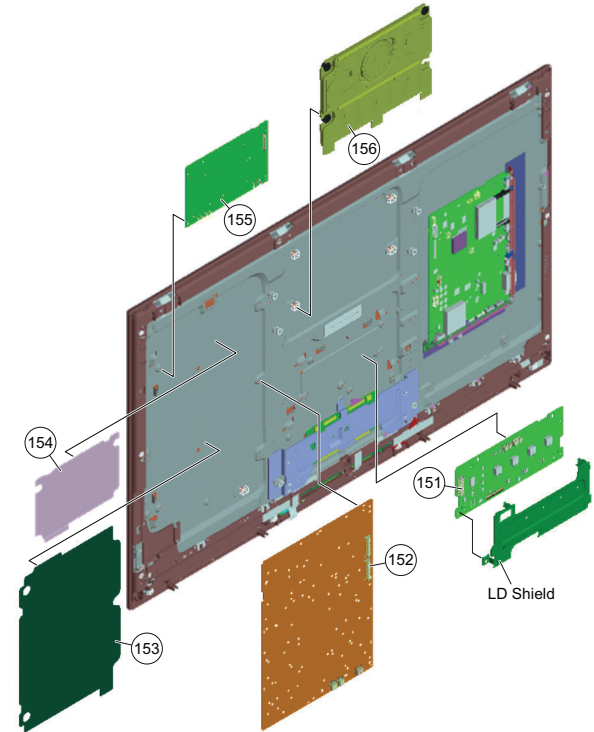



REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
151	A-1796-818-A	LD BOARD, MOUNTED (KDL-40NX720 ONLY)		154	4-268-445-01	SHEET, INSULATION (G7) (KDL-55NX720 ONLY)	
		NOTE: THE LD BOARD IS INCLUDED WITH THE LCD PANEL FOR KDL-46NX720/55NX720/60NX720				ORDER THIS PART WHEN REPLACING THE LCD PANEL	
152	1-474-301-11	G4 BOARD, COMPLETE (KDL-40NX720 ONLY)		155	1-474-305-11	G7 BOARD, COMPLETE (KDL-55NX720 ONLY)	
152	1-474-307-11	G5 BOARD, COMPLETE (KDL-46NX720 ONLY)		156	1-858-588-11	SPEAKER BOX ASSEMBLY (WOOFER) (KDL-40NX720 ONLY)	
152	1-474-304-11	G6 BOARD, COMPLETE (KDL-55NX720 ONLY)		156	1-858-587-11	SPEAKER BOX ASSEMBLY (WOOFER) (ALL MODELS EXCEPT KDL-40NX720)	
153	4-268-443-01	SHEET, INSULATION (G4)		\triangle	4-256-393-01	SCREW, +PSW M3X6 W12	
		ORDER THIS PART WHEN REPLACING THE LCD PANEL		\bullet	2-990-421-41	SCREW, (+PSW) (M3X6)	


SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION


KDL-60NX720 ONLY

 - Ⓐ Remove 4 screws and disconnect 7 connectors from G6 Board to detach from LCD Panel
- Ⓑ Remove 2 screws and disconnect 4 connectors from G7 Board to detach from LCD Panel
- Ⓒ Remove 2 screws and disconnect 1 connector from right-side Woofer Box to detach from LCD Panel
- Ⓓ Remove 2 screws and disconnect 1 connector from left-side Woofer Box to detach from LCD Panel

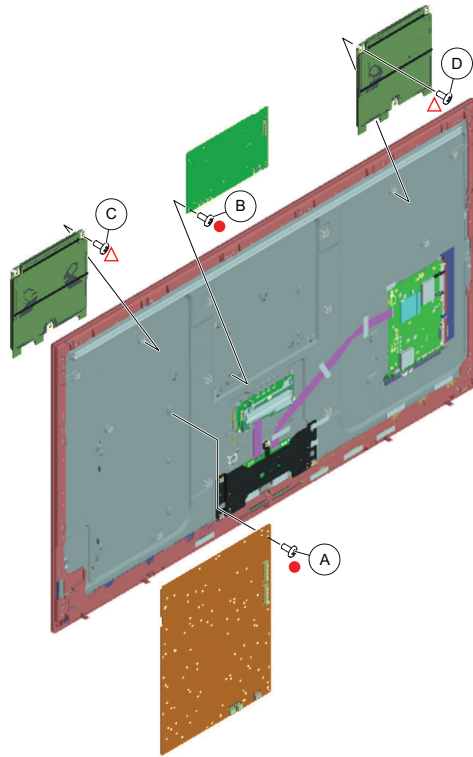




NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

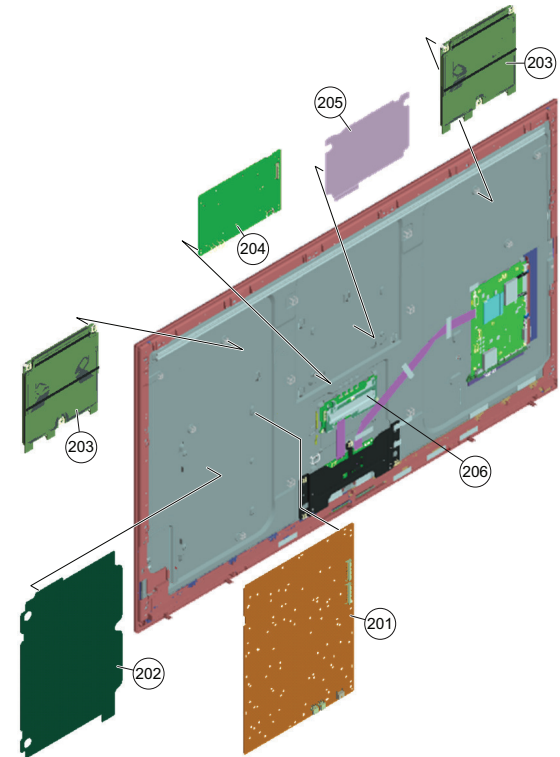(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)



REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
201	1-474-304-11	G6 BOARD, COMPLETE		205	4-288-445-01	SHEET, INSULATION (G7)	
202	4-288-443-01	SHEET, INSULATION (G4)				ORDER THIS PART WHEN REPLACING THE LCD PANEL	
		ORDER THIS PART WHEN REPLACING THE LCD PANEL					
203	1-858-587-11	SPEAKER BOX ASSEMBLY (WOOFER)			4-256-393-01	SCREW, +PSW M3X6 W12	
204	1-474-305-11	G7 BOARD, COMPLETE			2-990-421-41	SCREW, (+PSW) (M3X6)	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION


BATL (MAIN) BOARD REMOVAL

NOTES:

Refer to ["Handling the LVDS FFC Connector" on page 3](#) to disconnect the LVDS Connector.

The Sheet (BAT-L Metal Bottom) and Sheet (BAT-L Metal Side) are not included with the LCD Panel and must be replaced when replacing the LCD Panel.

- Ⓐ Remove 6 screws and disconnect 6 connectors from BATL Board to detach from LCD Panel (Refer to ["Handling the LVDS FFC Connector" on page 3](#))
- Ⓑ Release 2 clips and slide-out Bottom Bracket to detach from BATL Board
- Ⓒ Release 2 clips and slide-out Side Bracket to detach from BATL Board

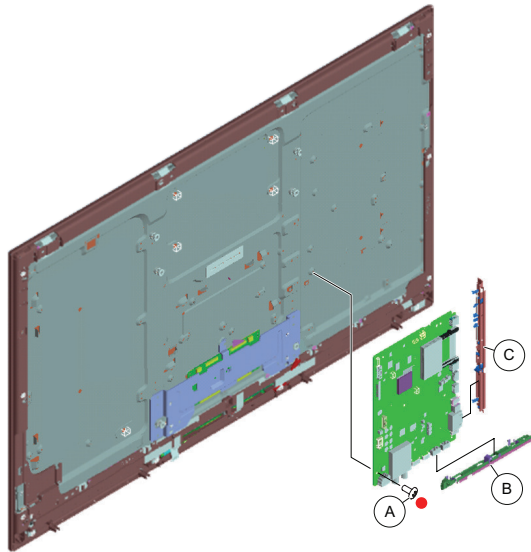


NOTE: The components identified by shading and mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

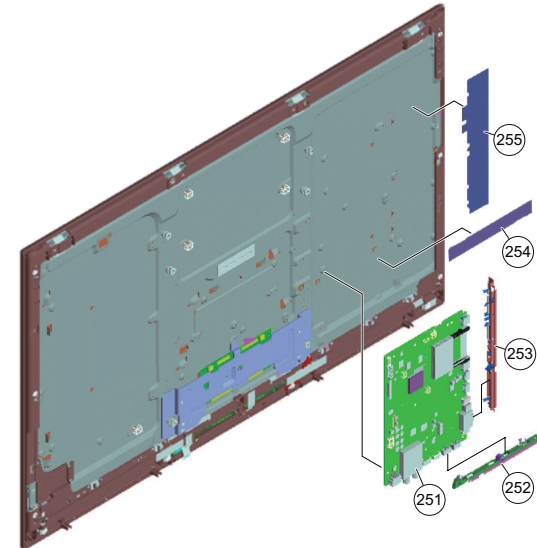

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
	251	A-1811-292-A	BATL BOARD, COMPLETE (ALL MODELS EXCEPT KDL-60NX720)	252	4-265-819-01	BRACKET BOTTOM (BAT-L METAL)	
			AFTER REPLACING THE MAIN BOARD OR THE LCD PANEL, YOU MUST UPDATE THE SOFTWARE TO THE LATEST VERSION AND COMPLETE ANY SERVICE ADJUSTMENTS.	253	4-265-817-01	BRACKET SIDE (BAT-L METAL)	
				254	4-256-432-11	SHEET (BAT-L METAL BOTTOM)	ORDER THIS PART WHEN REPLACING THE LCD PANEL
				255	4-256-431-11	SHEET (BAT-L METAL SIDE)	ORDER THIS PART WHEN REPLACING THE LCD PANEL
	251	A-1822-786-A	BATL BOARD, COMPLETE (KDL-60NX720 ONLY)		2-990-421-41	SCREW, (+PSW) (M3X6)	
			AFTER REPLACING THE MAIN BOARD OR THE LCD PANEL, YOU MUST UPDATE THE SOFTWARE TO THE LATEST VERSION AND COMPLETE ANY SERVICE ADJUSTMENTS.				

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION


CENTER CABINET, HLT2 BOARD AND LCD PANEL REMOVAL

CAUTION:

When replacing the LCD Panel Assembly refer to "Special Handling Instructions When Replacing the LCD Panel Assembly" on page 5

The HLT2 Board is attached to the LCD Panel with PWB (H) Tape. Do NOT damage the HLT2 Board when removing from the LCD Panel.

- Ⓐ Remove screws from Center Cabinet to detach from LCD Panel
3 from KDL-40NX720 Only
7 from KDL-46NX720 Only
5 from KDL-55NX720 Only
6 from KDL-60NX720 Only
- Ⓑ Carefully lift-up HLT2 Board to detach from LCD Panel

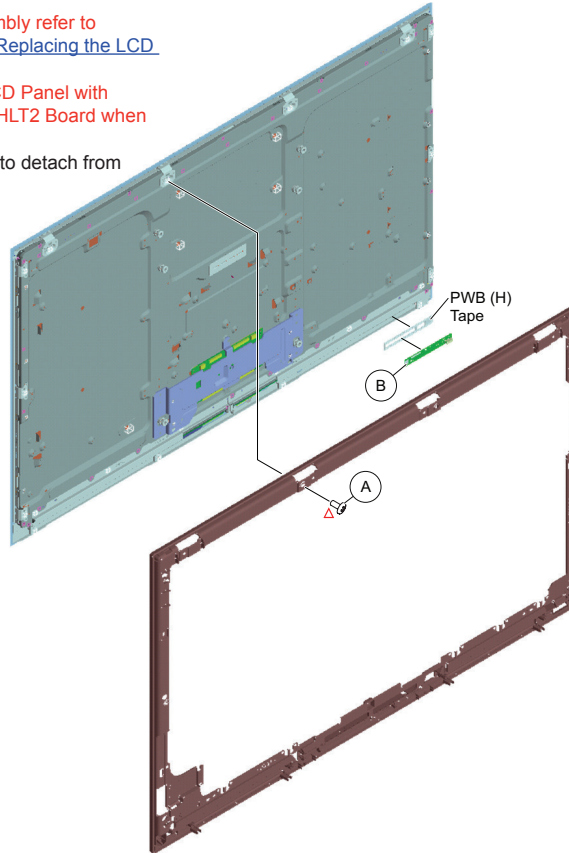


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

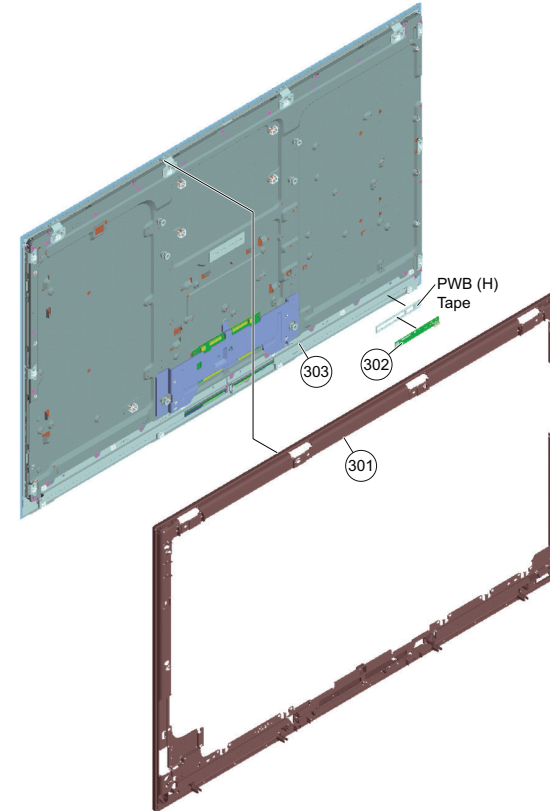

CLEANING THE LCD PANEL

CAUTION: When cleaning the TV, be sure to unplug the power cord to avoid any chance of electric shock.

Clean the cabinet of the TV with a dry soft cloth.

Wipe the LCD screen gently with a soft cloth.

- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never use strong solvents such as a thinner, alcohol or benzene for cleaning.
- Periodic vacuuming of the ventilation openings is recommended to ensure to proper ventilation.

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
301	4-278-451-01	CENTER CABINET (40 SIR) (KDL-40NX720 ONLY)		302	A-1792-918-A	HLT2 BOARD, MOUNTED	
301	4-263-623-01	CENTER CABINET (46 SIR) (KDL-46NX720 ONLY)		303	NA	P-MOD (LCD PANEL ASSEMBLY)	
301	4-263-627-01	CENTER CABINET (55 SIR) (KDL-55NX720 ONLY)				FOR ALL LCD PANEL AND TCON BOARD PART NUMBER INFORMATION REFER TO THE LCD PANELS SERVICE MANUAL	
301	4-256-645-01	CENTER CABINET (60 SIR) (KDL-60NX720 ONLY)		\triangle	4-256-393-01	SCREW, +PSW M3X6 W12	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

SCREWS

KDL-40NX720

P/N	DESCRIPTION	REMARKS	TOTAL
▲ 2-580-608-01	SCREW, +PSW M5X16	TABLE-TOP STAND(3)	3
△ 4-256-393-01	SCREW, +PSW M3X6 W12	AC COVER(1), WOOFER(3), CNTR CBNT(3)	7
□ 2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3	RC(4)	4
◆ 4-257-907-01	JOINT, STAND	RC(2)	2
◇ 4-268-126-02	SCREW, ORNAMENTAL M6X12	RC(6)	6
● 2-990-421-41	SCREW (+PSW) (M3X6)	BATL(6), G4BW(3), LD SHIELD(2), WIFI(1), ANTENNAS(2), CAMERA(1)	15
○ 4-258-272-01	SCREW, +PWH M3X8	RC(8), SWITH UNIT(1)	9
★ 7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	TERMINAL AREA(1), SIDEJACK AREA(1)	2
☆ 4-259-541-01	USER SCREW ST	HEAD STAND to NECK(1), NECK to BASE STAND(2)	3

KDL-46NX720

P/N	DESCRIPTION	REMARKS	TOTAL
▲ 2-580-608-01	SCREW, +PSW M5X16	TABLE-TOP STAND(3)	3
△ 4-256-393-01	SCREW, +PSW M3X6 W12	AC COVER(1), WOOFER(3), CNTR CBNT(7)	11
□ 2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3	RC(4)	4
◆ 4-257-907-01	JOINT, STAND	RC(2)	2
◇ 4-268-126-02	SCREW, ORNAMENTAL M6X12	RC(6)	6
● 2-990-421-41	SCREW (+PSW) (M3X6)	BATL(6), G5AW(3), WIFI(1), ANTENNAS(2), CAMERA(1)	13
○ 4-258-272-01	SCREW, +PWH M3X8	RC(8), SWITH UNIT(1)	9
★ 7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	TERMINAL AREA(2), SIDEJACK AREA(1)	3
☆ 4-259-541-01	USER SCREW ST	HEAD STAND to NECK(1), NECK to BASE STAND(3)	4

KDL-55NX720

P/N	DESCRIPTION	REMARKS	TOTAL
▲ 2-580-608-01	SCREW, +PSW M5X16	TABLE-TOP STAND(3)	3
△ 4-256-393-01	SCREW, +PSW M3X6 W12	AC COVER(1), WOOFER(3), CNTR CBNT(5)	9
□ 2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3	RC(4)	4
◆ 4-257-907-01	JOINT, STAND	RC(2)	2
◇ 4-268-126-02	SCREW, ORNAMENTAL M6X12	RC(6)	6
● 2-990-421-41	SCREW (+PSW) (M3X6)	BATL(6), G6CW(4), G7A(2), WIFI(1), ANTENNAS(2), CAMERA(1)	16
○ 4-258-272-01	SCREW, +PWH M3X8	RC(11), SWITH UNIT(1)	12
★ 7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	TERMINAL AREA(2), SIDEJACK AREA(1)	3
☆ 4-259-541-01	USER SCREW ST	HEAD STAND to NECK(1), NECK to BASE STAND(3)	4

KDL-60NX720

P/N	DESCRIPTION	REMARKS	TOTAL
▲ 2-580-608-01	SCREW, +PSW M5X16	TABLE-TOP STAND(3)	3
△ 4-256-393-01	SCREW, +PSW M3X6 W12	RC(2), AC COVER(1), WOOFERS(4), CNTR CBNT(6)	13
□ 2-580-639-01	SCREW, +BVTP 4X12 TYPE2 IT-3	RC(5)	5
◆ 4-257-907-01	JOINT, STAND	RC(2)	2
◇ 4-268-126-02	SCREW, ORNAMENTAL M6X12	RC(6)	6
● 2-990-421-41	SCREW (+PSW) (M3X6)	BATL(6), G6CW(4), G7A(2), WIFI(1), ANTENNAS(2), CAMERA(1)	16
○ 4-258-272-01	SCREW, +PWH M3X8	RC(12), SWITH UNIT(1)	13
★ 7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	TERMINAL AREA(2), SIDEJACK AREA(1)	3
☆ 4-259-541-01	USER SCREW ST	HEAD STAND to NECK(1), NECK to BASE STAND(4)	4

NOTE: The components identified by shading and ▲ mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a □ mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)

CONNECTORS

KDL-40NX720 ONLY

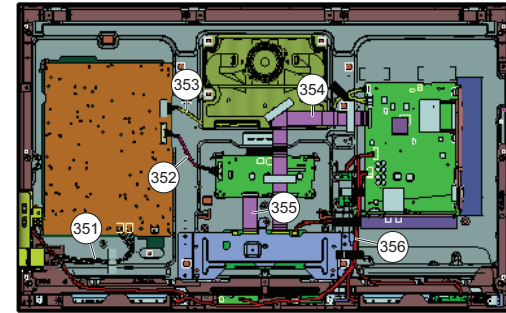

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
351	1-838-924-11	CONNECTOR ASSEMBLY		354	1-838-849-11	(LVDS) FLEXIBLE FLAT CABLE N1 40S	
352	1-910-801-10	CONNECTOR ASSEMBLY 14P		355	1-910-801-41	(LVDS) FLEXIBLE FLAT CABLE 56 PIN	
353	1-910-801-11	CONNECTOR ASSEMBLY 28P		356	1-910-801-59	HARNESS ASSEMBLY	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the Sony Authorized Servicer Portal at <http://www.sony.com/asp> website for any additional service related issues.)


KDL-46NX720 ONLY

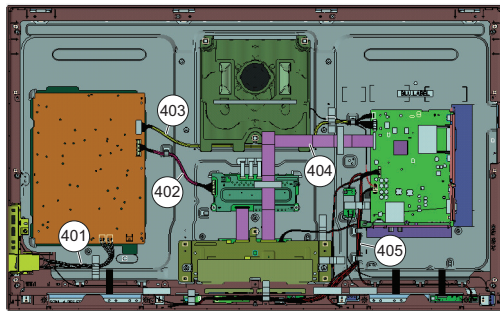

KDL-55NX720 ONLY

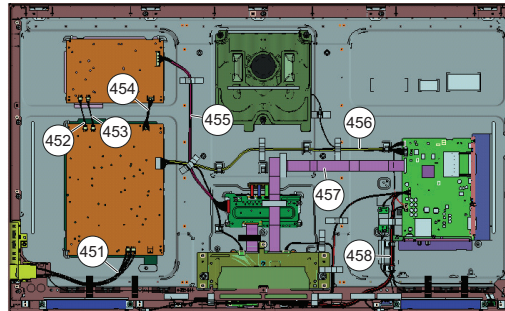

KDL-60NX720 ONLY

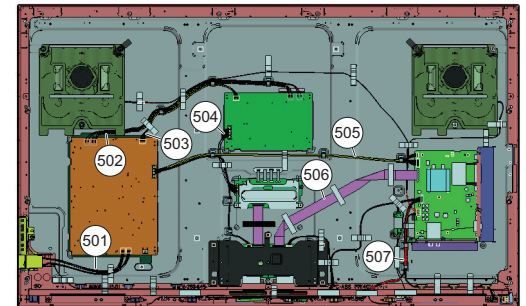

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
401	1-838-924-11	CONNECTOR ASSEMBLY	
402	1-910-801-18	CONNECTOR ASSEMBLY 14P	
403	1-910-801-21	CONNECTOR ASSEMBLY 28P	
404	1-838-848-11	(LVDS) FLEXIBLE FLAT CABLE N1 46S	
405	1-910-801-69	HARNESS ASSEMBLY	

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
451	1-838-923-11	CONNECTOR ASSEMBLY	
* 452	1-838-919-11	CONNECTOR ASSEMBLY 2P	
* 453	1-838-920-11	CONNECTOR ASSEMBLY 2P	
* 454	1-910-801-45	CONNECTOR ASSEMBLY 7P	
455	1-910-801-29	CONNECTOR ASSEMBLY 14P	
456	1-910-801-32	CONNECTOR ASSEMBLY 28P	
457	1-838-847-11	(LVDS) FLEXIBLE FLAT CABLE N1 55S	
458	1-910-801-77	HARNESS ASSEMBLY	

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
501	1-838-923-11	CONNECTOR ASSEMBLY	
* 502	1-838-917-11	CONNECTOR ASSEMBLY 2P	
* 503	1-910-801-46	CONNECTOR ASSEMBLY 7P	
* 504	1-910-801-81	CONNECTOR ASSEMBLY 14P	
* 505	1-910-801-82	CONNECTOR ASSEMBLY 28P	
* 506	1-838-846-11	(LVDS) FLEXIBLE FLAT CABLE N1 60S	
* 507	1-910-801-83	HARNESS ASSEMBLY	

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

ACCESSORIES AND PACKAGING

3-299-071-05	FLYER, SAFETY (ENGLISH, FRENCH, SPANISH)
4-273-074-11	FLYER, SAFETY (ENGLISH, FRENCH, SPANISH)
4-282-188-32	MANUAL, INSTRUCTION (SPANISH)
4-270-401-11	MANUAL, INSTRUCTION (ENGLISH) (ALL MODELS EXCEPT KDL-40NX720)
4-270-401-21	MANUAL, INSTRUCTION (FRENCH) (ALL MODELS EXCEPT KDL-40NX720)
4-270-401-32	MANUAL, INSTRUCTION (SPANISH) (ALL MODELS EXCEPT KDL-60NX720)
* 4-270-904-11	SUPPLEMENT(STAND INSTALLATION) (ALL MODELS EXCEPT KDL-60NX720)
4-271-059-11	SUPPLEMENT(STAND INSTALLATION) (KDL-60NX720 ONLY)

MISCELLANEOUS

X-2549-819-1	BAG, SCREW ASSEMBLY (M) (KDL-40NX720 ONLY)
X-2560-379-1	BAG, SCREW ASSEMBLY (L) (KDL-46NX720/55NX720 ONLY)
X-2580-633-2	BAG, SCREW ASSEMBLY (3L) (KDL-60NX720 ONLY)
1-838-791-11	CABLE CONVERSION
4-262-708-01	CLAMPER, CABLE
* 4-268-137-11	CUSHION, TERMINAL
* 4-277-411-11	GASKET (TU) (KDL-40NX720 ONLY)
* 4-287-536-01	GASKET (TU) (ALL MODELS EXCEPT KDL-40NX720)
4-188-302-11	HEX WRENCH

4-291-502-12	LABEL, ENERGY GUIDE (KDL-46NX720 ONLY)
4-291-502-32	LABEL, ENERGY GUIDE (KDL-55NX720 ONLY)
4-291-502-42	LABEL, ENERGY GUIDE (KDL-60NX720 ONLY)
4-268-552-52	SHEET (L2-R2), INSULATOR (KDL-60NX720 ONLY) ORDER THIS PART WHEN REPLACING THE LCD PANEL
4-256-682-52	SHEET (M2-R), INSULATOR (KDL-60NX720 ONLY) ORDER THIS PART WHEN REPLACING THE LCD PANEL
4-256-443-01	SHEET, RADIATION (BAT-L/V) ORDER THIS PART WHEN REPLACING THE LCD PANEL
2-580-608-01	SCREW, +PSW M5X16 (SCREWS TO ATTACH TABLE-TOP STAND TO LCD TV) For product protection and safety reasons, Sony strongly recommends that you use the screws provided with the TV CAUTION: These screws cannot be used to secure the TV to the Wall Mount Brackets
4-256-454-02	SPACER (G A)
4-260-776-02	SPACER (G B) (KDL-40NX720/46NX720 ONLY)
7-632-452-24	TAPE (NO.303) 18MMX35M YEL
4-195-059-21	TAPE, PWB (H)
4-259-541-01	USER SCREW ST (SCREWS TO ATTACH HEAD STAND AND BASE STAND TO NECK)

SECTION 6 - DISASSEMBLY/PART NUMBER INFORMATION

OPTIONAL ACCESSORIES

THE 3D GLASSES LISTED BELOW ARE AVAILABLE THROUGH THE [SONY STYLE](#) WEBSITE.

USE THE DESCRIPTION TO LOCATE THE PART AND PRICING INFORMATION

TDG-BR50/B 3D GLASSES (BLACK - SIZE SMALL)
TDG-BR50/P 3D GLASSES (PINK - SIZE SMALL)
TDG-BR50/L 3D GLASSES (BLUE - SIZE SMALL)

TDG-BR100/B 3D GLASSES (SIZE ADULT)
TDG-BR200/B 3D GLASSES (SIZE SMALL)
TDG-BR250/B 3D GLASSES (SIZE ADULT)
TDG-BR250/DBL 3D GLASSES - TWO PACK (SIZE ADULT)

4-289-288-01 BATTERY COVER FOR 3D GLASSES
1-458-395-11 POLARIZER ADAPTER (FOR BR250 MODEL)
1-458-395-21 POLARIZER ADAPTER (FOR BR200 MODEL)

1-838-940-11 USB CABLE
X-2549-230-1 SUPPORT BELT KIT

SU-WL700 WALL MOUNT BRACKET (KDL-40NX720/46NX720/55NX720 ONLY)
SU-WL500 WALL MOUNT BRACKET (KDL-60NX720 ONLY)

REMOTE COMMANDER

1-489-662-11 REMOTE COMMANDER (RM-YD069) (FOR LA/MX)
1-489-479-11 REMOTE COMMANDER (RM-YD059) (FOR US/CND)