

WH-CH510

SERVICE MANUAL

Conditions of Use:

- (1) Please use this information only for the purpose of performing repair, maintenance and/or configuration services of the Sony products (hereinafter the "Repair services") under the service agreement entered into with the Sony group company (hereinafter the "Service agreement"). Using this information for any purpose other than the purpose described foregoing is forbidden.
- (2) Only the Authorized Servicer's officers, employees or subcontractors (including their officers and employees) whose duties justify a need-to-know and who have agreed to hold confidential this information (collectively hereinafter the "Permitted users") are permitted to access and use this information. To disclose or disseminate to any person other than the Permitted users is forbidden.
- (3) Destroy or erase any and all portion of this information promptly in an irrecoverable and secure fashion after achieving the purpose described in Section (1) above.
- (4) Do not copy, replicate, reproduce, alter, translate, transmit, sell, lease, or distribute this information in whole or in part without the prior written permission of the author. (Notwithstanding foregoing, it is permitted to copy and distribute this information to the Permitted users.)
- (5) Please notify immediately any leakage, loss, theft, misappropriation, or other misuse of this information by e-mail to the following address:
somk-gcs-tissnexim-adm@jp.sony.com
- (6) In addition to the above, the terms and conditions of the Service agreement shall be applied to using this information.

Revision of Information:

This information may be changed or updated at any time without any prior notice. Please confirm that this information is up-to-date before using it.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

如果电池更换不当会有爆炸危险
只能用同样类型或等效类型的电池来更换

警告

本電池如果更換不正確會有爆炸的危險
請依製造商說明書處理用過之電池

Sony CONFIDENTIAL
For Authorized Servicer

9-896-603-01
2019G00-1
© 2019.07

Sony Home Entertainment &
Sound Products Inc.

SONY®

WH-CH510

SERVICE MANUAL

Ver. 1.0 2019.07

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Chinese Model
Tourist Model
PX Model

• Color variations

(B) Black, (L) Blue, (W) White

- The service policy of this model is Product Exchange.
The following parts are available for service parts of this model.

 
PARTS LIST

Ref. No.	Part No.	Description	Remark
	500497511	GUIDE, REFERENCE (ENGLISH, SPANISH, FRENCH) (US, CND, PX, LA)	
	500497521	GUIDE, REFERENCE (SIMPLIFIED CHINESE) (CH)	
	500497531	GUIDE, REFERENCE (ENGLISH, RUSSIAN, ARABIC, TRADITIONAL CHINESE, KOREAN) (E, AUS, JE, RU, IND)	
	500497541	GUIDE, REFERENCE (ENGLISH, FRENCH, GERMAN, SPANISH, DUTCH, ITALIAN, PORTUGUESE, DANISH, FINNISH, NORWEGIAN) (AEP, UK)	
	500497551	GUIDE, REFERENCE (SWEDISH, POLISH, GREEK, CZECH, HUNGARIAN, BULGARIAN, SLOVAK, SLOVENIAN, ROMANIAN) (AEP, UK)	
	500497611	MANUAL, INSTRUCTION	


• Abbreviations

AEP : European area, East European area, CIS area (Moldova, Ukraine),
Middle East area (Israel) models
 AUS : Australian (Oceania area) model
 CH : Chinese model
 CND : Canadian model
 IND : Indian model
 JE : Tourist model
 LA : Latin American area model
 RU : Russian (CIS area (Except for Moldova, Ukraine)) model

LOCATION OF THE SERIAL NUMBER LABEL

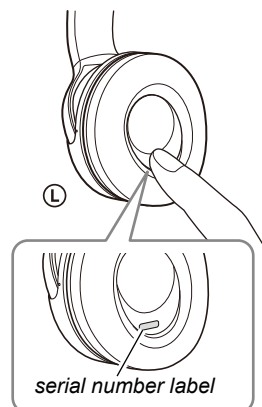

Ref. No.	Part No.	Description	Remark
1	930100203	CABLE, USB (USB Type-C™ cable (USB-A to USB-C™) (approx. 20 cm))	
2	930100204	EARPAD (B) (1 piece) (for Black)	
2	930100205	EARPAD (L) (1 piece) (for Blue)	
2	930100206	EARPAD (W) (1 piece) (for White)	

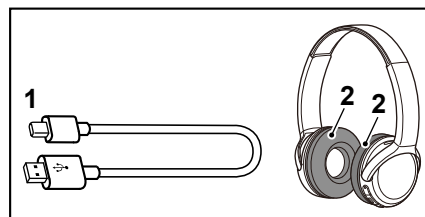 


MODEL IDENTIFICATION

It can identify the destination by checking the model number label engraved on the inside of the right slider.

Refer to the figure below.

 Note: Printed contents of the model number label may be changed in the midway of production.

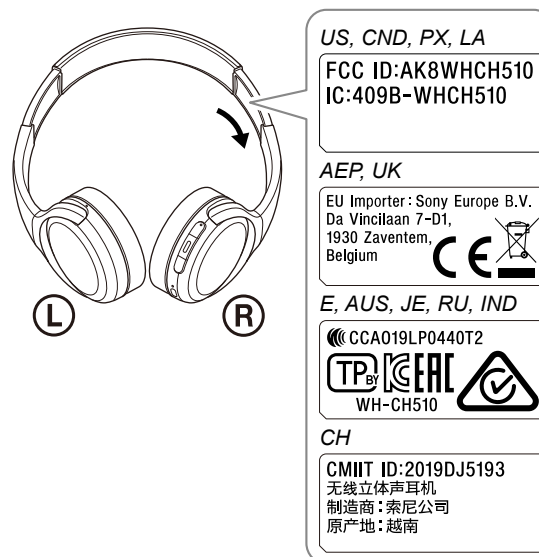

Sony CONFIDENTIAL
For Authorized Servicer

WIRELESS STEREO HEADSET

