



URT1R-1, URT2R48-1, URT2R-1, URT3R-1,
UFT1R-1, UFT2R48-1, UFT2R-1

WORKTOP UNITS

INSTRUCTION MANUAL

Please read the manual carefully and follow all instructions. Failure to do so may void your warranty.

The manufacturer cannot be held liable in the following cases:

- Improper installation and servicing
- Misuse of the refrigerator
- Improper or inadequate maintenance
- Unauthorized modification or tampering
- Use of non-original spare parts
- Partial or total failure to comply with the instructions

TRANSPORTATION

Unit may not be placed on its side for any reason during shipping. It should be stored in a protected and covered environment at a temperature between -25°C and 55°C with an ambient humidity of 30% to 90%. Do not stack more than 4 units high.

INSTALLATION AND SET UP

UNIT MUST RUN FOR 24 HOURS BEFORE USING!

- The unit is wrapped in absorbent material inside a cardboard box and strapped on a wood pallet. Remove all straps and packaging, including the PVC protective film. If damage is noted, file a claim immediately.
- Install the units on a level surface. If the surface is not level, the legs can be adjusted.
- Make sure that it is not placed in direct sunlight or by a heat source.
- There should be 5cm clearance from wall and unit so that there is proper air circulation for the condensing unit.
- Before use, the interior and exterior should be cleaned with a soft cloth.
 - Do not use an abrasive cleaner or scour pad!

CONNECTING TO THE MAIN POWER SUPPLY

- Before plugging in, make sure that the main power source is grounded properly and matches the voltage rating of that of the unit (found on the rating label).
- Do not in any way remove the ground prong.
- Always make sure that the power cord is in good condition, is not frayed and does not show abrasion.
- Do not use an extension cords or adapter plugs and only plug in one unit per circuit.
- When plugging and unplugging, do so by gripping onto the plug.
- Plug in the unit and adjust the thermostat to your desired temperature.

MAINTENANCE AND CLEANING

Regular cleaning of the unit is strongly recommended each

month. Before cleaning, power off and unplug the unit.

- Clean the exterior and interior with a mild detergent and soft cloth. Do not use abrasive detergents and cloths!

Cleaning the Condenser

- The condenser should be thoroughly cleaned every 4 months or when the fins get dirty. It can be cleaned with a dry brush or a vacuum cleaner.

Unnecessary service will be billed to the customer.
Please make sure to go over this troubleshooting guide before calling for service.

TROUBLESHOOTING

Power supply failure

- Check that the plug is plugged in correctly
- Make sure that the switch is on
- Check the main power source

Required temperature is not achieved

- Check that the thermostat range is correctly regulated
- Check that the condenser is not blocked with dust. Improper air flow will affect unit to function at its optimal level
- Unit should not be over-stuffed, and not loaded with hot food
- Make sure that the unit is not close to a heat source

Cabinet is leaking water

- The drip tray may be missing or damaged
- Make sure the pipes are not obstructed
- The unit may not be level

Cabinet is noisy

- The unit may not be level
- The frame may have loose screws or bolts

If problems persist after following the troubleshooting guide, please contact your local dealer and have ready your model number, serial number, and date of purchase. You may be asked to also provide proof of sales.


PROPER DISPOSAL

Proper disposal is the responsibility of the owner, and these instructions should be followed to prevent injuries and child entrapment.


- Remove all doors and shelves so that a child cannot get trapped inside.
- Follow the guidelines of the city garbage disposal program.
- The refrigerant will need to be removed by a qualified service technician.

CIRCUIT DIAGRAM

Temperature range (+33°F~+45°F)

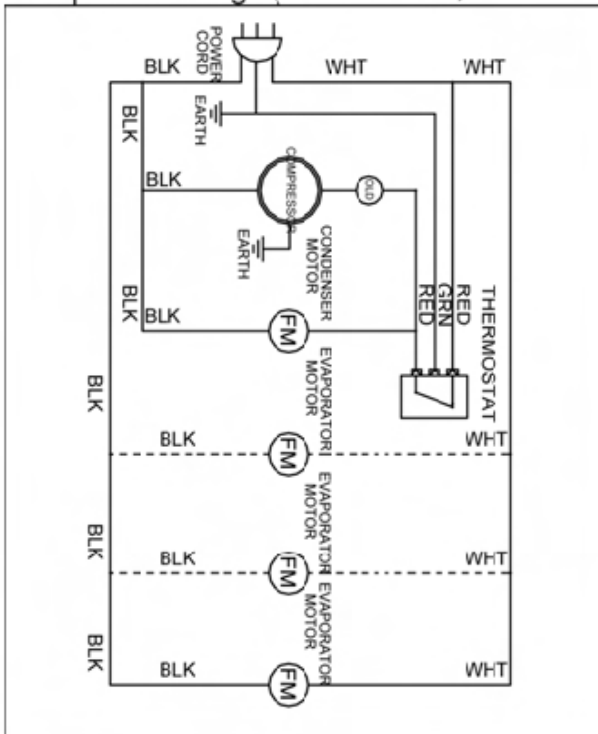


Temperature range (-8°F~-1°F)

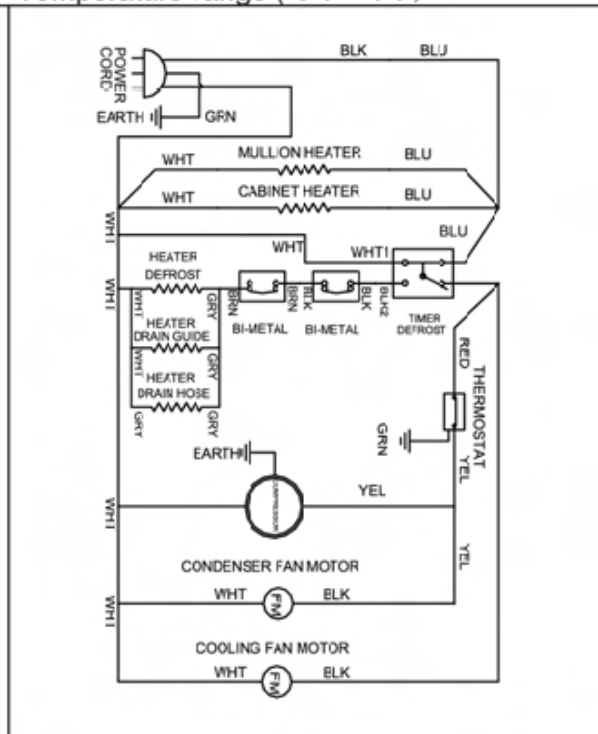

Technical Parameters

SKU	Voltage	Hz	Input Power	Temperature Range	Refrigerant	Capacity	Net Weight
URT1R-1	115	60 Hz	200	33°F - 45°F	R134a	184	187
URT2R48-1	115	60 Hz	290	33°F - 45°F	R134a	340	242.5
URT2R-1	115	60 Hz	290	33°F - 45°F	R134a	506	297.6
URT3R-1	115	60 Hz	290	33°F - 45°F	R134a	538	353
UFT1R-1	115	60 Hz	260	-8°F - -1°F	R134a	184	187
UFT2R48-1	115	60 Hz	500	-8°F - -1°F	R404a	340	242.5
UFT2R01	115	60 Hz	500	-8°F - -1°F	R404a	506	297.6

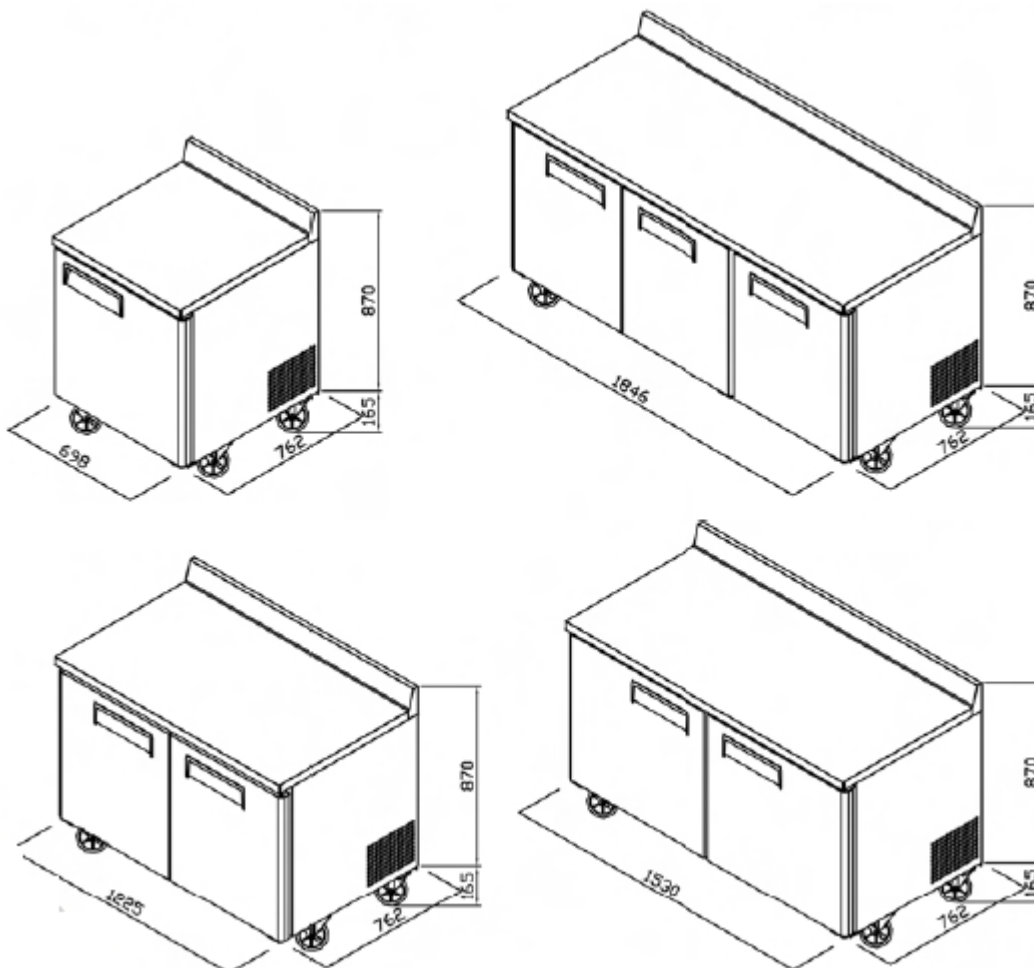

INSTRUCTION
MANUAL

Official Approvals

- Conforms to UL STD. 471
- Conforms to NSF 7
- Certified to CSA STD. C22.2 NO. 120



LIMITED WARRANTY

SUPERA REFRIGERATION EQUIPMENT MODELS:

Reach-In Refrigerators & Freezers [R1R-1, R2R-1, R3R-1, F1R-1, F2R-1, F3R-1]

Undercounter Refrigerators & Freezers [UR1R-1, UR2R-1, UR2R6-1, UF1R-1, UF2R-1, UF2R6-1]

Sandwich/Salad Prep Tables, Mega-Top Prep Tables & Pizza Prep Tables [SSPT1R, SSPT2R-1, SSPT2R6-1, MTPT1R-1, MTPT2R-1, MTPT2R6-1, PPT1R-1, PPT2R-1, PPT3R-1]

Glass Door Merchandisers [G1M-23-B-1, G1M-23-W-1, G2M-SW-48-B-1, G2M-SW-48-W-1, G3M-70-B-1, G3M-70-W-1]

Claims: All claims for parts or labor must be made directly through **SUPERA, LLC**. All claims should include: model number of the unit, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the alleged defect. In case of compressor replacement under warranty, either compressor or compressor tag must be returned to **SUPERA, LLC** along with above listed information. Failure to comply with warranty policies will result in voiding claims. Any service provided without authorization from Supera, LLC will not be covered by Supera, LLC.

Two-Year Parts & Labor Warranty: **SUPERA, LLC** warrants all new refrigerated components, the cabinet and all parts, to be free from defects in materials or workmanship, under normal and proper use and maintenance service as specified by **SUPERA, LLC** and upon proper installation (indoor building only) and start-up in accordance with the instruction packet supplied with each **SUPERA, LLC** unit. **SUPERA, LLC's** obligation under this warranty is limited to a period of two (2) years from the date of original purchase.

Any part, covered under this warranty that is determined by **SUPERA, LLC** to have been defective within two (2) years of original installation date is limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include **ONLY** pre-authorized time and up to sixty miles of travel for the service company.

Additional Three-Year Compressor Warranty: In addition to the two (2) year warranty stated above, **SUPERA, LLC** warrants its hermetically sealed compressor to be free from defects in both material and workmanship under normal and proper use and maintenance service for a period of three (3) additional years from the date of original installation, but not to exceed five (5) years and three (3) months after purchase.

Compressor determined by **SUPERA, LLC** to have been defective within this extended period will, at **SUPERA, LLC's** discretion, be either repaired or replaced with a compressor or compressor parts of similar design and capacity.

The three (3) year extended compressor warranty applies only to hermetically sealed parts of the compressor and does not apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly or and other electrical components, etcetera.

Compressor Warranty: The five-year compressor warranty detailed above will be void if the following procedure is not carefully adhered to:

1. This system contains R404A or R134a refrigerant and Polyol Ester lubricant. The Polyol Ester lubricant has rapid moisture absorbing qualities.
2. Drier replacement is very important and must be changed when a system is opened for servicing. A620 copper drier or better is highly recommended.
3. Micron level vacuums must be achieved to insure low moisture levels in the system. 500 microns or lower must be obtained.
4. When compressor is grounded, suction drier and 620 drier or better must be replaced.
5. Compressor must be obtained through **SUPERA, LLC**, unless otherwise specified in writing, through SUPERA, LLC's warranty department.

Not Covered Under This Warranty: **SUPERA, LLC's** sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty. Warranty does not cover service requests for free replacement and/or recall parts.

SUPERA, LLC HAS FINAL DISCRETION ON ALL WARRANTY REQUESTS. NO CONSEQUENTIAL DAMAGES. **SUPERA, LLC** IS NOT RESPONSIBLE FOR ECONOMIC LOSS; PROFIT LOSS; OR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOSSES, SERVICE TECHNICAN ERRORS, OR DAMAGES ARISING FROM FOOD OR PRODUCT SPOILAGE REGARDLESS OF WHETHER OR NOT THEY RESULT FROM REFRIGERATION FAILURE. WARRANTY IS NOT TRANSFERABLE, This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. ANY SUCH ASSIGNMENT OR TRANSFER SHALL VOID THE WARRANTIES HEREIN AND SHALL VOID ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR LABOR COVERAGE FOR COMPONENT FAILURE OR OTHER THE WARRANTY PACKET PROVIDED WITH THE UNIT. ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FOOD, ACTS OF GOD. SUPERA, LLC is not responsible for the repair or replacement of any parts that **SUPERA, LLC** determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of GOD. IMPROPER ELECTRICAL CONNECTIONS. SUPERA, LLC IS NOT RESPONSIBLE FOR THE REPAIR OR REPLACEMENT OF FAILED OR DAMAGED COMPONENTS RESULTING FROM ELECTRICAL POWER FAILURE, THE USE OF EXTENSION CORDS, LOW VOLTAGE, OR VOLTAGE DROPS TO THE UNIT. NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; THERE ARE NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, EXCEPT THE TWO (2) YEAR PARTS & LABOR WARRANTY AND THE ADDITIONAL THREE (3) YEAR COMPRESSOR WARRANTY AS DESCRIBED ABOVE. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTY AND MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. Outside U.S. and Canada; This warranty does not apply, and **SUPERA, LLC** is not responsible for, any warranty claims made on products sold or used outside the continent of the United States and Canada. Installation in a residential application will void all warranties.

Supera Customer Care Toll-Free Service Line:
1-866-953-3288

For additional product and warranty information,
please visit our website at:
www.SuperaCo.com

