


WIRING DIAGRAM FOR 514LL FRYER

120V OR 208/240V

SINGLE PHASE

POWER SUPPLY CORD

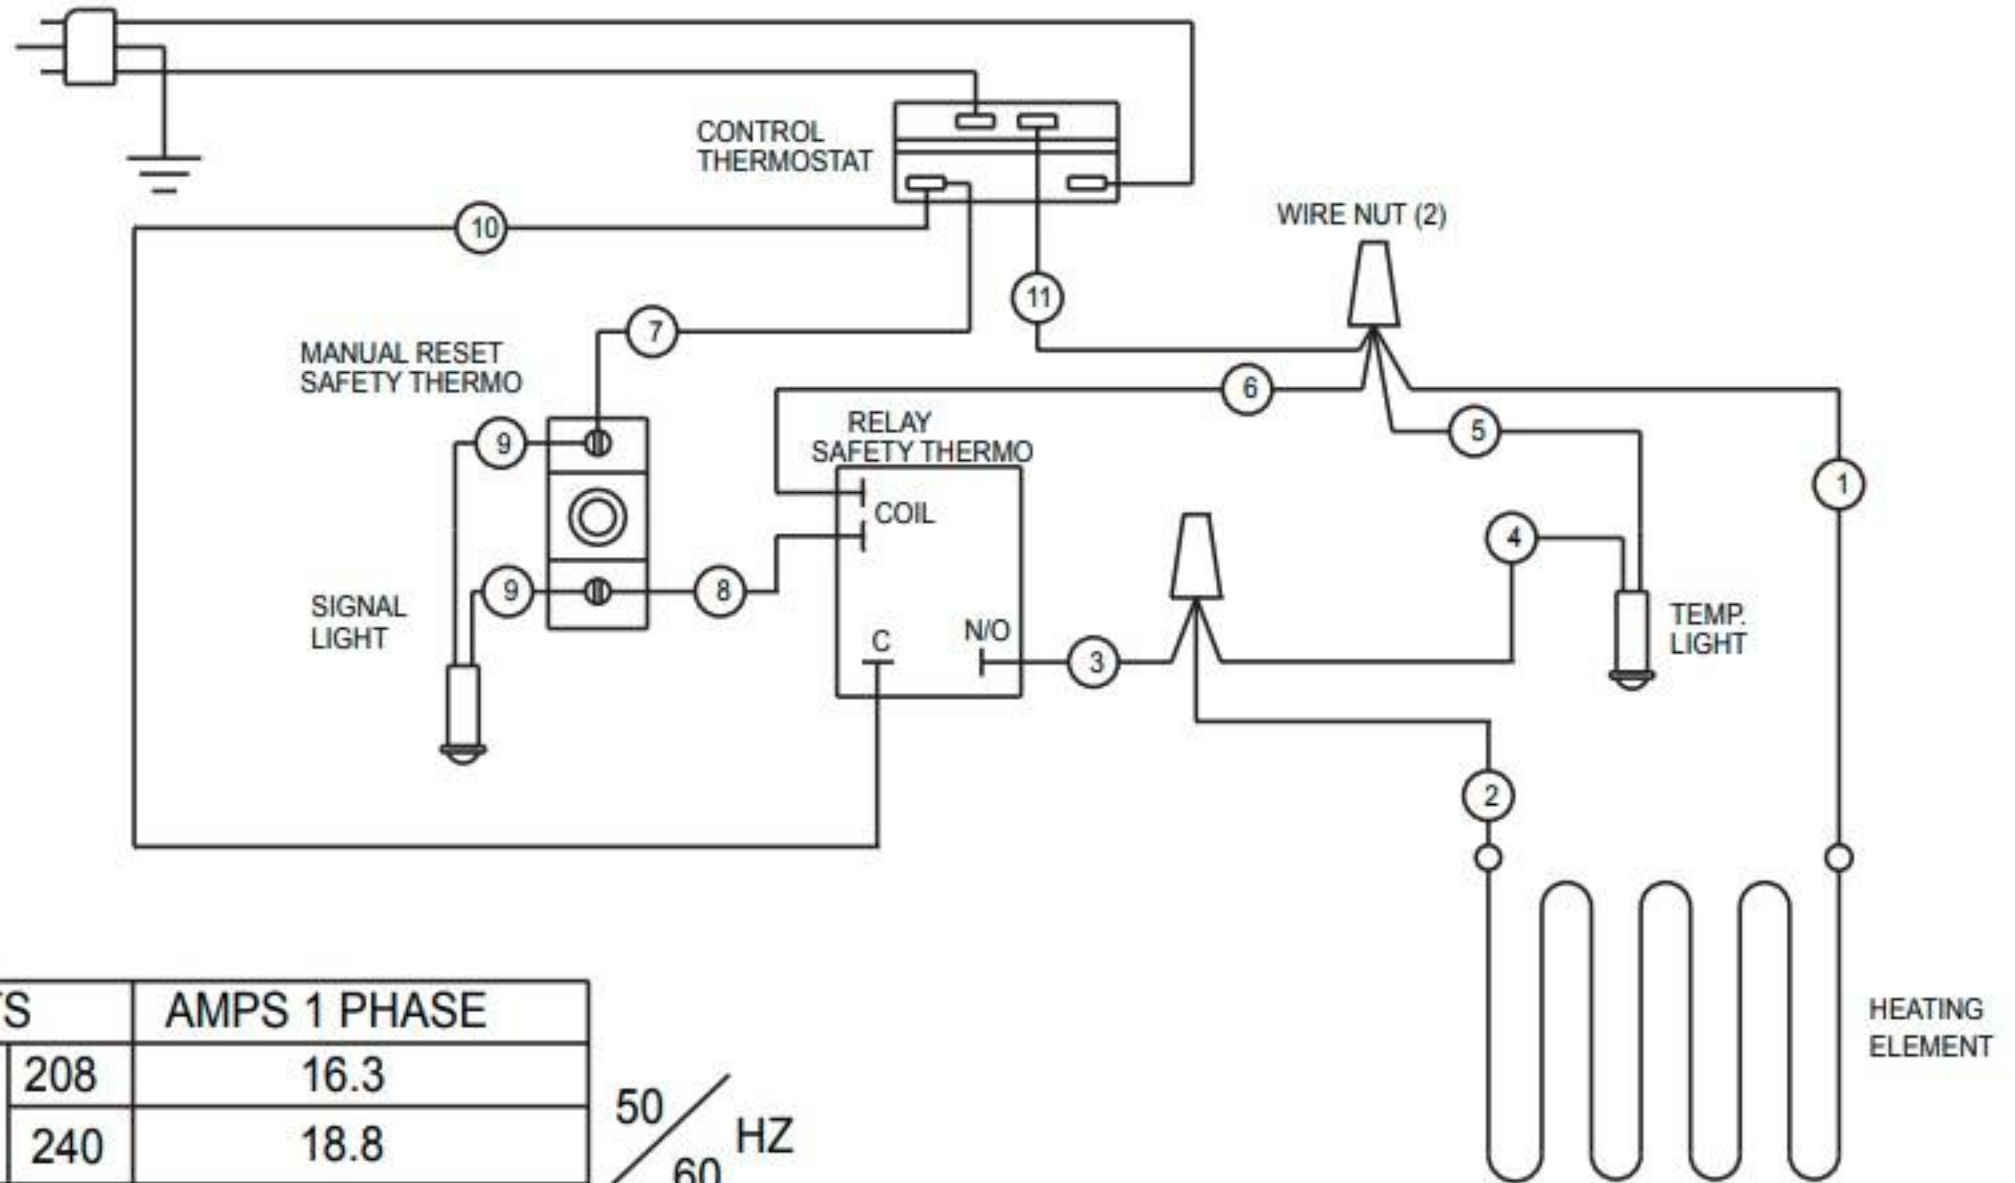

VOLTS		AMPS 1 PHASE
208/240	208	16.3
	240	18.8
120		15.0

50 / 60 HZ