


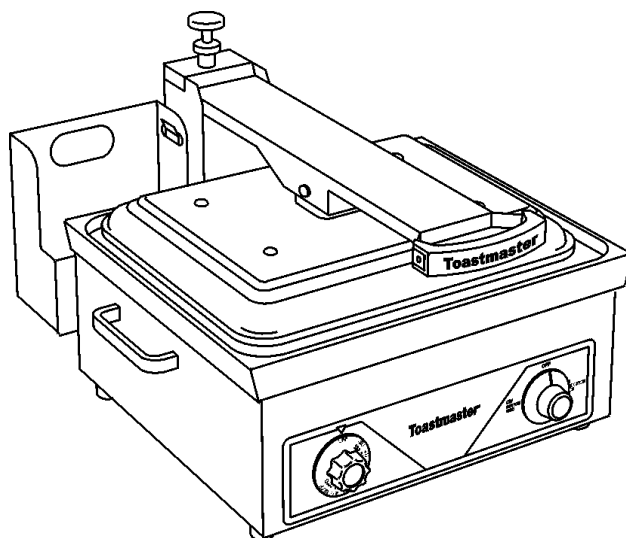

A710 Series Sandwich and Panini Grills ***(produced 1993 or later)***

Models:

- | | | | |
|-----------|-----------|------------|------------|
| • A710S72 | • A710P72 | • A710UP72 | • A710LP72 |
| • A710S74 | • A710P74 | • A710UP74 | • A710LP74 |

PARTS MANUAL

for domestic and standard export grills

© 2000 Toastmaster, A Middleby Company.




is a registered trademark of Toastmaster, A Middleby Company. All rights reserved.

SilverStone Supra® is a registered trademark of DuPont. All rights reserved.

Middleby Cooking Systems Group • 1400 Toastmaster Drive • Elgin, IL 60120 • (847)741-3300 • FAX (847)741-4406


MAIN COMPONENTS

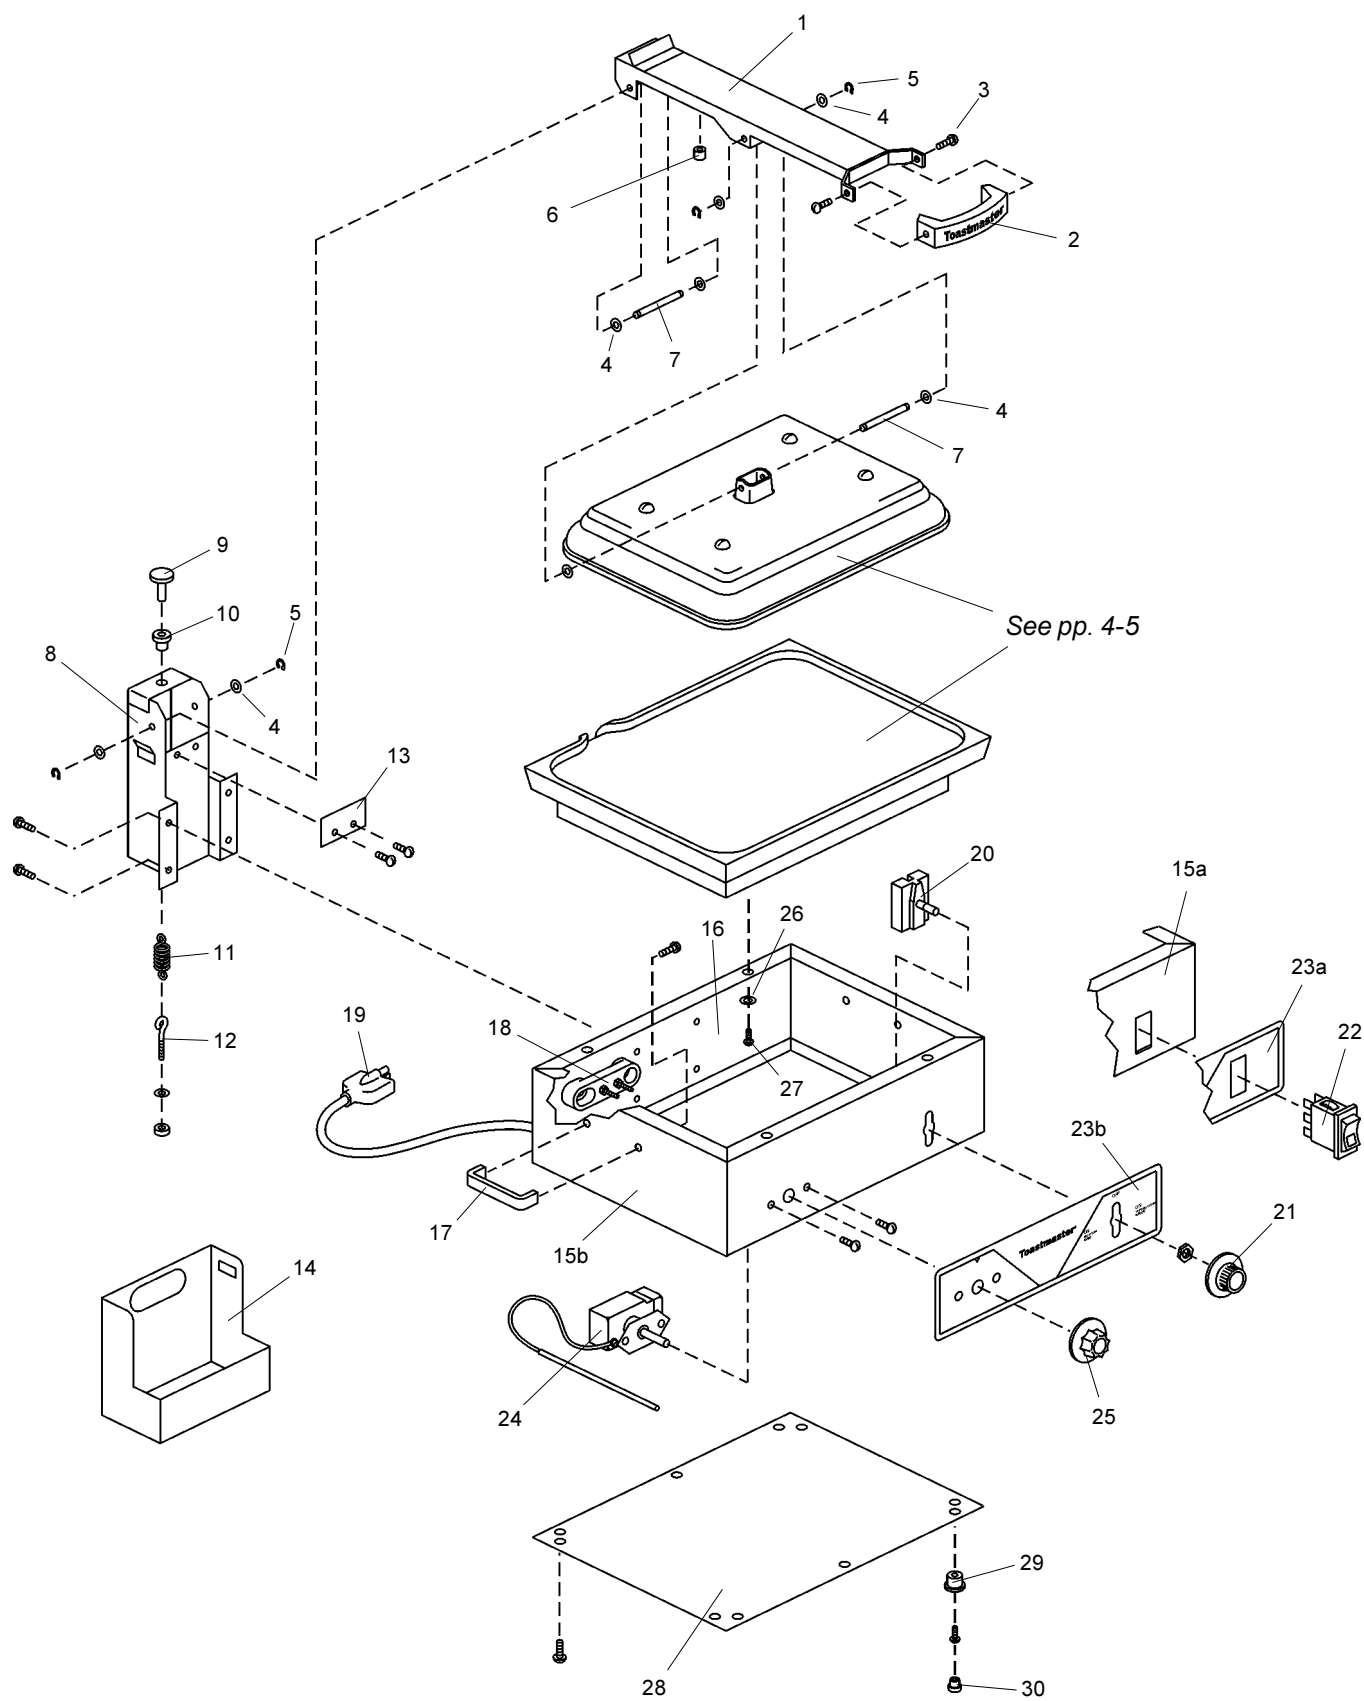

ITEM	QTY.	PART NO.	DESCRIPTION
1	1	7609805	ASSEMBLY, HANDLE ARM
2	1	3101758	HANDLE, TOP PLATE
3	2	4141A8857	SCREW, SLT RND HD #8-32 X 1/2" NP
4	A/R	2001767	FLAT WASHER, 1/4" SS
5	A/R	3102933	RING, RETAINING
6	1	K1DS268	BUMPER
7	2	7006900	PIN, ARM
8	1	7609806	ASSEMBLY, HINGE BRACKET
9	1	2100095	KNOB, HEIGHT ADJUSTMENT
10	1	A710E8901	KNOB, LOCKING THUMB
11	1	3103258	SPRING, BALANCE
12	1	7007114	EYEBOLT
13	1	7006914	COVER PLATE
14	1	7006899	GREASE TROUGH
15a	1	7610591	CASE, WITH OPENING FOR ROCKER SWITCH <i>(through 7/00)</i>
15b	1	44400	CASE, WITH OPENING FOR THREE-POSITION POWER SWITCH <i>(8/00-current)</i>
16	1	7610590	ASSEMBLY, BACK PLATE
17	2	3101772	HANDLE, SIDE

ITEM	QTY.	PART NO.	DESCRIPTION
18	1	1456A0133	TERMINAL BLOCK
19a	1	7610588	ASSY, CORD AND PLUG, NEMA 5-15P <i>(120V units)</i>
19b	1	7610589	ASSY, CORD AND PLUG, NEMA 6-15P <i>(208V and 240V units)</i>
20	1	PS-TC0047	SWITCH, THREE-POSITION POWER <i>(8/00-current)</i>
21	1	33402	KNOB, THREE-POSITION POWER SWITCH <i>(8/00-current)</i>
22	1	3003830	SWITCH, ROCKER, DPDT ON- OFF-ON, LIGHTED <i>(through 7/00)</i>
23a	1	41803	LABEL, CONTROL PANEL, WITH OPENING FOR ROCKER SWITCH <i>(through 7/00)</i>
23b	1	44384	LABEL, CONTROL PANEL, WITH OPENING FOR THREE-POSITION POWER SWITCH <i>(8/00-current)</i>
24	1	7A2S86	THERMOSTAT
25	1	A710E8751	KNOB, THERMOSTAT
26	4	1411D8811	LOCKWASHER, 1/4" SS
27	4	F716A8803	SCREW, HX HD 1/4"-20 X 3/8" NP
28	1	7007827	PANEL, BOTTOM
29	4	4021D8905	FOOT, RUBBER
30	4	3003969	FOOT, PLUG

GRILL PLATE AND HEATER COMPONENTS

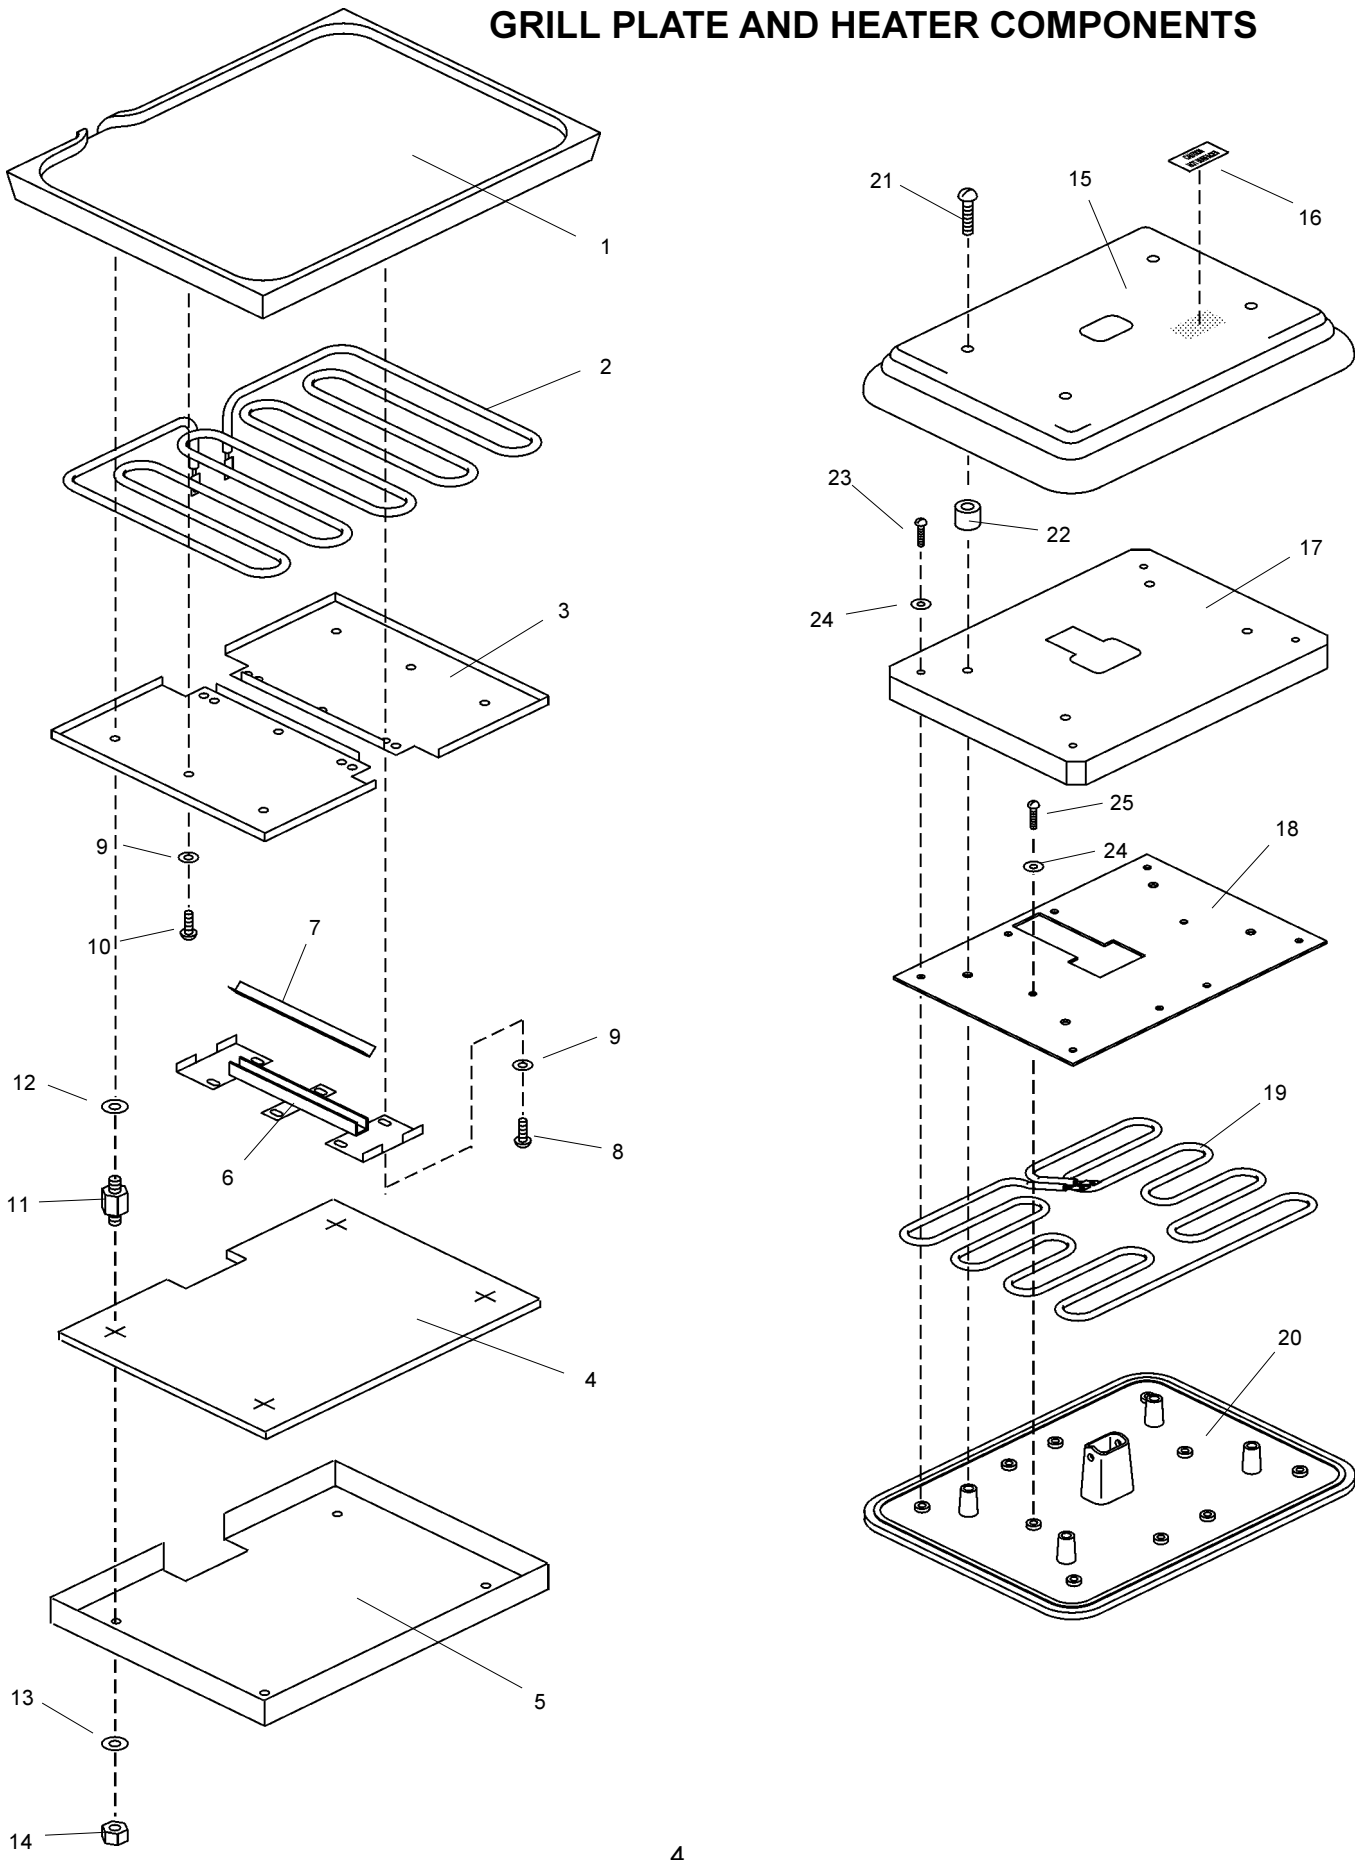

ITEM	QTY.	PART NO.	DESCRIPTION
1a	1	A710E1023	BOTTOM PLATE, A710S OR A710UP (SilverStone Supra® COATING, FLAT)
1b	1	41748	BOTTOM PLATE, A710P OR A710LP (SilverStone Supra® COATING, GROOVED)
2a	1	A710E8704	BOTTOM HEATER, 120V
2b	1	A710E8705	BOTTOM HEATER, 208V
2c	1	A710E8708	BOTTOM HEATER, 240V
3	2	A710E1007	PRESSURE PLATE
4	1	7007824	INSULATION, BOTTOM HEATER
5	1	A710E1017	BAFFLE, BOTTOM HEATER
6	1	A710E0003	CLAMP, BULB
7	1	7002943	PLATE, BULB
8	6	B301A8843	SCREW, HEX HD 1/4"-20 X 1/2" NP
9	8	F706A8805	FLAT WASHER, 1/4" NP
10	2	F716A8803	SCREW, HEX HD 1/4"-20 X 3/8" NP
11	4	7007823	STANDOFF, HEX 1/4"-20 X 0.56"
12	4	3023A8805	FLAT WASHER, 0.265"
13	4	B10212	LOCKWASHER, SPLIT 1/4" ZP
14	4	F706A8807	HEX NUT, 1/4"-20 BRASS

ITEM	QTY.	PART NO.	DESCRIPTION
15	1	A710E3023	TOP COVER
16	1	1112B8303	LABEL, "CAUTION - HOT SURFACES"
17	1	A710E1001	TOP HEAT BAFFLE
18	1	A710E1021	TOP CLAMP PLATE
19a	1	A710E8712	TOP HEATER, 120V
19b	1	A710E8713	TOP HEATER, 208V
19c	1	A710E8716	TOP HEATER, 240V
20a	1	A710E1025	TOP PLATE, A710S OR A710LP (SilverStone Supra® COATING, FLAT)
20b	1	41747	TOP PLATE, A710P OR A710UP (SilverStone Supra® COATING, GROOVED)
21	4	2000350	SCREW, SLT TRS HD 1/4"-20 X 1/2"
22	4	7007825	SPACER
23	4	411A8849	SCREW, HEX HD 1/4"-20 X 3/4" NP
24	10	F706A8805	FLAT WASHER, 1/4" NP
25	6	F716A8803	SCREW, CAP HEX HD 1/4"-20 X 3/8" NP

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

NOTICE

During the warranty period, ALL parts replacement and servicing should be performed by your Toastmaster Authorized Service Agent. Service that is performed by parties other than your Toastmaster Authorized Service Agent may void your warranty.

NOTICE

Using any parts other than genuine Toastmaster factory manufactured parts relieves the manufacturer of all warranty and liability.

NOTICE

Toastmaster reserves the right to change specifications at any time.

Middleby Cooking Systems Group • 1400 Toastmaster Drive • Elgin, IL 60120 • USA • (847)741-3300 • FAX (847)741-4406

24-Hour Service Hotline: 1-(800)-238-8444

www.middleby.com

